W7FG VINTAGE MANUALS

Telephone: 918-333-3754
Fax: 918-774-9180
Toll Free: 800-807-6146

402731 West 2155 Drive
Bartlesville, OK 74006
United States of America

E-Mail: w7fg@w7fg.com
Home Page: http://www.w7fg.com

KENWOOD

TS-820, S

SERVICE

KENWOOD

SERVICE MANUAL

Model TS-820(S)

SSB TRANSCEIVER

CONTENTS

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

No. 9

SUBJECT: TS-820 Speech Processor Alignment DATE 11/17/76

The following alignment procedure may be used in lieu of the one in the Service Manual.

Test equipment required:
Audio signal generator
Audio VTVM
Oscilloscope or RF VTVM

1. Preliminary control settings:
   Screen grid switch off
   Mode switch to USB
   Comp level to Max (CW)
   Processor sw to Pull "on"
   Meter switch to "Comp"

   Send/Rec switch to "Send" as required when making adjustments.

2. Apply 1500Hz audio signal to the mic jack at 10 mv level.
   Connect RF VTVM or scope to TP-2
   Adjust T-11, 12, 13, for maximum level on the S-meter.
   Adjust T-14 for maximum level on scope or VTVM at TP-2.

3. Turn compression level to min, (CCW)
   Reduce audio sig at mic jack to 0.3 mv
   Adjust TC-4 (freq response for speech processor) so that level at TP-2 is not changed when changing audio gen from 400Hz to 2000Hz.

4. Turn compression level to max, (CW)
   Set audio gen to 1500Hz at 0.3 mv.
   Adjust TC-3 and VR-6 (carrier bal for speech proc) for maximum level at TP-2.

5. Set audio gen to 10 mv 1500Hz
   Send/Rec switch to send
   Adjust VR-7 (comp level for speech processor) so that the level at TP-2 is not changed when turning the processor on and off. VR-7 should be adjusted for the particular microphone the customer will be using with his TS-820.

6. Finally check for non distortion of signal, and that comp level of 20 to db can be obtained at full comp on.

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

No. 12

SUBJECT: Installing AUX band in TS-820 (receive only) DATE 1/18/77

The following information is for the installation and alignment of the AUX band in the TS-820. This extra band will be for receive only. Reference will be made to schematics and board layouts as shown in the Service Manual.

INSTALLATION

1. Remove top and bottom covers.
2. Remove the connectors from the PLL Assembly X60-1010-00.
3. Remove the PLL Assembly X60-1000-00 and set it aside.
4. Use the board layout of the Coil Pack X44-1140-00 to locate the positions for the ANT and MIX coils on the Coil Pack X44-1140-00.
5. Install the ANT and MIX coils on the Coil Pack X44-1140-00.
6. Remove both covers from the PLL Assembly X60-1010-00.
7. Remove the 5 phillips screws holding the PD Unit X50-1340-00 in the PLL Assembly X60-1010-00 and carefully remove the PD Unit.
8. Use the board layout of the PD Unit X50-1340-00 to locate Q11.
9. Install R01, R02, C01, C02, and X01 as needed for the band desired.
10. Locate terminals AUX, B1, B2, B3, and B4 on the PD Unit X50-1340-00.
11. Install a jumper from the AUX terminal to the B terminal for the band desired. B1 is for 1.8MHz to 9MHz, B2 is for 10MHz to 18MHz, B3 is for 19MHz to 24MHz and B4 is for 25MHz to 30MHz.
12. Replace the PD Unit X50-1340-00 in the PLL Assembly X60-1010-00.
13. Use a 3mm nutdriver to remove the 4 hex nuts mounting the VCO Unit X50-1330-00 in the PLL Assembly X60-1010-00, then remove the two phillips screws.
14. Carefully remove the VCO Unit X50-1330-00 from the PLL Assembly X60-1010-00.
15. Use the board layout of the VCO Unit X50-1330-00 to locate Q11.
16. Install C01, C02, C03, C04, C05, and T11 as needed for the band desired. (Install T11 last)
17. Replace the VCo Unit C50-1330-00 in the PLL Assembly X60-1010-00.
18. Install the connectors on the PLL Assembly X60-1010-00.

ALIGNMENT

1. Turn on TS-820
2. Tune VFO to 250.
3. Set band switch to AUX.
4. Set the TUN/NOR switch on the VCO Unit X50-1330-00 to TUN.
5. Connect a frequency counter to terminals TP5 and TP6 on the VCO Unit X50-1330-00. (TP6 is ground.)

6. Adjust T11 for a frequency of 9.08MHz plus the lower limit of the band desired.
7. Connect a frequency counter to TP4 and ground on the PD Unit X50-1340-00 and verify the frequency of the reference oscillator. It may vary ±500KHz.
8. Return the TUN/NOR switch on the VCO Unit X50-1330-00 to the NOR position.
9. Turn off the TS-820.
10. Replace the covers on the PLL Assembly and reinstall it in the TS-820.
11. Replace the top and bottom covers on the TS-820.

CAUTION

Do not use magnetized tools when working on the PLL Assembly X60-1010-00. Beryllium tools would be better than ferrous ones. If the PLL Assembly X60-1010-00 should become magnetized, use a bulk tape eraser on open core AC transformer to demagnetize it.

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

No. 13

SUBJECT: TS-820 RIT Modification DATE 1/27/77

We have had a few reports of the TS-820 RIT tuning being "rubbery". The following information will solve this.

HOW TO MODIFY

1. Remove resistor R27 (1Kohm) on AF-AVR UNIT (X49-1080-00).
2. Install a 10Kohm resistor on foil side of AF-AVR UNIT --- see Figure 1.
3. Install a 1Kohm resistor on RIT control --- see Figure 2.
4. Install a capacitor (3.3μF~10μF) between RIT control and ground --- see Figure 2.
5. Adjust VR-2 on AF-AVR UNIT (X49-1080-00) for the same frequency as the center position of the RIT control.

Fig. 1

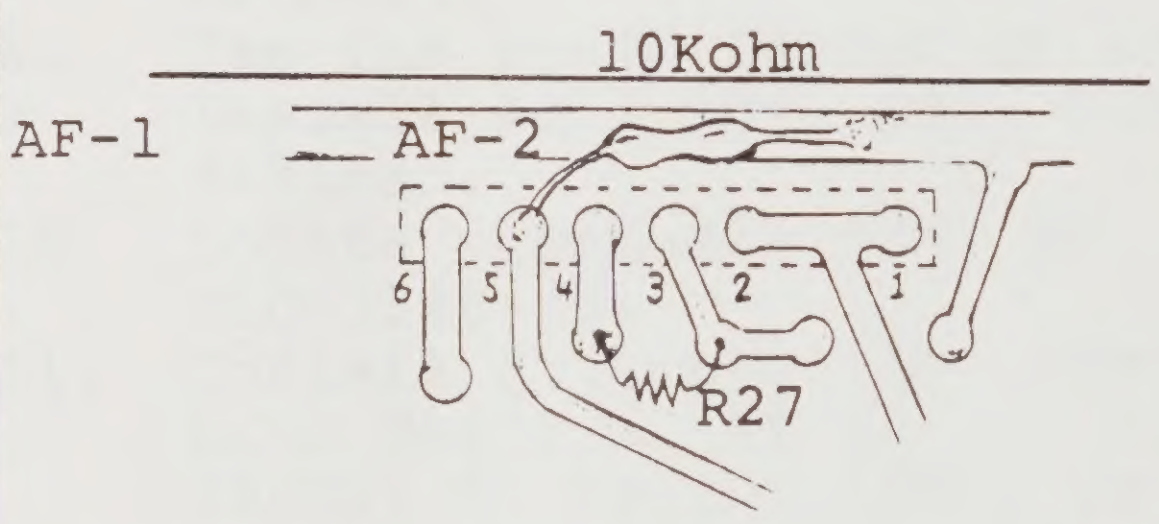

Foil side of AF-AVR UNIT

Fig. 2

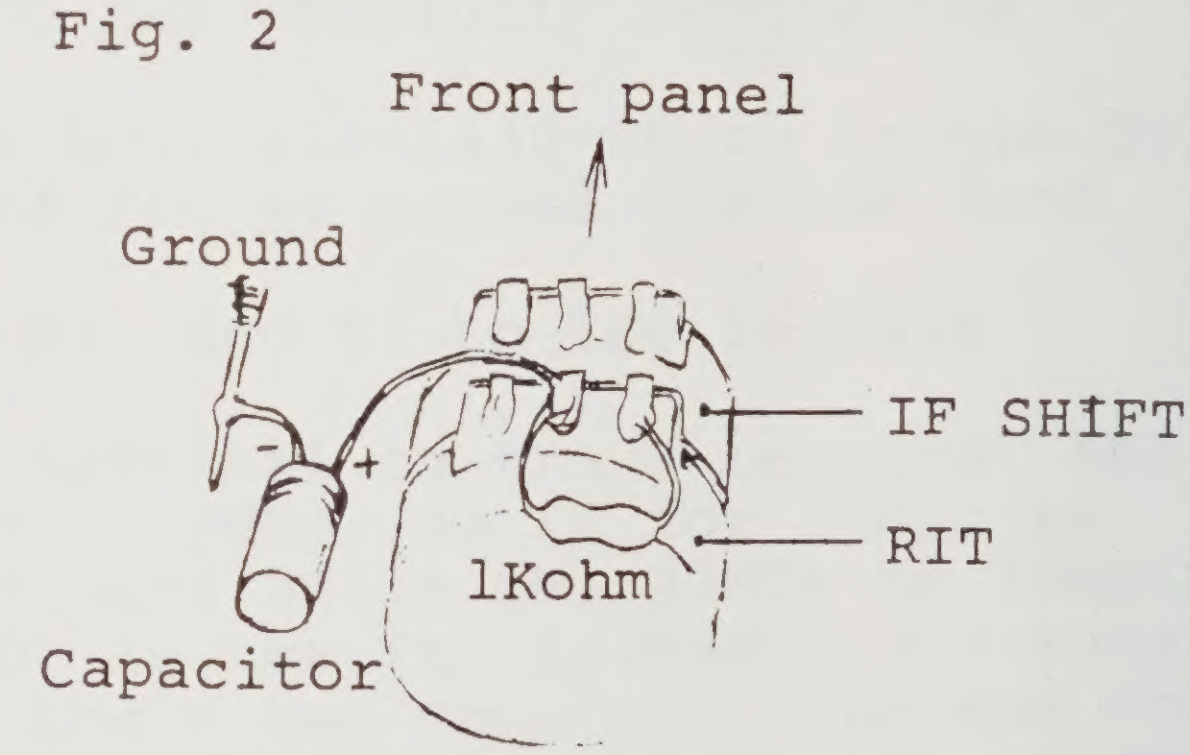

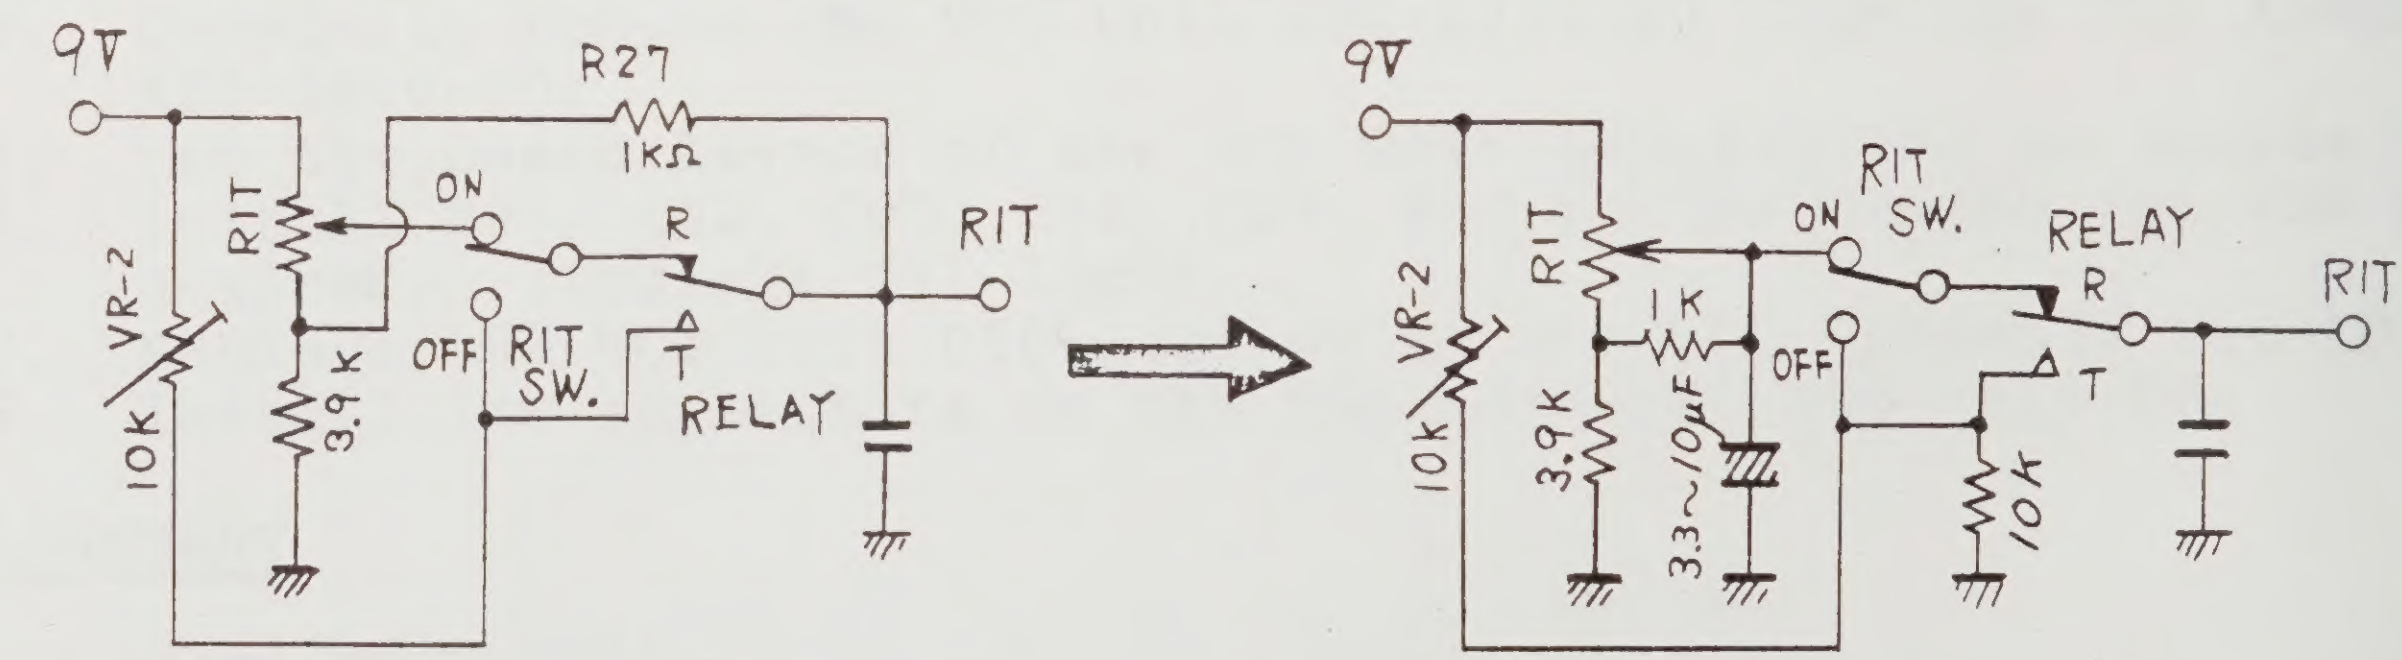

(original) SCHEMATIC DIAGRAM (modified)

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

No. 14a

SUBJECT: Microphone input attenuator for TS-820 DATE 2/16/77

When using a high output microphone (i.e. Shure 444), it is very likely that there will be distortion of the transmitted audio if the processor is used. The reason the distortion occurs is because the processor is between the first microphone amplifier and the microphone gain control. The installation of one of the attenuators shown below will reduce the microphone input to a level that will not cause RF speech processor distortion. The attenuator figures are approximate.

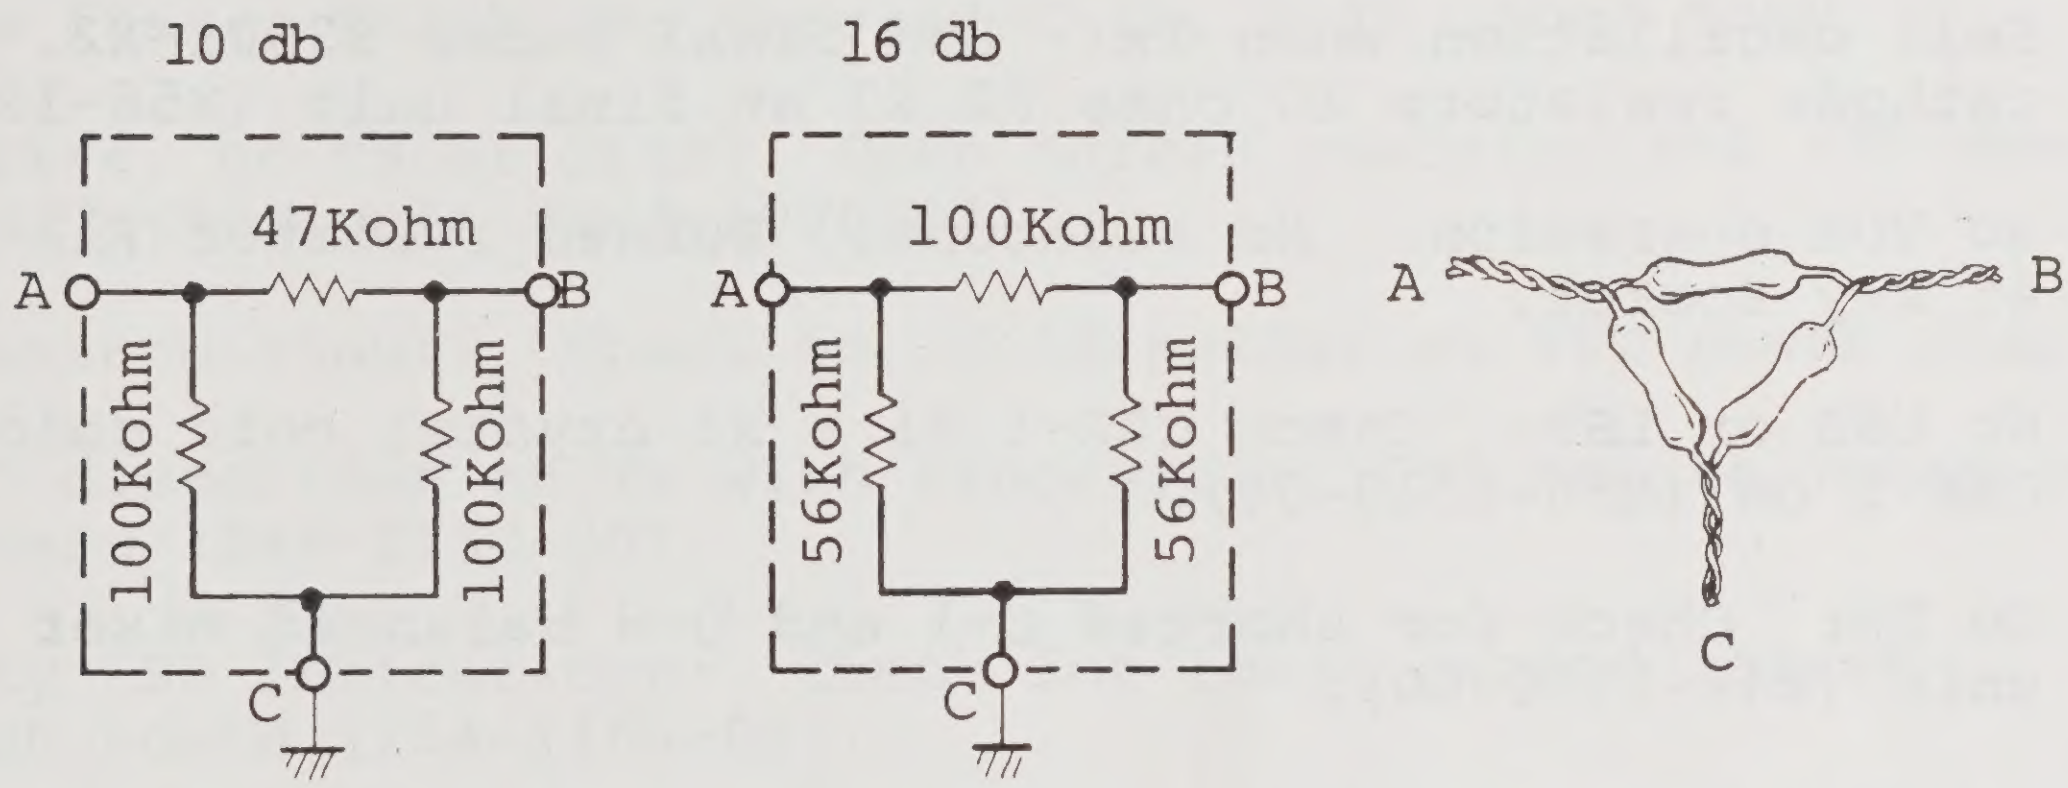

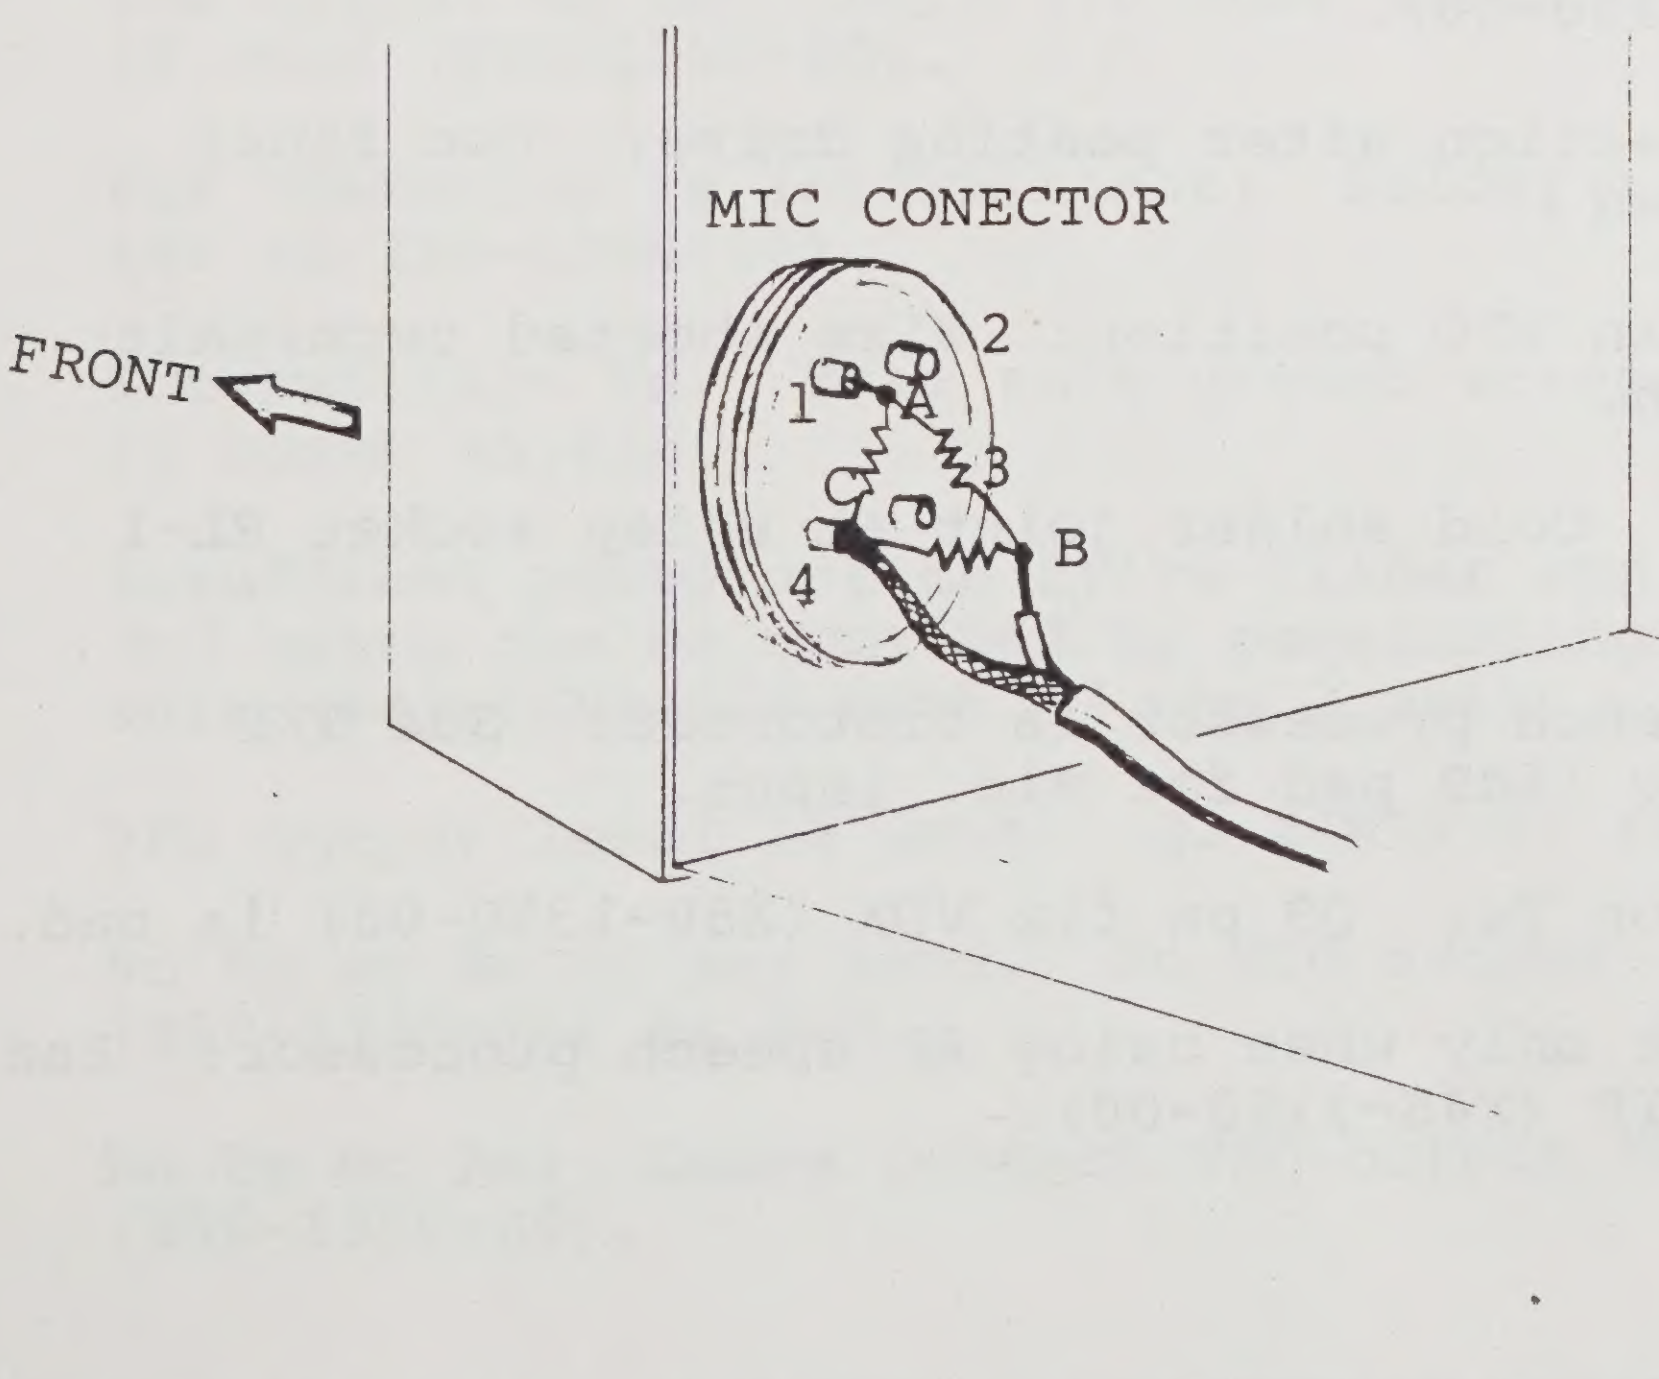

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

SUBJECT: SERVICE NOTES ON TS-820 DATE 10-25-77

TRANSMITTER

1. Mushy audio on transmit: Mic. amps. Q20 and Q21 on IF (X48-1150-00) are bad.

2. No 14V supply: Bad bridge diodes D8 - D10 on (X43-1090-02). LOOSE CON ON AC

3. Intermittant operation of any one band: Check for loosely soldered Xtals in PD unit (X50-1340-00).

4. Mic. gain down: Cold solder joint at SSB xtal filter IF unit (X48-1150-00).

5. Self oscillation when Tx: Bad final tubes S2001-X2. Burned cathode resistors 10 ohms R2 R3 at final unit (X56-1200-00).

6. No VOX operation. No sidetone: Burned resistor R12 220 ohms at key socket.

7. No USB or LSB: Check CAR-1 X1 - X2 crystal cold soldered CAR-1 on (X50-1310-00).

8. No Tx: Check for shorted Q-1 and Q-8 balanced mixer on RF unit (X44-1150-00).

9. No ALC meter movement: Readjustment of meter amp VR-1, VR-2 on IF unit (X48-1150-00).

10. Intermittant ALC action after peaking drive: One final tube S2001-A is bad.

11. Fix lite on when in VFO position: Wire shorted terminals of function switch.

12. No loading of Tx: Cold solder joint at relay socket RL-1 antenna relay.

13. Using Sure 444 speech processor is distorted: See TKC bulletin regarding 16dB pad for mic. input.

14. No relay closure on Tx: Q9 on fix VOX (X50-1350-00) is bad.

15. Very low RF output only when using RF speech processor: Bad Q30 2SC733(y) on IF (X48-1150-00).

TRIO-KENWOOD COMMUNICATIONS, INC. 1111 WEST WALNUT STREET - COMPTON, CALIFORNIA 90220
MAILING: P.O. BOX 7065 - COMPTON, CALIFORNIA 90224

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

SUBJECT: SERVICE NOTES ON TS-820 DATE 10-25-77

TRANSMITTER (Cont'd.)

16. Low RF output on SSB without RF speech processor: Bad Q20 2SC733(y) on (X48-1150-00).

17. Large audio difference between USB and LSB: realign carrier unit per TKC specifications.

18. No loading on 40 meters: Foil path is open on RF coil pack.

19. No Tx when using send switch: Bad R-28 1K and Q-9 2SA562(y) on fix VOX (X50-1350-00).

20. Blows fuse: Check for shorted C-21, C-22 100uf 500V.

21. No drive, no Tx or bias: Open screen resistor R-6 470 ohms at reflector unit (X43-1090-02).

22. VFO intermittant: Check for cold solder at VFO power plug.

23. Audio distortion on Tx with processor: C96 may be loose on IF board (X48-1150-00)

24. Faulty LED indications: Check for loose ground screws on LED board (X54-1180-00).

25. Low output on CW: R-14 470 ohms touch to filter case on IF unit (X48-1150-00).

26. VOX operation is intermittant: Solder touch VS terminal and 14V at (50-1350-00).

27. Intermittant Tx: Make sure ground strap for 12BY7 shield is under shield.

28. Insuffient power out to drive linear amp: An increase of 5-7 watts can be obtained by paralleling R-6 on receiver unit (X43-1090-02) with 47 ohm 2 watt.

29. VFO output level is down: Q2 2SK19(y) inside VFO is bad.

30. No Tx or Rx on any band. No VCO output: Q14 2SC741 on (X50-1330-00) is bad.

31. No Tx or Rx: Loose contact VFO output terminal on fix VOX (X50-1350-00).

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

SUBJECT: SERVICE NOTES ON TS-820 DATE 10-25-77

RECEIVER

1. Low audio output receiver sensitivity and no transmit: -6V supply is bad. Q13 on fix VOX (X50-1350-00).

2. 25KHz callibrator will not zero: ADD 3pf in parallel with TC-1 at (X52-0005-01) marker unit.

3. Receiver sensitivity down: Q2 3SK35(GR) on RF unit (X44-1150-00). +9V on PD unit is shorted. L-6 shorted to ground.

4. Intermittant receive when moving set. (Shock): Check for touching terminals at final relay socket.

5. No receiver or digital: 14V wire pinched between DG-1 chassis and ground.

6. Receiver sensitivity 40dB down: Check for shorted L-8 1.9 antenna coil on coil pack (X44-1140-00).

7. Adjacent signal interferance: See TKC bulletin.

8. No receive audio: Check for shorted TA 7201-P IC module at (X49-1080-00).

9. Poor receive audio: The 100V AC 120 volt taps were mis-wired.

10. Receiver doesn't work 20-40: Check for wafer touch to ground on band switch.

11. No DG-1, no Rx, no Tx, no VCO: Bad D-1 5 volt Zener on Relayunit (X43-1190-00).

12. RIT action seems warbly: See TKC bulletin.

13. Receiver has bad static and is noisey: Bad C14, C15 tantalum on PD unit (X50-1340-00).

14. VFO frequency shift: Check for loose tension of VFO tension spring.

15. USB - LSB will not work: Check for loose connection at C-18 CAR-1 on (X50-1310-00).

16. Intermittant audio: Check for Loose mounting screws on audio board (X49-1080-00).

SERVICE BULLETIN

from: TRIO—KENWOOD COMMUNICATIONS, INC.

SUBJECT: GENERAL NOTES ON TS-820 DATE 10-25-77

1. No output Tx: SG switch is "off".

2. No Tx, Rx, or VFO: There is not a 9P plug installed.

3. Low Rx sensitivity, no Tx: The transverter switch is "on".

4. S meter full deflection when first turned on: Make sure RF gain is not fully CCW.

5. If digital display does not count: Make sure DH is not "on".

6. If there is no DG display: Make sure you are not in remote VFO with no remote VFO.

7. When intermittant in any circuit:

   a. Check for loose black jumper from point to point on circuit board.

   b. Check for broken foil path.

   c. Check for component that has been pulled out or loosely soldered.

   d. Check for solder spash across foil path.

   e. Check for loose pins.

   f. Check for component leads touching to metal IF cans.

   g. Check for wire not soldered at function switch or at any switch or control.

   h. When checking FET, check for excessive voltage at can top usually source, or same G-1, G-2 voltage.

   i. Check for loose Molex mini connector or any foreign substance on pins.

8. Complaint of frequency shift when Tx - CW: This is normal. 800 Hz.

9. Not proper PLL action: Make sure PLL slide switch is in <u>NOR</u> not <u>TUNE</u>.

10. Receiver audio self oscillation at high level: Make sure audio board mounting screws are tight.

SERVICE BULLETIN

from: TRIO–KENWOOD COMMUNICATIONS, INC.

SUBJECT: General Alignment Procedure for the TS-820(S) **DATE** 3-14-78

The purpose of this bulletin is to give a simplified alignment procedure for the TS-820 and TS-820S transceivers. We have tried to combine some of the steps and rearranged the sequence of steps so the alignment may be done quicker. This may be used in lieu of the alignment procedure in the Service Manual.

1. ADJUSTMENT, A.V.R. UNIT (X49-1080-00)

   A) Adjust VR1 for 3.3V
   B) Adjust VR4 for 9V.

2. ADJUSTMENT, V.C.O. UNIT (X50-1330-00)

   A) Place S1 to TUNE and connect a frequency counter to TP5.
   B) Adjust T1~T11 for proper frequency. (See table)

Band	Coil	Set frequency
WWV	T 1	24.08 MHz
1.8	T 2	10.88 MHz
3.5	T 3	12.58 MHz
7	T 4	16.08 MHz
14	T 5	23.08 MHz
21	T 6	30.08 MHz
28	T 7	37.08 MHz
28.5	T 8	37.58 MHz
29	T 9	38.08 MHz
29.5	T10	38.58 MHz
AUX	T11	Received signal +8.83 MHz

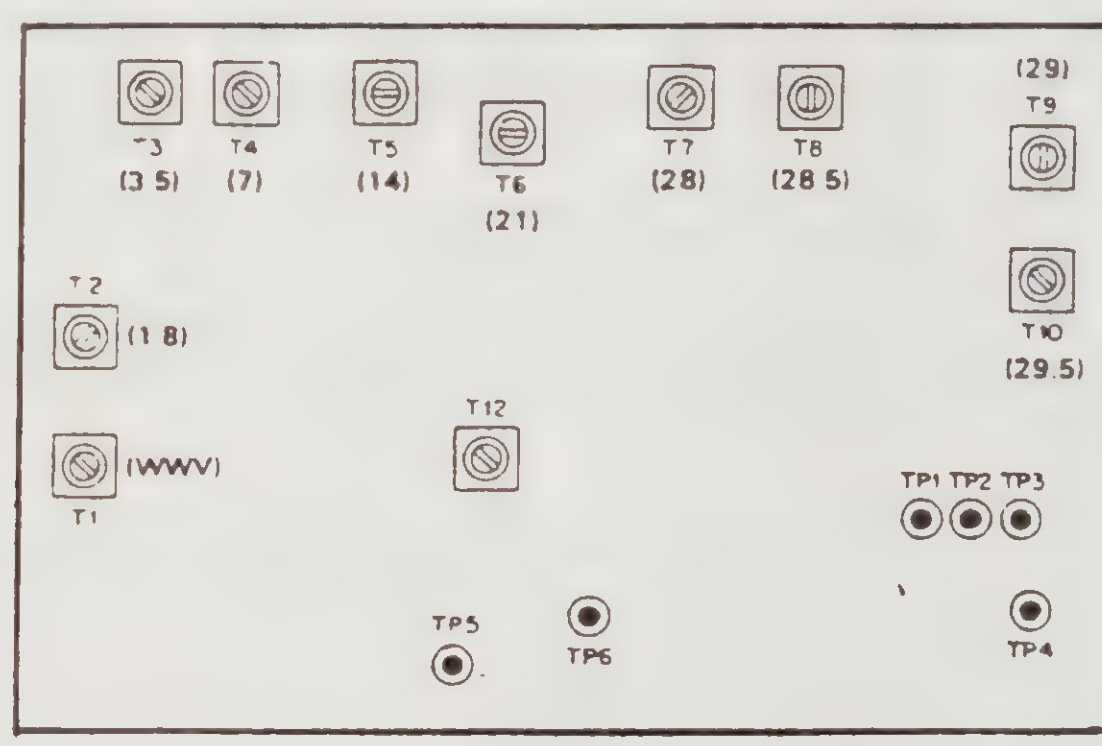

3. ADJUSTMENT OF COIL PACK (X44-1140-00)

   A) Turn screen grid (S.G.) switch (rear panel) off, heater switch ON.
   B) Center DRIVE control.
   C) Peak coil pack all bands for max. reading on panel meter in TX and RX (except WWV in TX).

Adjusting sequence	BAND	VFO scale
1	1.8	100
2	3.5	250
3	7	150
4	14	175
5	WWV	0 (15.0MHz)
6	21	225
7	28.5	500

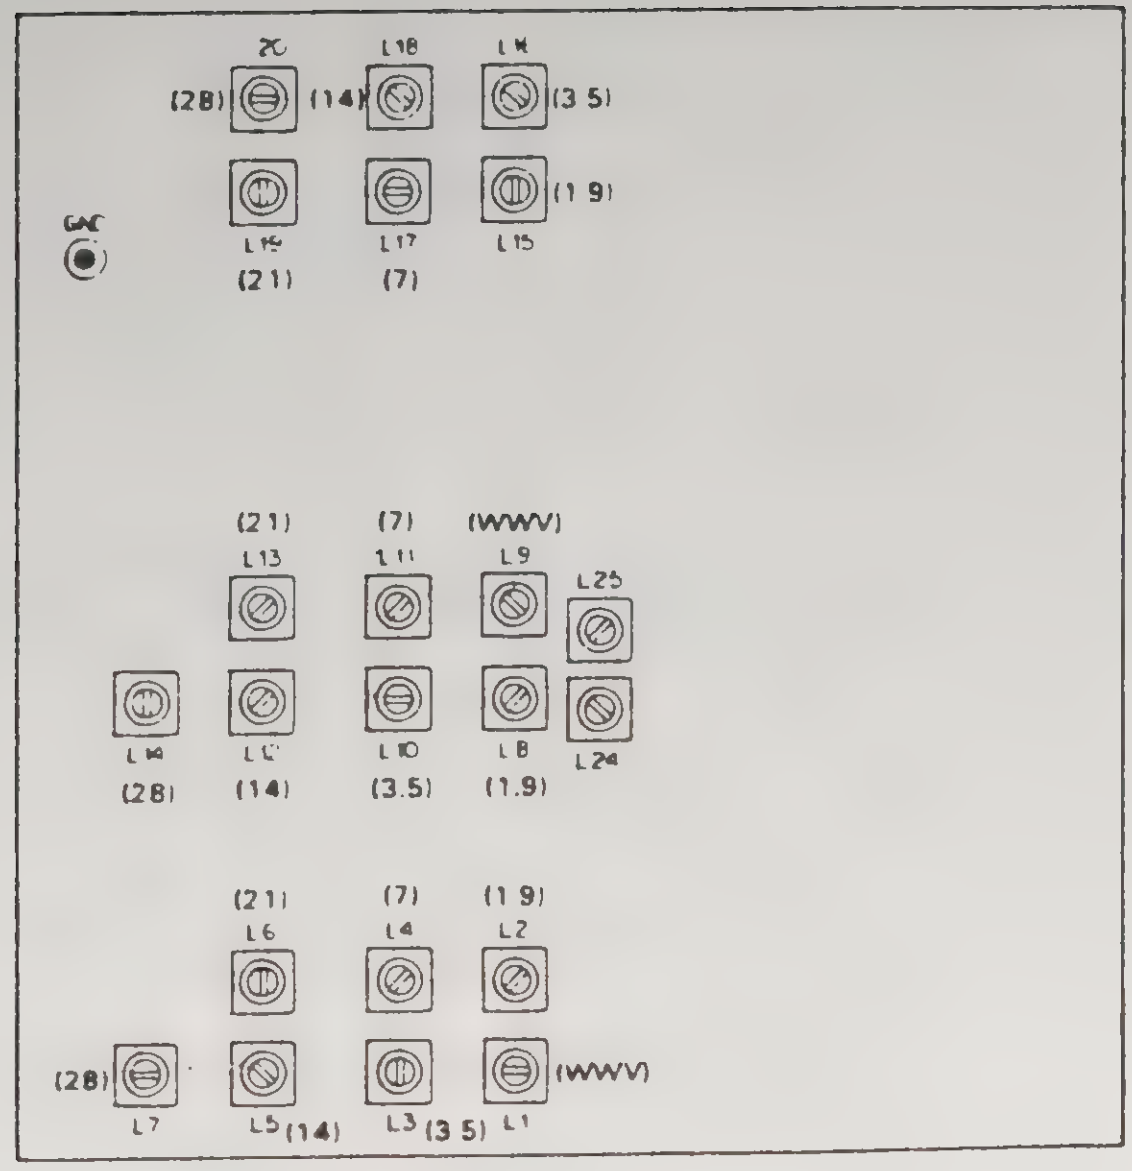

4. CARRIER POINT (X50-1310-00)

A) Peak TX power in CW mode. Then switch to LSB and modulate with Audio Gen. (A.G.) @ 5mv 1500Hz while reducing mic. gain to 50 watts output.
B) In the CW mode connect a frequency counter to TP5 on the IF Unit (X48-1150-00) and adjust TC1 on the CAR-2 Unit (X50-1320-00) for 8.830.7MHz.
C) Adjust VR1 on the CAR-1 Unit (X50-1310-00) for equal output freq. on USB and LSB.
D) In LSB mode, check the RX and TX frequency at TP-5 on the IF Unit. It should not change.
E) With mode switch in LSB position Audio Gen. input @ 5mv, vary input frequency from 400Hz to 2600Hz and check for BALANCED output while monitoring on scope LSB to USB and vice versa.

5. SPEECH PROCESSOR (X48-1150-00)

A) Tune TX for maximum output power at 14.175MHz.
B) Set mic. gain in center and S.G. off, comp. meter on.
C) Place scope on TP2 and counter on TP3
D) Set A.G. for 10mv @ 1500Hz and modulate unit.
E) Turn processor max. "on" position, and adjust TC4 to 451.9 ± 200Hz. Adjust T11, T12, T13 for peak indication on COMP. meter.
F) Peak T14 by scope on TP2.
G) Turn processor full C.C.W. and reduce A.G. gain to 1mv @ 400Hz.
H) Adjust TC4 for max. level on scope but <u>at proper</u> frequency. (451.9 ± 200Hz) (May adjust slightly off frequency if higher peak can be obtained.)
I) Sweep A.G. frequency from 400Hz to 2000Hz and check for balanced output on LSB and USB.
J) COMP. full clockwise and @ 1500Hz adjust TC3 and VR6 for min. reading on COMP. meter.
K) At 1500Hz @ 10mv adjust VR7 to balance processor in "on" and "off" positions (same level).

6. BALANCE MOD. ADJUSTMENT (X48-1150-00)

A) In CW position adjust Tx for max. output. Key unit with mode switch in SSB position (no Mod.).
B) Adjust VR5 and TC2 for min. output level on scope.
C) Check BALANCED output LSB and USB.

7. NEUTRALIZATION

A) S.G. switch turned off after Tx has been tuned in CW mode at 21.3MHz.
B) Adjust neutralization cap in final cage for min. output as seen on scope.

SB:ar

NO D4 READOUT

LOOSE CON ON VFO - RCA PLUG + PWR PL

COUNTS CONTINOUS ON 28 + ABOVE

OK ON 21 DOWN BUT GETS HOT +

LOOSES 3d DIGIT.

TROUBLE FIX -

ALIGN COIL ON COUNTER ASSY

YEL TOP - CLOSEST TO FRONT.

TAKE OUT UNIT + HOOK UP ON

BACKSIDE. PUT SCOPE ON FIRST PIN

TURN YEL COIL CCW $\frac{1}{8}$ - $\frac{1}{4}$ TURN

UNTIL SCOPE DOES NOT JUMP

F

M

P

P

A

A

A

R

F

A

C

S

I

H

S

I

R

R

T

C

D

W

TS-820 SPECIFICATIONS

FREQUENCY RANGE .... 160 meter band — 1.80 to 2.00 MHz
80 meter band — 3.50 to 4.00 MHz
40 meter band — 7.00 to 7.30 MHz
20 meter band — 14.00 to 14.35 MHz
15 meter band — 21.00 to 21.45 MHz
10 meter band — 28.00 to 28.50 MHz (A)
10 meter band — 28.50 to 29.00 MHz (B)
10 meter band — 29.00 to 29.50 MHz (C)
10 meter band — 29.50 to 29.70 MHz (D)
WWV — 15.0 MHz (receive only)

MODE .... USB, LBS, CW, FSK

POWER REQUIREMENTS ....

	120/220 VAC, 50/60 Hz operation	13.8V DC operation
Receive	45 watts (heaters on) 26 watts (heaters off)	5A (heaters on) 0.6A (heaters off)
Transmit	280 watts (maximum)	15A (maximum)

PLATE POWER INPUT ....

120/220 VAC, 50/60 Hz operation	13.8V DC operation
200 watts PEP for SSB operation 160 watts DC for CW operation 100 watts for FSK operation	120 watts PEP for SSB operation 90 watts DC for CW operation 60 watts for FSK operation

AUDIO INPUT IMPEDANCE .... 50 k ohms (high impedance)

AUDIO OUTPUT IMPEDANCE .... 4 to 16 ohms (speaker or headphones)

AUDIO OUTPUT .... More than 1.5 watts (with less than 10% distortion) into an 8 ohm load.

RF OUTPUT IMPEDANCE .... 50 ~ 75 ohms

FREQUENCY STABILITY .... Within 100 Hz during any 30 minute period after warmup
Within ±1 kHz during the first hour after 1 minute of warmup

AUDIO FREQUENCY RESPONSE .... 400 to 2600 Hz, within −6 db

CARRIER SUPPRESSION .... Carrier better than 40 db down from the output signal

SIDEBAND SUPPRESSION .... Unwanted sideband is better than 50 db down from the output signal

IMAGE RATIO .... Image frequency (8.83 MHz) better than 60 db (50 db for 10 meter band) down from the output signal

HARMONIC RADIATION .... Better than 40 db down from output signal

SPURIOUS RADIATION .... Better than 60 db down from output signal (without spurious radiation)

IF REJECTION .... IF frequency is 80 db or more down from output signal

RECEIVER SENSITIVITY .... 0.25 μV S/N 10 db or more

RECEIVER SELECTIVITY .... SSB: 2.4 kHz bandwidth (−6 db down)
4.4 kHz bandwidth (−60 db down)
CW*: 0.5 kHz bandwidth (−6 db down)
1.8 kHz bandwidth (−60 db down)
* (with optional CW filter installed)

TUBE AND SEMICONDUCTOR COMPLEMENT .... 3 Tubes
5 IC's
30 FET's
74 Transistors
167 Diodes

DIMENSIONS .... 13.2″ wide × 5.9″high × 13.2″ deep

WEIGHT .... 37.4 lbs.

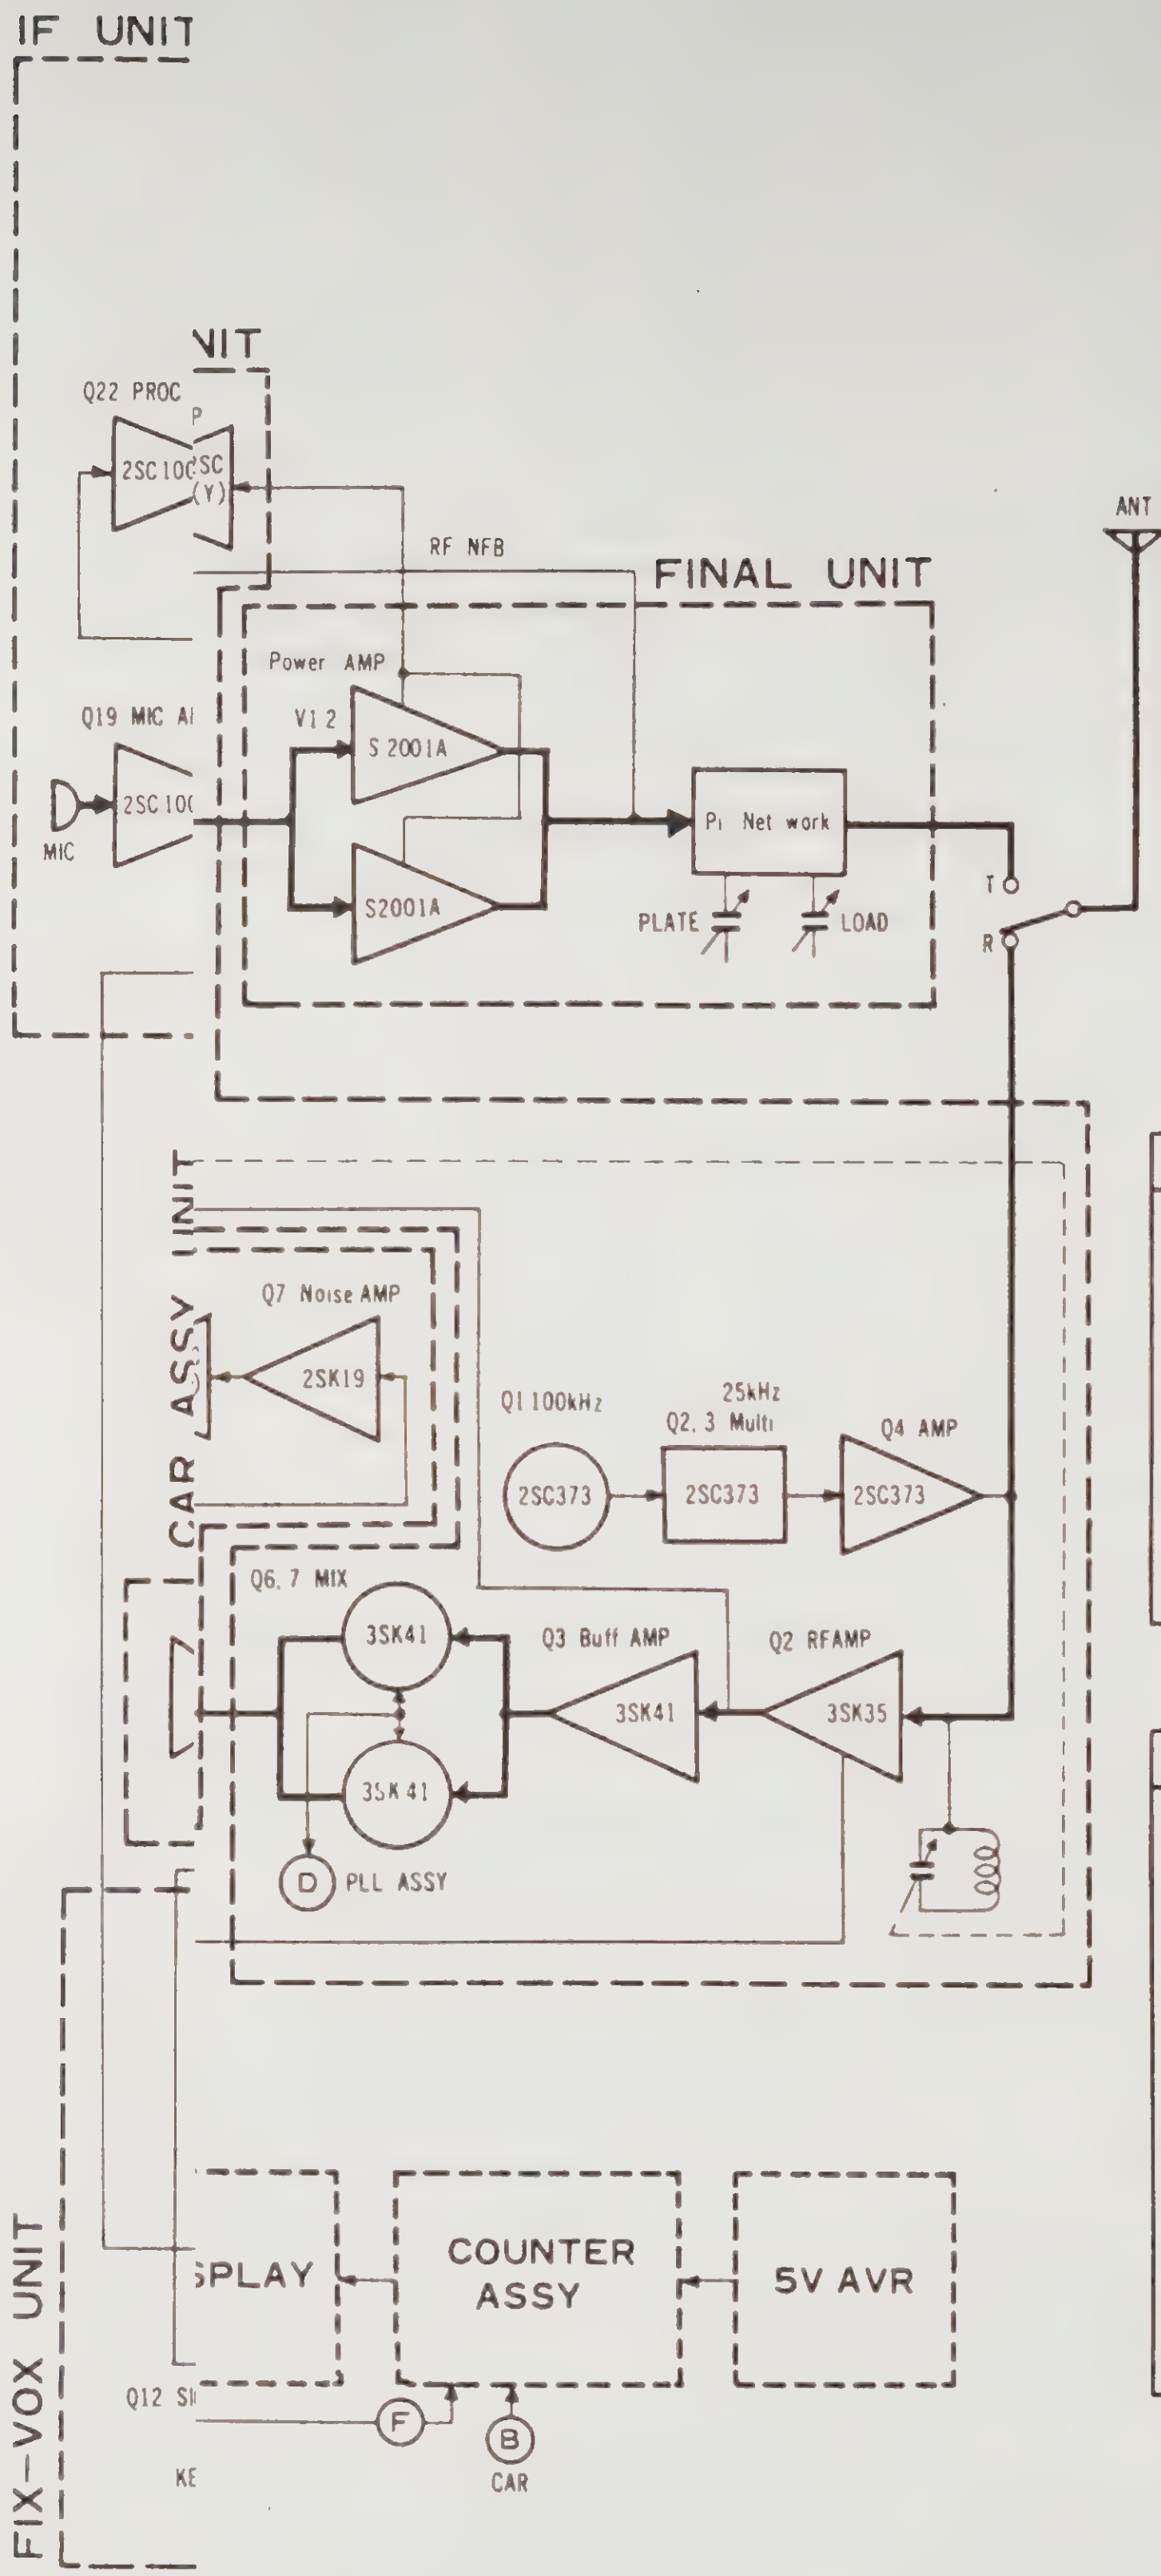

CAR FREQ

MODE	FREQ	OSC
LSB	8828.5	CAR1
USB	8831.5	CAR1
CW(T)	8830.7	CAR2
CW(R)	8831.5	CAR1
FSK S	8830.7	CAR2
FSK MN	8830.53	CAR2
FSK MW	8829.85	CAR2
FSK(R)	8828.5	CAR1

HET RFEQ(VCO)

BAND	FREQ
JJY wwV	23.83 ~ 24.33
1.8	10.63 ~ 11.13
3.5	12.33 ~ 12.83
7	15.83 ~ 16.33
14	22.83 ~ 23.33
21	29.83 ~ 30.33
28	36.83 ~ 37.33
28.5	37.33 ~ 37.83
29	37.83 ~ 38.33
29.5	38.33 ~ 38.83
AUX	

FEATURES

1. HF all-band SSB/CW/RTTY transceiver employing PLL system
This equipment is a SSB/CW/RTTY transceiver covering 1.8 to 29.7 MHz frequency bands (WWV; 15 MHz) in which an ideal circuit configuration has been achieved by employing a newly developed PLL technique.

2. Excellent spurious radiation characteristic and receiving two-signal characteristic
Thanks to employment of a FET balanced type mixer in each of the transmitting and receiving circuits and combination of MOS FET and a single conversion system, excellent performance is obtained in both the spurious radiation characteristic and receiving two-signal characteristic.

3. Built-in IF shift circuit
The IF shift circuit used, also called a pass-band tuning circuit, shifts the pass-band of intermediate frequency without changing the received frequency. Where there is radio interference, the pass-band can be shifted or the receiving frequency response can be set to a desired band only by manipulating one control knob.

4. Built-in RF processor
This transceiver is provided with a unique speech processor developed by KENWOOD. This circuit serves for compression with small time constant at 455 kHz. Due to processing at high frequency, the resulting distortion is minimized and deterioration of the tone quality is prevented unlike clippers.

5. Employment of RF negative feedback
RF negative feedback is applied between the final transmitting stage and the driver stage to suppress cross modulation distortion. The good-reputation high-quality, transmission radio waves are improved further by combination use of the amplifier type ALC and RF negative feedback.

6. Newly developed analogue dial
Due to combination use of the newly developed monoscale dial and subdial, it is very easy to read frequencies. Since such a circuit that a carrier frequency is kept unchanged regardless of change-over of operation mode is employed, each frequency is accurately indicated only by one dial index.

7. Rigid construction and excellent operability
Since die cast is employed for the front panel and the chassis is constructed in the sufficient consideration of strength, the transceiver maintains high mechanical stability even when installed on a vehicle. The reduction gears of the PLATE and LOAD knobs, the shape and arrangement of knobs designed on the base of human engineering permit superb operability together with the dial construction easy to read.

8. Built-in monitoring circuit
Unlike conventional transceivers, TS-820 incorporates a monitoring circuit that permits the operator's speech to be monitored by himself during transmission. This circuit can be used to check the modulated conditions or adjust the RF processor.

9. Audio frequency response change-over circuit to be used during SSB or CW receiving.
During CW receiving, audio frequency band is automatically narrowed to obtain tone quality easy to receive.

10. Built-in fixed channel circuit with RIT (crystal; option)
This transceiver is provided with a fixed channel circuit having RIT. Since cross operation is possible between this circuit and built-in VFO, high technical operation is enjoyable.

11. Transverter connection terminal provided
This transceiver permits combination use with transverter TV-502 (for 2m) only by connector connection. Automatic change-over can also be effected between HF and VHF by using the power switch provided on the transverter.

12. Built-in AC power supply and attachable DC-DC converter
Mobile operation of the transceiver can be performed by equipping a DC-DC converter unit (DS-1) available at option.

13. Wide variety of auxiliary circuits and divice
This transceiver is provided with wide variety built-in accessory circuits such as a noise blanker, VOX circuit, side tone circuit, maker circuit, built-in speaker, AGC 3-position change-over switch, heater switch, IF OUT terminal and connection terminals for a linear amplifier.

14. Systematized optional equipment
Optional equipments are fully provided such as remote VFO VFO-820, external speaker SP-520, CW filter YG-88C, digital display DG-1, transverter TV-502 microphone MC-50 and low-pass filter LF-30A.

15. Use of digital display dial DG-1 (option)

1) Digital display dial
The digital dial of TS-820 indicates transmit and receive frequencies using carrier, VFO and local oscillator signals instead of converting VFO frequencies. Thus, accurate frequencies can be read at all times at any band and any operating mode.
Since the accuracy of frequencies is set up only by the 1 MHz standard oscillator, frequencies can be read accurately up to 100 Hz order by calibrating the oscillator with WWV.
The green indication on the dial assures many hours of fatigueless operation.

2) D.H. (display hold) switch
By pressing the D.H. switch, the frequency read on the digital remains on, thus serving as a memory system.

TS-820 BLOCK DIAGRAM

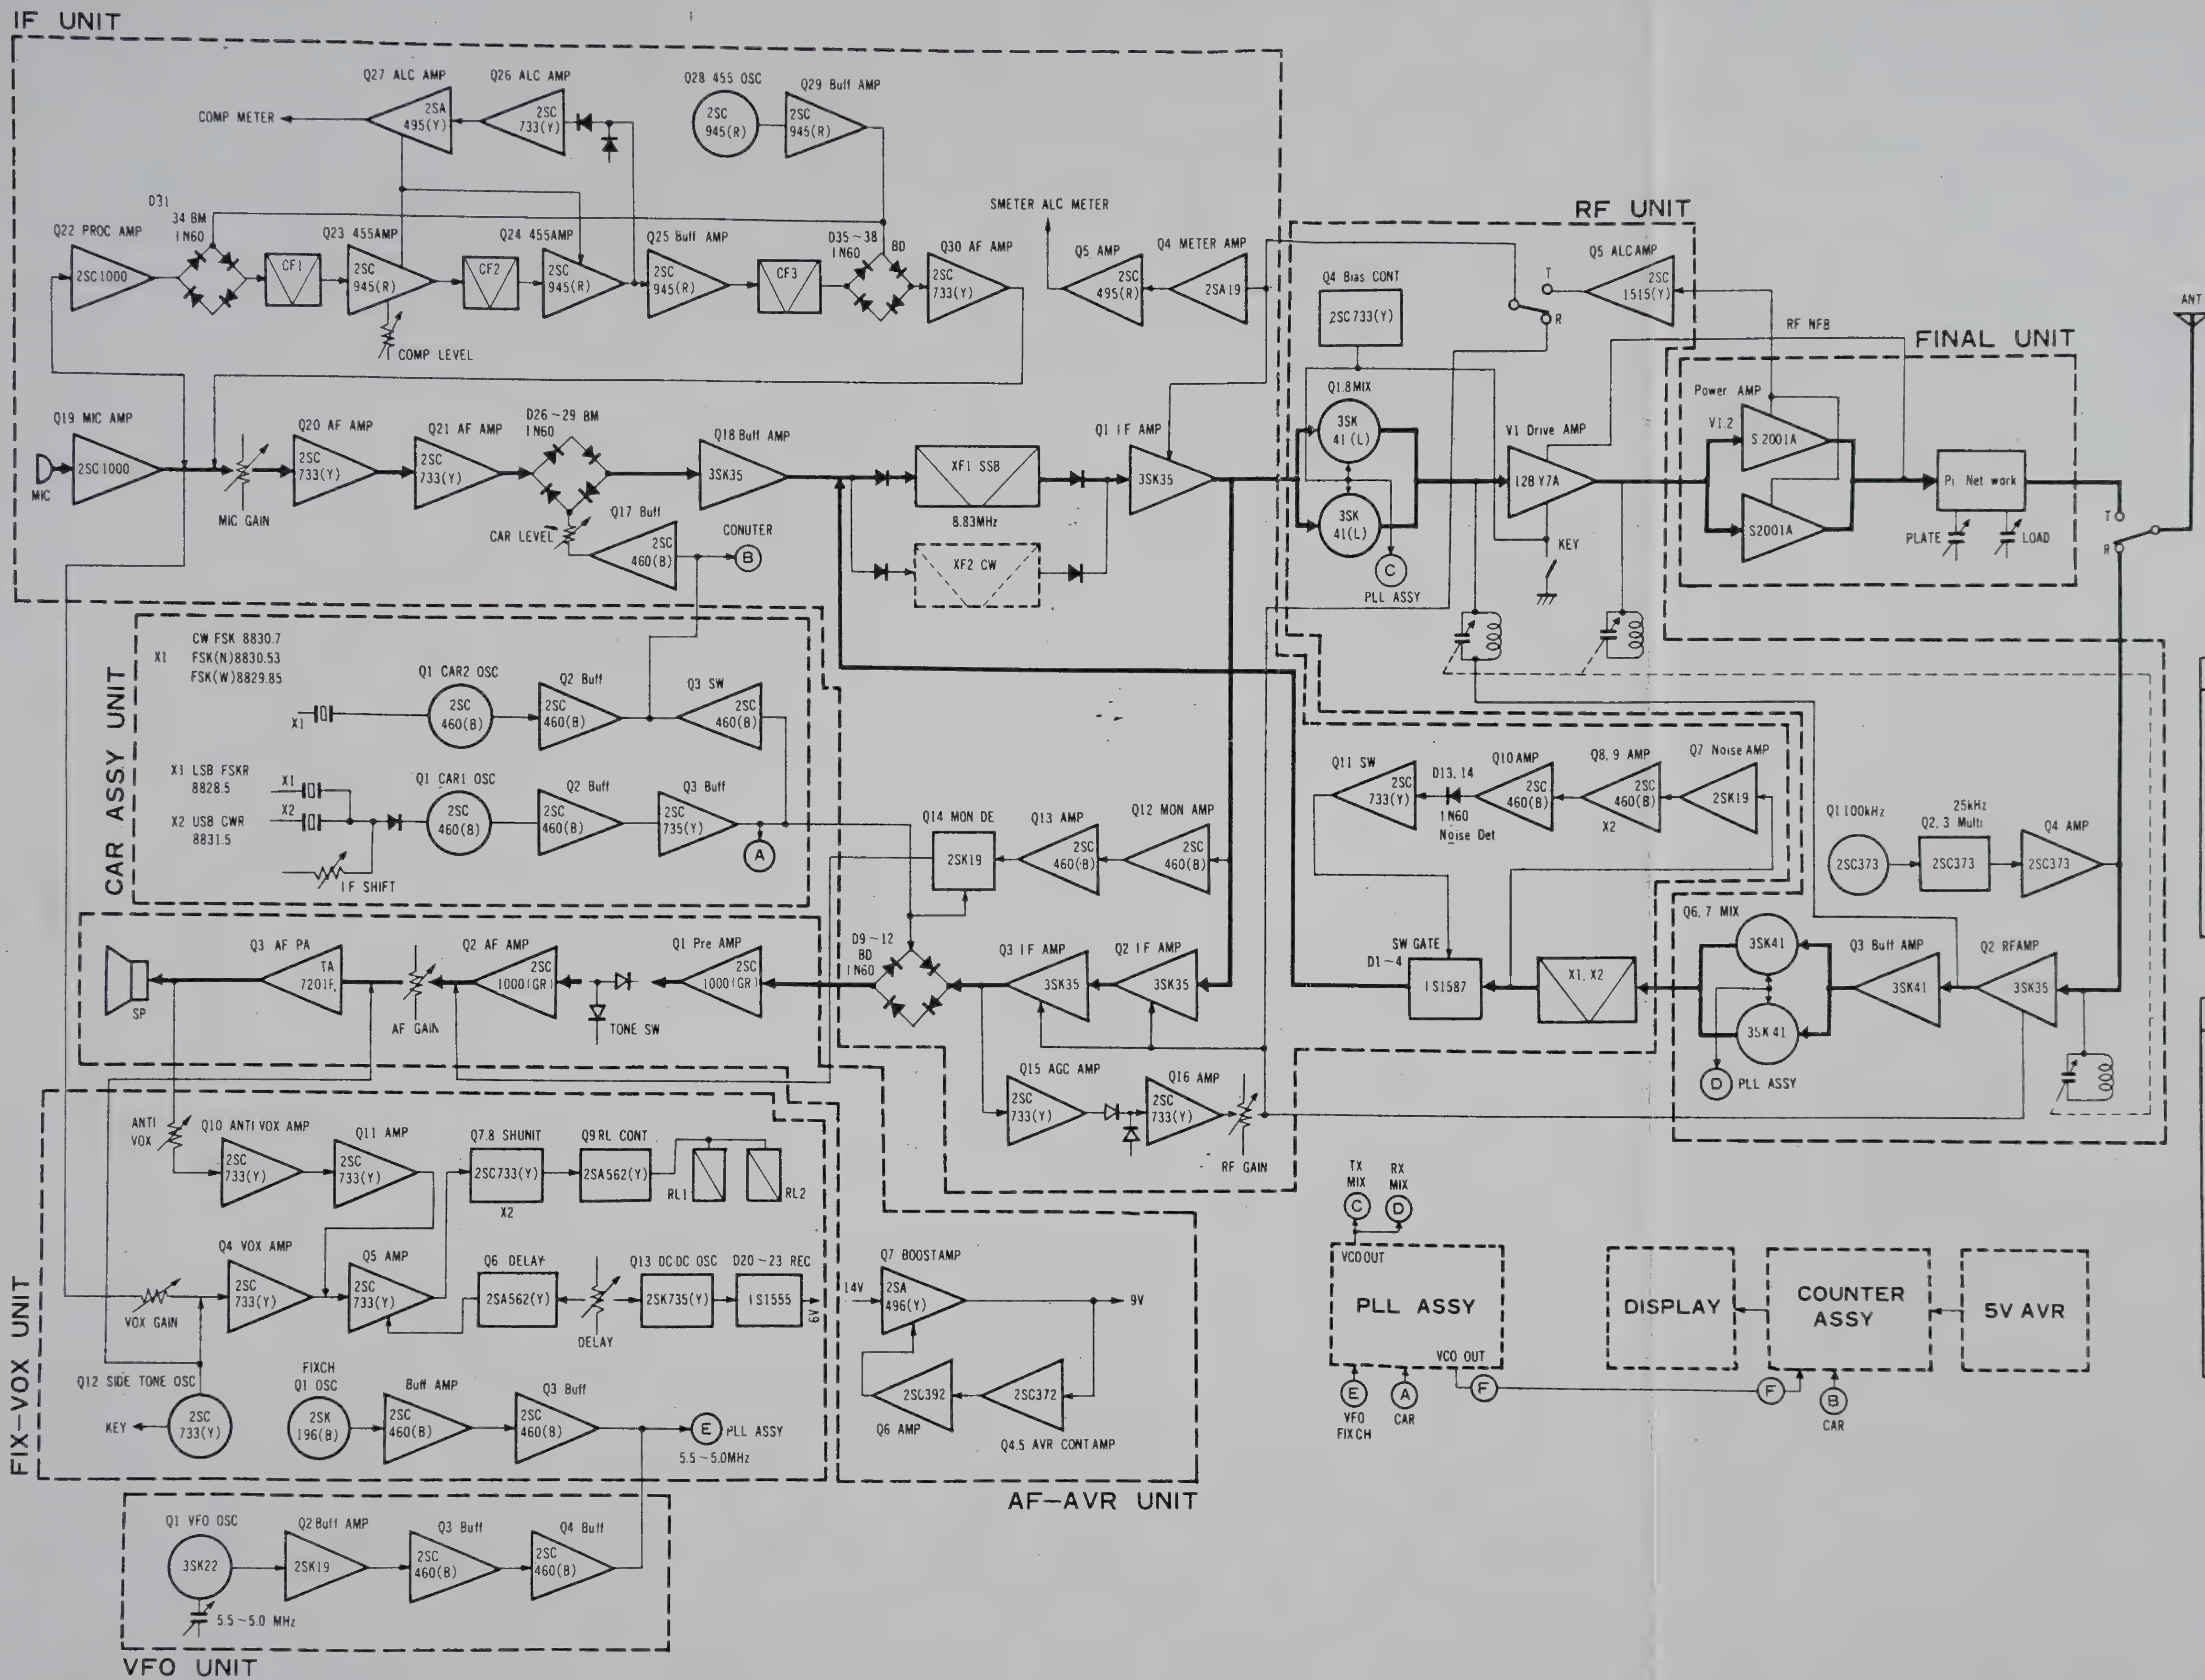

CAR FREQ

MODE	FREQ	OSC
LSB	8828.5	CAR1
USB	8831.5	CAR1
CW(T)	8830.7	CAR2
CW(R)	8831.5	CAR1
FSK S	8830.7	CAR2
FSK M N	8830.53	CAR2
FSK M W	8829.85	CAR2
FSK(R)	8828.5	CAR1

HET RFEQ(VCO)

BAND	FREQ
JJY wwV	23.83~24.33
1.8	10.63~11.13
3.5	12.33~12.83
7	15.83~16.33
14	22.83~23.33
21	29.83~30.33
28	36.83~37.33
28.5	37.33~37.83
29	37.83~38.33
29.5	38.33~38.83
AUX	

FEATURES

1. HF all-band SSB/CW/RTTY transceiver employing PLL system
This equipment is a SSB/CW/RTTY transceiver covering 1.8 to 29.7 MHz frequency bands (WWV; 15 MHz) in which an ideal circuit configuration has been achieved by employing a newly developed PLL technique.

2. Excellent spurious radiation characteristic and receiving two-signal characteristic
Thanks to employment of a FET balanced type mixer in each of the transmitting and receiving circuits and combination of MOS FET and a single conversion system, excellent performance is obtained in both the spurious radiation characteristic and receiving two-signal characteristic.

3. Built-in IF shift circuit
The IF shift circuit used, also called a pass-band tuning circuit, shifts the pass-band of intermediate frequency without changing the received frequency. Where there is radio interference, the pass-band can be shifted or the receiving frequency response can be set to a desired band only by manipulating one control knob.

4. Built-in RF processor
This transceiver is provided with a unique speech processor developed by KENWOOD. This circuit serves for compression with small time constant at 455 kHz. Due to processing at high frequency, the resulting distortion is minimized and deterioration of the tone quality is prevented unlike clippers.

5. Employment of RF negative feedback
RF negative feedback is applied between the final transmitting stage and the driver stage to suppress cross modulation distortion. The good-reputation high-quality, transmission radio waves are improved further by combination use of the amplifier type ALC and RF negative feedback.

6. Newly developed analogue dial
Due to combination use of the newly developed monoscale dial and subdial, it is very easy to read frequencies. Since such a circuit that a carrier frequency is kept unchanged regardless of change-over of operation mode is employed, each frequency is accurately indicated only by one dial index.

7. Rigid construction and excellent operability
Since die cast is employed for the front panel and the chassis is constructed in the sufficient consideration of strength, the transceiver maintains high mechanical stability even when installed on a vehicle. The reduction gears of the PLATE and LOAD knobs, the shape and arrangement of knobs designed on the base of human engineering permit superb operability together with the dial construction easy to read.

8. Built-in monitoring circuit
Unlike conventional transceivers, TS-820 incorporates a monitoring circuit that permits the operator's speech to be monitored by himself during transmission. This circuit can be used to check the modulated conditions or adjust the RF processor.

9. Audio frequency response change-over circuit to be used during SSB or CW receiving.
During CW receiving, audio frequency band is automatically narrowed to obtain tone quality easy to receive.

10. Built-in fixed channel circuit with RIT (crystal; option)
This transceiver is provided with a fixed channel circuit having RIT. Since cross operation is possible between this circuit and built-in VFO, high technical operation is enjoyable.

11. Transverter connection terminal provided
This transceiver permits combination use with transverter TV-502 (for 2m) only by connector connection. Automatic change-over can also be effected between HF and VHF by using the power switch provided on the transverter.

12. Built-in AC power supply and attachable DC-DC converter
Mobile operation of the transceiver can be performed by equipping a DC-DC converter unit (DS-1) available at option.

13. Wide variety of auxiliary circuits and divice
This transceiver is provided with wide variety built-in accessory circuits such as a noise blanker, VOX circuit, side tone circuit, maker circuit, built-in speaker, AGC 3-position change-over switch, heater switch, IF OUT terminal and connection terminals for a linear amplifier.

14. Systematized optional equipment
Optional equipments are fully provided such as remote VFO VFO-820, external speaker SP-520, CW filter YG-88C, digital display DG-1, transverter TV-502 microphone MC-50 and low-pass filter LF-30A.

15. Use of digital display dial DG-1 (option)

1) Digital display dial
The digital dial of TS-820 indicates transmit and receive frequencies using carrier, VFO and local oscillator signals instead of converting VFO frequencies. Thus, accurate frequencies can be read at all times at any band and any operating mode.
Since the accuracy of frequencies is set up only by the 1 MHz standard oscillator, frequencies can be read accurately up to 100 Hz order by calibrating the oscillator with WWV.
The green indication on the dial assures many hours of fatigueless operation.

2) D.H. (display hold) switch
By pressing the D.H. switch, the frequency read on the digital remains on, thus serving as a memory system.

OUTLINE / CIRCUIT DESCRIPTION

OUTLINE

The block diagram of TS-820 is shown on page 4.
The receiver part employs a single superheterodyne system, while the transmitter part employs a single conversion system having a filter type SSB generator. The intermediate frequency used is 8830 kHz.
The local oscillator employs a phase locked loop (PLL) circuit controlled by VFO and the mixer circuit is of a balanced mixer type using dual-gate MOS FET in each of transmission and reception. Thus, spurious radiation is minimized during transmission, and the desired signal can be received without being interferred by large signals of adjacent channel or spurious radiation, thus obtaining superb transmitting and receiving performances.
The IF shift function (electronic pass-band tuning) is also realized by making the most of PLL characqeristic and use of one SSB filter permits the same effect as in use of exclusive filters for USB and LSB.
In addition to the conventional accessory functions, the various circuits newly developed such as RF speech processor and transmission monitor are provided

CIRCUIT DESCRIPTION

TRANSMITTER SECTION

A voice signal applied to the microphone is fed to IF unit and amplified by microphone amplifiers Q19 ~ Q21, which performs faithful amplification using low-noise type transistors
The audio frequency signal, after amplified, is applied to a ring modulator consisting of four diodes D26 ~ D29. The DSB output of the ring modulator is passed through buffer amplifier Q18 and a crystal filter. Then after converted into SSB signal, the output is further IF amplified by Q1 to be applied to the transmitter mixer in RF unit.
The transmitter mixer is of a double balanced mixer configuration using two MOS FETs Q1 and Q8 (3SK41). In turn the output of VCO (voltage controlled oscillator) controlled PLL is used for the local oscillation, thereby minimizing spurious radiation. The SSB signal, the transmission signal converted into the desired frequency, is amplified by transmitter driver tube 12BY7A and then is applied to the final stage power amplifier.
The final stage tubes are operated in AB1 class to amplify SSB signal with low distortion and the output thus obtained is fed to the antenna through a π matching circuit.
RF negative feedback is applied between the final stage and the driver stage to suppress the cross modulation distortion further.

RECEIVER SECTION

The incoming signal is passed through RF ATT switch and after attenuated by approx. 20 dB, if necessary, is applied to RF unit, and then RF amplified by Q2. The amplified signal is passed through buffer amplifier Q3 and is mixed with the VCO output by balanced mixer consisting of two dual-gate MOS FETs Q6 and Q7, thereby being converted in IF signal of 8830 kHz.
This signal is fed to IF unit and, after passing through the noise blanker circuit and crystal filter, is amplified by three stages amplifiers Q1, Q2 and Q3 (3SK35) and then converted into AF signal by a ring detector consisting of four diodes D9 through D12.
The AF signal thus obtained is applied to AF AVR unit and amplified by Q1, Q2 and Q3 to a sufficient level enough to drive the speaker. The frequency response of the AF amplifier is changed over to that for CW or SSB in interlocking with MODE switch.

UNIT

IF UNIT (X48-1150-00)

The IF unit is a very principal unit provided with many functions in both transmission and reception. It consists of a microphone amplifier, ring modulator, crystal filter, transmitter/receiver IF amplifier and ring detector as well as a noise blanker, AGC amplifier, S meter amplifier, speech processor and monitoring circuit.
Crystal filters are equipped only for SSB, but CCW filters available at option can be attached easily.

RF UNIT (X44-1150-00)

This unit includes the ALC amplifier and the block bias circuit, centering around the transmitter and receiver RF amplifier stage and mixer circuit. They are arranged together with the coil pack unit of centralized tuning circuit.

COIL PACK UNIT (X44-1140-00)

Individual interstage coils of each band, band change-over rotary switch and variable capacitors are arranged neatly in this unit, while operating in combination with the RF unit.

PLL ASSEMBLY UNIT (X60-1010-00)

This consists of PD unit (X50-1340-00) and VCO unit (X50-1330-00) to compose transmitter and receiver local oscillators. Oscillation output having the same stability as in the built-in VFO is obtained for each frequency band.
The PD unit consisting of crystal oscillators for respective frequency bands, two mixers, a wave shaper and a phase comparator generates a control voltage for VCO (voltage controlled oscillator) as a reference oscillator, and also configurates an electronic IF shift loop arrangement using the carrier signal supplied from outside.
The VCO unit consists of oscillator for respective frequency bands using FET (VCO), buffer amplifier and the oscillation output stopping circuit, which stops the oscillation output when PLL fails, and its output frequency is controlled by the control signal fed from the PD unit.
Both units use diode switches for band change-over.

COUNTER ASSEMBLY UNIT (X60-1020-00) (DG-1: Option)

This unit consists of a countermixer unit (X54-1150-00) and a counter unit (X54-1160-00); the former mixes VCO output (the local oscillation signal of mixer) with a carrier signal into actual operating frequency and the latter counts the digital value of that frequency.

CIRCUIT DISCRIPTION / FUNCTIONAL DISCRIPTION

These circuits are strictly housed in a shield case. Since all local oscillator signals are read after combined with carrier signals, actual operating frequency can be always counted. The output of the counter is picked out as a signal for driving the display tube and supplied to the display unit.

DISPLAY UNIT (X54-1170-00) (DG-1: Option)

The operating frequency counted by the counter unit is indicated by a 6-digit fluorescent display tube. Use of blue display color won't weary the operator's eye.

5V AVR UNIT (X43-1220-00) (DG-1: Option)

This unit is a 5-volt stabilized power supply for the counter unit. Due to use of ICs, the specified voltages are obtained without making any adjustment.

CARRIER ASSEMBLY UNIT (X60-1000-00)

This unit consists of a CAR-1 unit X50-1310-00 and CAR-2 unit X50-1320-00. CAR-1 unit includes oscillator circuits for LSB and USB transmission and reception and for CW and FSK reception, while CAR-2 unit includes oscillation circuits for CW and FSK transmission.
These oscillators are crystal oscillators that serve as carrier generator during transmission and as BFO for the ring detection during reception. Part of the output is applied to the PLL unit and counter unit.

AF-AVR UNIT (X49-1080-00)

This unit includes AF amplifier in the final stage of the receiver section and the 9-volt stabilized power supply. The frequency response of the AF amplifier can be automatically changed over to that for CW or CCW with tone switching diodes D1 and D2 by changing over the band switch.

FIX-VOX UNIT (X50-1350-00)

This unit includes a fixed-channel oscillator circuit, VOX circuit for performing stand-by operation by means of voice and —6-volt generator circuit for block bias.

VFO UNIT (X40-1110-00)

Since the PLL circuit is controlled by VFO signal, the frequency stability of TS-820 is essentially determined by that of VFO. The circuit consists of 2 FETs, 2 transistors and 3 diodes, and the oscillation frequency is 5.0 to 5.5 MHz.

MARKER UNIT (X52-0005-01)

A signal of 100 kHz is generated by driving a crystal quartz by Q1. This oscillation frequency can be fine adjusted by ceramic trimmer TC1 inserted into the collector circuit. The output of Q1 is wave-shaped by diode D1 and thereby the free-running multivibrator Q2, Q3 is triggered. Although the free-running oscillation frequency exists around 25 kHz, it is accurately synchronized with 25 kHz by the synchronizing signal of the output of the crystal oscillator. This oscillation frequency is phase inverted by Q4 and then taken out as the output.

FINAL UNIT (X56-1200-00)

This unit includes the final stage power amplifier compartment except for the output-side π matching circuit.

RELAY UNIT (X43-1190-00)

This unit consists of a stand-by relay and smoothing capacitors for DC low-voltage power supply and a 5-volt stabilized power supply for the PLL circuit. The relay in this unit is mainly used to change over DC signal such as block bias or "cross" operation control.

HV UNIT (X43-1110-00)

This unit includes voltage-dividing resistors for measuring the plate voltage of S2001A and voltage dropping resistors for reducing the screen voltage of S2001A with the MODE switch set to TUNE position.

RECTIFIER UNIT (X43-1090-02)

This unit contains all the rectifier circuits of TS-820. The high-voltage line of 800-volt uses voltage doubler rectifier, the 300-volt/210-volt/C line uses a half-wave rectifier and the 14-volt line uses a bridge receitifer.

INDICATOR UNIT (X54-1180-00)

TS-820 permits 16 kinds of the so-called "cross" operations using internal VFO, remote VFO and internal fixed channels to be optionally selected by the operation of the function switch. To perform this operation smoothly it should be able to be checked instantlh which is in operation among two VFOs and internal fixed channels. Thus, this unit indicates the individual operations of "VFO", "ATT", "FIX" and "RIT" using GaP light-emitting diodes.

VOX-VR UNIT (X54-1190-00)

Three variable resistors VOX GAIN, ANTI VOX and DELAY are directly mounted onto a printed circuit board.

FUNCTIONAL DESCRIPTION

SINGLE CONVERSION SYSTEM

Almost all conventional transceivers for amateur use employ the double conversion system as shown in **Fig. 1**, particularly with the first local oscillator fixed and the second local oscillator variable. This double conversion system has also been employed by KENWOOD in the transceivers up to TS-520.

The double conversion system has the following features.

1. Multiple-band arrangement can be obtained comparatively easily by selecting the first local oscillator frequency.
2. The first IF frequency is fairly free to be set.
3. Mixer noise is apt to increase due to twice frequency conversions.
4. Excessive level signals are fed to the second mixer. Thus, the two-signal characteristic might be deteriorated.
5. Due to many internal oscillators and mixers beat interference and spurious radiation are liable to be caused.

FUNCTIONAL DISCRIPTION

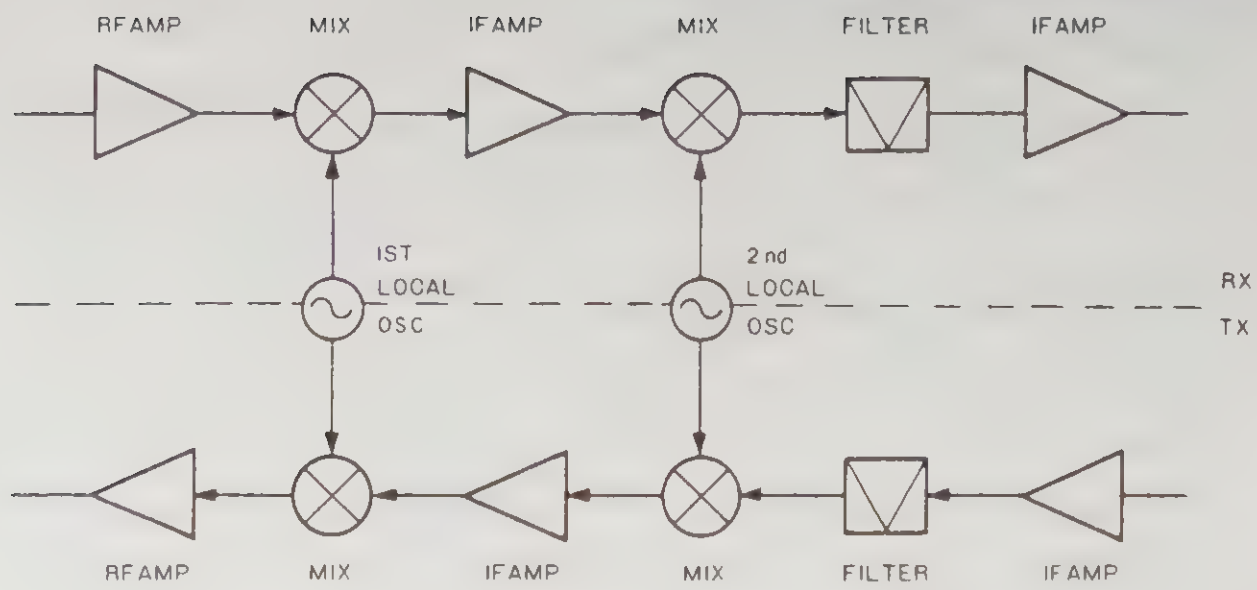

Fig. 1 Typical double conversion type

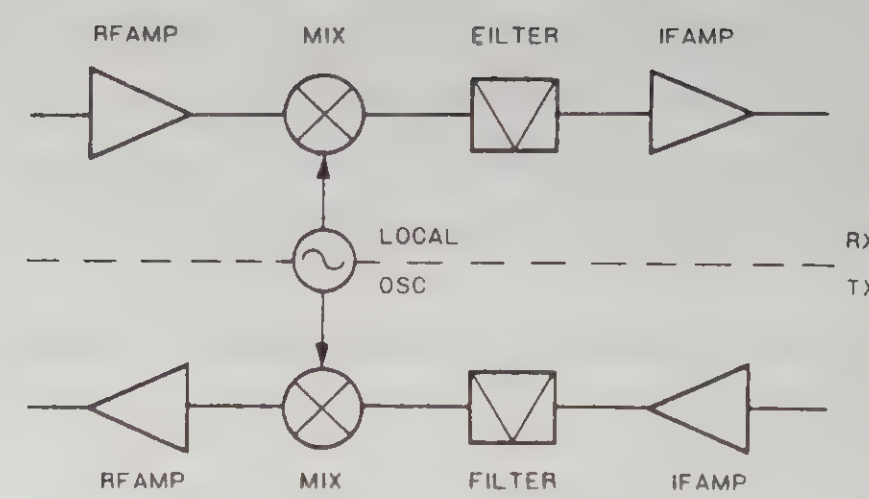

Fig. 2 Single conversion type

In turn the single conversion system has a simple circuit configuration, as compared with the double conversion system, as shown in **Fig. 2**, and it is considered to be provided with the following features.

1. Since only one mixer is used, mixer noise level is low.
2. Since the number of oscillators can be reduced, beat interference in receiving and spurious radiation in transmitting are eliminated comparatively.
3. It is comparatively difficult to increase the number of bands. Thus, the local oscillator circuit configuration becomes complicated.
4. IF frequency cannot be set to a higher frequency (due to the IF crystal filter used).

TS-820 is designed to enhance the two-signal characteristic in receiving and on suppression of spurious radiation in transmitting. Thus, it employs the single conversion system with PLL type local oscillator. Employment of the PLL system permits various merits such as unification of the dial pointer and IF shift function.

The circuit configuration of TS-820 is as shown in the block diagram. As shown in **Fig. 3** (Frequency diagram) TS-820 is of a single conversion type using PLL local oscillator and crystal filters of 8.83 MHz IF frequency.

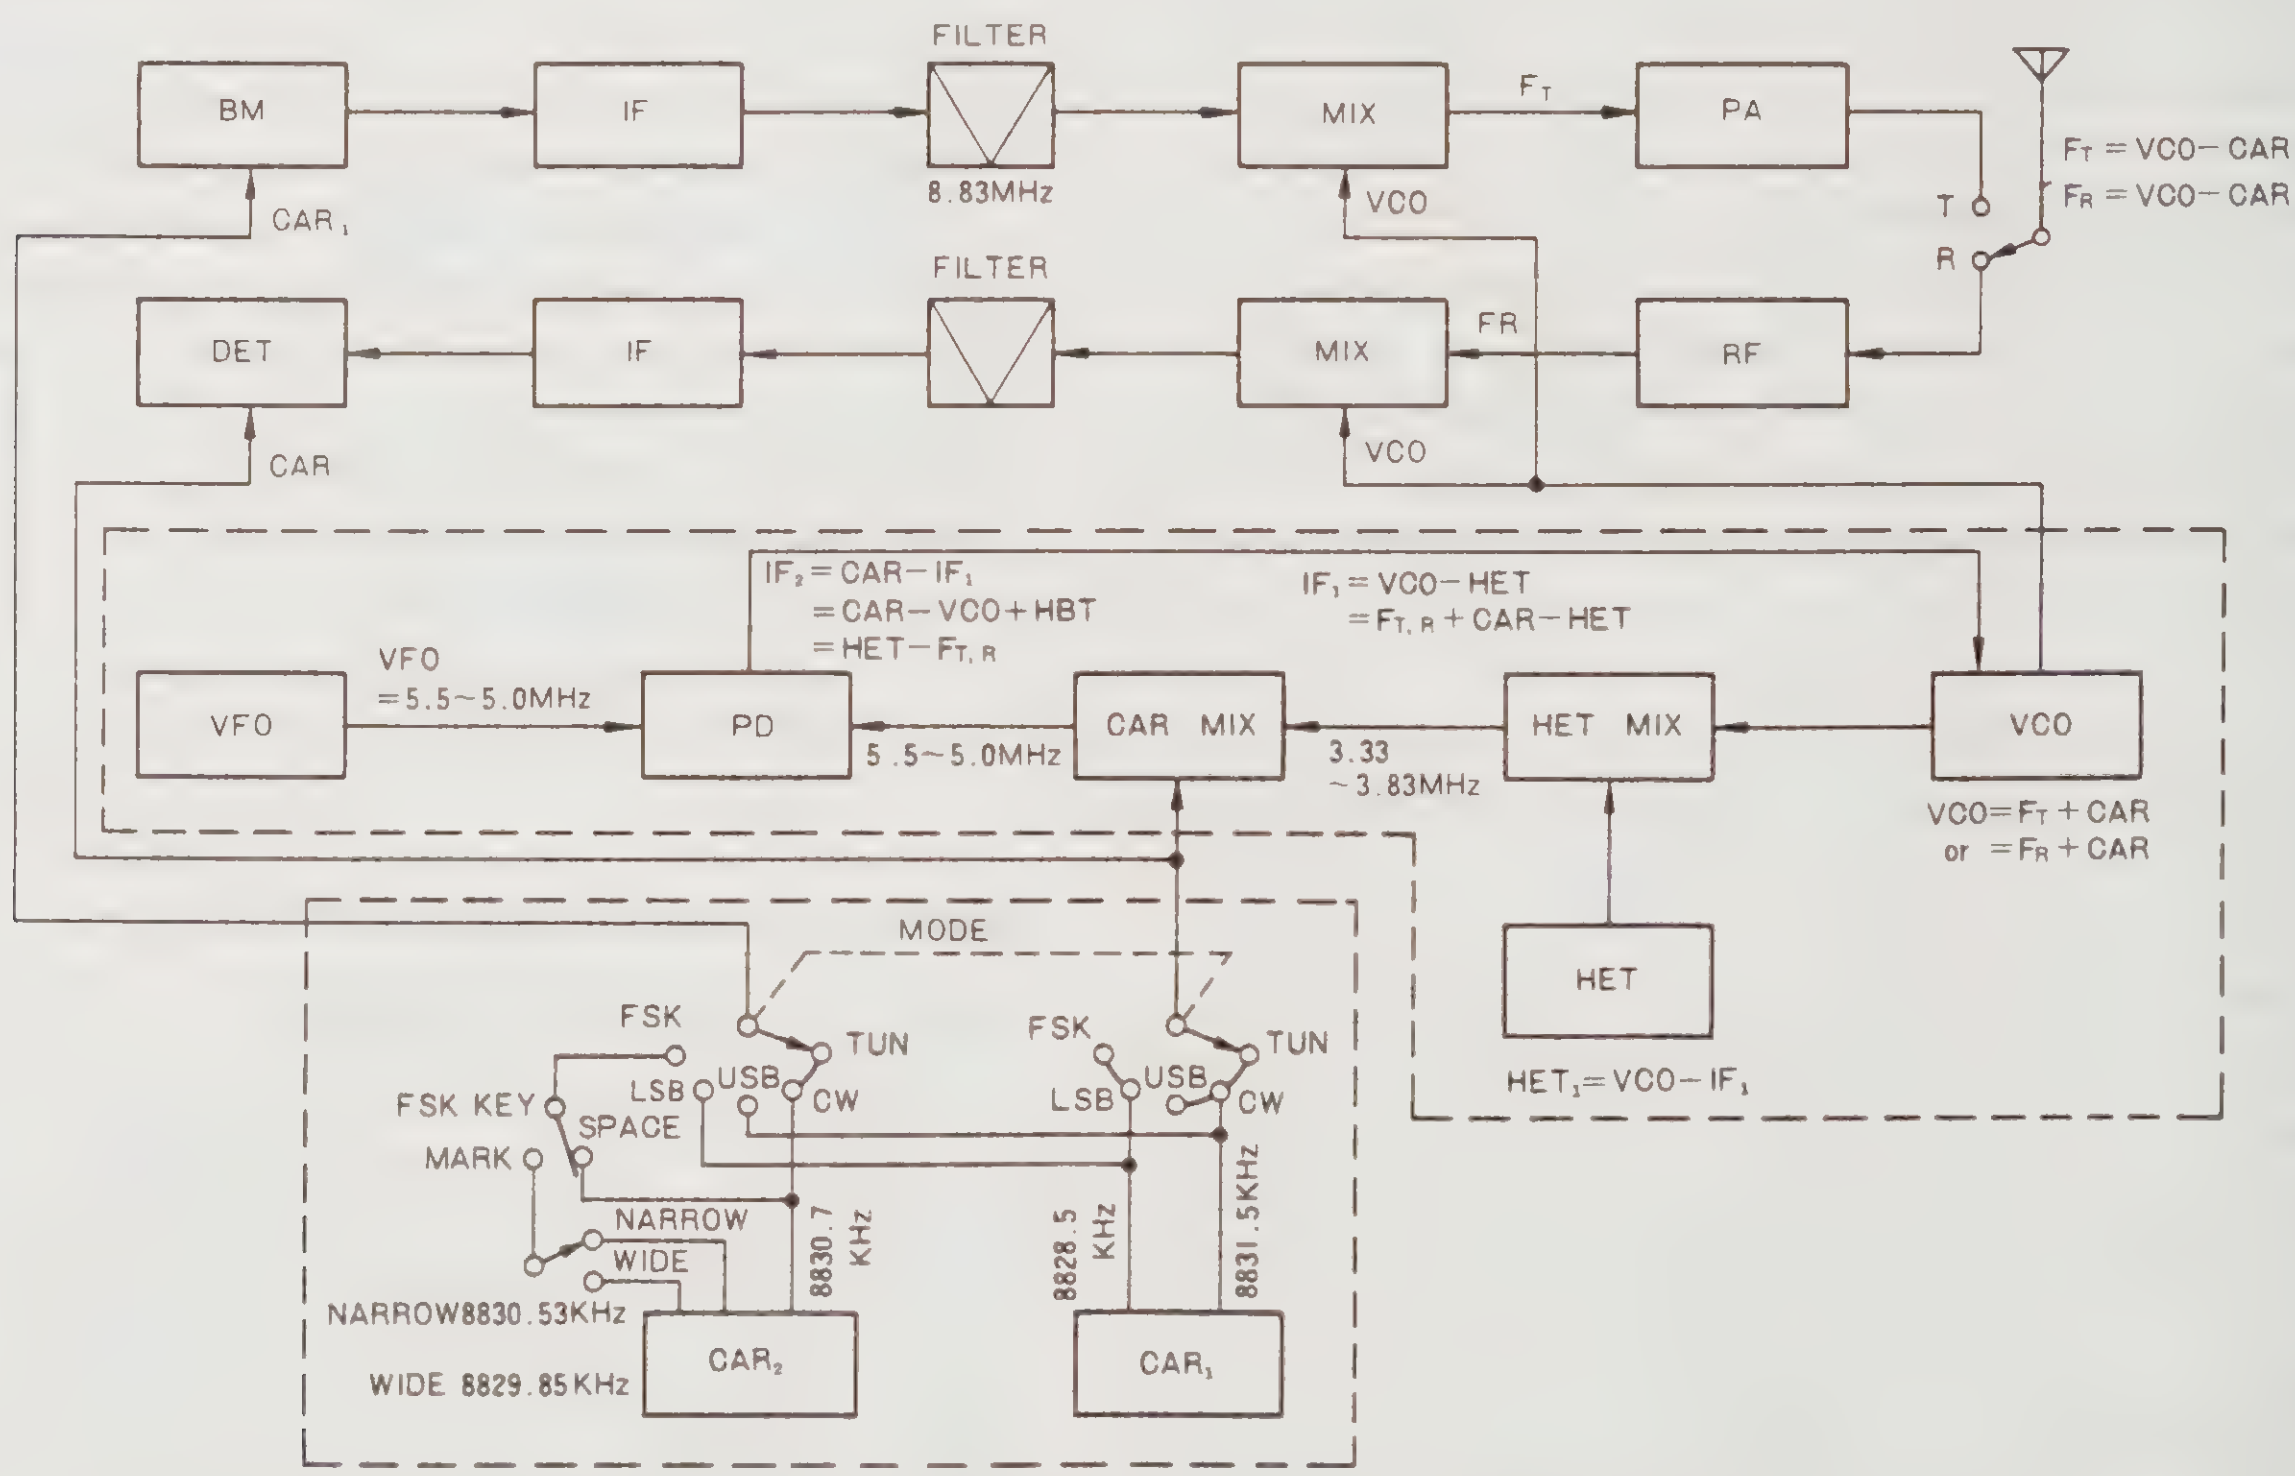

MODE	FREQ. KHz	OSC
LSB	8828.5	CAR1
USB	8831.5	〃
CW(T)	8830.7	CAR2
CW(R)	8831.5	CAR1
FSK(R)	8828.5	〃
FSK(S)	8830.7	CAR2
FSK(M)N	8830.53	〃
FSK(M)W	8829.85	〃

BAND	VCO	HET	BAND	VCO	HET
JJY/WWV	23.83~24.33	20.5	29	37.83~38.33	34.5
1.8	10.63~11.13	7.3	29.5	38.33~38.83	35.0
3.5	12.33~12.83	9.0	AUX		
7	15.83~16.33	12.5			
14	22.83~23.33	19.5			
21	29.83~30.33	26.5			
28	36.83~37.33	33.5			
28.5	37.33~37.83	34.0			

Fig. 3 TS-820 frequency diagram

FUNCTIONAL DISCRIPTION

RF SPEECH PROCESSOR

During DX communication, TS-820 can increase talk power by using the speech processor, in which audio frequency signal is converted into 455 kHz SSB signal and compression processing is performed with a small time constant. Thus, signal distortion is minimized and tone quality is prevented from being deteriorated, as compared with the conventional clipper system. The compression level can be adjusted by the COMP LEVEL knob, while watching the meter scale.

The audio frequency signal applied to the microphone is amplified by Q22 to the level required for the balanced modulator circuit D31 to D34 and converted into 455 kHz. Q28 is an oscillator for 455 kHz and Q29 is a buffer amplifier. The voice signal converted into 455 kHz is amplified sufficiently by Q23 and Q24, subjected to automatic gain control by Q26 and Q27, and compression-processed.

The processor level is adjusted by changing the emitter bias of Q23 with the RF PRO variable resistor.

The signal sufficiently compression-processed is buffer amplified by Q25 and balance detected by D35 to D38 to be converted into audio frequency again (refer to **Fig. 4**).

MONITORING CIRCUIT

Since TS-820 is provided with a monitoring circuit that permits the operator to hear his voice during transmission, it can be used to check the modulated condition or to adjust the RF speech processor. This circuit is incorporated in the IF unit. When the MONI switch mounted on the front panel is turned ON, the monitoring circuit is biased and operated. The signal is passed through the IF crystal filter of 8.83 MHz, amplified by one-stage IF amplifier, buffer amplified by Q12 in the monitoring circuit, further amplified by Q13, product detected by FET Q14, and thereby demodulated into AF signal. The AF signal thus obtained is then applied through VR4 to Q3 in AF AVR unit and thereby power amplified.

This circuit is energized only in SSB transmission. D16 and D17 act as a diode switch to prevent the carrier from leaking into IF circuit (refer to **Fig. 5**).

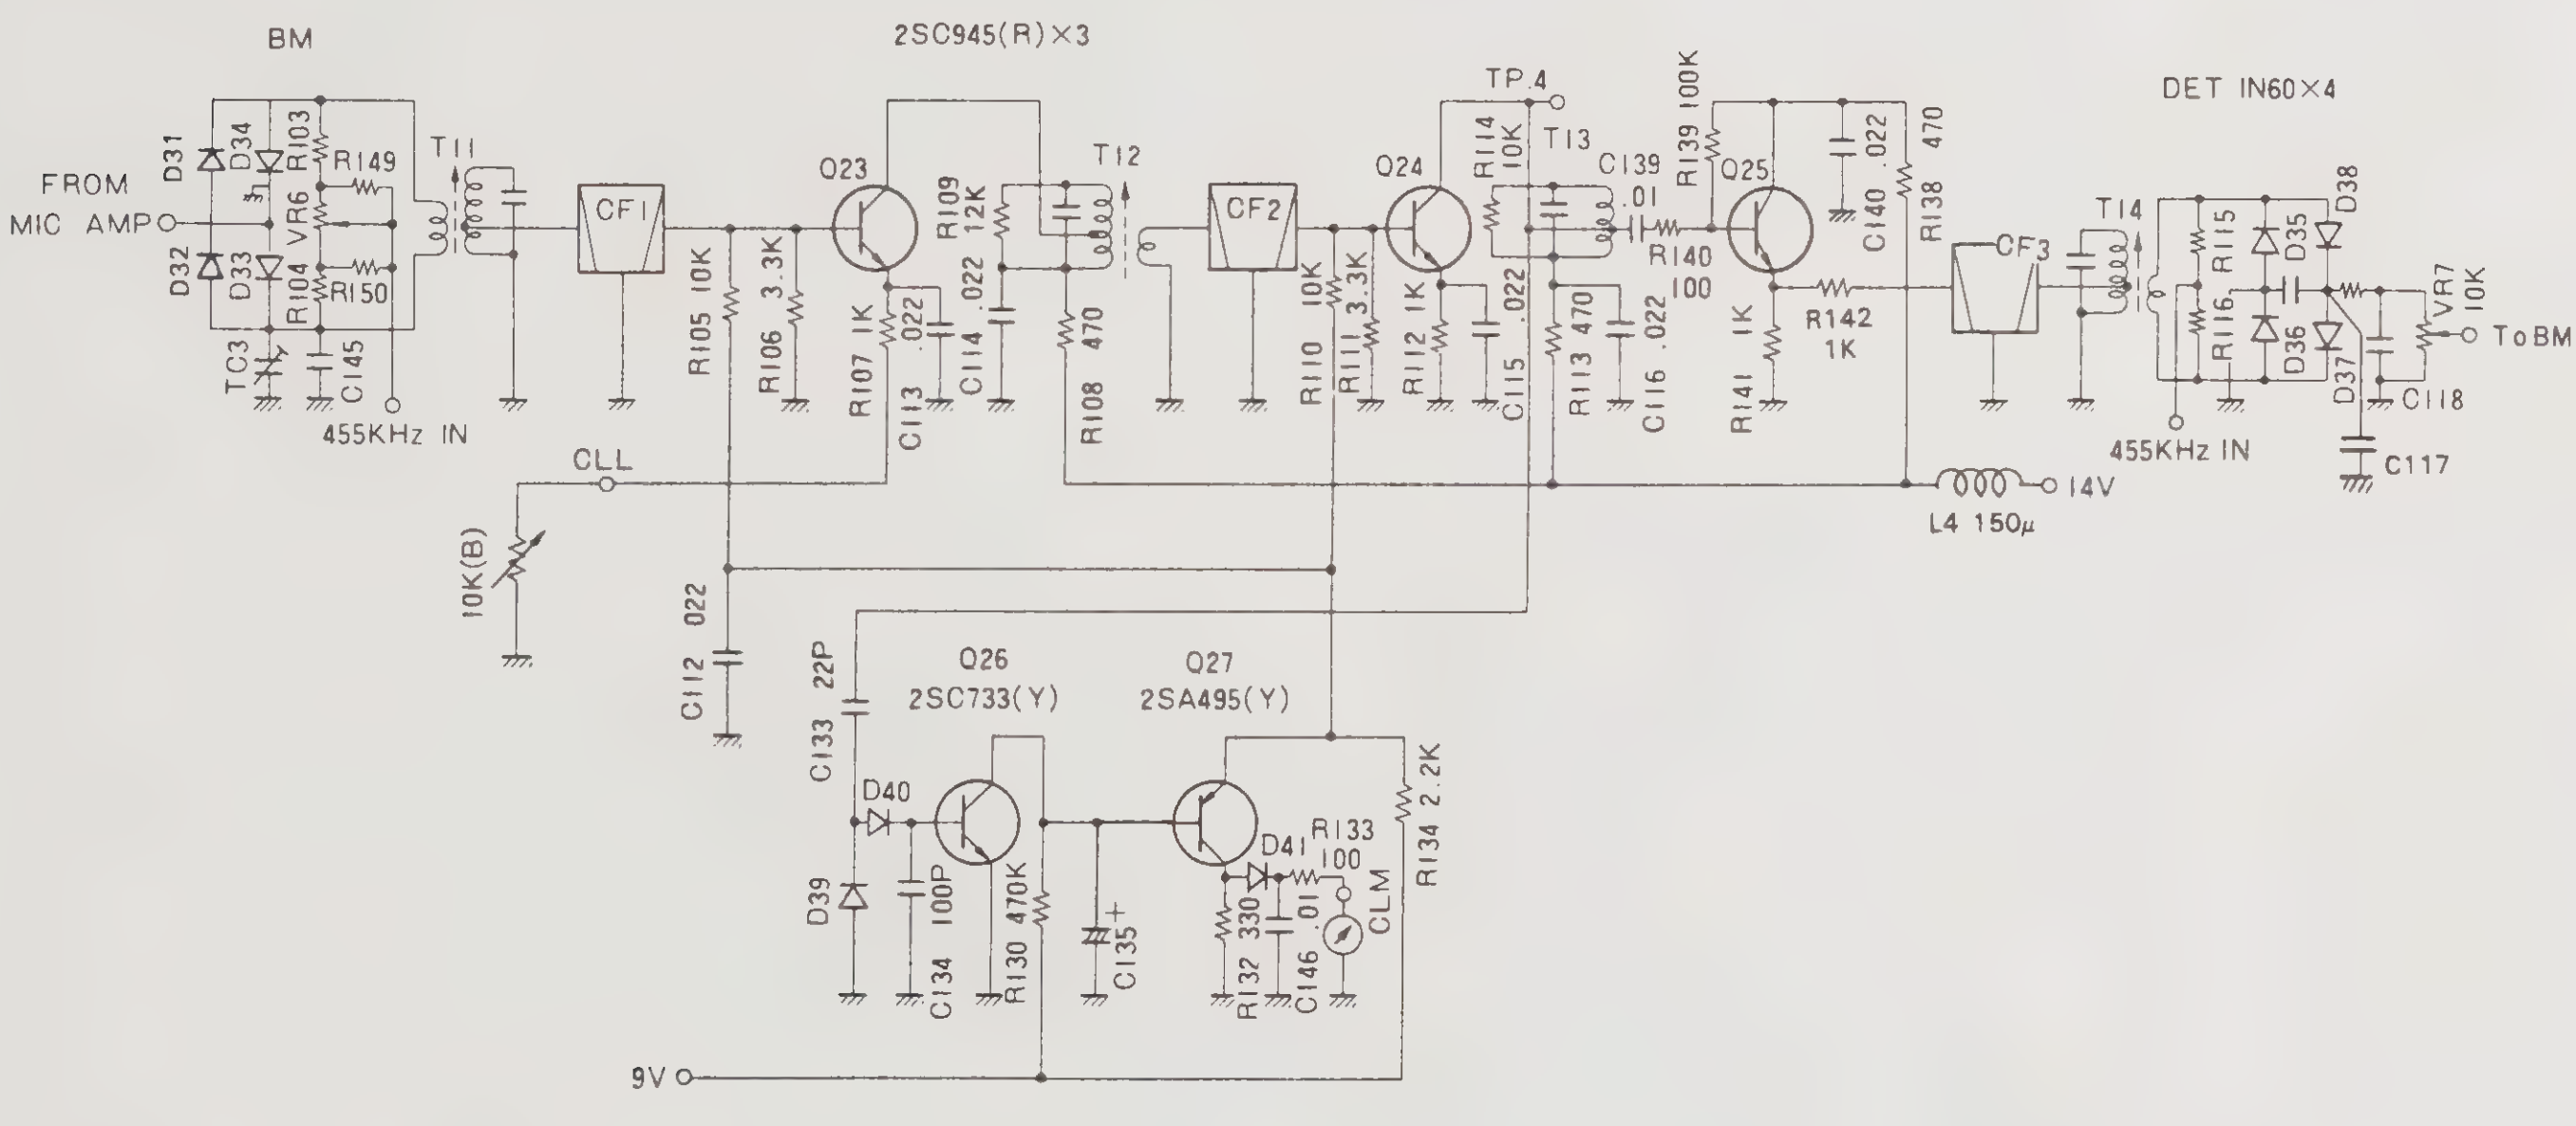

Fig. 4 RF speech processor

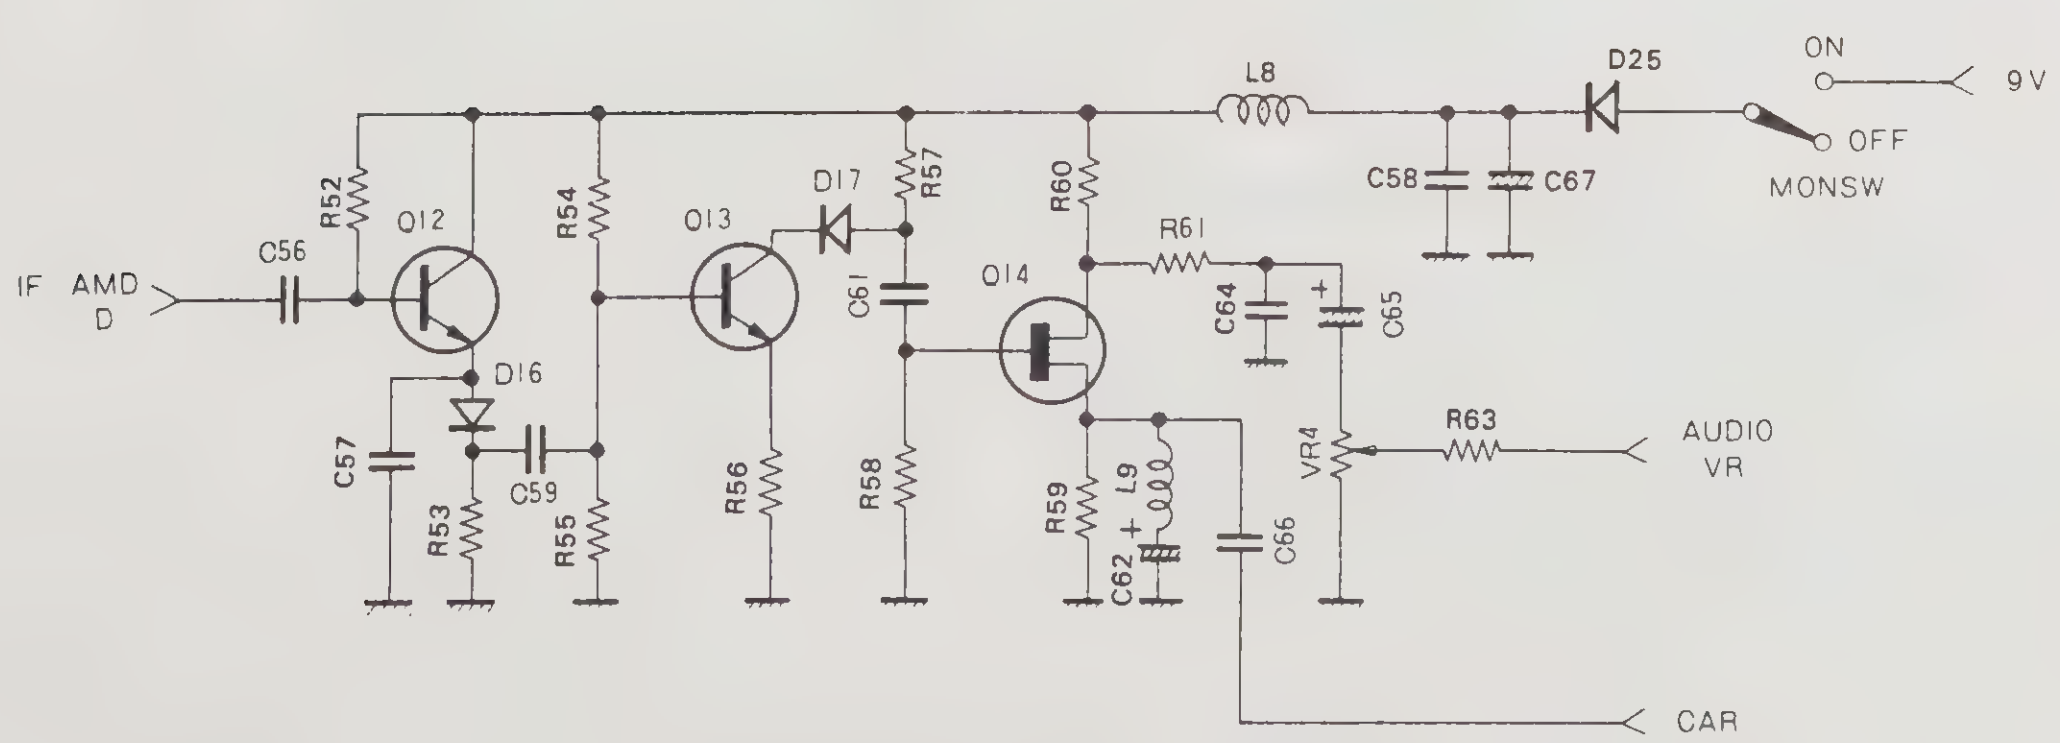

Fig. 5 Monitor circuitry

FUNCTIONAL DISCRIPTION

PLL CIRCUIT

Fig. 6 shows the circuit configuration of the PLL system developed in TS-820. In this system, VCO signal is mixed with HET signal and thereby converted into a signal of 3.33 to 3.83 MHz common to all bands, which is further mixed with a carrier to be converted into 5.5 to 5.0 MHz. This signal is phase compared with VFO signal of 5.5 to 5.0 MHz. The comparison output thus obtained is returned to VCO to lock it.

The HET mixer serves to convert the different frequencies of individual bands into the same frequency, whereas the carrier mixer acts to keep the transmitting and receiving frequencies constant regardless of change-over of the MODE switch by applying a carrier signal to the PLL loop and to perform IF shift. **Fig. 7** shows the block diagram of the PLL part.

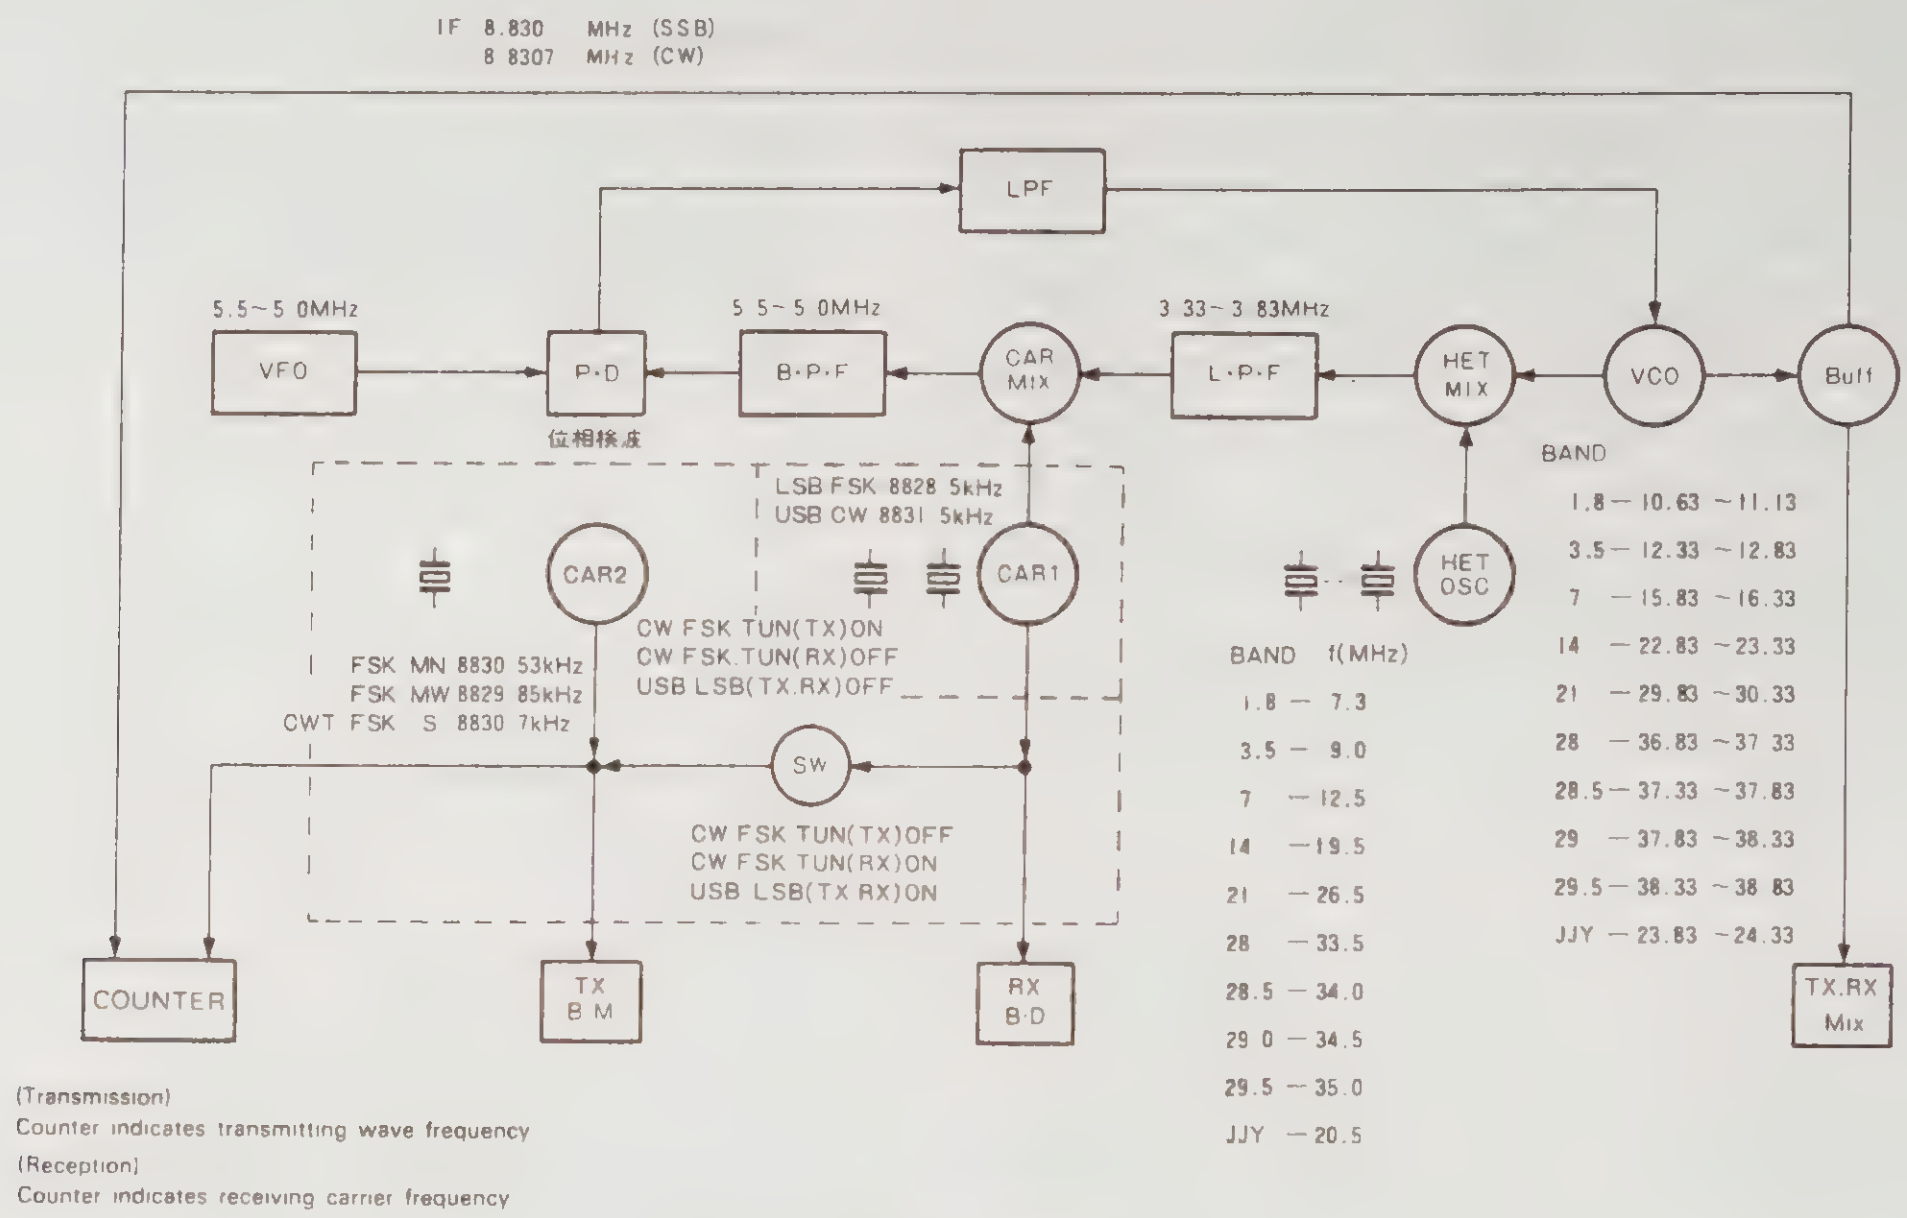

Fig. 6 PLL system

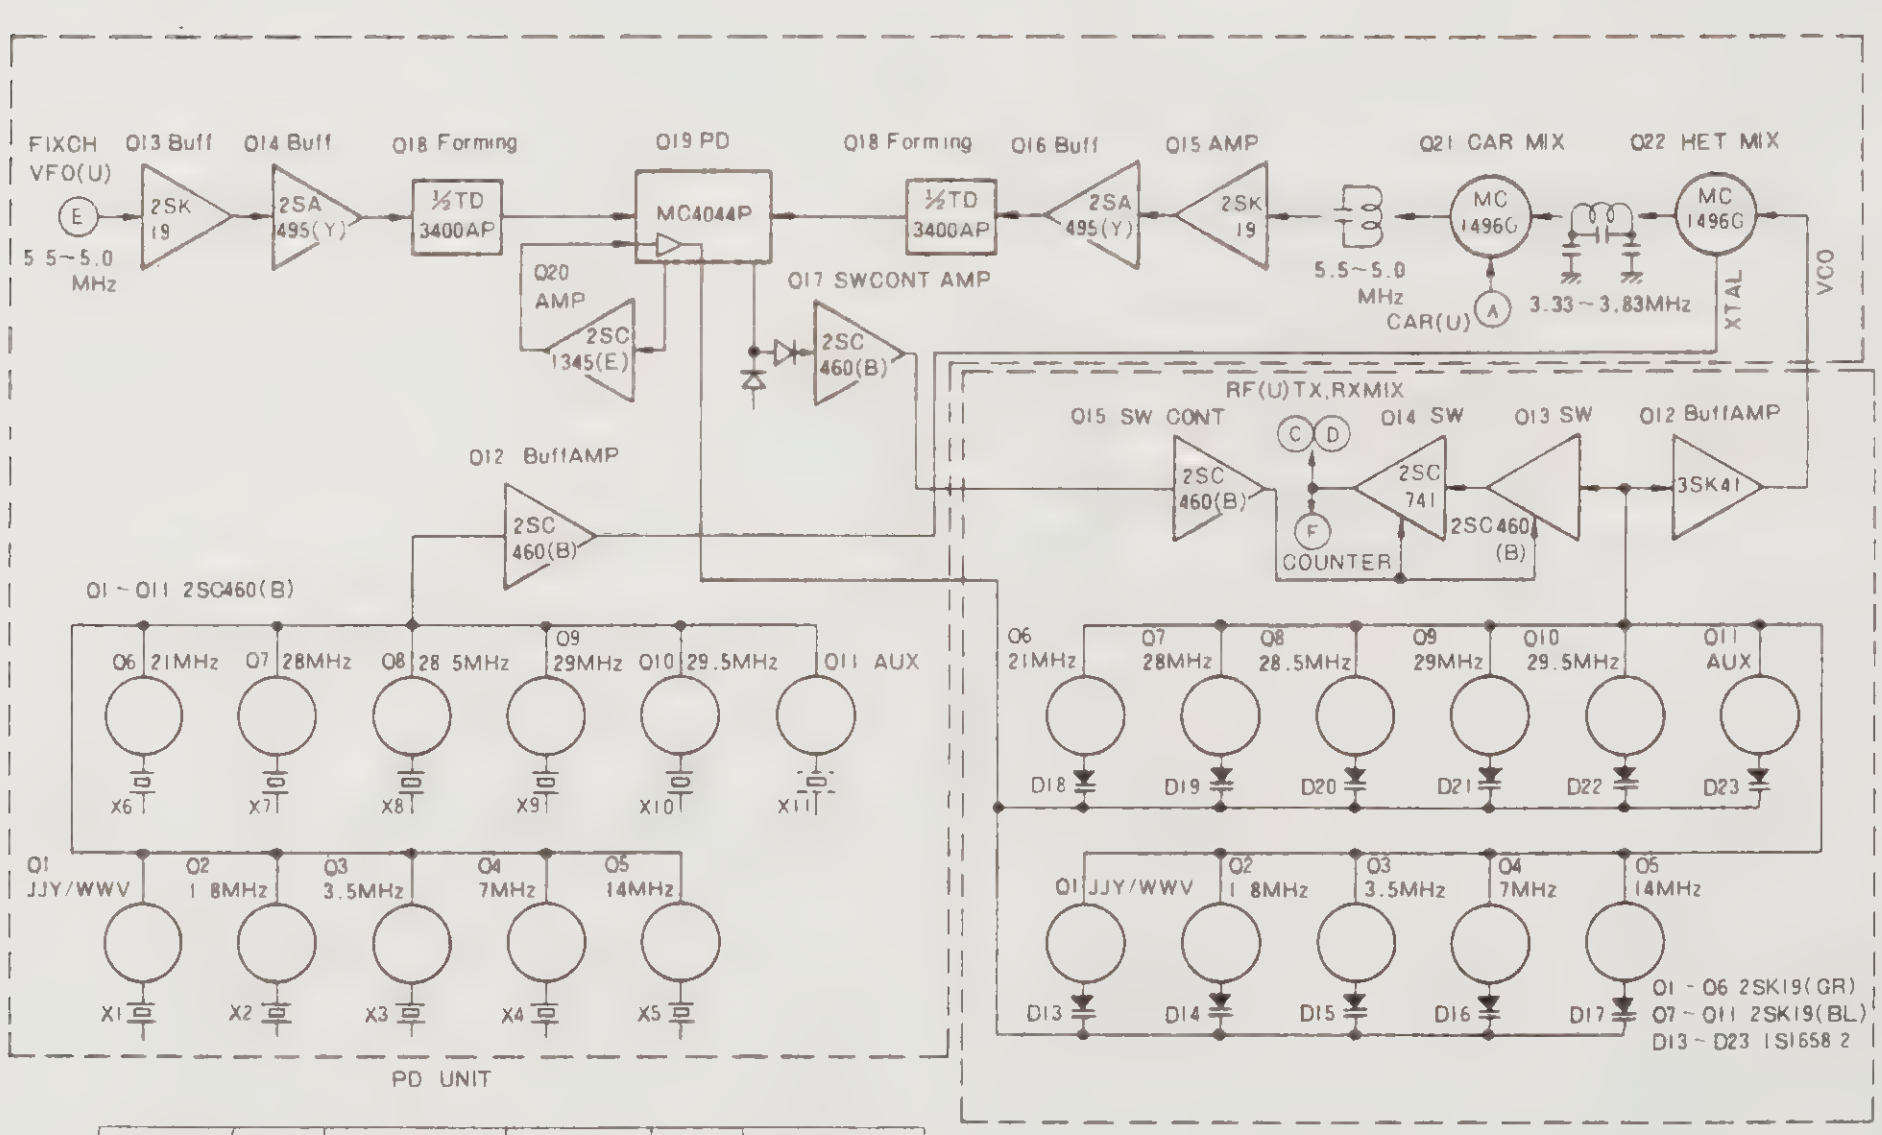

BAND	XTAL	VCO	BAND	XTAL	VCO
JJY WWV	20.5	23.83~24.33	28	33.5	36.83~37.33
18	7.3	10.63~11.13	28	34.0	37.33~37.83
35	9.0	12.33~12.83	29.5	34.5	37.83~38.33
7	12.5	15.83~16.33	29	35.0	38.33~38.83
14	19.5	22.83~23.33	AUX		
21	26.5	29.83~30.33			

Fig. 7 PLL assy

FUNCTIONAL DISCRIPTION

VCO is provided with independent oscillators for the respective bands up to Q1 to Q11, which can be changed over by the band switch. The stability of this circuit is determined by HET, CAR and VFO. Since HET and CAR are crystal oscillators, it is considered to be determined only by the stability of VCO. The high stability of VCO itself is also essential as the major point in design in order to improve C/N of VCO output and prevent unlocking due to temperature variation. Thus, FET is used as the oscillator transistor to strictly compensate for temperature variation in the coils. The output of this VCO is applied to the transmitter and receiver mixers through Q13 and Q14 which serve as a buffer and also switching amplifier.

As in VCO, HET is provided with independent oscillators for the individual bands, which are changed over by the band switch in interlock with VCO. This change-over is effected by + B power and switching diodes. The oscillator is a Colpitts type non-adjustment circuit.

The CAR mixer preceded by the HET mixer uses MC-1496G for balanced mixer to prevent spurious radiation and a band-pass filter is inserted at its output. If a spurious signal is contained in the output of this carrier mixer, it may be mixed with the output of PD and appear at VCO.

The carrier oscillator circuit is divided into CAR 1 and CAR 2; the former is in charge of CW (receive), USB, LSB, FSK (receive) and the latter is charge of CW (transmit) and FSK (transmit). The crystal oscillators used are three of 8828.5 kHz, 8831.5 kHz (AR1) and 8830.7 kHz (AR2) and other oscillators are of a variable frequency type using varicap diodes. The signal to be applied to PLL loop is generated at the CAR 1 side. Thus, when CW or FSK signals, the frequencies of which are different between transmitting and receiving, are transmitted, PLL loop is composed of CAR 1 and the transmitting carrier is generated by CAR 2.

The output of the carrier mixer, after amplified by buffer amplifier Q15 and Q16, is wave shaped by NAND gate Q18 (TD3400AP) and applied to MC-4044P. Meanwhile, the output of VFO, after amplified by buffer amplifier Q13, Q14, is wave-shaped by Q18 and fed to MC-4044P.

MC-4044 consists internally of a phase detector (PD), charge pump and amplifier, and it is used in this transceiver as shown in **Fig. 8**. The output of PD #1 is fed to the varicap of VCO through the charge pump and active filter. The output D2 of PD #2 becomes high level (constant) when either (or both) input signal is removed. By utilizing this quality, it is used as OFF circuit for VCO. If the TS-820 function is changed over to remote VFO without connecting remote VFO, PLL is not locked. Thus, under such a condition, VCO output is automatically turned OFF.

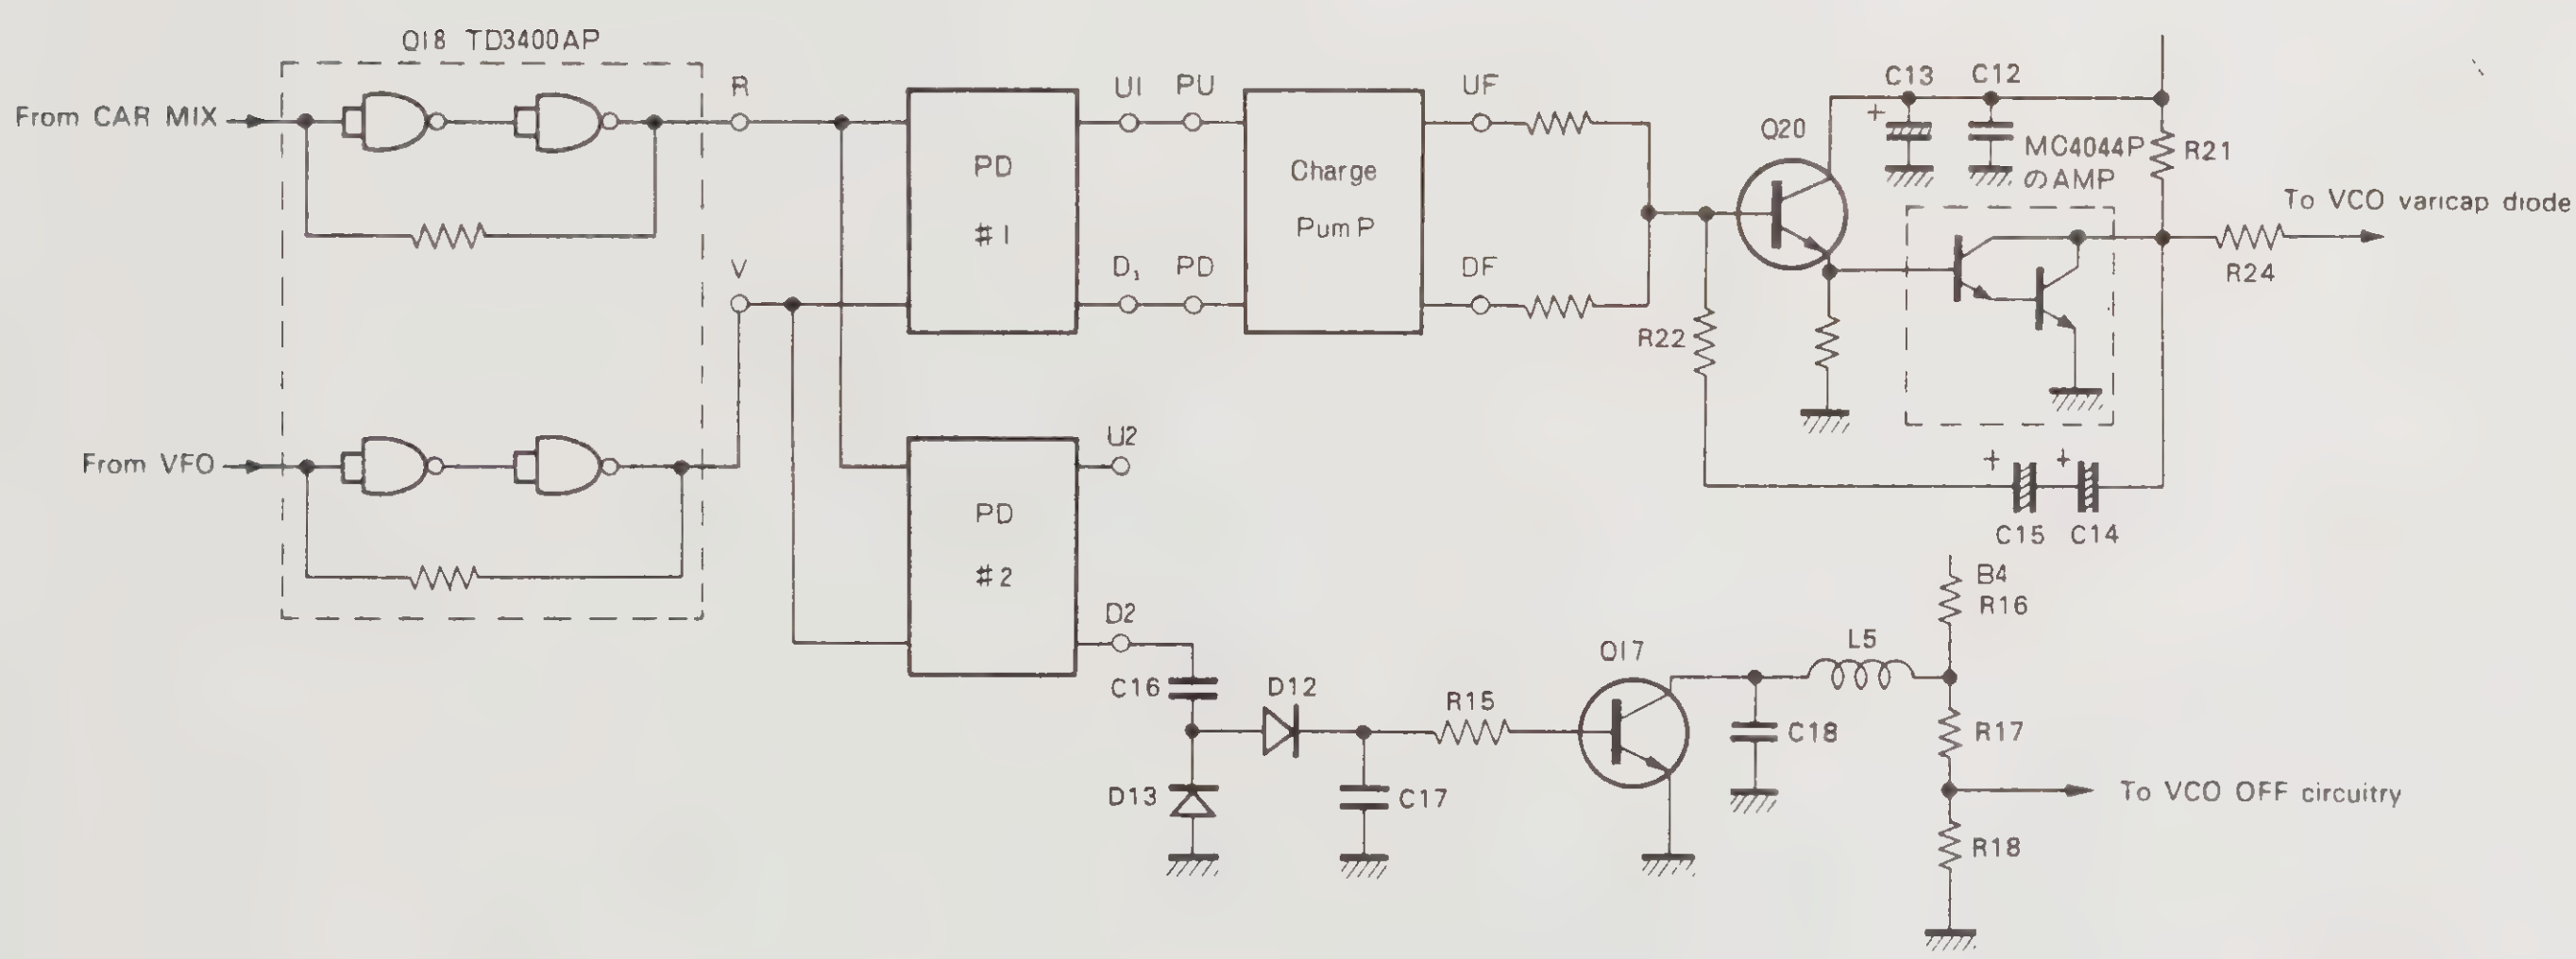

Fig. 8 TS-820 phase detector circuit

FUNCTIONAL DISCRIPTION

This PLL part consists of two printed circuits boards of VCO part and PD/HET part. These printed circuits boards are shielded from each other and the overall unit is housed in a shielding case, thus achieving full shield effect.
The PLL circuit of this transceiver is provided with the following features.

1. Since the phase comparison is performed at a frequency as high as 5 MHz, the response speed is rapid and C/N is improved. When "cross" operation is performed together with remote VFO or fixed channels by using VOX, the signal is interrupted at the beginning if the lock time is not long. When the reference frequency is as high as 5 MHz, the cut-off frequency of the active filter can be selected at high frequency and therefore no problem is offered here.
2. Since VCO is used independently in each band, the C/N of the oscillator is improved.
3. Since the output of VCO is applied directly to the transmitter and receiver mixers, the spurious characteristic is excellent. This is one of the large merits, as compared with the premix system.
4. Since MC-4044 is used for phase comparison and therefore the variable range of VCO is narrow, there is no possibility of unlocking.
5. Since VFO uses the conventional range of 5.5 to 5.0 MHz, TS-820 has compatibility with other KENWOOD's transceiver models.

The VFO used is basically the same as the traditional VFO. VFO-520 can be used as remote VFO as it is.

IF SHIFT CIRCUIT

This IF shift operation shifts the carrier frequency by ±1.7 kHz and thereby moves IF frequency and the pass-band of the crystal filters. Thus, AF output can be received in the frequency response of ±1.7 kHz high-cut or low-cut. As shown in **Fig. 9**, the IF shift circuit is energized only during receiving and deenergized during transmitting, fixed by VR1 in CAR-1 unit. This function is achieved by employment of use of PLL circuit in the local oscillator part. The feature of the IF shift circuit is as follows:

1. Tone quality adjustment and interference elimination during SSB receiving. During USB mode operation, the receiving characteristics of low-cut and high-cut are obtained by turning the IF SHIFT knob clockwise and counterclockwise respectively. (Opposite to the above during LSB mode operation.) Thus, the received signal can be heard in the desired tone quality, and interference from the sidebands of adjacent channel signals, if any, can be eliminated by using the IF shift circuit.

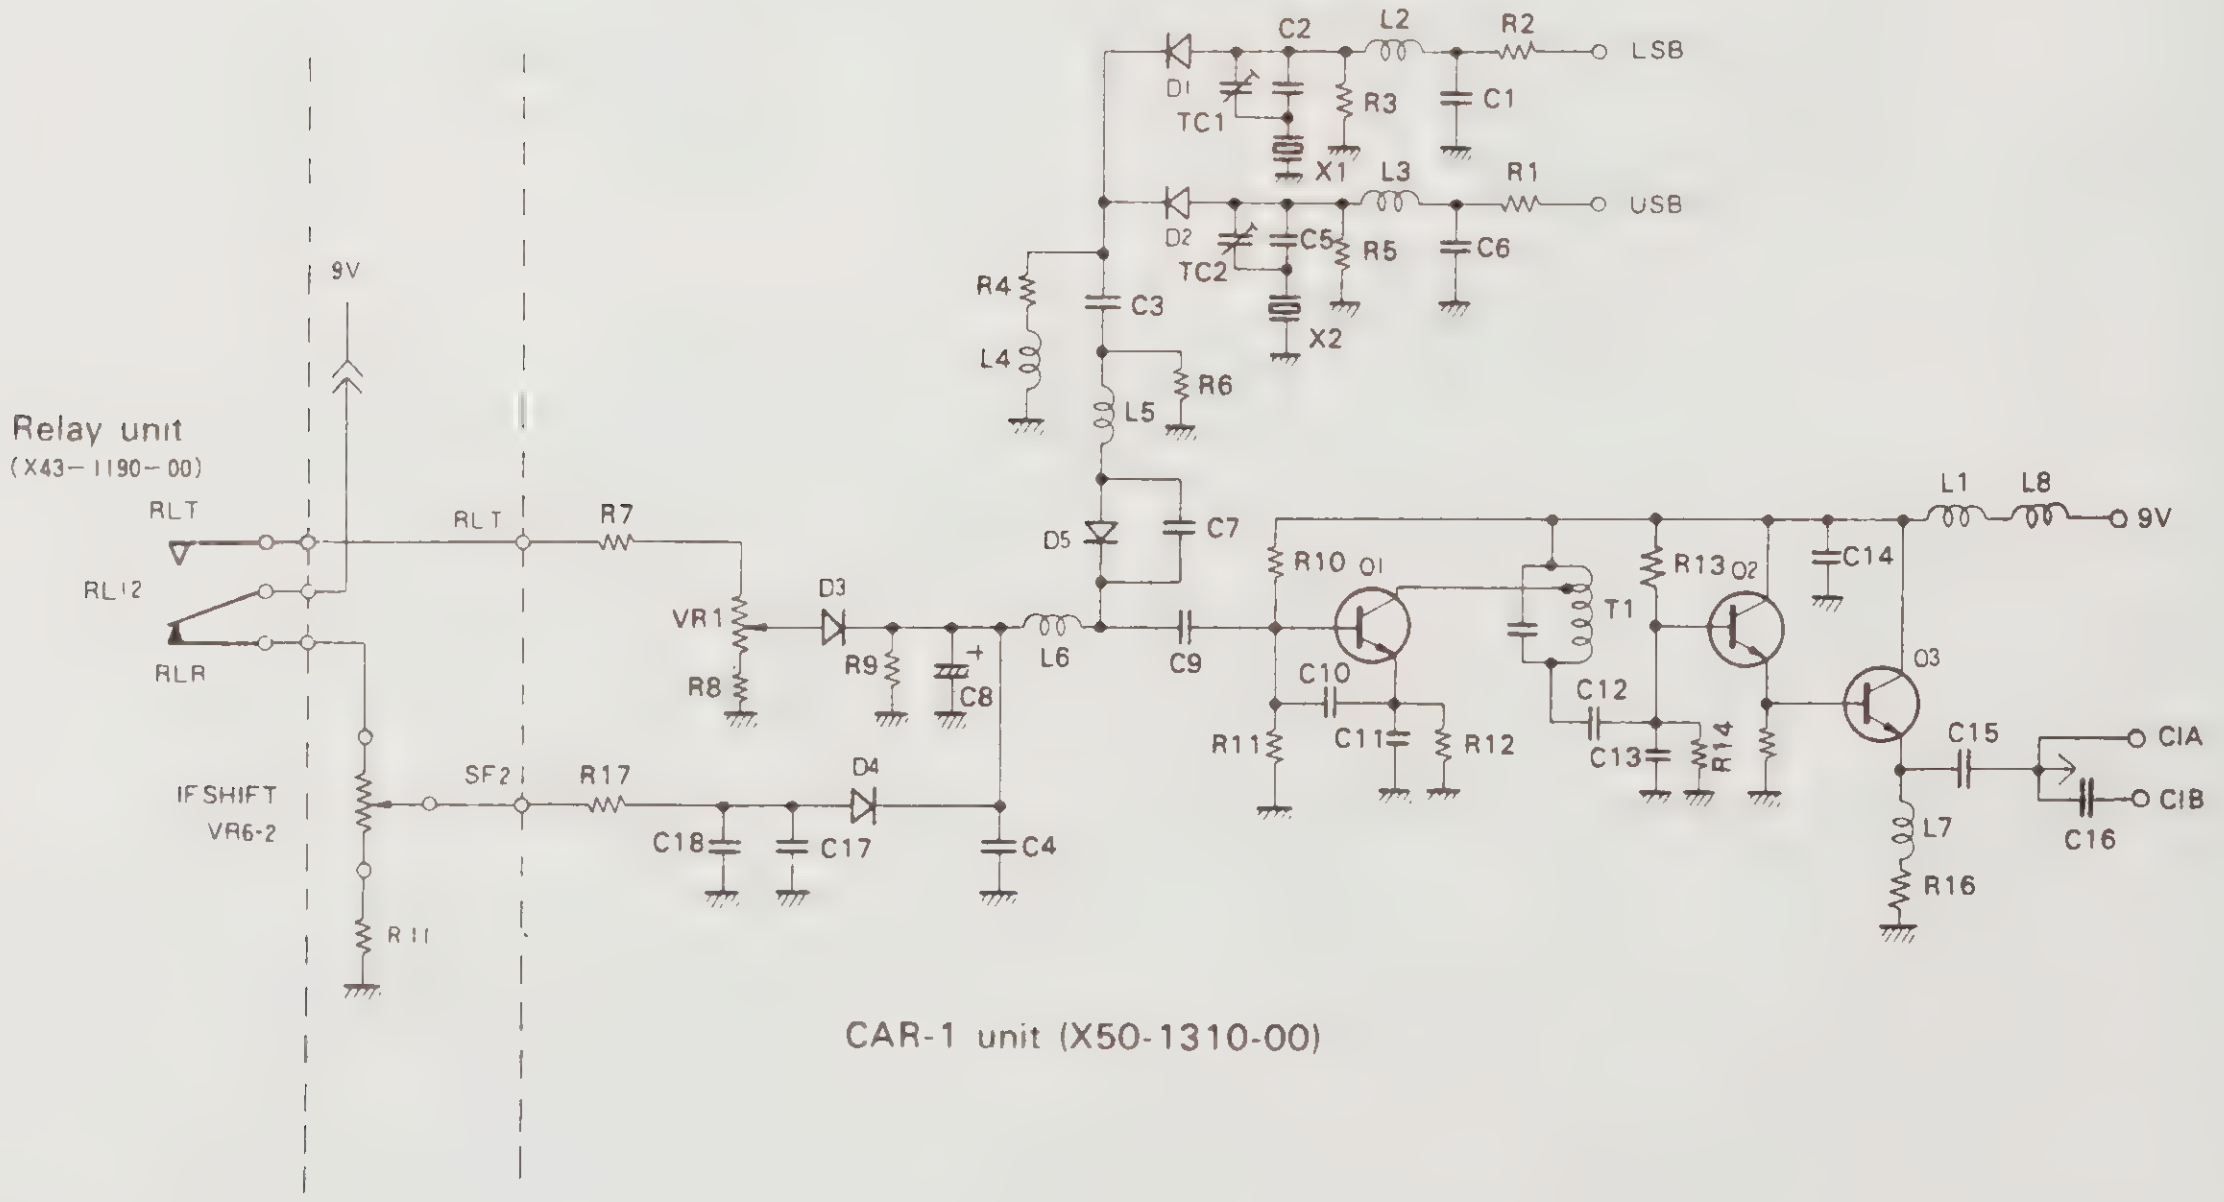

Fig. 9 IF SHIFT circuit

2. Adjustment of tone quality during CW mode operation

○ When no CW filter is installed:
When the main tuning knob is adjusted so that the beat tone becomes approx. 800 Hz while receiving CW signal with the IF SHIFT knob set to the center position and the RIT switch turned OFF, the transmitting frequency of the own station can be set to that of the party station. After this zero-in, turn the RIT switch on and turn the RIT knob to sound clear. When there is interference, it might be eliminated by turning the IF SHIFT knob. However, attaching of the exclusive CW filters is more effective (YG-88C at option).

○ When CW filter is installed:
Set the IF SHIFT knob at the center position and turn OFF the RIT switch. While receiving a signal, set the main tuning knob until S meter indicates maximum. The received tone then becomes approx. 800 Hz and the transmitting frequency is set to that of the party station. Turn ON the RIT switch, adjust the RIT knob to the desired position and set the IF SHIFT knob to the highest receiving level.

○ When the digital display is provided:
The digital display indicates the frequency of carrier signal (BFO signal) and therefore during CW receiving, it indicates the frequency shifted from the transmitting frequency of the party station by the receiving beat frequency (when the IF SHIFT knob is set to the center position, the lower-side beat frequency is indicated).
If zero-in operation is performed by using the digital display, follow the procedure shown below.
Turn ON the RIT switch and turn the RIT knob, while operating the stand-by switch, until the frequency indication is kept unchanged regardless of change-over from transmitting mode to receiving mode and vice versa. Leave the RIT knob as it is and turn the main tuning knob until the zero beat is obtained with respect to the transmitting signal of the party station (the zero beat is easy to obtain by turning the IF SHIFT knob). Through the above proc-edure, the transmitting signal can be set to that of the party station. Turn the RIT knob until the desired position is obtained.

3. When FSK (RTTY) is operated
For the RTTY operation, a demodulator and a teletypewriter are necessary. Demodulators that are operated with audio input signals with filters of 2125/2295 Hz (NARROW, 170 Hz shift) or 2125/2975 Hz (WIDE, 850 Hz shift) incorporated can be all used for this purpose. For keying of the FSK circuit in TS-820, insert a relay coil into the closed loop circuit of the teletypewriter and connect the relay contacts to the RTTY KEY jack on the rear panel.
Fig. 10 shows the relationship between the transmitting and receiving frequencies used in TS-820. Although the frequency deviation in the FSK circuit has been set to the NARROW side in our factory, it can also be set to the WIDE side by switching the connector as shown in **Fig. 11**. When making FSK operation in the WIDE side, turn the IF SHIFT knob counterclockwise by approx. 1.2 kHz until balance between mark signal and space signal can be obtained during receiving.
When the CW filters available at option are equipped, they can be used during the NARROW side operation by switching the connectors in the IF unit.
When the MODE switch is changed over to FSK position, the input voltage of the final stage is automatically reduced. Thus, the continuous transmission of this transceiver can be enjoyed without any anxiety.

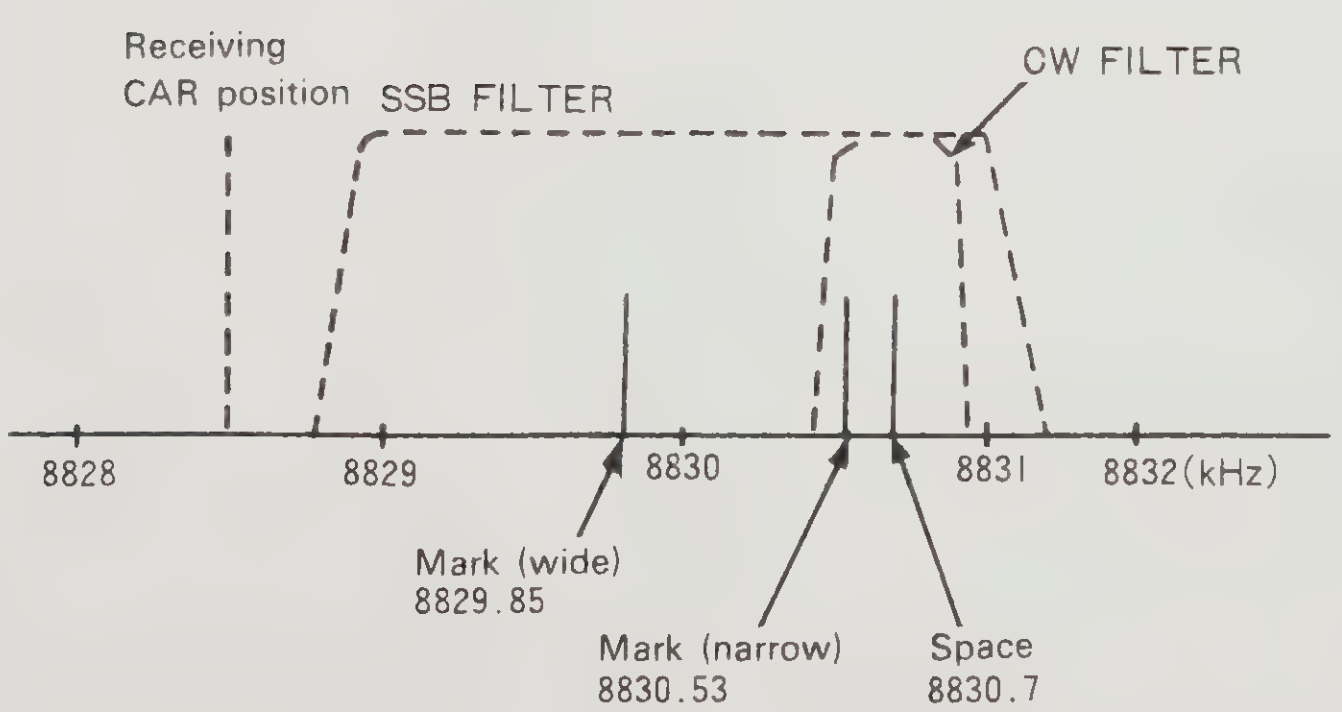

Fig. 10 RTTY frequency

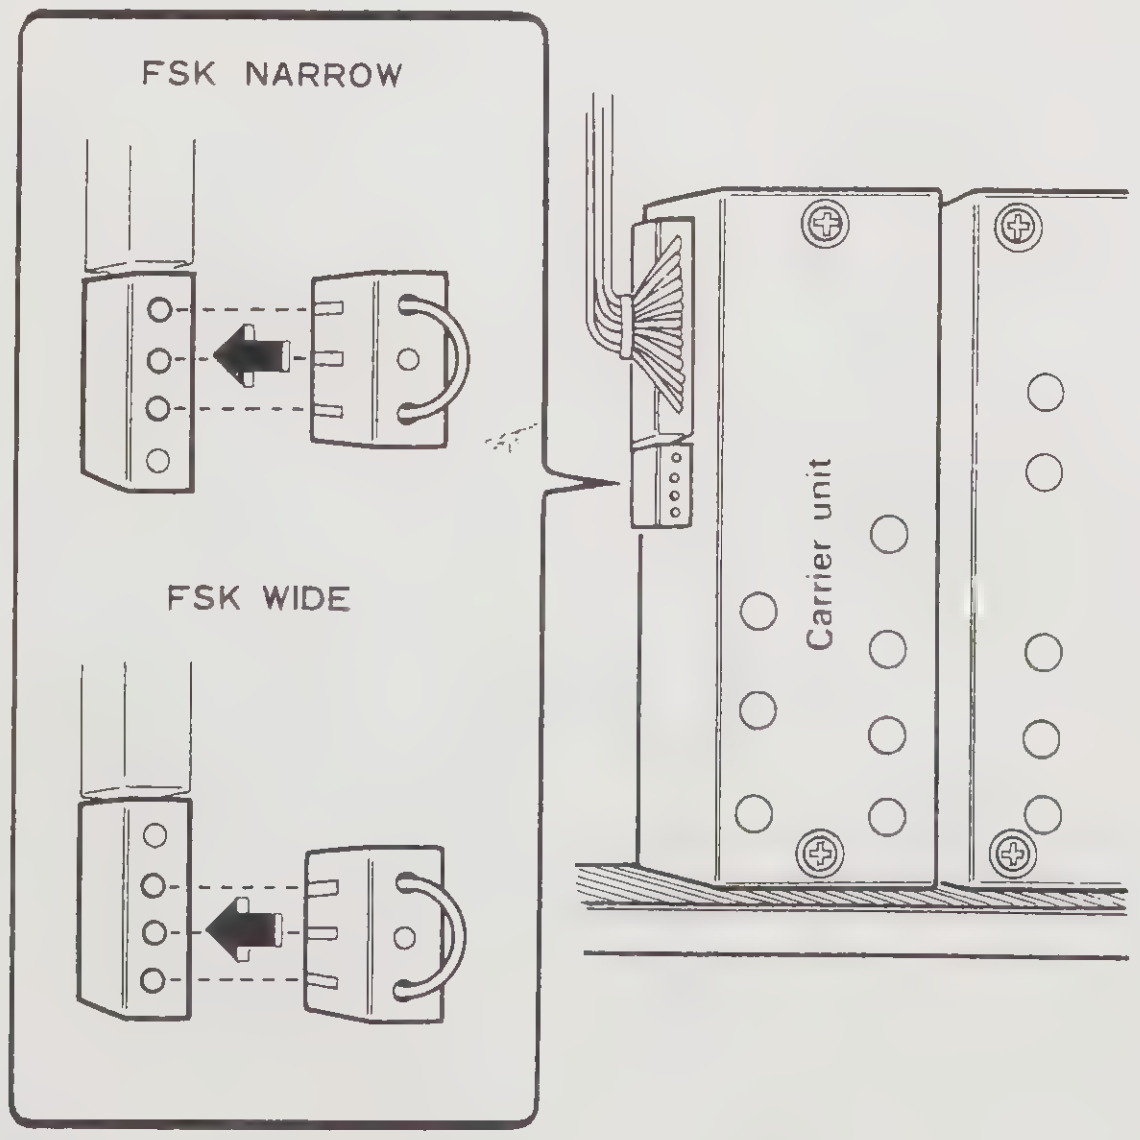

Fig. 11 Switching of FSK, WIDE-NARROW

AGC CIRCUIT

AGC signal is taken from the IF final stage Q3, and after amplified by Q15 and Q16, is fed to Q1, Q2 and Q3 in the IF circuit and the first stage Q2 in the RF amplifier, thereby performing GAIN control. On the collector side of Q16, each control operation of AGC-SLOW, FAST, OFF and RF GAIN is carried out. Q4 and Q5 act as the meter amplifier for AGC in receiving and as the meter amplifier for ALC during transmitting. D20 is used for AGC discharge and D21 for prevention of reverse current flow. During transmition, Q2 and Q3 are cut off since they are reversely biased by the RB line voltage.

RF NEGATIVE FEEDBACK AND NEUTRALIZING CIRCUIT

In TS-820, the tone quality of transmitting signal has been examined more thoroughly. Without careful overall design over the entire circuitry improvement of the tone quality cannot be achieved. For example, distortion in the low frequency stage, its frequency response, distortion in the high frequency stage, level distribution and ALC have been thoroughly examined and in addition overall balance design has been considered.

To minimize the distortion in AF stage, the negative feedback is often employed as general circuit technique. However, the negative feedback for the RF circuit is actually difficult to employ since stable operation is not easily obtained due to restriction by parts arrangement and frequency response.

TS-820 applies negative feedback to the so-called tuning type amplifier circuit including interstage LC tuned circuits. (Refer to **Fig. 12**).

In the tuned type negative feedback, the plate impedance of the final stage tube and the gain are greatly changes when its π matching circuit is adjusted. Thus, it is necessary to prevent possible undesired oscillation from occurring regardless of the set positions of the plate variable capacitor and the drive variable capacitor. TS-820 is designed so that undesired oscillation won't occur when the gain increases up to three times as large as optimum condition.

Neutralization also has large effect on the stability. If it is imperfect, phase variation increases proportionally and it is difficult to have effect from low band to high band in the case of all-band transceivers. Where variable capacitors are used for interstage tuning, sufficient neutralization is said to be difficult as compared with the μ tuning type, thus causing unstable negative feedback.

Although TS-820 employs the variable capacitor type neutralization, the rotors and stators are floated from ground and neutralization is applied and thereby the same effect as the μ tuning type is obtained.

Although the negative feedback has one effect in audio circuits since the bandwidth becomes wide, the selectivity is deteriorated in tuning type amplifiers. Thus, sufficient selectivity is required to be obtained before the driver stage in the case of such transmitter that the spurious characteristic should be improved in the driver and final stages.

Since TS-820, employs a balanced mixer in the IF stage, it is not necessary to attenuate adjacent spurious signals in the driver and final stage. Thus, the driver stage is placed immediately after the mixer and negative feedback is applied, there. This transceiver applies negative feedback of approx. 6 dB by C5 and C10 and improvement of approx. 10 dB is effected by the tertiary cross modulation products.

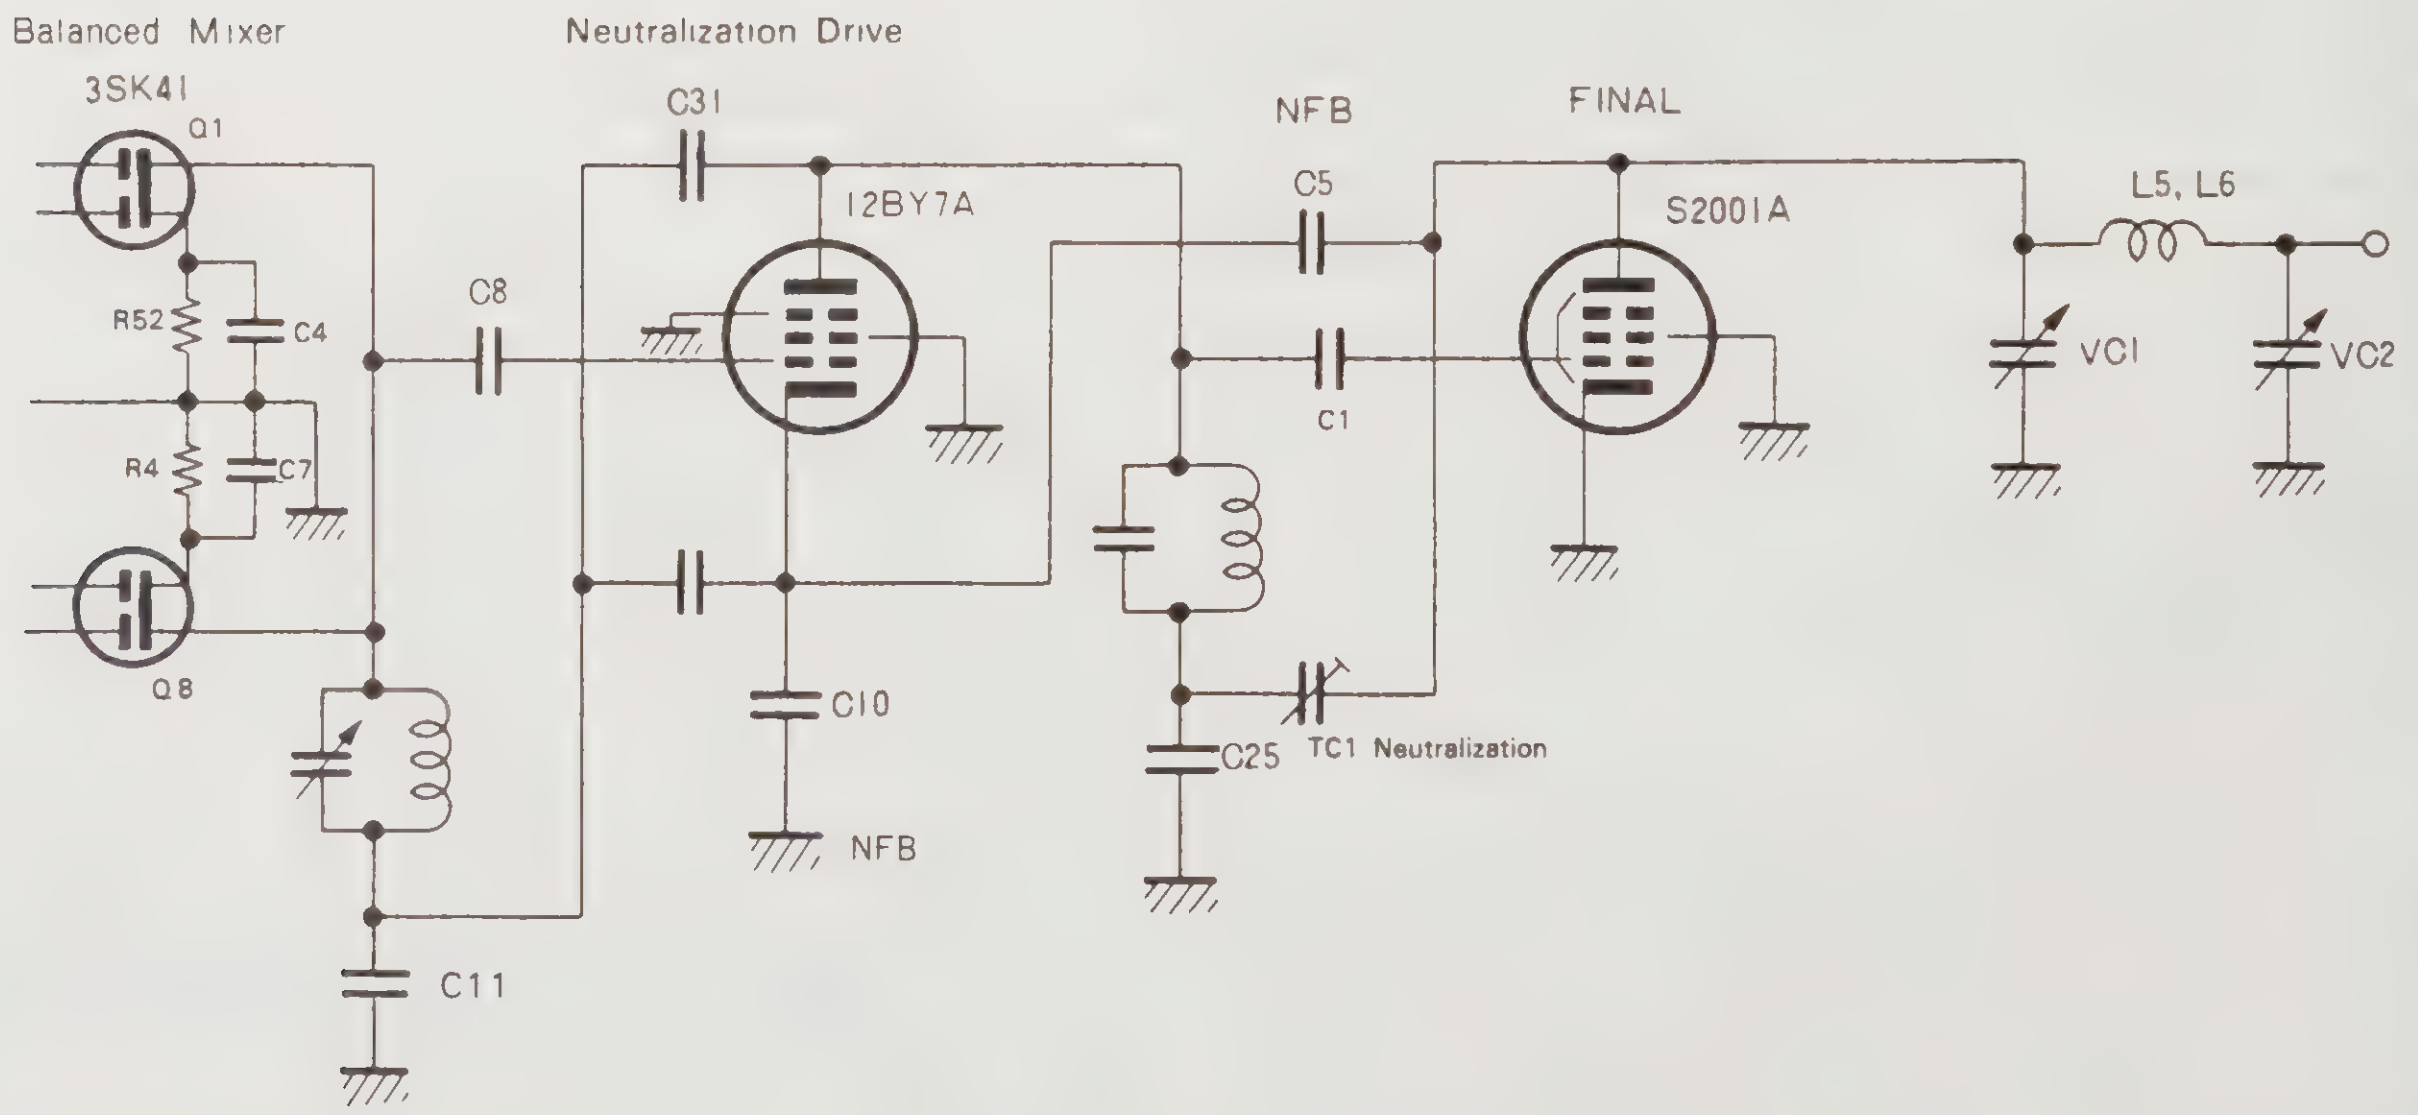

Fig. 12 RF-NFB circuit

FUNCTIONAL DISCRIPTION

NB CIRCUIT

The NB unit roughly consists of a signal system and noise system.

The signal converted into IF signal of 8.83 MHz is purified through a filter for removing adjacent large input interference (±15 kHz at −6 dB point in case of X1 and X2) and fed to the crystal filter through balanced type blanking gate circuit D1 ~ D4 and matching transformer T4.

When NB switch is turned ON, the received signal passed through the input filter circuit is buffer amplified by FET and its noise component only is picked out through transistors Q8, Q9 and Q10 and rectified by D13 and D14 to trigger blanking gate D13 to D4 through Q11. Q6 acts as AGC in the noise blanker circuit. The noise amplified by Q8, Q9 and Q10 is rectified by D13 and D14 and applied to the base of Q6, and then applied to Q8, Q9 and Q10 as AGC voltage. AGC time constant circuit Q6 is designed to be inoperative against pulse noise, but operative against continuous signal having short period such as SSB. Thus, Q8, Q9 and Q10 are operated nearly in maximum gain state, and against continuous signals they are operated in the condition that gain is suppressed by AGC voltage. Now, assume that Q11 is turned ON by pulse noise when the NB switch is turned ON. The collector voltage of Q11 is reduced suddenly and D1 through D4 connected to the collector of Q11 are reversely biased for a specified time by the time constant circuit consisting of C8 and R2, thus placing the signal line to OFF state. That is, the pulse noise is then eliminated (such as ignition noise of automobiles) D15 is a diode for setting the switching level.

This NB circuit is incorporated in IF unit.

AUX BAND

AUX position in BAND switch is empty channel because of circuit configuration.

PARTS ALIGNMENT

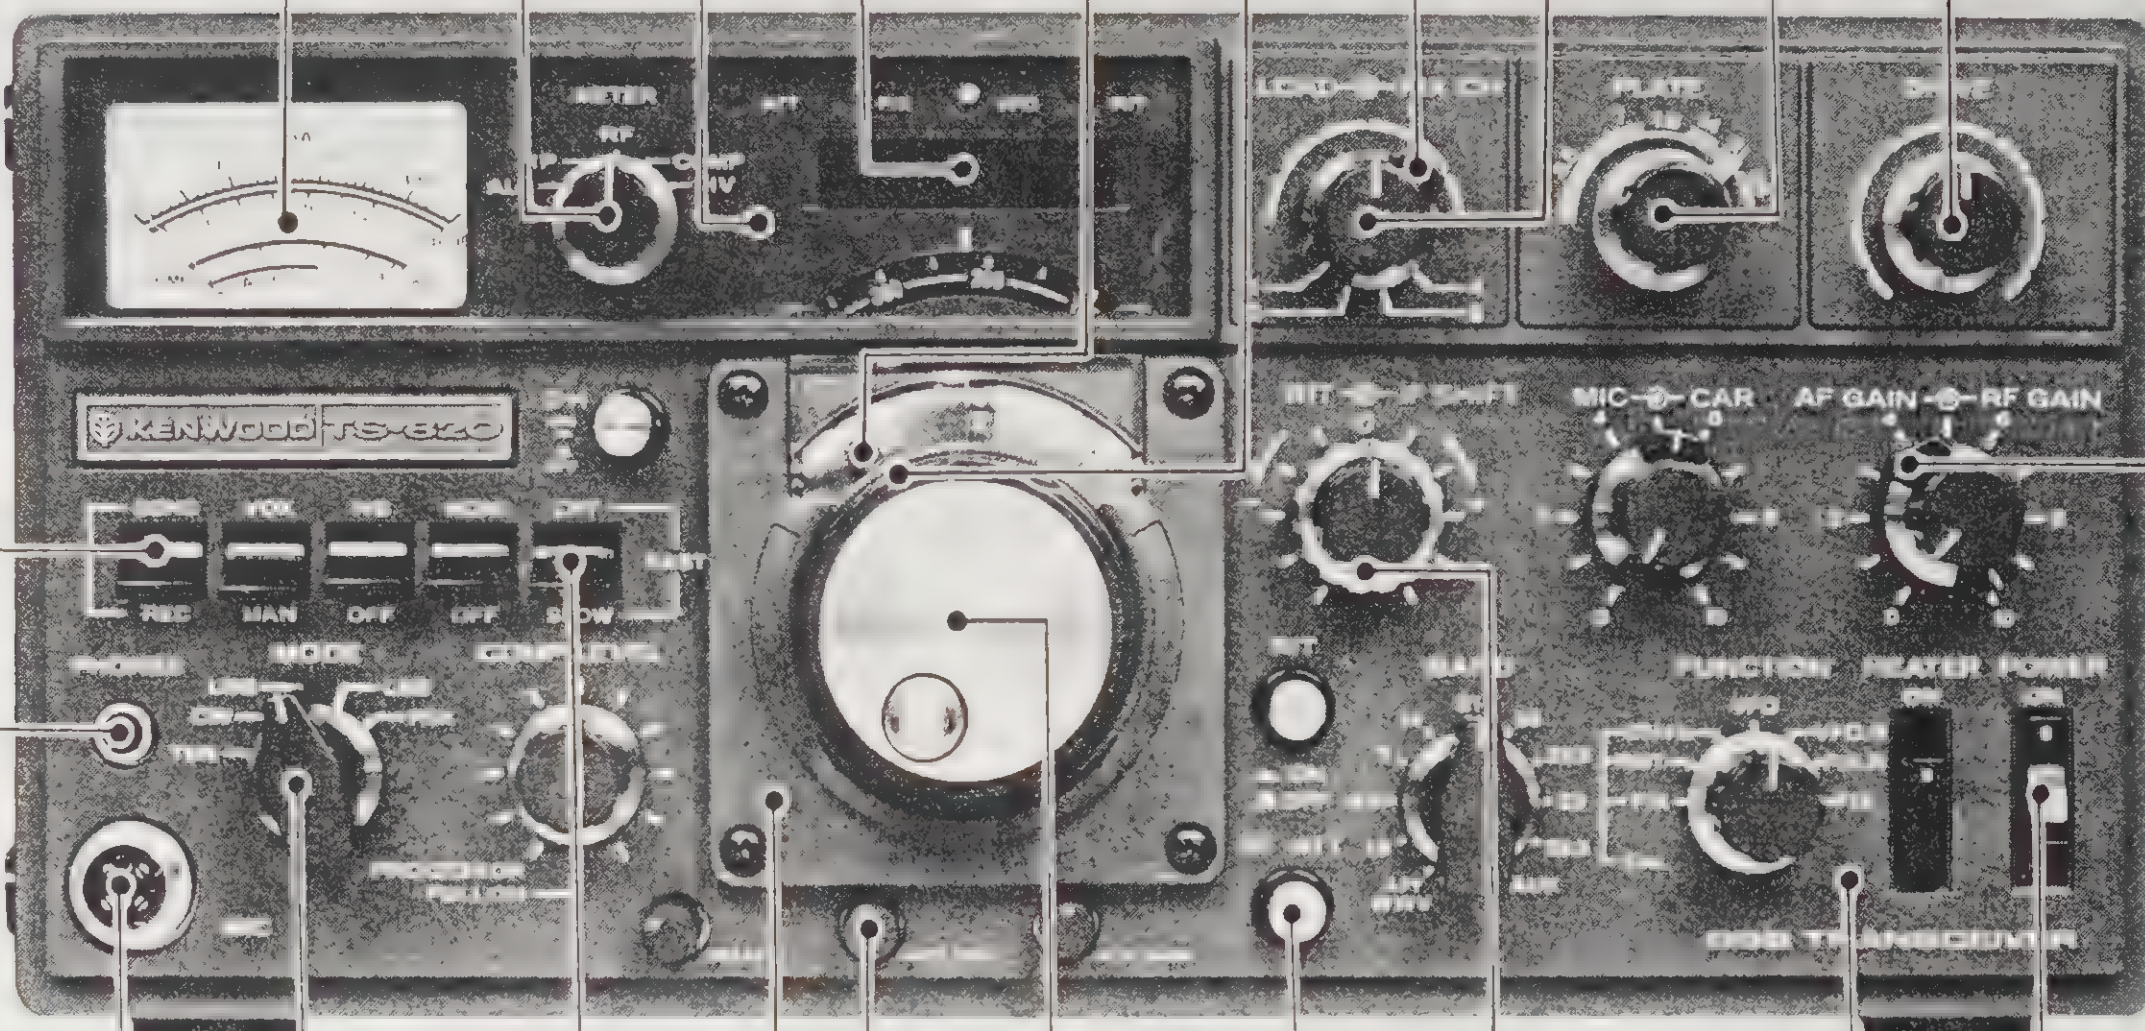

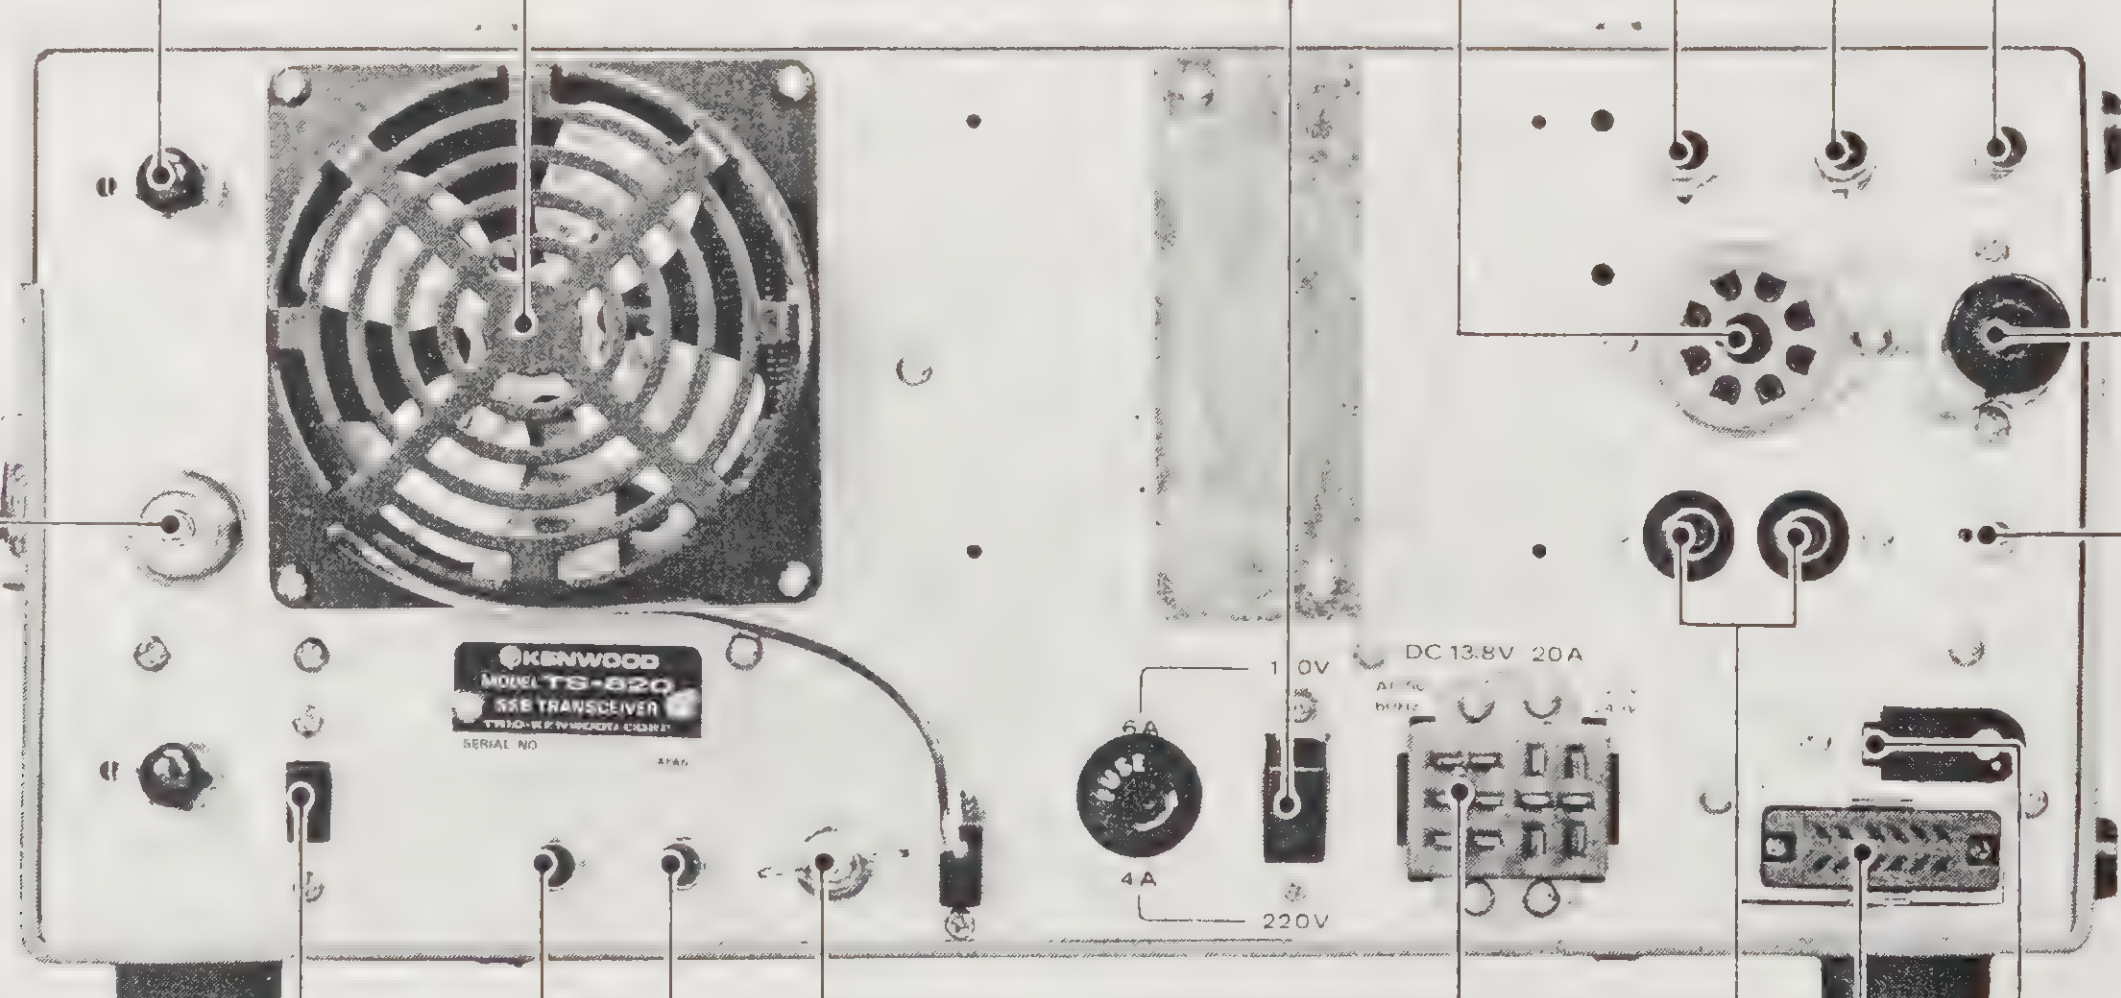

PARTS ALIGNMENT

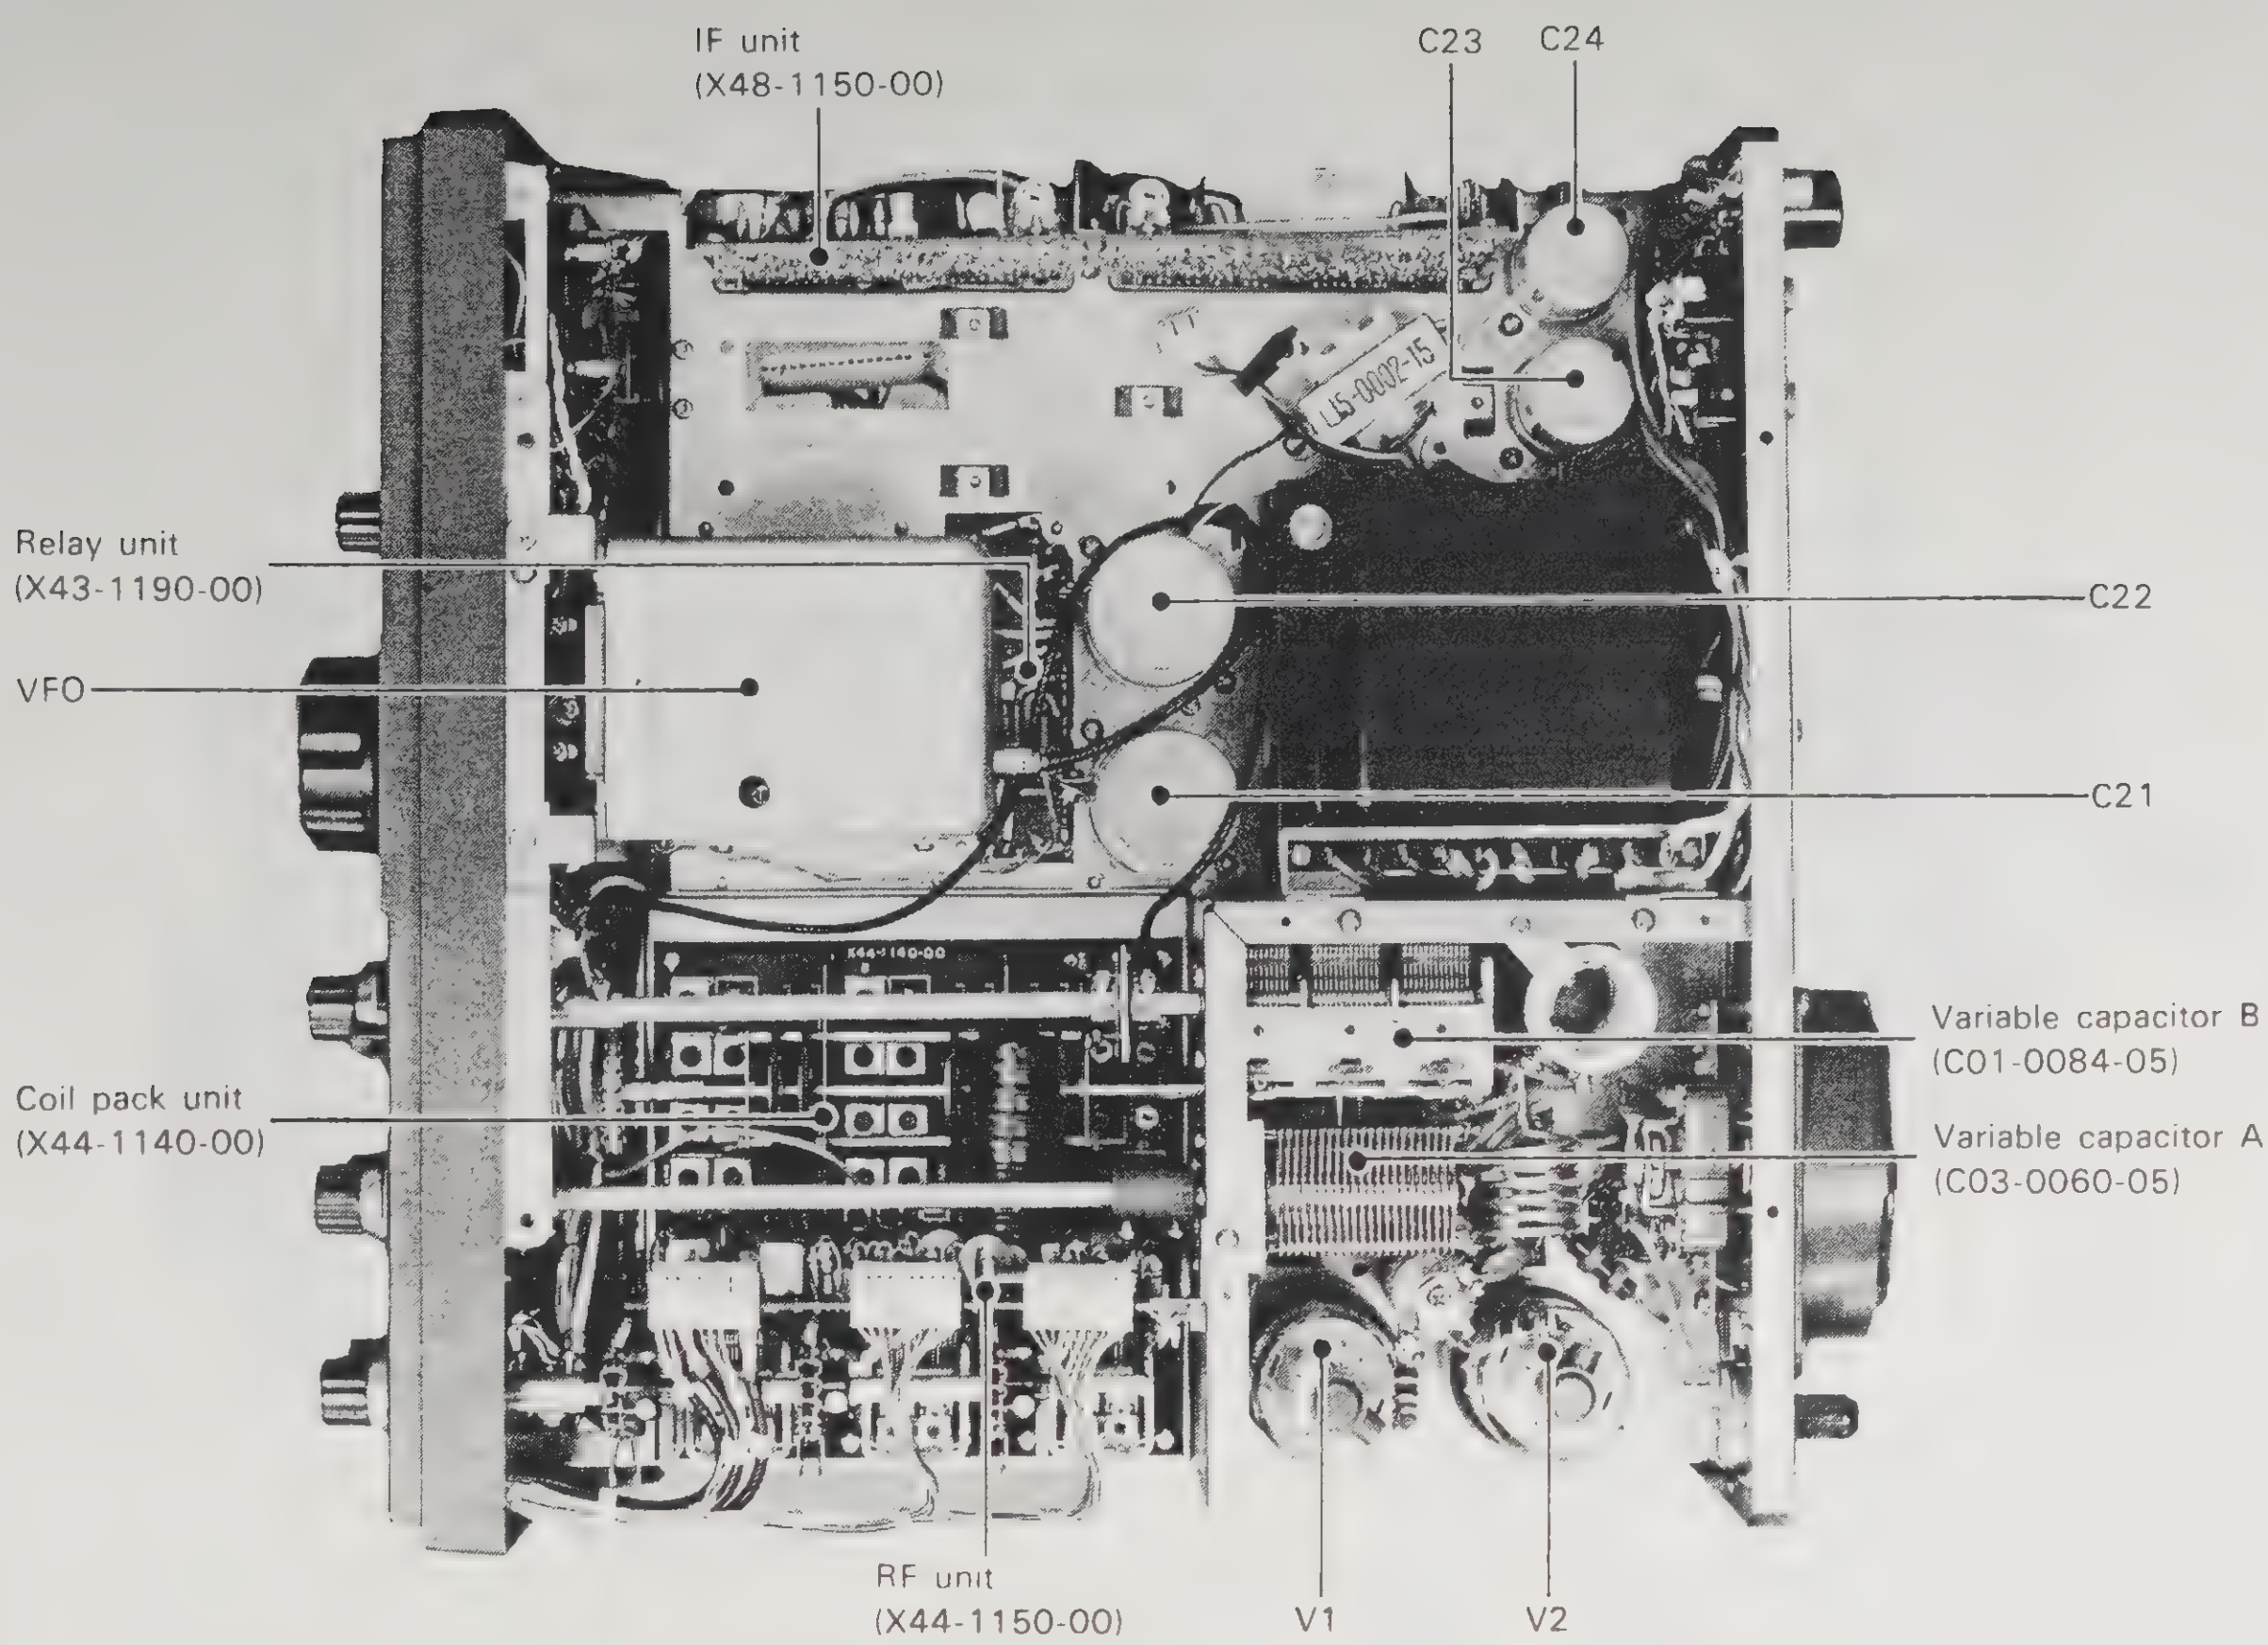

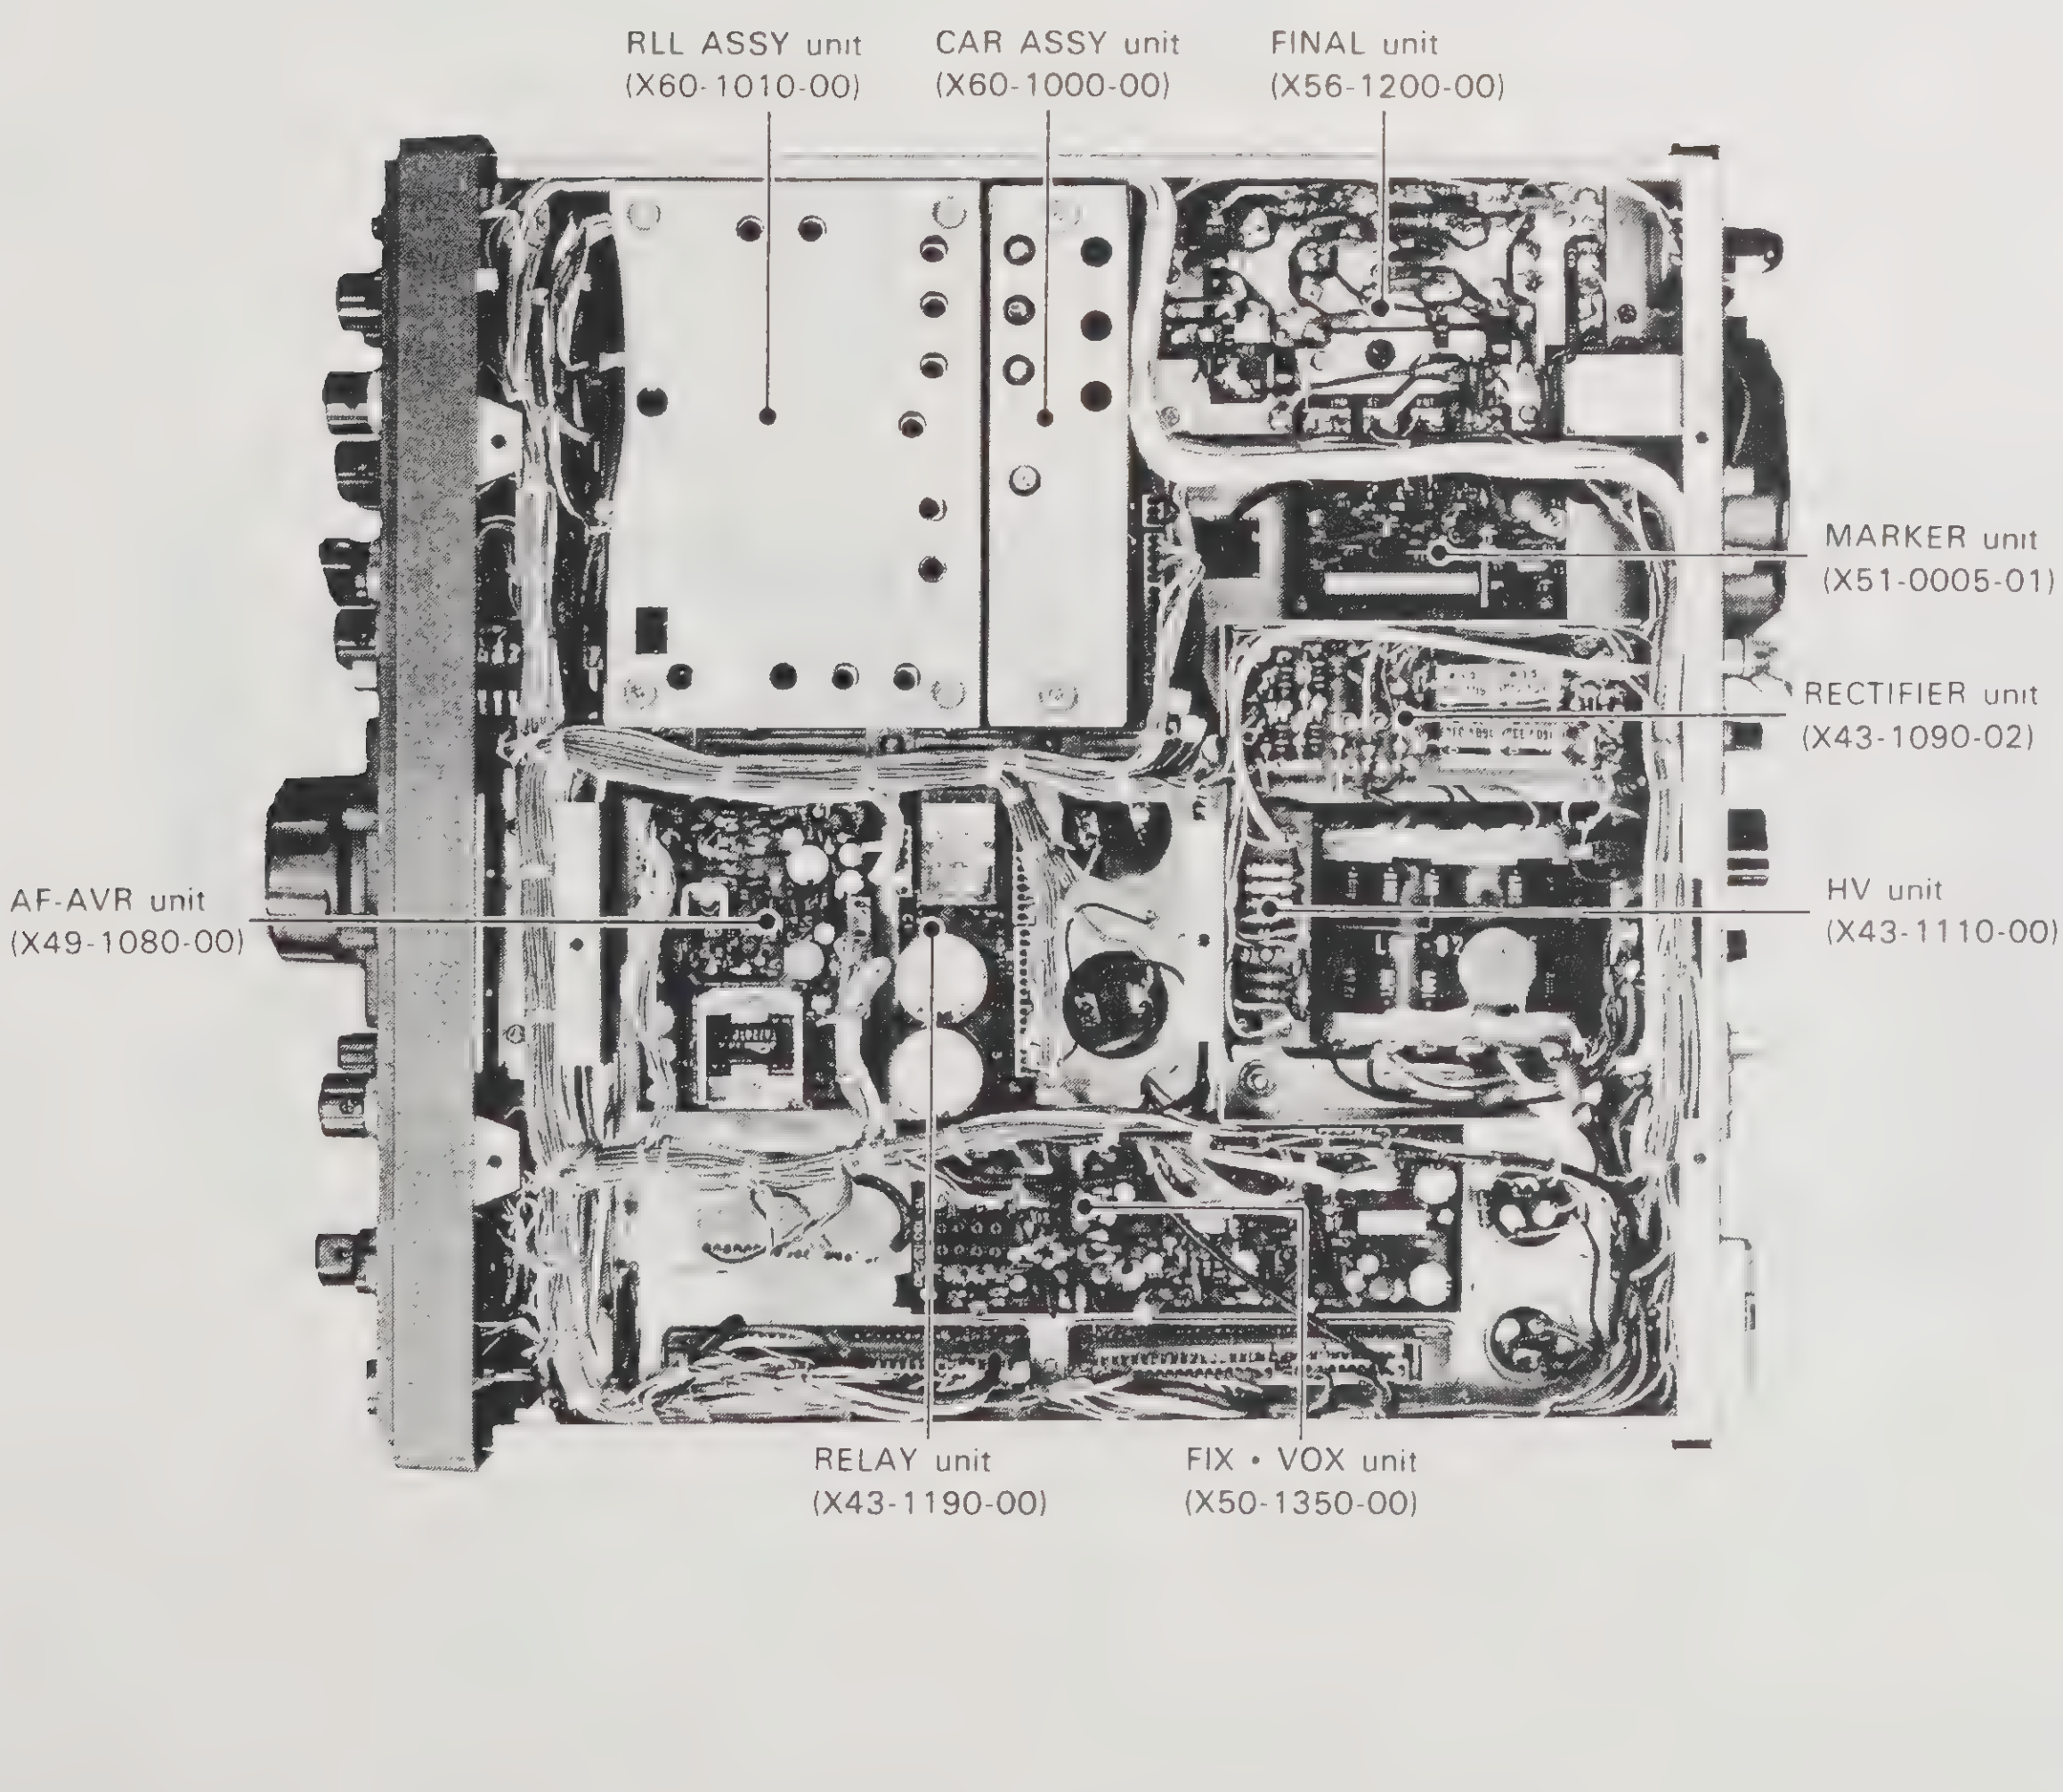

PARTS ALIGNMENT

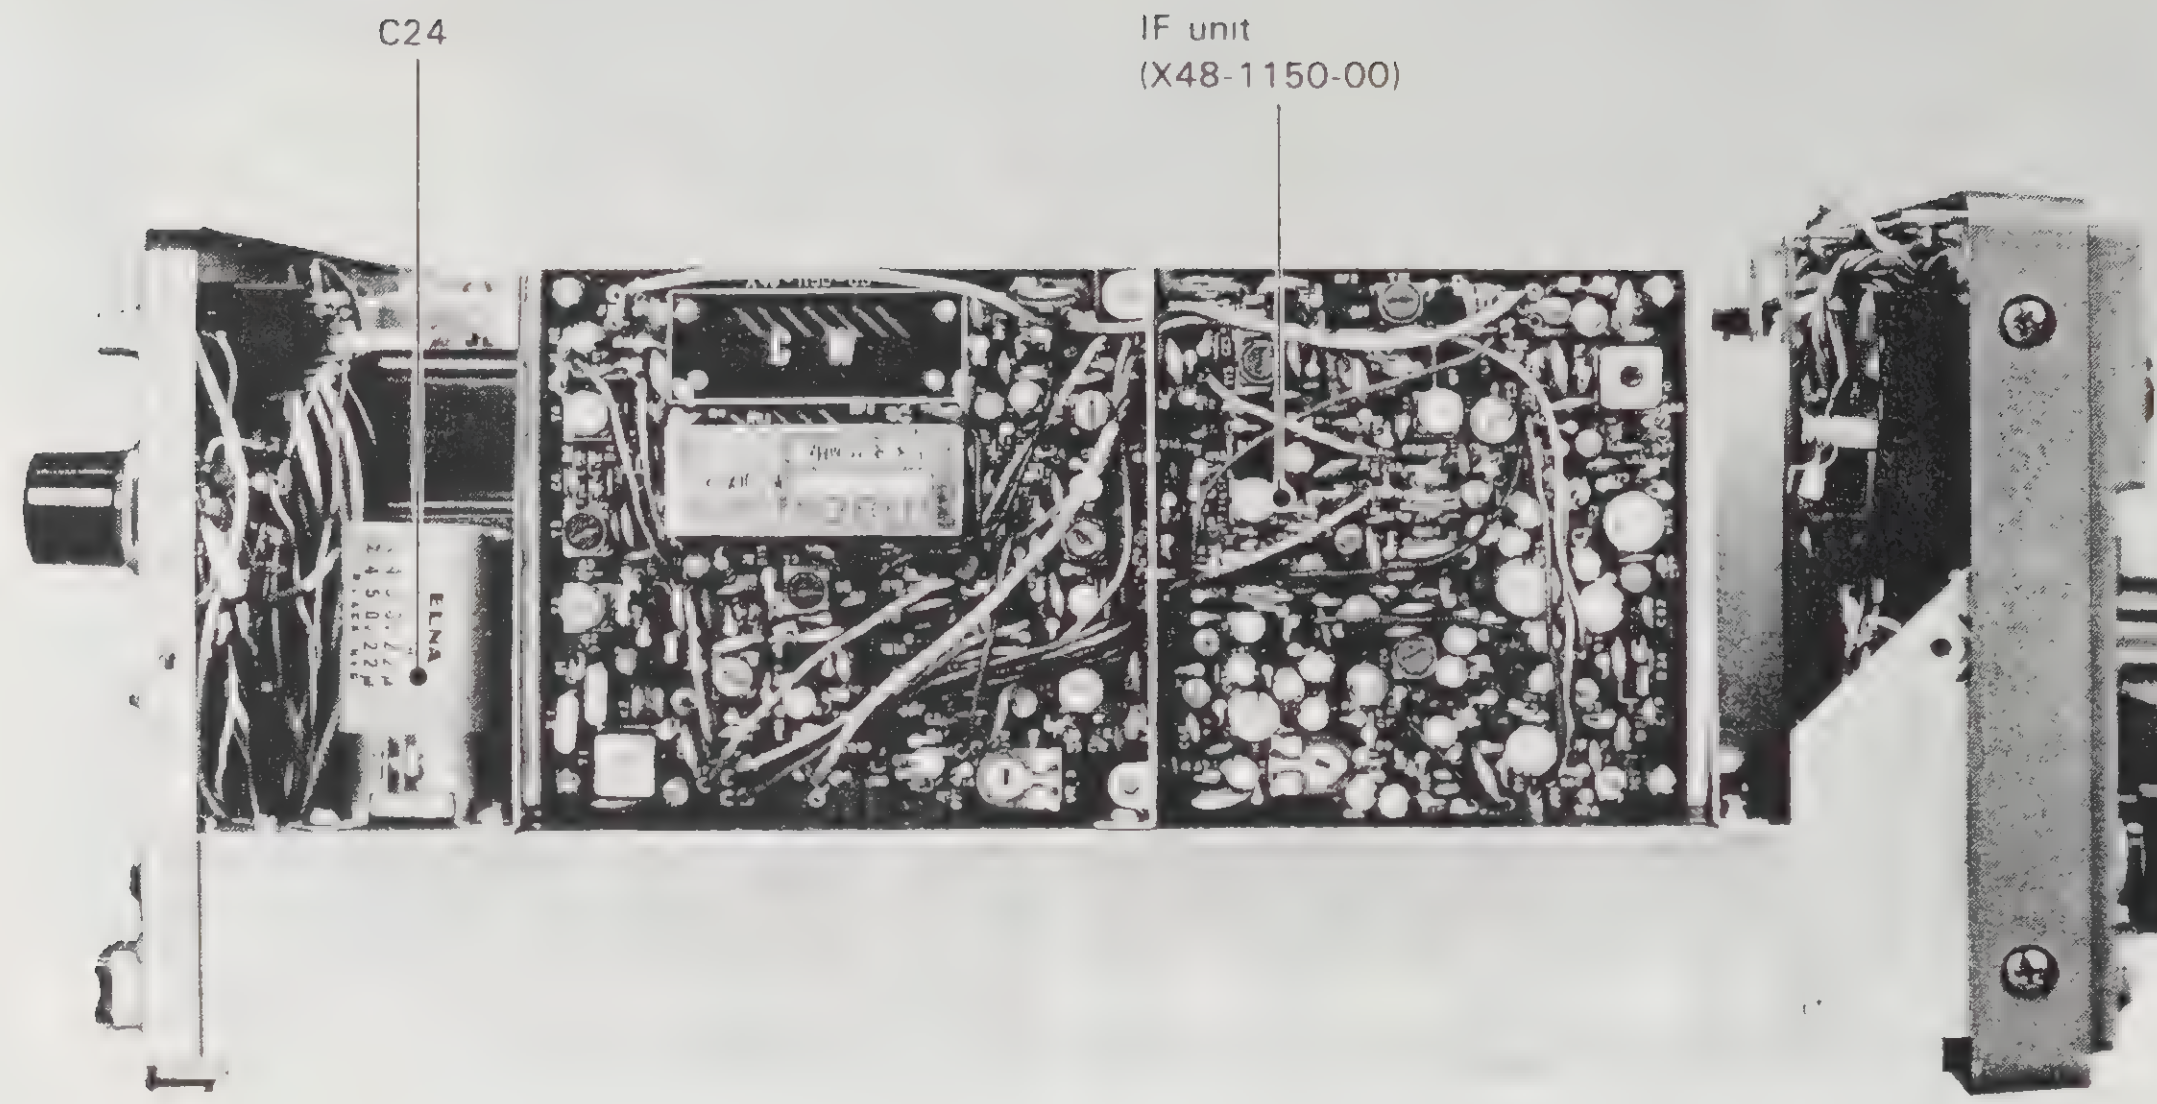

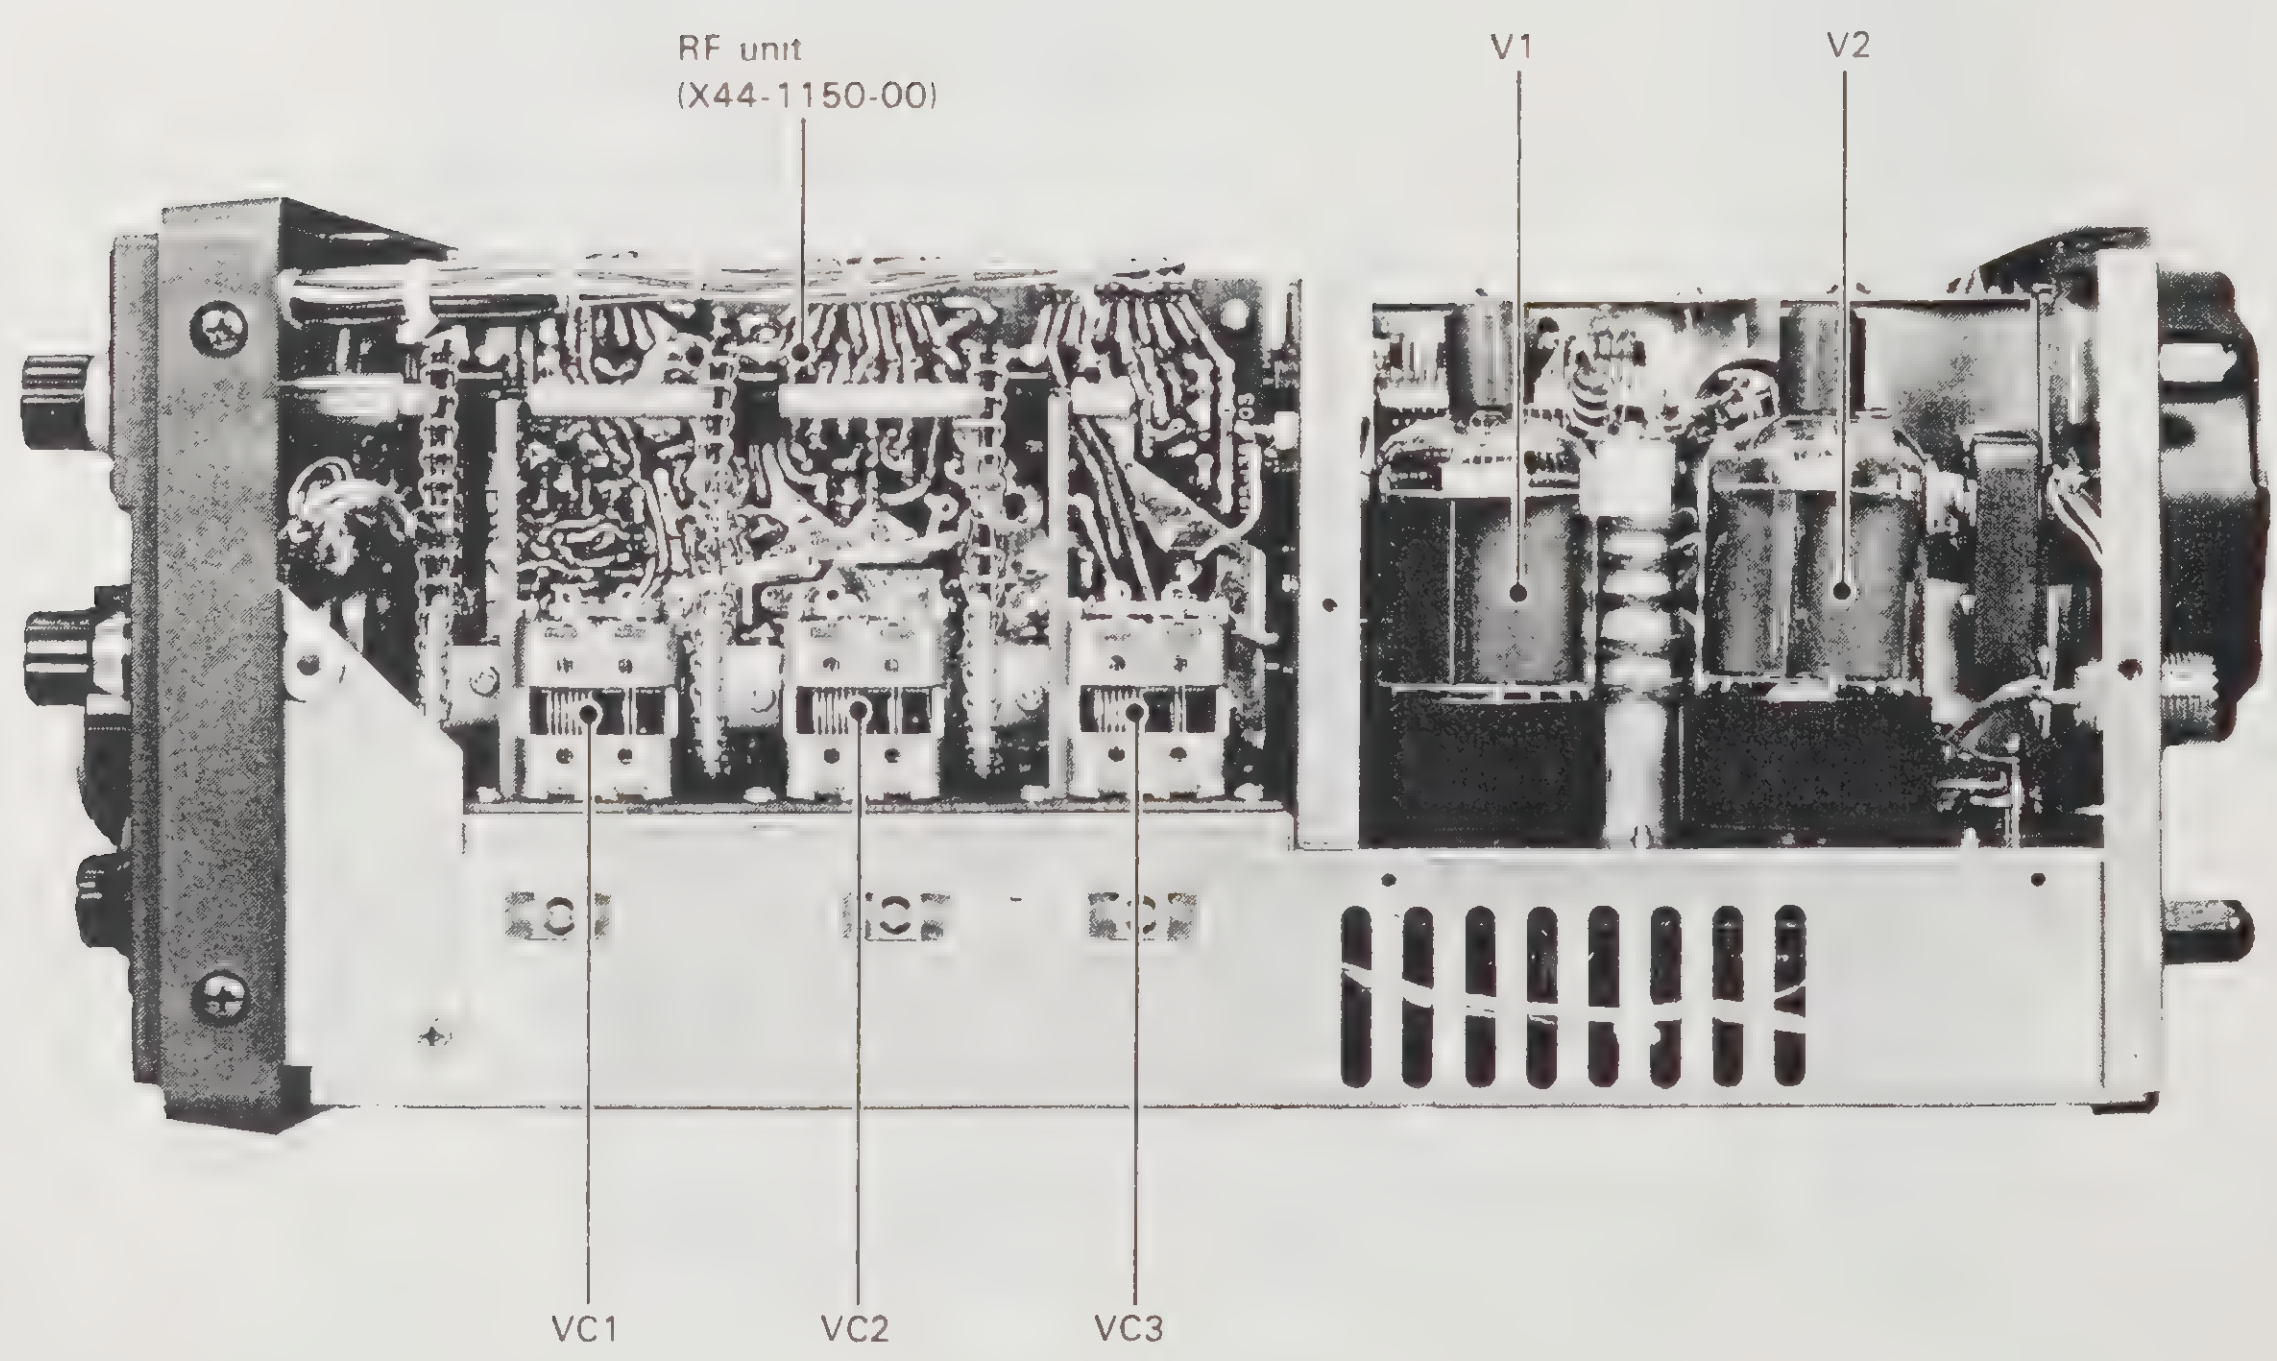

PACKING

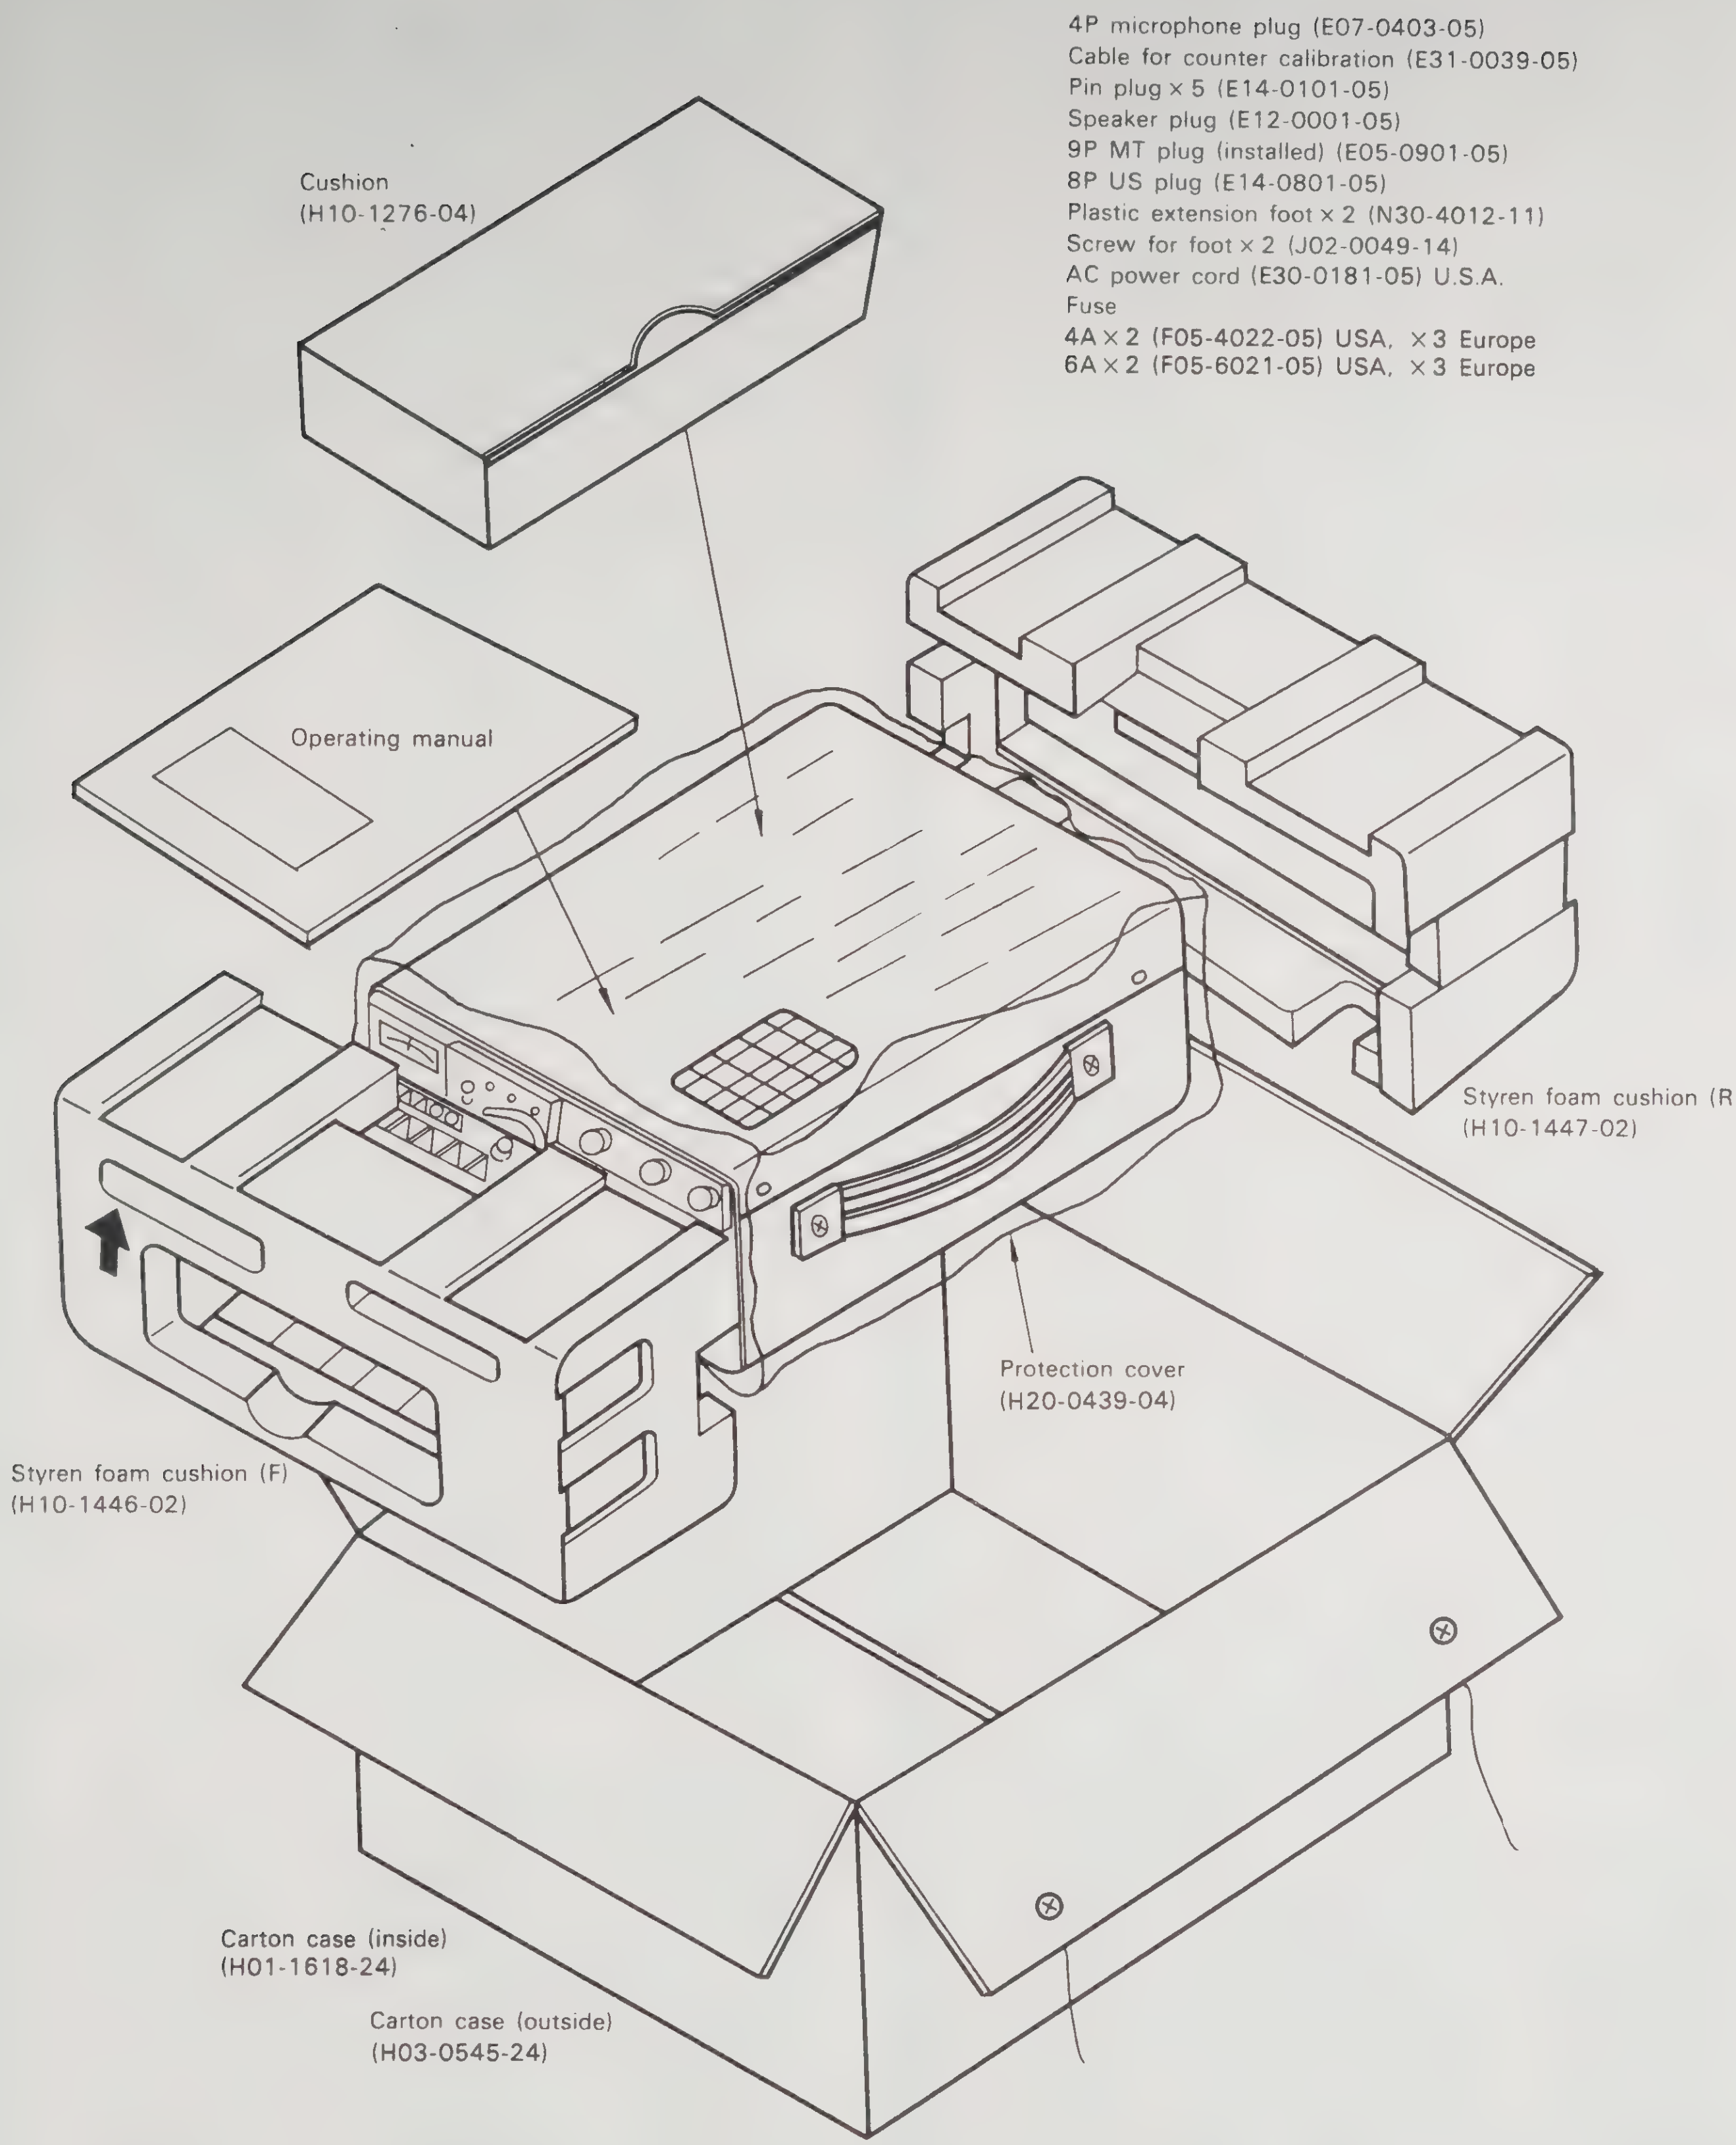

4P microphone plug (E07-0403-05)
Cable for counter calibration (E31-0039-05)
Pin plug × 5 (E14-0101-05)
Speaker plug (E12-0001-05)
9P MT plug (installed) (E05-0901-05)
8P US plug (E14-0801-05)
Plastic extension foot × 2 (N30-4012-11)
Screw for foot × 2 (J02-0049-14)
AC power cord (E30-0181-05) U.S.A.
Fuse
4A × 2 (F05-4022-05) USA, × 3 Europe
6A × 2 (F05-6021-05) USA, × 3 Europe
Cushion
(H10-1276-04)
Operating manual
Styren foam cushion (R)
(H10-1447-02)
Protection cover
(H20-0439-04)
Styren foam cushion (F)
(H10-1446-02)
Carton case (inside)
(H01-1618-24)
Carton case (outside)
(H03-0545-24)

PARTS LIST

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	C90 0186 05	Ceramic 0.001μF 3kWV	
C2	C90 0187 05	Ceramic 0 0047μF 1.4kWV	
C3	C90 0185 05	Ceramic 100pF 3kWV	
C4	C91 0017-05	Ceramic 390pF	
C5	C91 0016-05	Ceramic 3pF 3kWV	
C6	CC45SL2H821J	Ceramic 820pF ±5%	
C7	CC45SL2H102J	Ceramic 0.001μF ±5%	
C8	CC45SL2H681J	Ceramic 680pF ±5%	
C9	CC45SL2H271J	Ceramic 270pF ±5%	
C10	CC45SL2H101J	Ceramic 100pF ±5%	
C11	C90-0187-05	Ceramic 0.0047μF 1.4kWV	
C12 13	C90-0300-05	Ceramic 470pF AC150WV	
C14～17	CK45F1H103Z	Ceramic 0 01μF +80% −20%	
C18～20	CK45E2H103P	Ceramic 0 001μF +100% −0%	
C21	C90-0327-05	Electrolytic 100μF 500WV	
C22	C90-0327-05	Electrolytic 100μF 500WV	
C23.24	C90-0326-05	Electrolytic 22μF 450WV	
C25	CC45CH2H470J	Ceramic 47pF ±5%	
C26	CC45SL2H221J	Ceramic 220pF 500WV	
C27	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C28	CK45D1H102M	Ceramic 0.001μF ±20%	
C29.30	CK45F1H103Z	Ceramic 0.001μF +80% −20%	
C31	C90-0172-05	Ceramic 12pF 3kV	
C32～34	CK45F1H103Z	0.01μF +80% −20%	
		RESISITOR	
R1	RD14BY2E102J	Carbon lkΩ ±5% 1/4W	
R2	RD14BY2E332J	Carbon 3.3kΩ ±5% 1/4W	
R3 4	RC05GF2H101J	Carbon 100Ω ±5% 1/4W	
R5～7	RC05GF2H474J	Carbon 470kΩ ±5% 1/2W	
R8	RC05GF3A103K	Carbon 10kΩ ±10% 1W	
R9	PD14BY2B560J	Carbon 56Ω ±5% 1/8W	
R10	PD14BY2B471J	Carbon 470Ω ±5% 1/8W	
R11	PD14BY2E182J	Carbon 1 8kΩ ±5% 1/4W	
R12	PD14BY2E221J	Carbon 220Ω ±5% 1/4W	
R13	PD14BY2E681J	Carbon 680Ω ±5% 1/4W	
R14	PD14BY2E102J	Carbon 1kΩ ±5% 1/4W	
		SEMICONDUCTOR/TUBE	
D1	V11-0051-05	Diode IN60	
D2	V11-0285-05	Diode V06E	
V1 2	V40-0150-00	Final tube S2001A	
		POTENTIOMETER	
VR1	R01-3028-05	10kΩ (C), RF-PRO with switch (S10)	
VR2 3	R03-3050-05	10kΩ (B), RF-VOLT, BIAS	
VR4 5	R08-3012-15	10kΩ (A), AF, 10kΩ (B) RF-GAIN 10kΩ (A) MIC, 10kΩ (B) CAR	
VR6	R08-9011-05	5kΩ (B) RIT, 10kΩ (F) IF-SHIFT	
		SWITCH	
S1	S01-1037-05	Rotary switch METER SW	
S2	S01 1038-05	Rotary switch FIX CH	
S3	S01-1039-05	Rotary switch BAND SW	
S4	S01-3022-15	Rotary switch FINAL	
S5	S01-4017-05	Rotary switch FUNCTION	
S6	S01-5010-05	Rotary switch MODE	
S7～9	S40-2077-05	Push switch RIT, ATT, DH	
S11～14	S44-2020-05	Paddle switch STBY, VOX, NB, MON	
S15	S44-2015-05	Paddle switch AGC	
S16 17	S59-2020-05	See-saw switch POWER, HEATER	
S18.19	S31-2007-05	Slide switch SG, XVTR	
S21	S59-2017-05	Rocker switch (Power source selectior	

Ref. No.	Parts No.	Description	Re-marks
		COIL/TRIMMER/VARIABLE CAPACITOR	
L1	L33-0032-05	Choke coil , 3μH	
L3	L33-0218-15	Choke coil (Final)	
L4	L33-0259-05	Choke coil, 470μH (for safety)	
L5	L34-0560-05	Final coil (A)	
L6	L34-0561-05	Final coil (B) (28 MHz)	
L7	L40-1511-03	Ferri-inductor, 150μH	
TC1	C03-0002-05	Trimmer (Neutralizing)	
VC1	C03-0060-05	Variable capacitor (A) (Final)	
VC2	C01-0084-05	Variable capacitor (B) (Loard)	
PS1 2	L39-0046-05	Coil (Parastic suppressor)	
		MISCELLANEOUS	
—	A01-0274-05	Casing	
—	A01-0283-22	Case	
—	A10-0488-11	Chassis	
—	A20-1030-05	Panel	
—	A22-0195-32	Sub-panel	
—	A23-0649-12	Rear panel	
—	A40-0151-21	Bottom plate	
—	B01-0105-05	Dial escutcheon	
—	B05-0201-04	Speaker grille cloth	
—	B09-0003-05	Coupling × 2 (Baklite)	
—	B09-0011-04	Rubber cap × 3 (Opening for adjustment)	
—	B10-0195-14	Front glass	
—	B10-0196-14	Front glass (Indicating plate)	
—	B10-0197-03	Front glass (Main dial)	
—	B20 0373-04	Dial scale (Sub-dial)	
—	B20-0374-04	Dial scale (A) (Out side)	
—	B20-0375-04	Dial scale (B) (Inside)	
—	B21-0007-04	Pointer (PLATE knob)	
—	B30-0079 05	Pilot lamp × 3 12V, 40 mA	
—	B31-0241-05	Meter	
—	B40-1429-04	Model name plate (KENWOOD)	
—	B41-0222-24	Voltage indication sticker 120/220V	
—	B42-0287-14	Caution sticker (high voltage)	
—	B42-0628-04	Fixed ch. sticker	
—	B42-0452 04	DC terminal indicating sticker	
—	B43-0261-04	Badge (TS-820)	
—	B46-0058-00	Warranty card	U.S.A.
—	B50-2529-00	Operating manual	
—	B58 0181-00	Caution card (Transmitter section)	
—	B58-0187-00	Caution card (Source voltage)	Europe
—	B58-0188-00	Caution sticker (Source voltage)	
—	D13-0055-04	Sprocket × 2	
—	D16-0058-04	Chain ass'y	
—	D21-0326-24	Shaft (A) (LOAD)	
—	D21-0413-05	Band shaft	
—	D21-0414-24	Shaft (B) (DRIVE)	
—	D21-0415-14	Shaft (C) (PLATE)	
—	D22-0004-04	Shaft coupling (6φ − 6φ)	
—	D22-0027-14	Shaft joint (6φ − 3φ)	
—	D22-0401-04	Shaft coupling (DRIVE)	
—	D23-0702-05	Ball retainer	
—	D32-0051-04	Shaft stopper (3 × 10)	
—	D32-0064-04	Shaft stopper × 2	
—	D32-0075-04	Switch stopper	
—	D40-0204-04	Vernier mechanism ass'y	
—	D40-0206-05	Fan ass'y	
—	E01-0801-05	US socket	
—	E01-0903-05	9PMT socket	
—	E03-0301-15	3P plug (Power source)	Europe

PARTS LIST

Ref. No	Parts No	Description	Remarks
—	E04-0102-05	M type receptacle	
—	E05-0901-05	9PMT plug	
—	E06-0403-05	4P Miceophone socket	
—	E07-0403-05	4P Microphone jack	
—	E08-0204-05	2P plug socket × 2	
—	E08-1202-05	12P plug socket	
—	E08-1207-05	12P plug	
—	E08-1208-05	Connector socket (for transverter)	
—	E09-0204-05	2P plug socket × 3	
—	E11-0003-15	US jack (External speaker)	
—	E11-0005-15	3P phone jack (Key)	
—	E11-0014-05	US jack (RTTY)	
—	E11-0034-25	US jack (2P with SW)	
—	E12-0001-05	Phone plug (SP)	
—	E13-0101-05	1P jack × 3	
—	E13-0205-05	2P jack	
—	E14-0101-05	1P plug × 6	
—	E14-0801-05	US plug	
—	E20-0512-05	5P terminal plate	
—	E20-1003-05	10P terminal plate	
—	E22-0207-05	Lug plate	
—	E23-0014-04	Acme terminal	
—	E23-0056-05	Terminal	
—	E23-0093-05	Teminal (mini connector)	
—	E30-0181-05	AC power cord	U.S.A
—	E31-0037-05	3P connector with lead (FSK switching)	
—	E31-0038-05	3P connector with coaxial cable	
—	E31-0039-05	Counter cable	
—	E33-0084-00	Wire kit	U.S.A.
—	E33-0085-00	Wire kit	Europe
—	E33-0097-00	Wire kit	U.S.A
—	E33-0098-00	Wire kit	Europe
—	E90-0004-15	Plate cap × 2	
—	F05-4022-05	Fuse (4A) × 2	U.S.A.
		Fuse (4A) × 3	Europe
—	F05-6021-05	Fuse (6A) × 2	U.S.A.
		Fuse (6A) × 3	Europe
—	F09-0041-05	Fan	
—	F10-0402-04	Shield plate (Relay)	
—	F10-0412-14	Shield plate (Final)	
—	F11-0243-23	Final box	
—	F11-0244-03	Final cover	
—	F15-0205-04	Shading plate	
—	F15-0601-04	Shading plate (small) × 2	
—	F19-0133-14	Protecting plate (for DC-DC converter)	
—	G01-0801-04	Spring (for earth)	
—	G11-0008-04	Cushion (Relay)	
—	G11-0053-04	Cushion	
—	H01-1608-24	Carton case (Inside)	
—	H03-0545-24	Carton case (Outside)	Europe
—	H03-1603-14	Carton case (Outside)	U.S.A.
—	H10-1276-04	Cushion	
—	H10-1446-02	Styrene foam cushion (F)	
—	H10-1447-02	Styrene foam cushion (R)	
—	H20-0439-04	Protection cover	
—	H25-0029-04	Polyetylene bag	
—	H25-0120-04	Polyetylene bag	
—	J02-0022-05	Leg (Small) × 4	
—	J02-0049-14	Leg (Large) × 6	
—	J13-0033-15	Fuse holder	
—	J19-0006-04	Switch stopper	
—	J19-1301-04	Diode holder × 4	
—	J21-0392-04	Lead holder	
—	J21-0934-15	Fitting for handle × 2	
—	J21-1144-04	Speaker retainer	
—	J21-1148-04	Variable capacitor stopper	
—	J21-1151-04	Terminal plate stopper	
—	J21-1202-04	Speaker retainer ass'y	
—	J21-1425-04	Retainer	
—	J21-1494-04	Meter stopper	
—	J21-1495-04	Lamp stopper	
—	J21-1496-04	Rotary switch stopper	
—	J21-1497-04	Final coil stopper × 2	
—	J21-1502-04	RF PC board stopper	
—	J21-2556-04	VFO fittings	
—	J21-1504-14	Shaft holder × 2	
—	J31-0141-04	Ring spacer (Microphone)	
—	J32-0074-04	Hexagonal boss (AF) × 4	
—	J32-0218-04	Hexagonal boxx × 8 (Push switch)	
—	J32-0220-04	Hexagonal boss × 2 (Final)	
—	J32-0222-04	Boss for dial scale (A)	
—	J32-0223-14	Boss for dial scale (B)	
—	J32-1030-14	Round boss	
—	J41-0020-04	Knob bushing × 3	
—	J41-0024-15	Cord bushing	
—	J61-0006-04	Free up belt	Europe
—	J61-0019-05	Vinyl tie × 12	
—	K01-0049-15	Handle	
—	K21-0266-04	Knob FIX, CH	
—	K21-0267-04	Knob × 3 DRIVE, FUNCTION, COMP LEVEL	
—	K21-0268-04	Knob × 2 CAR, RF GAIN	
—	K21-0269-04	Knob × 4 LOAD, RIT, MIC, AF GAIN	
—	K21-0279-04	Knob METER	
—	K21-0315-04	Knob PLATE	
—	K21-0709-03	Knob MAIN	
—	K23-0239-04	Knob BAND, MODE	
—	K23-0240-04	Knob VOX, ANTI VOX, DELAY	
—	K23-0241-14	Knob IF SHIFT	
—	K29-0166-04	Knob (Push) × 3 DH, RF ATT, RIT	
—	K29-0269-04	Knob (Calibration)	
—	L01-1056-05	Power transformer	
—	L15-0002-15	Choke coil (Low frequency)	
—	S51-4017-15	ANT relay	
—	T03-0027-15	Speaker	
—	T40-0022-05	Motor	
—	X40-1110-00	VFO unit	
—	X43-1090-02	Rectifier unit	
—	X43-1110-00	HV unit	
—	X43-1190-00	Relay unit	
—	X44-1140-00	Coil pack unit	
—	X44-1150-00	RF unit	
—	X48-1150-00	IF unit	
—	X49-1080-00	AF-AVR unit	
—	X50-1350-00	FIX-VOX	
—	X52-0005-01	Marker unit	
—	X54-1180-00	Indicator unit	
—	X54-1190-00	VOX-VR unit	
—	X56-1200-00	FINAL unit	
—	X60-1000-00	CAR ass'y unit	
—	X60-1010-00	PLL ass'y unit	

PARTS LIST

VFO (X40-1110-00)

Ref No	Parts No	Description	Re-marks
		CAPACITOR	
C1	CC45PG1H470J	Ceramic 47pF ±5%	
C2,3	CC45LG1H150J	Ceramic 15pF ±5%	
C4	CC45SG1H070J	Ceramic 7pF ±5%	
C5	CC45LG1H470J	Ceramic 47pF ±5%	
C6	CC45LG1H220J	Ceramic 22pF ±5%	
C7,8	CM93F2A151J	Mica 150pF ±5%	
C9	CC45CH1H030D	Ceramic 3pF ±0.5pF	
C10	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C11,12	CK45F1H473Z	Ceramic 0.047μF +80%−20%	
C13	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C14	CC45SL1H330J	Ceramic 33pF ±5%	
C15	CC45SL1H050D	Ceramic 5pF ±0.5pF	
C16	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C17	CC45SL1H050D	Ceramic 5pF ±0.5pF	
C18	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C19	CK45F1H473Z	Ceramic 0.047μF +80%−20%	
C20	CC45CG1H100D	Ceramic 10pF ±0.5pF	
		RESISTOR	
R1	PD14BY2E105J	Carbon 1MΩ ±5% 1/4W	
R2	PD14BY2E101J	Carbon 100Ω ±5% 1/4W	
R3,4	PD14BY2E105J	Carbon 1MΩ ±5% 1/4W	
R5	PD14BY2E331J	Carbon 330Ω ±5% 1/4W	
R6	PD14BY2E333J	Carbon 33kΩ ±5% 1/4W	
R7	PD14BY2E473J	Carbon 47kΩ ±5% 1/4W	
R8	PD14BY2E102J	Carbon 1kΩ ±5% 1/4W	
R9	PD14BY2E101J	Carbon 100Ω ±5% 1/4W	
		SEMICONDUCTOR	
Q1	V09-0020-05	FET 3SK22(Y)	
Q2	V09-0011-05	FET 2SK19(Y)	
Q3,4	V03-0079-05	FET 2SC460(B)	
D1	V11-0053-05	Diode SD111	
D2,3	V11-0051-05	Diode IN60	
		COIL/VC/TRIMMER	
L1	L32-0098-05	Oscillator coil	
L2～4	L40-1021-03	Ferri inductor 1 mH	
L5	L40-2201-03	Ferri inductor 22μH	
L6,7	L40-1021-03	Ferri inductor 1 mH	
TC1	C03-0001-05	Variable capacitor (Small size)	
TC2	C05-0013-15	Ceramic trimmer	
		MISCELLANEOUS	
–	A01-0169-23	VFO Case	
–	B42-0010-04	Indication tape	
–	C01-0169-05	Variable capacitor	
–	D22-0011-05	Shaft coupling	
–	D40-0205-05	Dial mechanism	
–	E08-0204-05	2P plug socket	
–	E13-0101-05	1P pin jack	
–	E22-0207-05	Lug plate	
–	E23-0021-04	Terminal × 5	
–	F07-0231-34	VFOcover	
–	F10-0249-14	VFO shield plate	
–	F11-0010-04	VFO box	
–	G03-0009-04	Spring	

Ref. No	Parts No.	Description	Re-marks
–	J21-0895-03	VFO variable capacitor stopper	
–	J25-1505-13	VFO stopper	

HV (X43-1110-00)

Ref No	Parts No	Description	Re-marks
		CAPACITOR	
C1	CK45E2H103P	Ceramic 0.01μF +100%−0%	
		RESISTOR	
R1	RC05GF2H104J	Carbon 100kΩ ±5% 1/2W	
R2～4	PD14BY2H684J	Carbon 680kΩ ±5% 1/2W	
R5,6	RC05GF2H563J	Carbon 56kΩ ±5% 1/2W	
R7	RC05GF2H123J	Carbon 12kΩ ±5% 1/2W	
		MISCELLANEOUS	
	E23-0047-04	Terminal (square) × 6	

RELAY (X43-1190-00)

Ref No	Parts No	Description	Re-marks
		CAPACITOR	
C1,2	C90-0325-05	Electrolytic 2200μF 25WV	
C3	CK45F1H473Z	Ceramic 0.04μF +80%−20%	
C4,5	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C6	CQ92M1H104K	Mylar 0.1μF ±10%	
		RESISTOR	
R1	RS14AB3D221J	Metal film 220Ω ±5% 2W	
		SEMICONDUCTOR	
D1	V11-0418-05	Zener diode BZ-052	
		MISCELLANEOUS	
RL	S51-4031-05	Relay	
RL1,2	E40-1413-05	Mini connector	
RL3	E40-0613-05	Mini connector	

RECTIFIER (X43-1090-02)

Ref No	Parts No	Description	Re-marks
		CAPACITOR	
C1,2	CE02W2C330	Electrolytic 33μF 160WV	
C3,4	CK45E2H103P	Ceramic 0.01μF +100%−0%	
		RESISTOR	
R1～4	RC05GF2H474J	Carbon 410kΩ ±5% 1/2W	
R5,6	RS14AB3D471J	Metal film 470Ω ±5% 2W	
R7	RC05GF2H102J	Carbon 1kΩ ±5% 1/2W	
R8	RC05GF2H104J	Carbon 100kΩ ±5% 1/2W	
R9,10	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
		SEMICONDUCTOR	
D1～6	V11-0282-05	Diode V08J	
D7	V11-0285-05	Diode V06E	
D8～11	V11-0290-05	Diode V03C	
		MISCELLANEOUS	
	E23-0047-04	Terminal (square) × 17	

PARTS LIST

COIL PACK (X44-1140-00)

Ref No	Parts No	Description				Re-marks
		CAPACITOR				
C1,2	CC45RH1H560J	Ceramic	56pF	±5%		
C3	CC45RH1H470J	Ceramic	47pF	±5%		
C4	CC45RH1H560J	Ceramic	56pF	±5%		
C5	CC45RH1H470J	Ceramic	47pF	±5%		
C6	CC45RH2H560J	Ceramic	56pF	±5%		
C7	CC45RH2H390J	Ceramic	39pF	±5%		
C8	CC45RH2H330J	Ceramic	33pF	±5%		
C9	CC45RH1H151JTD	Ceramic	150pF	±5%		
C10	CC45RH1H101JTD	Ceramic	100pF	±5%		
C11	CC45SL1H561JTD	Ceramic	560pF	±5%		
C12,13	CK45F1H103Z	Ceramic	0.01μF	+80% −20%		
C14	CC45RH1H220J	Ceramic	22pF	±5%		
C15	CC45RH1H221JTD	Ceramic	220pF	±5%		
C16	CC45RH1H101JTD	Ceramic	100pF	±5%		
C17	CC45SL1H561JTD	Ceramic	560pF	±5%		
C18	CC45RH1H330J	Ceramic	33pF	±5%		
C19	CC45RH1H390J	Ceramic	39pF	±5%		
C20	CQ92M1H102J	Ceramic	0.001μF	±5%		
C21	CC45RH1H101JTD	Ceramic	100pF	±5%		
C22,23	CC45RH2H121JTD	Ceramic	120pF	±5%		
C24	CC45RH2H330J	Ceramic	33pF	±5%		
C25	CC45SL1H561JTD	Ceramic	560pF	±5%		
C26,27	CK45E2H103P	Ceramic	0.01μF	+100% −0%		
C28	CC45SL1H100D	Ceramic	10pF	+0.5pF		
C29,30	CK24E2H103P	Ceramic	0.01μF	+100% −0%		
C32	CC45RH1H330J	Ceramic	33pF	±5%		
C33	CK45F1H103Z	Ceramic	0.01μF	+80% −20%		
C34	CC45RH1H390J	Ceramic	39pF	±5%		
C35	CC45RH1H390J	Ceramic	39pF	±5%		
C36	CC45HH1H390J	Ceramic	39pF	±5%		
C37	CC45RH1H390J	Ceramic	39pF	±5%		
C38	CC45RH2H390J	Ceramic	39pF	±5%		
C39	CC45RH1H050D	Ceramic	5pF	±5%		
		RESISTOR				
R1	PD14CY12E103J	Carbon	10kΩ	±5%	1/4W	
R2	PD14CY2E102J	Carbon	1kΩ	±5%	1/4W	
R3	PD14CY2E223J	Carbon	22kΩ	±5%	1/4W	
R4	PD14CY2E102J	Carbon	1kΩ	±5%	1/4W	
R5	PD14CY2E820J	Carbon	82Ω	±5%	1/4W	
R6,7	PD14CY2E472J	Carbon	4.7kΩ	±5%	1/4W	
R8	PD14CY12E392J	Carbon	3.9kΩ	±5%	1/4W	
		COIL/VC				
L1	L34-0545-05	Tuning coil	WWV	MIX		
L2	L34-0548-05	Tuning coil	1.9	MIX		
L3	L34-0549-05	Tuning coil	3.5	MIX		
L4	L34-0550-05	Tuning coil	7	MIX		
L5	L34-0545-05	Tuning coil	14	MIX		
L6	L34-0546-15	Tuning coil	21	MIX		
L7	L34-0547-15	Tuning coil	28	MIX		
L8	L34-0542-05	Tuning coil	1.9	ANT		
L9	L34-0545-05	Tuning coil	WWV	ANT		
L10	L34-0543-05	Tuning coil	3.5	ANT		
L11	L34-0544-05	Tuning coil	7	ANT		
L12	L34-0545-05	Tuning coil	14	ANT		
L13	L34-0546-15	Tuning coil	21	ANT		
L14	L34-0547-15	Tuning coil	28	ANT		
L15	L34-0552-15	Tuning coil	1.9	DRIVE		
L16	L34-0553-05	Tuning coil	3.5	DRIVE		
L17	L34-0554-05	Tuning coil	7	DRIVE		
L18	L34-0555-05	Tuning coil	14	DRIVE		
L19	L34-0556-05	Tuning coil	21	DRIVE		
L20	L34-0557-05	Tuning coil	28	DRIVE		
L21～23	L40-0711-03	Ferri-indicator				
L24	L34-0558-05	Trap coil				
L25	L34-0559-05	Trap coil				
VC1～3	C01-0127-15	Variable capacitor				
		MISCELLANEOUS				
—	D13-0032-03	Sprocket × 3				
—	D13-0055-04	Sprocket × 3				
—	D16-0021-04	Chain ass'y				
—	D21-0412-14	Shaft				
—	E23-0015-04	Lug (ground)				
—	E23-0047-04	Terminal (square)				
—	E40-0315-05	Mini connector × 2				
—	E40-0401-05	Connector × 3				
—	F10-0399-04	Shield plate × 2				
—	J19-0486-04	VC stopper × 2				
—	S29-6003-05	Rotary wafer ass'y				

RF (X44-1150-00)

Ref. No.	Parts No.	Description			
		CAPACITOR			
C1	CC45SL1H330J	Ceramic	33pF	±5%	
C2,3	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C4	C90-0262-05	Ceramic	0.047μF	±10%	
C5	CK45F1H103Z	Ceramic	0.01μF	±20%	
C6	CK45K1H102M	Ceramic	0.001μF	±20%	
C7	C90-0262-05	Ceramic	0.0047μF	±10%	
C8	CC45SL2H151J	Ceramic	150pF	±5%	
C9	CQ93M2A473K	Mylar	0.047μF	±10%	
C10	C91-0022-05	Ceramic	0.001μF	±5%	
C11	C90-0262-05	Ceramic	0.047μF	±10%	
C12	CK45E2H103P	Ceramic	0.01μF	+100% −0%	
C13,14	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C15	CQ93M2A473K	Mylar	0.047μF	±10%	
C16,17	CK45E2H103P	Ceramic	0.01μF	+100% −0%	
C18	C90-0262-05	Ceramic	0.047μF	±10%	
C20	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C21	C90-0162-05	Ceramic	0.047μF	±10%	
C22	CC45SL1H100D	Ceramic	10pF	±0.5pF	
C23	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C24	CC45RH1H120J	Ceramic	12pF	±5%	
C25	CC45RH1H390J	Ceramic	39pF	±5%	
C26,27	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C29	C90-0262-05	Ceramic	0.047μF	±10%	
C30	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C31	C90-0262-05	Ceramic	0.047μF	±10%	
C32,33	CK45D1H102M	Ceramic	0.001μF	±20%	
C34	CK45F1H103Z	Ceramic	0.01μF	+80% −20%	
C35	CQ93M2A224M	Mylar	0.22μF	±20%	
C36	CK45D1H102M	Ceramic	0.01μF	±20%	
C37	C90-0262-05	Ceramic	0.047μF	±10%	
C38	CE04W1H010(RL)	Electrolytic	1μF	50WV	

PARTS LIST

Ref No	Parts No	Description	Remarks
C39	CE04W1HR47(RL)	Electrolytic 0.47μF 20WV	
C40	C90-0262-05	Ceramic 0.047μF ±10%	
C41	CK45E2H103P	Ceramic 0.01μF +100% −0%	
C43～45	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C46～48	C90-0262-05	Ceramic 0.047μF ±10%	
C49	CC45SL1H220J	Ceramic 22pF ±5%	
C50	CC45SL1H150J	Ceramic 15pF ±5%	
C51,52	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C53	CK45E2H103P	Ceramic 0.01μF +100% −0%	
		RESISTOR	
R1	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R2,3	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R4	PD14CY2E471J	Carbon 470Ω ±5% 1/4W	
R5	PD14CY2E822J	Carbon 8.2kΩ ±5% 1/4W	
R6	PD14CY2E682J	Carbon 6.8kΩ ±5% 1/4W	
R7	PD14CY2E273J	Carbon 27kΩ ±5% 1/4W	
R8	PD14CY2E333J	Carbon 33kΩ ±5% 1/4W	
R9	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R10	PD14CY2E820J	Carbon 82Ω ±5% 1/4W	
R11	RC05GF2H680J	Carbon 68Ω ±5% 1/2W	
R12	PD14CY2E563J	Carbon 56Ω ±5% 1/4W	
R13	RC04GF2H823J	Carbon 82kΩ ±5% 1/2W	
R14	RC05GF2H392J	Carbon 3.9kΩ ±5% 1/2W	
R15	PD14CY2E822J	Carbon 8.2kΩ ±5% 1/4W	
R16	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R17	PD14CY2E393J	Carbon 39kΩ ±5% 1/4W	
R18	PD14CY2E392J	Carbon 3.9kΩ ±5% 1/4W	
R19	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R20	PD14CY2E561J	Carbon 560Ω ±5% 1/4W	
R21,22	PD14CY2E333J	Carbon 33kΩ ±5% 1/4W	
R23	PD14CY2E123J	Carbon 12kΩ ±5% 1/4W	
R24	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R25	PD14CY2E123J	Carbon 12kΩ ±5% 1/4W	
R26	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R27	PD14CY2E221J	Carbon 220Ω ±5% 1/4W	
R28	PD14CY2E393J	Carbon 39kΩ ±5% 1/4W	
R29	PD14CY2E474J	Carbon 470kΩ ±5% 1/4W	
R30	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R31	PD14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R32	PD14CY2E182J	Carbon 1.8kΩ ±5% 1/4W	
R33	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R34	PD14CY2E182J	Carbon 1.8kΩ ±5% 1/4W	
R35	PD14CY2E470J	Carbon 47Ω ±5% 1/4W	
R36	PD14CY2E474J	Carbon 470kΩ ±5% 1/4W	
R37	PD14CY2E105J	Carbon 1MΩ ±5% 1/4W	
R38,39	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R40	PD14CY2E331J	Carbon 330Ω ±5% 1/4W	
R41	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R42	PD14CY2E274J	Carbon 270kΩ ±5% 1/4W	
R43	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R44	RC05GF2H225J	Carbon 2.2MΩ ±5% 1/2W	
R45	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R46	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R47	PD14CY2E154J	Carbon 150kΩ ±5% 1/4W	
R48	PD14CY2E184J	Carbon 180kΩ ±5% 1/4W	
R49,50	PD14CY2E471J	Carbon 470Ω ±5% 1/4W	
R51	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R52	PD14CY2E471J	Carbon 470Ω ±5% 1/4W	
R53	PD14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R54	PD14CY2E470J	Carbon 47Ω ±5% 1/4W	
R55	RC05GF2H474J	Carbon 470kΩ ±5% 1/2W	
R56	PD14BY2B470J	Carbon 470Ω ±5% 1/4W	

Ref. No.	Parts No.	Description	Remarks
		SEMICONDUCTOR	
Q1	V09-0057-05	FET 3SK41(L)	
Q2	V09-0036-05	FET 3SK35(GR)	
Q3	V09-0057-05	FET 3SK41(L)	
Q4	V03-0123-05	Transistor 2SC733(Y)	
Q5	V03-0450-05	Transistor 2SC1515(K)	
Q6～8	V09-0577-05	FET 3SK41(L)	
D1	V11-0240-05	Zener diode WZ-090	
D2,3	V11-0219-05	Diode V06B	
D4	V11-0414-05	Diode IS2588	
D5	V11-0076-05	Diode IS1555	
D6	V11-0414-05	Diode IS2588	
D7	V11-0076-05	Diode IS1555	
D8	V11-0250-05	Zener diode WZ-090	
D9,10	V11-0219-05	Diode V06B	
		COIL/TRANSFORMER	
L1,2	L40-1511-03	Ferri-indicator 150μH	
L3～5	L40-4711-03	Ferri-indicator 470μH	
L6,7	L40-1511-03	Ferri-indicator 150μH	
L8	L33-0074-05	Heater choke 0.22μH	
L9	L40-4782-02	Ferri-indicator 0.47μH	
L10	L40-1511-03	Ferri-indicator 150μH	
T1,2	L34-0527-05	Tuning coil	
T3,4	L34-0524-05	Transformer (wide range)	
		TUBE	
V1	V40-0114-00	Tube 12BY7A	
		MISCELLANEOUS	
J8,9	R92-0150-05	Short jamper × 2	
J10	R92-0152-05	Short jamper	
RF1～3	E40-1026-05	Type U, Wafer pin	
—	E10-1902-05	Tube socket	
—	E23-0047-04	Terminal (square)	
—	E40-0406-05	Connector	
—	F11-0249-05	Shield case	

IF (X48-1150-00)

Ref. No.	Parts No.	Description	Remarks
		CAPACITOR	
C1	CC45SL1H221J	Ceramic 220pF ±5%	
C2	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C3	CC45SL1H030C	Ceramic 3pF ±0.25pF	
C4,5	CC45SL1H470J	Ceramic 47pF ±5%	
C6,7	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C8	CE04W1C100	Electrolytic 10μF 16WV	
C9～11	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C12,13	C90-0254-05	Ceramic 0.022μF 25WV	
C14,15	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C16,17	C90-0254-05	Ceramic 0.022μF 25WV	
C18～20	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C21,22	C90-0254-05	Ceramic 0.022μF 25WV	
C24	C90-0254-05	Ceramic 0.022μF 25WV	
C25	CC45SL1H470J	Ceramic 47pF ±5%	
C26,27	CK45F1H103Z	Ceramic 0.01μF +80% −20%	

PARTS LIST

Ref. No.	Parts No.	Description			Re-marks
C28,29	C90-0254-05	Ceramic	0.022μF	25WV	
C30	CC45SL1H470J	Ceramic	47pF	±5%	
C31	CL45F1J103Z	Ceramic	0.01μF	+80%−20%	
C32	C90-0262-05	Ceramic	0.047μF	25WV	
C33	C90-0254-05	Ceramic	0.022μF	25WV	
C34	CC45SL1H100D	Ceramic	10pF	±0.5pF	
C35	C90-0254-05	Ceramic	0.022μF	25 WV	
C36	CK45P1H102M	Ceramic	0.001μF	±20%	
C37	CC45SL1H101J	Ceramic	100pF	±5%	
C38	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C39~41	C90-0254-05	Ceramic	0.022μF	25WV	
C42	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C43	CE04W1H010	Ceramic	1μF	50WV	
C44	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C45	CK45D1H102M	Ceramic	0.001μF	±20%	
C46	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C47	C90-0254-05	Ceramic	0.022μF	25WV	
C48	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C49	CC45SL1H030C	Ceramic	3pF	±0.25pF	
C50,51	C90-0254-05	Ceramic	0.22μF	25WV	
C52	CK45D1H102M	Ceramic	0.001μF	±20%	
C53	CC45SL1H331J	Ceramic	330pF	±5%	
C54	C90-0254-05	Ceramic	0.022μF	25WV	
C55	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C56	CC45SL1H010C	Ceramic	1pF	±0.25pF	
C57	CC45SL1H470	Ceramic	47pF	±5%	
C58	C90-0254-05	Ceramic	0.022μF	25WV	
C59	CC45SL1H101J	Ceramic	100pF	±5%	
C61	CC45SL1H100D	Ceramic	10pF	±0.5pF	
C62	CE04W1C100	Electrolytic	10μF	16WV	
C64	CQ92M1H103K	Mylar	0.01μF	±10%	
C65	CE04W1C010	Electrolytic	1μF	50WV	
C66	CK45D1H102M	Ceramic	0.001μF	±20%	
C67	CE04W1C330	Electrolytic	33μF	16WV	
C68	C90-0254-05	Ceramic	0.022μF	25WV	
C69	CC45SL1H470J	Ceramic	47pF	±5%	
C70	CC45SL1H221J	Ceramic	220pF	±5%	
C71	C90-0254-05	Ceramic	0.022μF	25WV	
C72	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C73	CE04W1H010	Electrolytic	1μF	50WV	
C74	C90-0262-05	Ceramic	0.047	25WV	
C75	CE04W1H010(RL)	Electrolytic	1pF	50WV	
C75	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C77	CK45D1H102M	Ceramic	0.001μF	±20%	
C79	CC45SL1H470J	Ceramic	47pF	±5%	
C81	C90-0254-05	Ceramic	0.022μF	25WV	
C82,83	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C84	CC45UJ1H220J	Ceramic	22pF	±5%	
C85,86	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C87	CC45SL1H101J	Ceramic	100pF	±5%	
C8, 89	C90-0245-05	Ceramic	0.047μF	25WV	
C90	C90-0262-05	Ceramic	0.022μF	25WV	
C91	CK45F1H103Z	Ceramic	0.01μF	+80%−20%	
C92	CC45SL1H050D	Ceramic	5pF	±0.5pF	
C93,94	CC45SL1H101J	Ceramic	100pF	±5%	
C95	CE04W1H010	Electrolytic	1μF	50WV	
C96	C91-0404-05	Electrolytic	330μF	10WV	
C97	CC45SL1H470J	Ceramic	47pF	±5%	
C99	CE04W1H010	Electrolytic	1μF	50WV	

Ref. No.	Parts No.	Description				Re-marks
C100	CQ92M1H153K	Mylar	0.015μF	±10%		
C101	CE04W1E4R7(RL)	Electrolytic	4.7μF	25WV		
C102	C90-0162-05	Ceramic	0.047μF	25WV		
C103	CE04W1A470(RL)	Electrolytic	47μF	10WV		
C104	CE04W1H010(RL)	Electrolytic	1μF	50WV		
C105	CE04W1H3R3(RL)	Electrolytic	3.3μF	50WV		
C106	CE04WE4R7(RL)	Electrolytic	4.7μF	25WV		
C107,108	CE04W1H010(RL)	Electrolytic	1μF	50WV		
C109	CE04W1C100(RL)	Electrolytic	10μF	16WV		
C110	CK45F1H103Z	Ceramic	0.01μF	+80%−20%		
C111	C90-0262-05	Ceramic	0.047μF	25WV		
C112~116	C90-0254-05	Ceramic	0.022μF	25WV		
C117	CK45F1H103Z	Ceramic	0.01μF	+80%−20%		
C118	C90-0254-05	Ceramic	0.022μF	25WV		
C119,120	CE04W1H010(RL)	Electrolytic	1μF	50WV		
C121	CE04W1C100(RL)	Electrolytic	10μF	16WV		
C122	C90-0262-05	Ceramic	0.047μF	25WV		
C123	CO92M1H102K	Mylar	0.001μF	±10%		
C124	C90-0262-05	Ceramic	0.047μF	±5%		
C125	CC45RH1H151J	Ceramic	150pF	±5%		
C127	CC45PG1H151J	Ceramic	150pF	±5%		
C128	CC45SL1H100D	Ceramic	10pF	±0.5pF		
C129	CC45SL1H220J	Ceramic	22pF	±5%		
C130,131	CQ92M1H103K	Mylar	0.01μF	±10%		
C132	C90-0254-05	Ceramic	0.022μF	25WV		
C133	CC45SL1H220J	Ceramic	22pF	±5%		
C134	CC45SL1H101J	Ceramic	100pF	±5%		
C135	CE04W1H010	Electrolytic	1μF	50WV		
C138	CE04W1E4R7	Electrolytic	47μF	4.7μF		
C139	CK45F1H103Z	Ceramic	0.01μF	+80%−20%		
C140	C90-0254-05	Ceramic	0.022μF	25WV		
C141	CE04W1C470	Electrolytic	47μF	16WV		
C142	CC45SL1H470J	Ceramic	47pF	±5%		
C144	CE04W1H010	Electrolytic	1μF	50WV		
C145	CC45CH1H680J	Ceramic	68pF	±5%		
C146	CK45F1H103Z	Ceramic	0.001μF	+80%−20%		
C147	CC45SL1H100D	Ceramic	10pF	±0.5pF		
C148	CK45F1H473	0.047μF	+80%−20%			
RESISTOR						
R1	PD14CY2B392J	Carbon	3.9kΩ	±5%	1/8W	
R2	PD14CY2B102J	Carbon	1kΩ	±5%	1/8W	
R3	PD14CY2B472J	Carbon	4.7kΩ	±5%	1/8W	
R4	PD14CY2B102J	Carbon	1kΩ	±5%	1/8W	
R5	PD14CY2B392J	Carbon	3.9kΩ	±5%	1/8W	
R6	PD14CY2B221J	Carbon	220Ω	±5%	1/8W	
R7	PD14CY2B473J	Carbon	47kΩ	±5%	1/8W	
R8	PD14CY2B221J	Carbon	220Ω	±5%	1/8W	
R9	PD14CY2B561J	Carbon	560Ω	±5%	1/8W	
R10	PD14CY2B221J	Carbon	220Ω	±5%	1/8W	
R11	PD14CY2B392J	Carbon	3.9kΩ	±5%	1/8W	
R12	PD14CY2B473J	Carbon	47kΩ	±5%	1/8W	
R13	PD14CY2B221J	Carbon	220Ω	±5%	1/8W	
R14	PD14CY2B561J	Carbon	560Ω	±5%	1/8W	
R15	PD14CY2B392J	Carbon	3.9kΩ	±5%	1/8W	
R16	PD14CY2B103J	Carbon	10kΩ	±5%	1/8W	
R17	PD14CY2B123J	Carbon	12kΩ	±5%	1/8W	
R18	PD14CY2B473J	Carbon	47kΩ	±5%	1/8W	
R19	PD14CY2B102J	Carbon	1kΩ	±5%	1/8W	
R21	PD14CY2B101J	Carbon	100Ω	±5%	1/8W	
R23	PD14CY2B153J	Carbon	15kΩ	±5%	1/8W	

PARTS LIST

Ref No	Parts No	Description	Remarks
R24	PD14CY2B122J	Carbon 1.2kΩ ±5% 1/8W	
R25	PD14CY2B152J	Carbon 1.5Ω ±5% 1/8W	
R26	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R27	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R28	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R29	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R30	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R31	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R32	PD14CY2B274J	Carbon 270kΩ ±5% 1/8W	
R33	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R34	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R35,36	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R37	PD14CY2B682J	Carbon 6.8kΩ ±5% 1/8W	
R38,39	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R40	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R41	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R42	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R43	PD14CY2B123J	Carbon 12kΩ ±5% 1/8W	
R44	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R45	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R46	PD14CY2B683J	Carbon 68kΩ ±5% 1/8W	
R47	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R48	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R49	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R50	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R51	PD14CY2B222J	Carbon 2.2Ω ±5% 1/8W	
R52	PD14CY2B224J	Carbon 220kΩ ±5% 1/8W	
R53	PD14CY2B222J	Carbon 2.2kΩ ±5% 1/8W	
R54	PD14CY2B154J	Carbon 150kΩ ±5% 1/8W	
R55	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R56	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R57	PD14CY2B152J	Carbon 1.5Ω ±5% 1/8W	
R58	PD14CY2B104J	Carbon 110kΩ ±5% 1/8W	
R59	PD14CY2B273J	Carbon 27kΩ ±5% 1/8W	
R60	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R61	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R63	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R64	PD14CY2B224J	Carbon 220kΩ ±5% 1/8W	
R65	PD14CY2B222J	Carbpn 2.2kΩ ±5% 1/8W	
R66	RC05GFH225J	Carbon 2.2MΩ ±5% 1/2W	
R67	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R68	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R69	PD14CY2B683J	Carbon 68kΩ ±5% 1/8W	
R70	PD14CY2B561J	Carbon 560Ω ±5% 1/8W	
R71	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R72	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R73,74	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R75,76	PD14CY2B474J	Carbon 470kΩ ±5% 1/8W	
R77	PD14CY2B274J	Carbon 270kΩ ±5% 1/8W	
R78	PD14CY2B394J	Carbon 390kΩ ±5% 1/8W	
R79	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R80	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R81	PD14CY2B273J	Carbon 2.7kΩ ±5% 1/8W	
R82	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R83	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R84	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R85	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R86	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R87	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R88	PD14CY2B562J	Carbon 5.6Ω ±5% 1/8W	
R89	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R90	PD14CY2B154J	Carbon 150kΩ ±5% 1/8W	

Ref. No.	Parts No.	Description	Remarks
R91	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R92	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R93,94	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R95	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R96	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R97	PD14CY2B183J	Carbon 18kΩ ±5% 1/8W	
R98	PD14CY2B153J	Carbon 15kΩ ±5% 1/8W	
R99	PD14CY2B683J	Carbon 68kΩ ±5% 1/8W	
R100	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R101	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R102	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R103,104,	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R105	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R106	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R107	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R108	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R109	PD14CY2B123J	Carbon 12kΩ ±5% 1/8W	
R110	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R111	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R112	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R113	PD14CY2B470J	Carbon 470Ω ±5% 1/8W	
R114	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R115,116	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R117	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R118	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R119	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R120	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R121	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R122	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R123	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R124	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R125	PD14CY2B392J	Carbon 3.9kΩ ±5% 1/8W	
R126	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R127	PD14CY2B332J	Carbon 3.3Ω ±5% 1/8W	
R128	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R129	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R130	PD14CY2B474J	Carbon 470kΩ ±5% 1/8W	
R132	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R133	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R134	PD14CY2B222J	Carbon 2.2kΩ ±5% 1/8W	
R137	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R138	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R139	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R140	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R141	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R142	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R143	PD14CY2B561J	Carbon 560Ω ±5% 1/8W	
R145	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R146	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R147	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R148	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R149,150	PD14CY2B270J	Carbon 27Ω ±5% 1/8W	
R151	PD14CY2B822J	Carbon 8.2kΩ ±5% 1/8W	
R152	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R153	PD14CY2B470J	Carbon 47Ω ±5% 1/8W	
R154	PD14BY2E474J	Carbon 470kΩ ±5% 1/4W	
		SEMICONDUCTOR	
Q1～3	V09-0036-05	FET 3SK35GR	
Q4	V09-0012-05	FET 2SK19(GR)	
Q5	V01-0027-05	Transistor 2SA495(Y)	
Q6	V03-0123-05	Transistor 2SC733(Y)	
Q7	V09-0012-05	FET 2SK19(GR)	

PARTS LIST

Ref. No.	Parts No.	Description	Re-marks
Q8～10	V03-0079-05	Transistor 2SC460(B)	
Q11	V03-0123-05	Transistor 2SC733(Y)	
Q12,13	V03-0079-05	Transistor 2SC460(B)	
Q14	V09-0012-05	FET 2SK19(GR)	
Q15,16	V03-0123-05	Transistor 2SC733(Y)	
Q17	V03-0079-05	Transistor 2SC460(B)	
Q18	V09-0036-05	FET 3SK35(GR)	
Q19	V03-0299-05	Transistor 2SC1000(GR)	
Q20,21	V03-0123-05	Transistor 2SC733(Y)	
Q22	V03-0299-05	Transistor 2SC1000(GR)	
Q23～25	V03-0270-05	Transistor 2SC945(R)	
Q26	V03-0079-05	Transistor 2SC733(Y)	
Q27	V01-0037-05	Transistor 2SA495(Y)	
Q28,29	V03-0270-05	Transistor 2SC945(R)	
Q30	V03-0123-05	Transistor 2SC733(Y)	
D1～8	V11-0370-05	Diode IS1587	
D9～14	V11-0051-05	Diode IN60	
D15	V21-0004-05	Varistor MV-13	
D16～19	V11-0051-05	Diode IN60	
D20,21	V11-0076-05	Diode IS1555	
D22	V11-0240-05	Zener diode WZ090	
D23	V11-0076-05	Diode IS1555	
D24	V11-0370-05	Diode IS1587	
D25～29	V11-0051-05	Diode IN60	
D30	V11-0076-05	Diode IS1555	
D31～41	V11-0051-05	Diode IN60	
D42	V11-0240-05	Zener diode WZ090	
D43	V11-0076-05	Diode IS1555	
D44	V11-0370-05	Diode IS1587	
D45	V11-0076-05	Diode IS1555	
		POTENTIOMETER	
VR1	R12-3025-05	Fixed resistor 10kΩ	
VR2	R12-7013-05	Semi-fixed resistor 500k	
VR3	R12-1012-05	Semi-fixed resistor 1kΩ	
VR4	R12-4015-05	Semi-fixed resistor 50kΩ	
VR5	R12-0401-05	Semi-fixed resistor 100Ω	
VR6	R12-0045-05	Semi-fixed resistor 100Ω	
VR7	R12-3025-05	Semi-fixed resistor 10kΩ	
		COIL/TRIMMER/FILTER	
L1,3,4	L40-1511-03	Ferri inductor	
L5	L40-1021-03	Ferri inductor	
L6～11	L40-1511-03	Ferri inductor	
L13	L40-1511-03	Ferri inductor	
L15	L40-1511-03	Ferri inductor	
L16	L40-1021-03	Ferri inductor	
L17	L40-4711-03	Ferri inductor	
L18	L40-1021-03	Ferri inductor	
L20	L40-6825-04	Ferri inductor	
L21	L40-1021-03	Ferri inductor	
T1	L34-0534-05	Tuning coil	
T2	L34-0536-05	Tuning coil	
T3	L34-0537-05	Tuning coil	
T4	L34-0538-05	Tuning coil	
T5,6	L34-0353-05	Tuning coil	
T7	L34-0536-05	Tuning coil	
T8	L34-0535-05	Tuning coil	
T9	L34-0536-05	Tuning coil	
T10	L34-0567-05	Tuning coil	
T11	L34-0539-05	Tuning coil	
T12,13	L34-0540-05	Tuning coil	
T14	L34-0539-05	Tuning coil	

Ref. No.	Parts No.	Description	Re-marks
T15	L34-0202-05	Oscillator coil	
TC1,2	C05-0030-05	Ceramic trimmer	
TC3	C05-0048-05	Ceramic trimmer	
TC4	C05-0009-05	Ceramic trimmer	
TC5	C05-0030-05	Ceramic trimmer	
CF1～3	L72-0038-05	Ceramic filter	
		CRYSTAL QUARTZ	
X1	L77-0499-05	NB filter	
X2	L77-0500-05	NB filter	
		MISCELLANEOUS	
XF1	L71-0023-05	Crystal quartz filter SSB8.83MHz	
—	E23-0046-04	Terminal (square)	
—	E23-0047-04	Terminal (square) × 5	
IF1	E40-0714-05	Mini-connector	
IF2	E40-0512-05	Mini-connector	
IF3	E40-1714-05	Mini-connector	
IF4,5	E40-1414-05	Mini-connector	
—	J21-1499-04	PC board stopper (A)	
—	J21-1500-04	PC board stopper (B)	
—	J21-0501-04	PC board stopper (C)	

AF-AVR (X49-1080-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CE04W1C221	Electrolytic 220μF 16WV	
C2	CQ92M1H273K	Mylar 0.027μF ±10%	
C3	CK45B1H471K	Ceramic 470pF ±10%	
C4	CQ92M1H273K	Mylar 0.027μF ±10%	
C5	CE04W1E4R7	Electrolytic 4.7μF 25WV	
C6,7	CQ92M1H273K	Mylar 0.027μF ±10%	
C8,9	CQ92M1H473K	Mylar 0.047μF ±10%	
C10	CE04W1C100	Electrolytic 10μF 16WV	
C11	CE04W1HR47	Electrolytic 0.47μF 50WV	
C12	CQ92M1H103K	Mylar 0.01μF ±10%	
C13,14	CE03W1C100	Electrolytic 10μF 16WV	
C15	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C16	CQ92M1H104K	Mylar 0.1μF ±10%	
C17	CE04W1H010	Electrolytic 1μF 50WV	
C18	CC45SLH101J	Ceramic 100pF ±5%	
C20	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C21	CE04W1H010	Electrolytic 1μF 50WV	
C22	CQ92M1H472K	Mylar 0.0047μF ±10%	
C23	CE04W1C100	Electrolytic 10μF 16WV	
C24	CE04W0J101	Electrolytic 100μF 6.3WV	
C25	CC45SL1H470J	Ceramic 47pF ±5%	
C26	CQ92M1H473K	Mylar 0.047μF ±10%	
C27	CE04W1A470	Electrolytic 47μF 10WV	
C28	CC45SL1H101J	Ceramic 100pF ±5%	
C29	CE04W1C221	Electrolytic 220μF 16WV	
C30	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C31	CE04W2HR47	Electrolytic 0.47μF ±10%	
C32	CQ92M1H473K	Mylar 0.047μF ±10%	
C33	CK45B1H331K	Ceramic 330pF ±10%	
		RESISTOR	
R1,2	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R3	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	

PARTS LIST

Ref. No	Parts No	Description	Re-marks
R4	PD14CY2E221J	Carbon 220Ω ±5% 1/4W	
R5	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R6	PD14CY2E562J	Carbon 5.6kΩ ±5% 1/4W	
R7	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R8	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R9	PD14CY2E332J	Carbon 3.3kΩ ±5% 1/4W	
R10	PD14CY2E182J	Carbon 1.8Ω ±5% 1/4W	
R11	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R12	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R13	PD14CY2E332J	Carbon 3.3kΩ ±5% 1/4W	
R14	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R15	PD14CY2E223J	Carbon 22kΩ ±5% 1/4W	
R16	PD14CY2E562J	Carbon 5.6kΩ ±5% 1/4W	
R17	PD14CY2E273J	Carbon 27kΩ ±5% 1/4W	
R18	PD14CY2E392J	Carbon 3.9kΩ ±5% 1/4W	
R19	PD14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R20	PD14CY2E221J	Carbon 220Ω ±5% 1/4W	
R21	PD14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R22	PD14CY2E821J	Carbon 820Ω ±5% 1/4W	
R23	PC14CY2E471J	Carbon 470Ω ±5% 1/4W	
R24	PC14CY2E682J	Carbon 6.8kΩ ±5% 1/4W	
R25	PC14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R27	PC14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R28	PC14CY2E392J	Carbon 3.9kΩ ±5% 1/4W	
R29	PC14CY2E471J	Carbon 470Ω ±5% 1/4W	
R30	PC14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R31	PC14CY2E212J	Carbon 2.7kΩ ±5% 1/4W	
R32	PC14CY2E222J	Carbon 2.2Ω ±5% 1/4W	
R33	PC14CY2E821J	Carbon 820Ω ±5% 1/4W	
R34	PC14CY2E471J	Carbon 470Ω ±5% 1/4W	
R35	PC14CY2E331J	Carbon 330Ω ±5% 1/4W	
R36	PC14CY2E683J	Carbon 68kΩ ±5% 1/4W	
R37	PC14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R38	RS14AB3A680J	Metal film 68Ω ±5% 1W	
R39	PD14CY2E224J	Carbon 220kΩ ±5% 1/4W	
R40	PD14CY2E820J	Carbon 82Ω ±5% 1/4W	
R41	PD14CY2E332J	Carbon 3.3kΩ ±5% 1/4W	
R42	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R43	PD14CY2E223J	Carbon 22kΩ ±5% 1/4W	
R44	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R45	PD14CY2E563J	Carbon 56kΩ ±5% 1/4W	
R46,47	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
		SEMICONDUCTOR	
Q1,2	V03-0299-05	Transistor 2SC1000(GR)	
Q3	V30-0172-05	IC TA7201P	
Q4～6	V03-0099-05	Transistor 2SC372	
Q7	V11-0113-05	Transistor 2SA496	
D1,2	V11-0076-05	Diode 1S1555	
D3,4	V11-0051-05	Diode 1N60	
D5	V11-0243-05	Zener diode WZ-061	
		POTENTIOMETER/COIL	
VR1	R12-4020-05	Semi-fixed resistor 50kΩ	
VR2	R12-3036-05	Semi-fixed resistor 10kΩ	
VR3	R12-3004-05	Semi-fixed resistor 47kΩ	
VR4	R12-0042-05	Semi-fixed resistor 500Ω	
L1	L40-3391-03	Ferri inductor 3.3μH	
		MISCELLANEOUS	
AF1,2	E40-0613-05	Mini-connector	
AF3	E40-1113-05	Mini-connector	

Ref. No.	Parts No.	Description	Re-marks
—	F01-0242-04	IC heat sink	
—	F01-0243-04	AVR heat sink	

FIX-VOX (X50-1350-00)

Ref. No.	Parts No.	Description	Re-marks
C1～4	CC45CH1H220J	Ceramic 22pF ±5%	
C5～7	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C6	CC45CH1H270J	Ceramic 27pF ±5%	
C7	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C8	CC45CH1H330J	Ceramic 33pF ±5%	
C9	CC45CH1H680J	Ceramic 68pF ±5%	
C10	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C11	CC45CH1H050D	Ceramic 5pF ±0.5pF	
C12	CC45CH1H070D	Ceramic 7pF ±0.5pF	
C13,14	CC45CH1H120J	Ceramic 12pF ±5%	
C15	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C16,17	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C18	CE04W1H010	Electrolytic 1μF 50WV	
C19	CK45B1H331K	Ceramic 330pF ±10%	
C20	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C21	CQ92M1H472K	Mylar 0.047μF ±10%	
C22	CQ92M1H473K	Mylar 0.047μF ±10%	
C23	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C24	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C25	CE04W1HR47	Electrolytic 0.47μF 50WV	
C26	CE04W1C221(RL)	Electrolytic 220μF 16WV	
C27	CE04W1C101	Electrolytic 100μF 16WV	
C28	CE04W0J470	Electrolytic 47μF 6.3WV	
C29	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C30	CE04W1H3R3	Electrolytic 3.3μF 50WV	
C31	CQ92M1H472K	Ceramic 0.01μF +80% −20%	
C32	CE04W1H010	Electrolytic 1μF 50WV	
C33	CE04W1C100(RL)	Electrolytic 10μF 16WV	
C34～37	CQ92M1H123K	Mylar 0.012μF ±10%	
C38	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C39	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C40	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
		RESISTOR	
R1～4	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R5	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R6～9	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R10	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R11	PD14CY2E333J	Carbon 33kΩ ±5% 1/4W	
R12	PD14CY2E473J	Carbon 47Ω ±5% 1/4W	
R13	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R14	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R15	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R16	PD14CY2E472J	Carbon 4.7Ω ±5% 1/4W	
R17	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R18	PD14CY2E563J	Carbon 56kΩ ±5% 1/4W	
R19	PD14CY2E334J	Carbon 330kΩ ±5% 1/4W	
R20	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R21	PD14CY2E562J	Carbon 5.6kΩ ±5% 1/4W	
R22	PD14CY2E683J	Carbon 68kΩ ±5% 1/4W	
R23	PD14CY2E222J	Carbon 2.2kΩ ±5% 1/4W	
R24	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R25	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R26	PD14CY2E153J	Carbon 15kΩ ±5% 1/4W	
R27	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	

PARTS LIST

Ref No.	Parts No.	Description	Re-marks
R28	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R29	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R30	PD14CY2E471J	Carbon 470Ω ±5% 1/4W	
R31	PD14CY2E4R7J	Carbon 4.7Ω ±5% 1/4W	
R32	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R33	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R34	PD14CY2E471J	Carbon 470Ω ±5% 1/4W	
R35	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R36	PD14CY2E223J	Carbon 22kΩ ±5% 1/4W	
R37	PD14CY2E334J	Carbon 330kΩ ±5% 1/4W	
R38	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R39	PD14CY2E474J	Carbon 470kΩ ±5% 1/4W	
R40	PD14CY2E274J	Carbon 270kΩ ±5% 1/4W	
R41	PD14CY2E223J	Carbon 22kΩ ±5% 1/4W	
R42	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R43	PD14CY2E105J	Carbon 1MΩ ±5% 1/4W	
R44	PD14CY2E104J	Carbon 100kΩ ±5% 1/4W	
R45.46	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R47	PD14CY2E124J	Carbon 120kΩ ±5% 1/4W	
R48	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R49	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
		SEMICONDUCTOR	
Q1	V09-0012-05	FET 2SK19(GR)	
Q2.3	V03-0079-05	Transistor 2SC460(B)	
Q4.5	V03-0123-05	Transistor 2SC733(Y)	
Q6	V01-0032-05	Transistor SA562(Y)	
Q7.8	V03-0123-05	Transistor 2SC733(Y)	
Q9	V01-0032-05	Transistor 2SA562(Y)	
Q10～12	V03-0123-05	Transistor 2SC733(Y)	
Q13	V03-0241-05	Transistor 2SC735(Y)	
D1～4	V11-0370-05	Diode 1S1587	
D5.6	V11-0293-05	Vari-cap diode 1S1658-3	
D7.8	V11-0051-05	Diode 1N60	
D9.10	V11-0076-05	Diode 1S1555	
D11～15	V11-0051-05	Diode 1N60	
D16	V11-0076-05	Diode 1S1555	
D17	V11-0051-05	Diode 1N60	
D18	V11-0297-05	Zener diode WZ-13	
D19～23	V11-0076-05	Diode 1S1555	
D24	V11-0297-05	Zener diode WZ-061	
D25	V11-0076-05	Diode 1S1555	
		TRANSFORMER	
T1	L13-0001-05	Input transformer	
T2	L12-0013-05	Oscillation transformer	
		TRIMMER	
TC1～4	C05-0030-15	Ceramic trimmer 20pF	
		MICELLANEOUS	
	E18-0401-05	Crystal quarts socket	
FIX1	E40-1413-05	Mini-connector	
FIX2	E40-0613-05	Mini-connector	
FIX3	E40-1413-05	Mini-connector	

MARKER (X52-0005-01)

Ref No	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CM93M1H103K	Mylar 0.01μF ±10%	

Ref. No.	Parts No.	Description	Re-marks
C2	CC45CH1H151J	Ceramic 150pF ±5%	
C3	CC45CH1H101J	Ceramic 100pF ±5%	
C4	CC45CH1H330J	Ceramic 33pF ±5%	
C5	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C6	CC45CH1H390J	Ceramic 39pF ±5%	
C7	CC45CH1H330J	Ceramic 33pF ±5%	
C8	CC45SL1H101J	Ceramic 100pF ±5%	
C9	CC45SL1H221K	Ceramic 220pF ±10%	
C10	CC94SL1H470K	Ceramic 47pF ±10%	
C11	CC94SL2H050D	Ceramic 5pF ±0.5pF	
C12	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C13	CC45CH1H470J	Ceramic 47pF ±5%	
		RESISTOR	
R1	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R2	PD14CY2E103J	Carbon 10kΩ ±5% 1/4W	
R3	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R4	PD14CY2E473J	Carbon 47kΩ ±5% 1/4W	
R5	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R6	PD14CY2E224J	Carbon 220kΩ ±5% 1/4W	
R7	PD14CY2E105J	Carbon 1MΩ ±5% 1/4W	
R8～10	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
		SEMICONDUCTOR	
Q1～4	V03-0042-05	Transistor 2SC373	
D1	V11-0051-05	Diode IN60	
		COIL/TRIMMER	
L1	L40-1235-05	Ferri inductor	
TC	C05-0029-05	Ceramic trimmer 50pF	
		CRYSTAL QUARTZ	
X1	L77-0009-05	Crystal quartz	
		MISCELLANEOUS	
—	E18-0401-05	Socket (Crystal)	
—	E23-0005-04	Terminal × 6	

INDICATOR (X54-1180-00)

Ref No	Parts No.	Description	Re-marks
		RESISTOR	
R1	PD14BY2E471J	Carbon 470Ω ±5% 1/4W	
R2	PD14BY2E681J	Carbon 680Ω ±5% 1/4W	
		SEMICONDUCTOR	
D～4	V11-0430-05	LED SEL-103W	
		MISCELLANEOUS	
J1	R92-0150-05	Short jamper	
	E23-0040-04	Terminal × 3	
	F20-0501-04	Insulator × 2	

VOX-VR (X54-1190-00)

Ref. No.	Parts No		Re-marks
		CAPACITOR	
C1	CK45F1H103Z	Ceramic 0.01μF +80% −20%	

PARTS LIST

Ref. No	Parts No.	Description	Re-narks
		POTENTIOMETER	
VR1	R01-6013-05	250kΩ(B) VOX DELAY	
VR2	R01-0043-05	300Ω(B) ANTI VOX	
VR3	R01-4025-05	50kΩ(B) VOX GAIN	
		MISCELLANEOUS	
—	E23-0046-04	Terminal (square) × 8	

FINAL (X56-1200-00)

Ref No	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CC45SL2H101J	Ceramic 100pF ±5%	
C2	CK45E2H102P	Ceramic 0.001μF +100%, −0%	
C3～10	CK45F1H473Z	Ceramic 0.047μF +80% −20%	
C11～13	CK45E2H103P	Ceramic 0.01μF +100% −0%	
C14	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
		RESISTOR	
R1	PD14BY2E101J	Carbon 100Ω ±5% 1/4W	
R2,3	RC05GF3A100J	Carbon 10Ω ±5% 1W	
R4	PD14BY2E332J	Carbon 3 3kΩ ±5% 1/4W	
R5,6	RC05GF2H101J	Carbon 100Ω ±5% 1/2W	
		COIL	
L1	L40-1511-03	Ferri-inductor 150μH	
L2	L40-4711-03	Ferri-inductor 470μH	
L3,4	L40-1511-03	Ferri-inductor 150μH	
PS1 2	L33-0010-05	Parastic supressor	
		MISCELLANEOUS	
V1,2	E01-0801-05	US socket	
—	E23-0047-04	Terminal (square) × 9	

CAR ASS'Y (X60-1000-00)

Ref. No.	Parts No.	Description	Re-marks
—	E40-1025-05	Chassis mount wafer	
—	F11-0235-03	CAR shield box	
—	F11-0236-04	CAR shield box cover (upper)	
—	F11-0237-14	CAR shield box cover (lower)	
—	J32-0216-04	Hexagonal boss × 2 (long)	
—	J32-0217-04	Hexagonal boss × 3 (medium)	
—	J32-0217-04	Hexagonal boss × 3 (short)	
—	X50-1310-00	CAR-1 unit	
—	X50-1320-00	CAR-2 unit	

CAR-1 (X50-1310-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CK45F1H103Z	Ceramic 1μF +80% −20%	
C2	CC45UJ1H180J	Ceramic 18pF ±5%	
C3	CC45UJ1H330J.	Ceramic 33pF ±5%	
C4	CK45D1H102M	Ceramic 0.001μF ±20%	
C5	CC45UJ1H180J	Ceramic 18pF ±5%	
C6	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C7	CC45TH1H030C	Ceramic 3pF ±0.25pF	
C8	CS15E1VR22M	Tantalum 0.22μF ±20%	
C9	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C10	CK45B1H471K	Ceramic 470pF ±10%	
C11	CC45SL1H101J	Ceramic 100pF ±5%	
C12	CC45CH1H020C	Ceramic 2pF ±0.25pF	
C13	CC45CH1H270J	Ceramic 27pF ±5%	
C14	C90-0262-05	Ceramic 0.047μF 25WV	
C15	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C16	CC45SL1H151K	Ceramic 150pF ±10%	
C17,18	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
		RESISTOR	
R1,2	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R3	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R4	PD14CY2B272J	Carbon 2.7kΩ ±5% 1/8W	
R5,6	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R7,8	PD14CY2B152J	Carbon 1.5kΩ ±5% 1/8W	
R9	PD14CY2B153J	Carbon 15kΩ ±5% 1/8W	
R10	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R11	PD14CY2B682J	Carbon 6.8kΩ ±5% 1/8W	
R12	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R13	PD14CY2B823J	Carbon 82kΩ ±5% 1/8W	
R14	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R15	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R16	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R17	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
		SEMICONDUCTOR	
Q1,2	V03-0079-05	Transistor 2SC460(B)	
Q3	V03-0241-05	Transistor 2SC735(Y)	
D1～4	V11-0076-05	Diode 1S1555	
D5	V11-0432-05	Diode 1TT310	
		POTENTIOMETER	
VR1	R12-1012-05	1kΩ	
		COIL/TRIMMER	
L1～4	L40-1511-03	Ferri-indicator 150μH	
L5	L33-0266-05	Choke coil 28μH	
L6～8	L40-1511-03	Ferri-indicator 150μH	
T1	L32-0201-05	Oscillating coil	
TC1,2	C05-0049-05	Trimmer 20pF	
		CRYSTAL QUARTZ	
X1	L77-0486-05	8828.5kHz LSB	
X2	L77-0485-05	8831.5kHz USB	
		MISCELLANEOUS	
J1	R92-0501-05	Short jamper	
—	E23-0046-04	Terminal (square)	
CJ1	E40-0427-05	Type U pin wafer	
CJ2	E40-0726-05	Type U pin wafer	
CJ3	E40-0826-05	Type U pin wafer	
—	E40-1007-05	Counter	

CAR-2 (X50-1320-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CL45F1H103Z	Ceramic 0.01μF +80% −20%	

PARTS LIST

Ref No	Parts No.	Description	Remarks
C2	CC45CH1H180J	Ceramic 18pF ±5%	
C4	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C6	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C7	CK45B1H471K	Ceramic 470pF ±10%	
C8	CC45SL1H101J	Ceramic 100pF ±5%	
C9	CC45SL1H020C	Ceramic 2pF ±0.25pF	
C10	CC45CH1H330J	Ceramic 33pF ±5%	
C11	C90-0262-05	Ceramic 0.047μF	
C12,13	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C14	CC45SL1H150J	Ceramic 15pF ±5%	
C15	CC45SL1H221K	Ceramic 220pF ±10%	
C16	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C17	C90-0262-05	Ceramic 0.047μF	
C18	CC45CH1H050D	Ceramic 5pF ±0.25pF	
C19	C90-0262-05	Ceramic 0.047μF	
		RESISTOR	
R1,2	PD14CY2E392J	Carbon 3.9kΩ ±5% 1/4W	
R3	PD14CY2E333J	Carbon 33Ω ±5% 1/4W	
R4	PD14CY2E682J	Carbon 6.8kΩ ±5% 1/4W	
R5	PD14CY2E333J	Carbon 33kΩ ±5% 1/4W	
R6	PD14CY2E102J	Carbon 1kΩ ±5% 1/4W	
R7	PD14CY2E683J	Carbon 68kΩ ±5% 1/4W	
R8	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
R9	PD14CY2E561J	Carbon 560Ω ±5% 1/4W	
R10	PD14CY2E472J	Carbon 4.7kΩ ±5% 1/4W	
R11	PD14CY2E332J	Carbon 3.3kΩ ±5% 1/4W	
R12	PD14CY2E101J	Carbon 100Ω ±5% 1/4W	
		SEMICONDUCTOR	
Q1～3	V03-0079-05	Transistor 2SC460(B)	
D1,2	V11-0076-05	Diode 1S1555	
D3～5	V11-0051-05	Diode 1N60	
D6,7	V11-0076-05	Diode 1S1555	
D8,9	V11-0414-05	Diode 1S2588	
		COIL	
L1～12	L40-1511-03	Ferri-inductor 150μH	
T1	L32-0201-05	Oscillating coil	
TC1,2	C05-0010-15	Trimmer 10pF	
TC3	C05-0013-05	Trimmer 20pF	
		CRYSTAL QUARTZ	
X1	L77-0487-05	8830.7kHz	
		MISCELLANEOUS	
—	E23-0046-04	Terminal (square)	
—	E40-1007-05	Connector	

PLL ASS'Y (X60-1010-00)

Ref No.	Parts No.	Description	Remarks
—	E40-0625-05	Chassis mount wafer × 2	
—	E40-0825-05	Chassis mount wafer	
—	F11-0239-03	PLL shield box	
—	F11-0240-14	PLL shield cover (upper)	
—	F11-0241-24	PLL shield cover (lower)	
—	J32-0216-04	Hexagonal boss × 4	
—	J32-0217-04	Hexagonal boss × 5	
—	J32-0218-04	Hexagonal boss × 6	
—	X50-1330-00	VCO unit	
—	X50-1340-00	PD unit	

VCO (X50-1330-00)

Ref. No.	Parts No.	Description	Remarks
		CAPACITOR	
C1	CC45TH1H180J	Ceramic 18pF ±5%	
C2	CC45TH1H220J	Ceramic 22pF ±5%	
C3	CC45TH1H270J	Ceramic 27pF ±5%	
C4	CC45TH1H150J	Ceramic 15pF ±5%	
C5	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C6	CC45F1H103Z	Ceramic 0.01μF +80% −20%	
C7	CC45TH1H470J	Ceramic 47pF ±5%	
C8,9	CC45RH1H220J	Ceramic 22pF ±5%	
C10	CC45RH1H330J	Ceramic 33pF ±5%	
C11	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C12	CC45RH1H150J	Ceramic 15pF ±5%	
C13	CC45TH1H330J	Ceramic 33pF ±5%	
C14	CC45RH1H180J	Ceramic 18pF ±5%	
C15	CC45RK1H220J	Ceramic 22pF ±5%	
C16	CC45RH1H270J	Ceramic 27pF ±5%	
C17	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C18	CC45RH1H100D	Ceramic 10pF ±0.5pF	
C19	CC45TH1H270J	Ceramic 27pF ±5%	
C20	CC45SH1H180J	Ceramic 18pF ±5%	
C21	CC45SH1H220J	Ceramic 22pF ±5%	
C22	CC45SH1H150J	Ceramic 15pF ±5%	
C23	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C24	CC45TH1H180J	Ceramic 18pF ±5%	
C25	CC45TH1H220J	Ceramic 22pF ±5%	
C26	CC45TH1H270J	Ceramic 27pF ±5%	
C27	CC45TH1H150J	Ceramic 15pF ±5%	
C28	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C29	CC45RH1H020C	Ceramic 2pF ±0.25pF	
C30	CC45TH1H180J	Ceramic 18pF ±5%	
C31	CC45RH1H270J	Ceramic 27pF ±5%	
C32	CC45RH1H150J	Ceramic 15pF ±5%	
C33	CC45RH1H330J	Ceramic 33pF ±5%	
C34	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C35	CC45TH1H180J	Ceramic 18pF ±5%	
C36	CC45SH1H680J	Ceramic 68pF ±5%	
C37	CC45SH1H470J	Ceramic 47pF ±5%	
C38	CC45SH1H560J	Ceramic 56pF ±5%	
C39	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C40	CC45TH1H180J	Ceramic 18pF ±5%	
C41	CC45SH1H680J	Ceramic 68pF ±5%	
C42	CC45SH1H470J	Ceramic 47pF ±5%	
C43	CC45SH1H560J	Ceramic 56pF ±5%	
C44	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C45	CC45TH1H180J	Ceramic 18pF ±5%	
C46	CC45SH1H680J	Ceramic 68pF ±5%	
C47	CC45SH1H470J	Ceramic 47pF ±5%	
C48	CC45SH1H560J	Ceramic 56pF ±5%	
C49	CK45F1H103Z	Ceramic 0.01μF ±5%	
C50	CC45TH1H180J	Ceramic 18pF ±5%	
C51	CC45SH1H680J	Ceramic 68pF ±5%	
C52	CC45SH1H470J	Ceramic 47pF ±5%	
C53	CC45SH1H560J	Ceramic 56pF ±5%	
C54,55	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C56	CK45D1H102M	Ceramic 0.001μF ±20%	
C57	CC45CH1H020C	Ceramic 2pF ±0.25pF	
C58	CC45CH1H030C	Ceramic 3pF ±0.25pF	
C59	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C60	C90-0262-05	Ceramic 0.047μF	
C61	CK45D1H102M	Ceramic 0.001μF ±20%	

PARTS LIST

Ref. No	Parts No.	Description	Re-marks
C62,63	CC45SL1H120J	Ceramic 12pF ±5%	
C64	CC45SL1H220J	Ceramic 22pF ±5%	
C65	CC45CH1H150J	Ceramic 15pF ±5%	
C66	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C67	CC45CH1H030C	Ceramic 3pF ±0.25pF	
C68	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C69	CC45SL1H151J	Ceramic 150pF ±5%	
C70,71	C90-0262-05	Ceramic 0.047μF	
C72	CS15E1A3R3M	Tantalum 3.3μF ±20%	
C73	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C74	CC45SL1H271J	Ceramic 270pF ±5%	
C75	CC45SL1H121J	Ceramic 120pF ±5%	
C76〜86	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C87	CL45D1J102M	Ceramic 0.001μF ±20%	
		RESISTOR	
R1	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R2	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R3	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R4	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R5	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R6	PD14CY2B151J	Carbon 150Ω ±5% 1/8W	
R7	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R8	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R9	PD14CY2B151J	Carbon 150Ω ±5% 1/8W	
R10	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R11,12	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R13	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R14	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R15	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R16	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R17	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R18	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R19	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R20	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R21	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R22	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R23	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R24	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R25	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R26	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R27	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R28	PD14CY2B470J	Carbon 47Ω ±5% 1/8W	
R29	PD14CY2B391J	Carbon 390Ω ±5% 1/8W	
R30	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R31	PD14CY2B333J	Carbon 33kΩ ±5% 1/8W	
R32	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R33	PD14CY2B123J	Carbon 12kΩ ±5% 1/8W	
R34	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R35	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R36	PD14CY2B393J	Carbon 390Ω ±5% 1/8W	
R37	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R38	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R39	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R40	PD14CY2B681J	Carbon 680Ω ±5% 1/8W	
R41	PD14CY2B470J	Carbon 47Ω ±5% 1/8W	
R42	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R43	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R44	PD14CY2B822J	Carbon 8.2kΩ ±5% 1/8W	
R45	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R46	PD14CY2B122J	Carbon 1.2kΩ ±5% 1/8W	
R47	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R48	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	

Ref. No.	Parts No	Description	Re-marks
		SEMICONDUCTOR	
Q1〜6	V09-0012-05	FET 2SK19(GR)	
Q7〜11	V09-0013-05	FET 2SK19(BL)	
Q12	V09-0057-05	FET 3SK41(L)	
Q13	V03-0079-05	Transistor 2SC460(B)	
Q14	V03-0283-05	Transistor 2SC741	
Q15	V03-0124-05	Transistor 2SC734(Y)	
D1〜12	V11-0414-05	Diode 1S2588	
D13〜23	V11-0293-05	Diode 1S1658-3	
		COIL	
L1〜15	L40-1511-02	Ferri-inductor 150μH	
L16	L40-1592-02	Ferri-inductor 1.5μH	
L17〜18	L40-1092-02	Ferri-inductor 1μH	
L20	L40-1292-02	Ferri-inductor 1.2μH	
L21	L40-1511-03	Ferri-inductor 150μH	
L22	L40-1292-02	Ferri-inductor 1.2μH	
L23	L40-1511-03	Ferri-inductor 150μH	
T1	L32-0199-05	Oscillating coil 15MHz	
T2,3	L32-0193-05	Oscillating coil 1.8MHz, 3.5MHz	
T4	L32-0195-05	Oscillating coil 7MHz	
T5	L32-0196-05	Oscillating coil 14MHz	
T6	L32-0197-05	Oscillating coil 21MHz	
T7〜10	L32-0198-05	Oscillating coil 28MHz	
T12	L34-0529-05	Trap coil 8.83MHz	
		SWITCH	
S1	S31-1005-05	Slide switch	
		MISCELLANEOUS	
J1〜6	R92-0150-05	Short jamper × 6	
	E23-0046-04	Terminal (square) × 6	
	E40-0607-05	Connector × 2 6p	
	E40-0807-05	Connector 8p	

PD (X50-1340-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1,2	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C3	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C4	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C5,6	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C7	CE04W1A101	Electrolytic 100μF 10WV	
C8	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C9,10	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C12	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C13	CE04W1A101	Electrolytic 100μF 10WV	
C14,15	CS15E1VR22M	Tantalum 0.22μF ±20%	
C16	CC45SL1H470J	Ceramic 47pF ±5%	
C17	CK450D1H102M	Ceramic 0.001μF ±20%	
C18,19	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C20	CC45RH1H101J	Ceramic 100pF ±5%	
C21	CQ09S1H391J	Ceramic 390pF ±5%	
C22	CC45RH1H101J	Ceramic 100pF ±5%	
C23	C90-0262-05	Ceramic 0.047μF	
C24,25	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C26	CS15E1V010M	Tantalum 1μF ±20%	
C27	CC45SL1H050C	Ceramic 5pF ±0.25pF	
C28	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C29,30	CC45SL1H330J	Ceramic 33pF ±5%	

PARTS LIST

Ref. No.	Parts No.	Description	Remarks
C31	CC45SL1H100D	Ceramic 10pF ±0.5pF	
C32	CC45SL1H050C	Ceramic 5pF ±0.25pF	
C33	CK45D1H102M	Ceramic 0.001μF ±20%	
C34,35	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C37	CS15E1V010M	Tantalum 1μF ±20%	
C38	CC45CH1H470J	Ceramic 47pF ±5%	
C39	CC45CH1H470J	Ceramic 47pF ±5%	
C40	CC45SL1H151J	Ceramic 150pF ±5%	
C41	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C42,43	CC45SL1H331J	Ceramic 330pF ±5%	
C44	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C45,46	CC45SL1H331J	Ceramic 330pF ±5%	
C47	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C48	CC45SL1H151J	Ceramic 150pF ±5%	
C49	CC45SL1H221J	Ceramic 220pF ±5%	
C50	CL45F1H103Z	Ceramic 0.01μF +80% −20%	
C51	CC45CH1H470J	Ceramic 47pF ±5%	
C52	CC45SL1H151J	Ceramic 150pF ±5%	
C53	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C54	CC45CH1H100D	Ceramic 10pF ±0.5pF	
C55	CC45SL1H151J	Ceramic 150pF ±5%	
C56	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C57	CC45CH1H101J	Ceramic 100pF ±5%	
C58	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C59	CC45CH1H101J	Ceramic 100pF ±5%	
C60	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C61	CC45CH1H101J	Ceramic 100pF ±5%	
C62	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C63	CC45CH1H101J	Ceramic 100pF ±5%	
C64,65	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C66	CC45SL1H020C	Ceramic 2pF ±0.25pF	
C67	CC45SL1H180J	Ceramic 18pF ±5%	
C68	C90-0262-05	Ceramic 0.047μF	
C69	CK45D1H102M	Ceramic 0.001μF +80% −20%	
C70	C90-0262-05	Ceramic 0.047μF	
C72	CC45SL1H330J	Ceramic 33pF ±5%	
		RESISTOR	
R1	PD14CY2B151J	Carbon 150Ω ±5% 1/8W	
R2	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R3	PD14CY2B391J	Carbon 390Ω ±5% 1/8W	
R4	PD14CY2B472J	Carbon 4.7Ω ±5% 1/8W	
R5	PD14CY2B183J	Carbon 18kΩ ±5% 1/8W	
R6	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R7	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R8	PD14CY2B391J	Carbon 390Ω ±5% 1/8W	
R9	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R11	PD14CY2B183J	Carbon 18Ω ±5% 1/8W	
R12	PD14CY2B472J	Carbon 4.7Ω ±5% 1/8W	
R13,14	PD14CY2B332J	Carbon 3.3Ω ±5% 1/8W	
R15	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R16	PD14CY2B222J	Carbon 2.2kΩ ±5% 1/8W	
R17	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R18	PD14CY2B821J	Carbon 820Ω ±5% 1/8W	
R19	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R20	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R21	PD14CY2B182J	Carbon 1.8kΩ ±5% 1/8W	
R22	PD14CY2B561J	Carbon 560Ω ±5% 1/8W	
R24	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R25	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R26	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R27	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R28	PD14CY2B122J	Carbon 1.2kΩ ±5% 1/8W	

Ref. No.	Parts No.	Description	Remarks
R29	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R30,31	PD14CY2B470J	Carbon 47Ω ±5% 1/8W	
R32～34	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R35	PD14CY2B821J	Carbon 820Ω ±5% 1/8W	
R36	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R37	PD14CY2B152J	Carbon 1.5kΩ ±5% 1/8W	
R38	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R39	PD14CY2B152J	Carbon 1.5kΩ ±5% 1/8W	
R40	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R41	PD14CY2B122J	Carbon 1.2kΩ ±5% 1/8W	
R42,43	PD14CY2B470J	Carbon 47Ω ±5% 1/8W	
R44	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R45	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R46,47	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R48	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R49	PD14CY2B272J	Carbon 2.7kΩ ±5% 1/8W	
R50	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R51	PD14CY2B393J	Carbon 39kΩ ±5% 1/8W	
R52	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R53	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R54	PD14CY2B473J	Carbon 47kΩ ±5% 1/8W	
R55	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R56	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R57	PD14CY2B273J	Carbon 27kΩ ±5% 1/8W	
R58	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R59	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R60	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R61	PD14CY2B272J	Carbon 2.7kΩ ±5% 1/8W	
R62	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R63	PD14CY2B682J	Carbon 6.8Ω ±5% 1/8W	
R64	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R65	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R66	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R67	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R68	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R69	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R70	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R71	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R72	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R73	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R74	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R75	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R76	PD14CY2B562J	Carbon 5.6kΩ ±5% 1/8W	
R77,78	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R79	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R80	PD14CY2B683J	Carbon 68kΩ ±5% 1/8W	
R81	PD14CY2B330J	Carbon 33Ω ±5% 1/8W	
R82	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R83	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R84	PD14CY2B151J	Carbon 150Ω ±5% 1/8W	
R85	PD14CY2B821J	Carbon 820Ω ±5% 1/8W	
R86,87	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
		SEMICONDUCTOR	
Q1～12	V03-0079-05	Transistor 2SC460(B)	
Q13	V09-0012-05	FET 2SK19(GR)	
Q14	V01-0037-05	Transistor 2SA495(Y)	
Q15	V09-0012-05	FET 2SK19(GR)	
Q16	V01-0037-05	Transistor 2SA495(Y)	
Q17	V03-0079-05	Transistor 2SC460(B)	
Q18	V30-0132-05	IC TD3400AP	
Q19	V30-0173-05	IC MC4044P	
Q20	V03-0271-05	Transistor 2SC1345(E)	
Q21,22	V30-0174-05	IC MC1496G	

Ref. No	Parts No.	Description	Re-marks
D1～24	V11-0076-05	Diode 1S1555	
		POTENTIOMETER	
VR1	R12-4021-05	Semi-fixed resistor 5kΩ(B)	
		COIL	
L1,2	L40-1511-03	Ferri-inductor 150μH	
L3	L40-2201-03	Ferri-inductor 22μH	
L4	L40-1021-03	Ferri-inductor 1mH	
L5～12	L40-1511-03	Ferri-inductor 150μH	
T1	L34-0518-05	BPF coil	
T2	L34-0519-05	BPF coil	
T3	L34-0518-05	BPF coil	
T4	L34-0520-05	LPF coil	
T5	L34-0521-05	LPF coil	
T6	L34-0520-05	LPF coil	
		CRYSTAL QUARTZ	
X1	L77-0497-05	20.5MHz (3rd over tone)	
X2	L77-0488-05	7.3MHz (Original)	
X3	L77-0489-05	9.0MHz (Original)	
X4	L77-0490-05	12.5MHz (Original)	
X5	L77-0491-05	19.5MHz (3rd over tone)	
X6	L77-0492-05	26.5MHz (3rd over tone)	
X7	L77-0493-05	33.5MHz (3rd over tone)	
X8	L77-0494-05	34MHz (3rd over tone)	
X9	L77-0495-05	34.5MHz (3rd over tone)	
X10	L77-0496-05	35.0MHz (3rd over tone)	
J1～4	R92-0150-05	Short jamper	
—	E23-0046-04	Terminal (square) × 9	
—	E40-0607-05	Connector × 2 6p	
—	E40-0626-05	Type U pin wafer × 4 6p	
—	E40-0807-05	Connector 8p	
—	E40-0826-05	Type U pin wafer 8p	
—	F10-0401-04	Shield plate	
—	F10-0404-04	Shield plate	
—	F11-0238-04	Shield plate	

DISASSEMBLY

1. How to remove panel

1) Remove all the knobs from the front panel.
2) Remove the dial escutcheon and front glass according to **Fig. 14**.
3) Remove the screws from both sides of the panel according to **Fig. 13**.

2. How to remove VFO

1) Remove upper and lower cases.
2) Disconnect the VFO output cable and 2P plug behind the VFO case.
3) Remove the four mounting screws from the VFO unit and subchassis of the body front according to **Fig. 14**.
4) Lift the VFO unit and extract it from the body, while taking care not to damage the subdial plate.

3. Mono-scale dial adjustment

1) Remove the knob and dial escation as shown in **Fig. 14**.
2) Turn the dial to the "0" of VFO dial scale.
3) Install the inside of the mono-scale so that the number "5" comes upside. (Only one number "5" exists.)
4) Fit the outside of the mono-scale with the inside so that the section of 12 division (12 kHz) right side from "0" comes up-center.
5) Install the inside and outside of the mono-scale to the shaft so that the number "5" can be seen through the small square hole (□ 90).

NOTE:

1) When installing the both sides of the mono-scale, provide a clearance of 1 ~ 1.5 mm between them.
2) Use care not to turn imprudently the mono-scale to avoid damaging it.

---

6) Install the dial escation and knob as shown in **Fig. 14**.

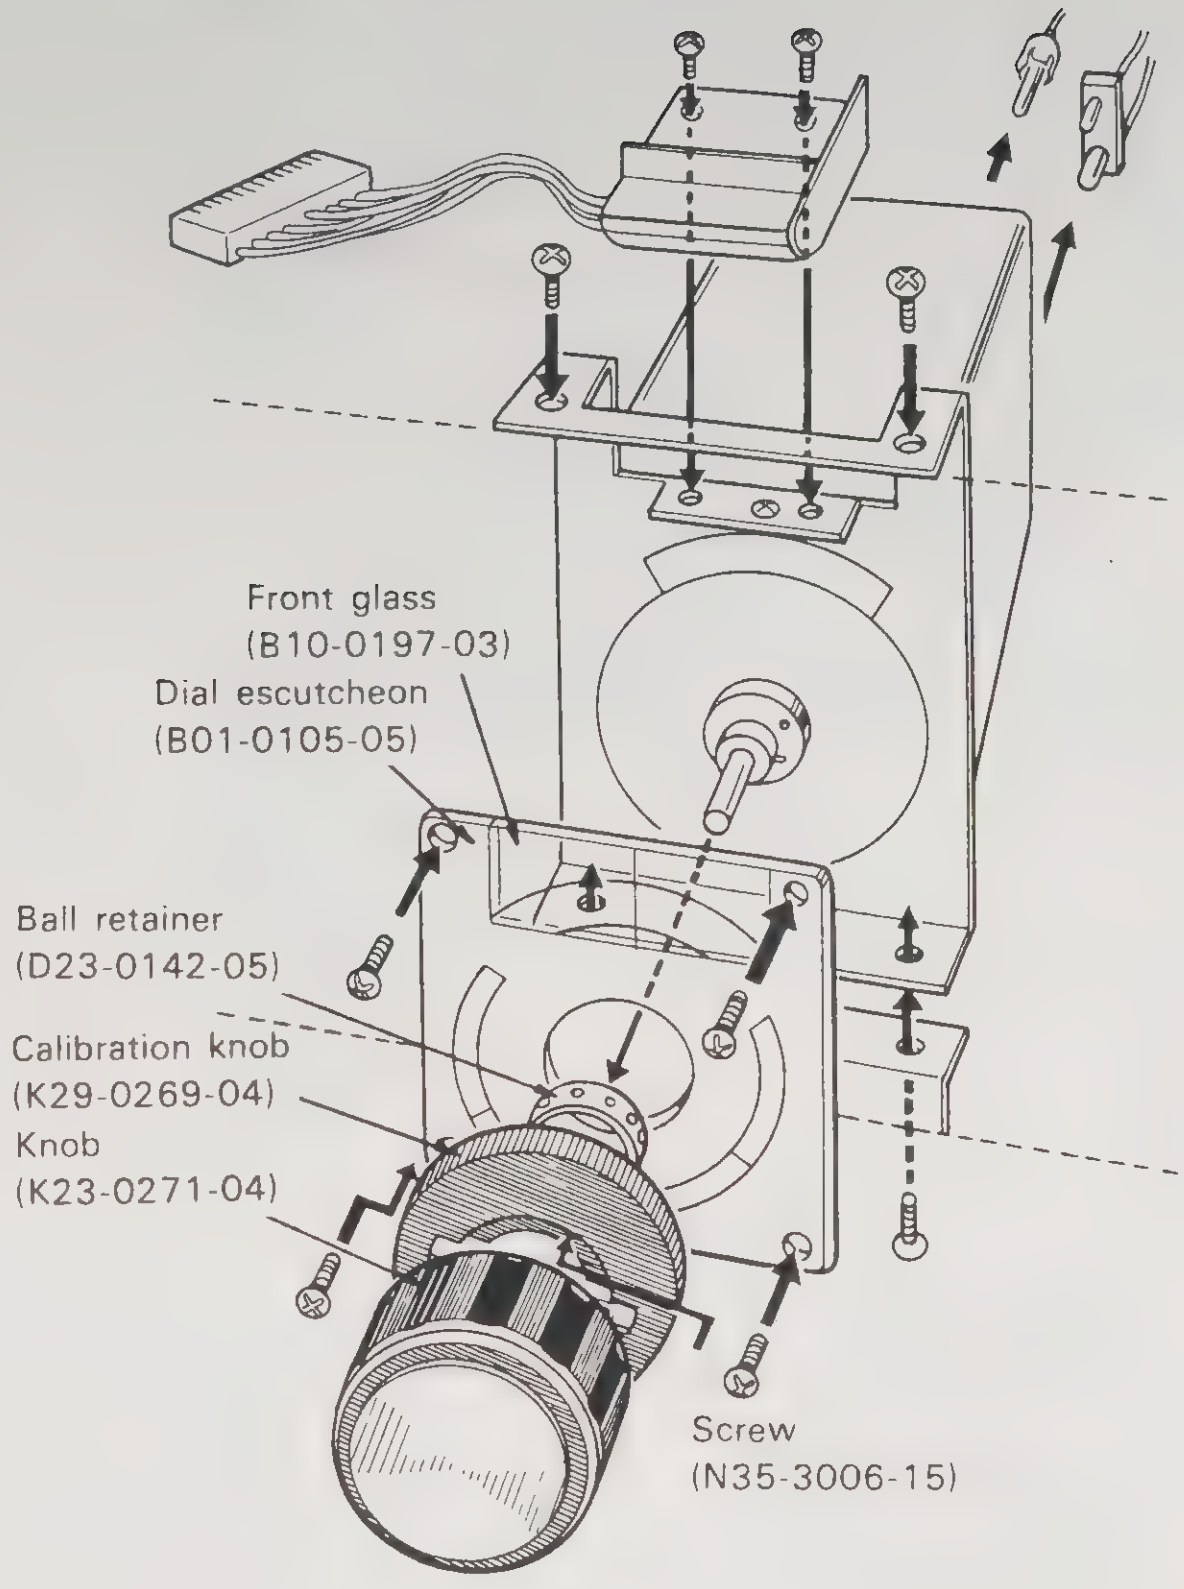

Fig. 14 Removing VFO

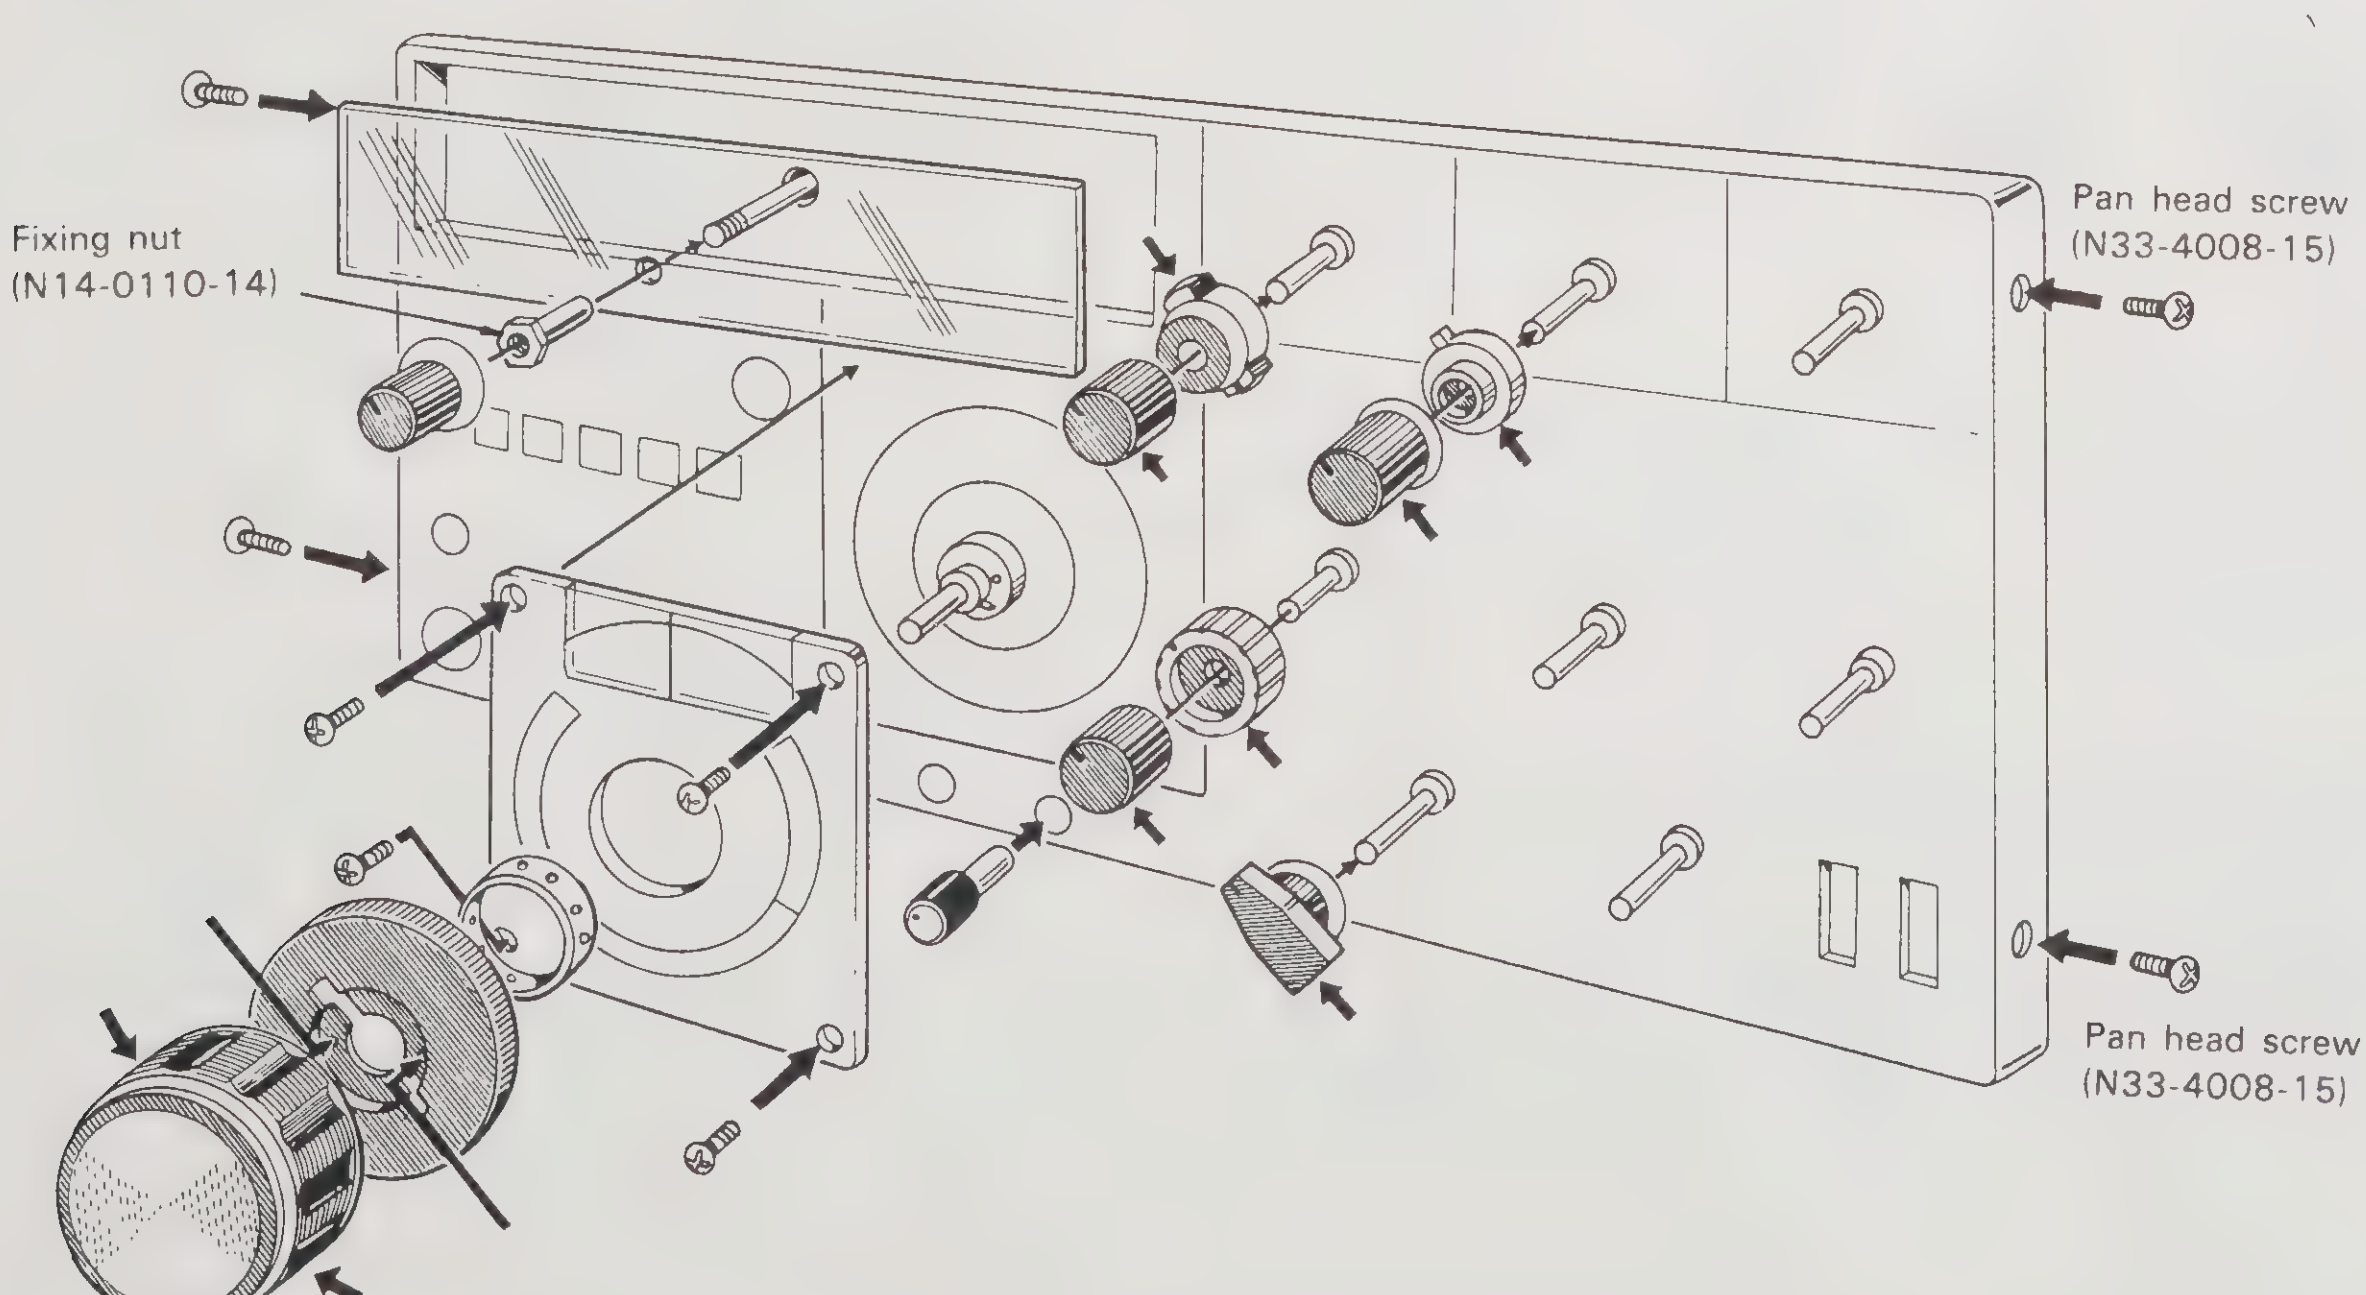

Fig. 13 Removing the panel

3. How to check counter assembly (DG-1: Option)

1) For the mounting procedure of the counter assembly, refer to **Fig. 15** "Modification first option mounting procedure".

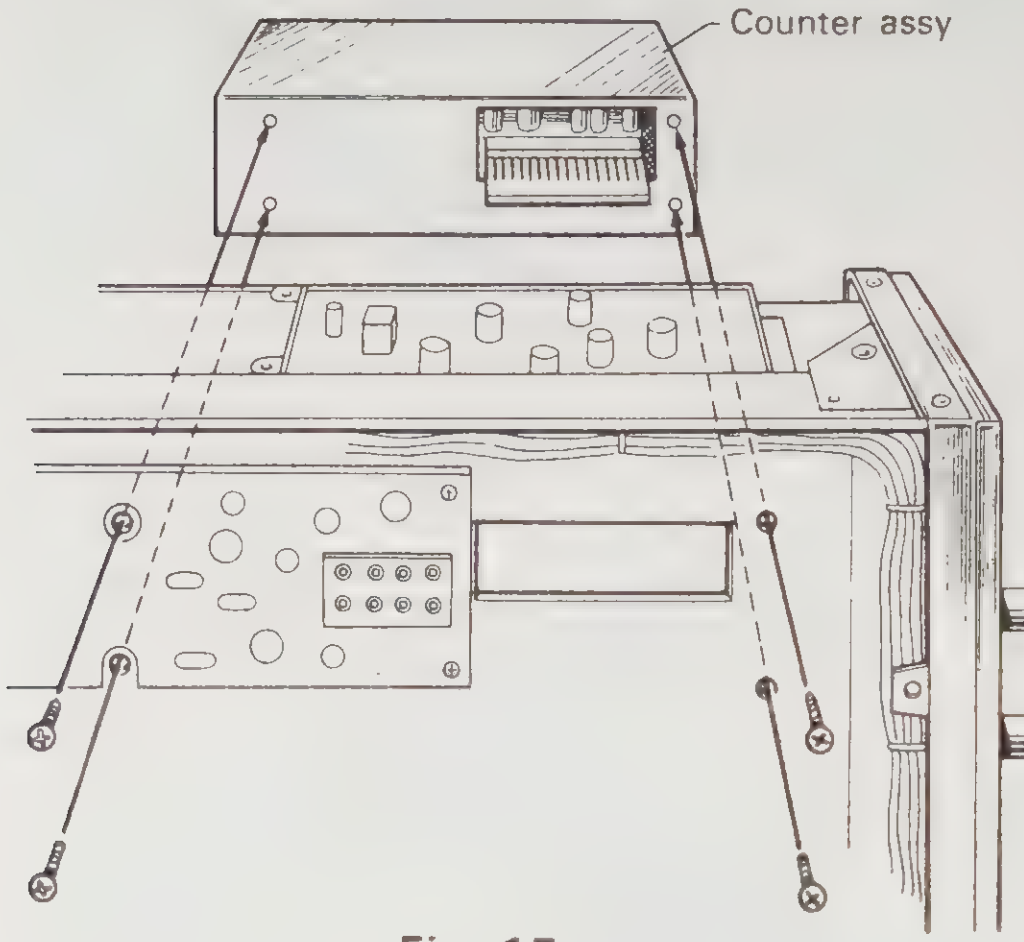

Fig. 15

2) When checking each voltage, attach the printed circuit boards, as shown in **Fig. 16**.

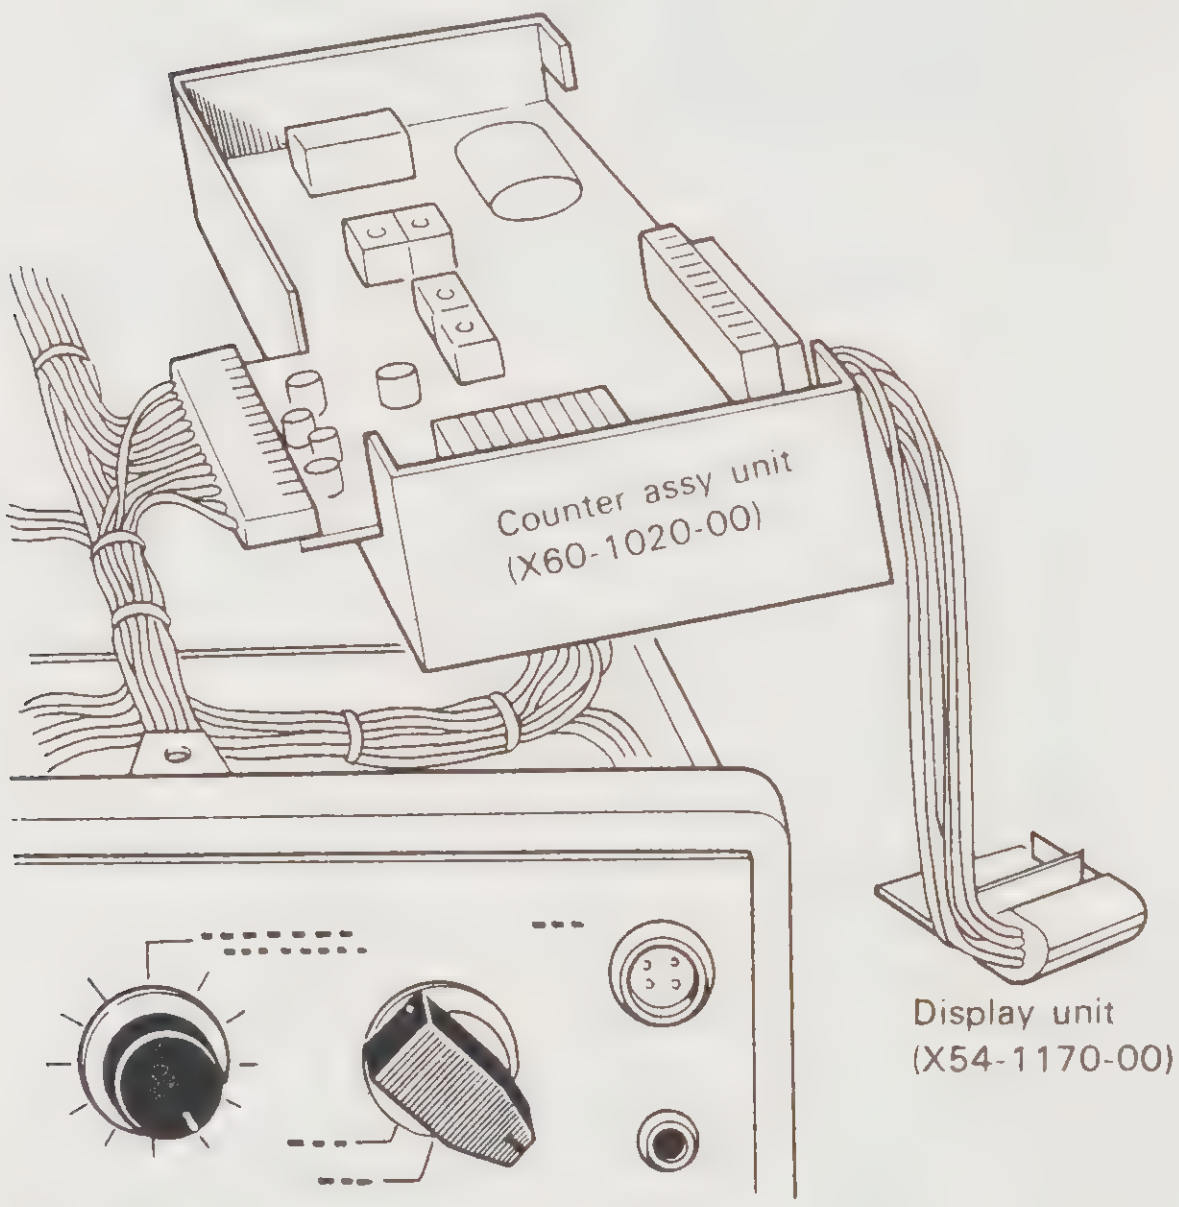

Fig. 16

3) Since the patterns in the counter assembly unit are thin and subject to heat, use a soldering iron with a small capacity of approx. 20W and carry out unsoldering quickly.

4. How to remove VOX/VR unit

1) Remove the panel according to the instruction mentioned in Item 1 above.
2) Remove the upper and lower cases.
3) Remove the two each screws, by which the individual switches are attached to the subpanel.

5. How to remove RIT and RF ATT switches

1) Remove the panel according to the instruction shown in Item 1 above.
2) Remove the upper and lower cases.
3) Remove from the subpanel the chassis, on which the VOX/VR unit is mounted, according to **Fig. 17** and detach the unit.

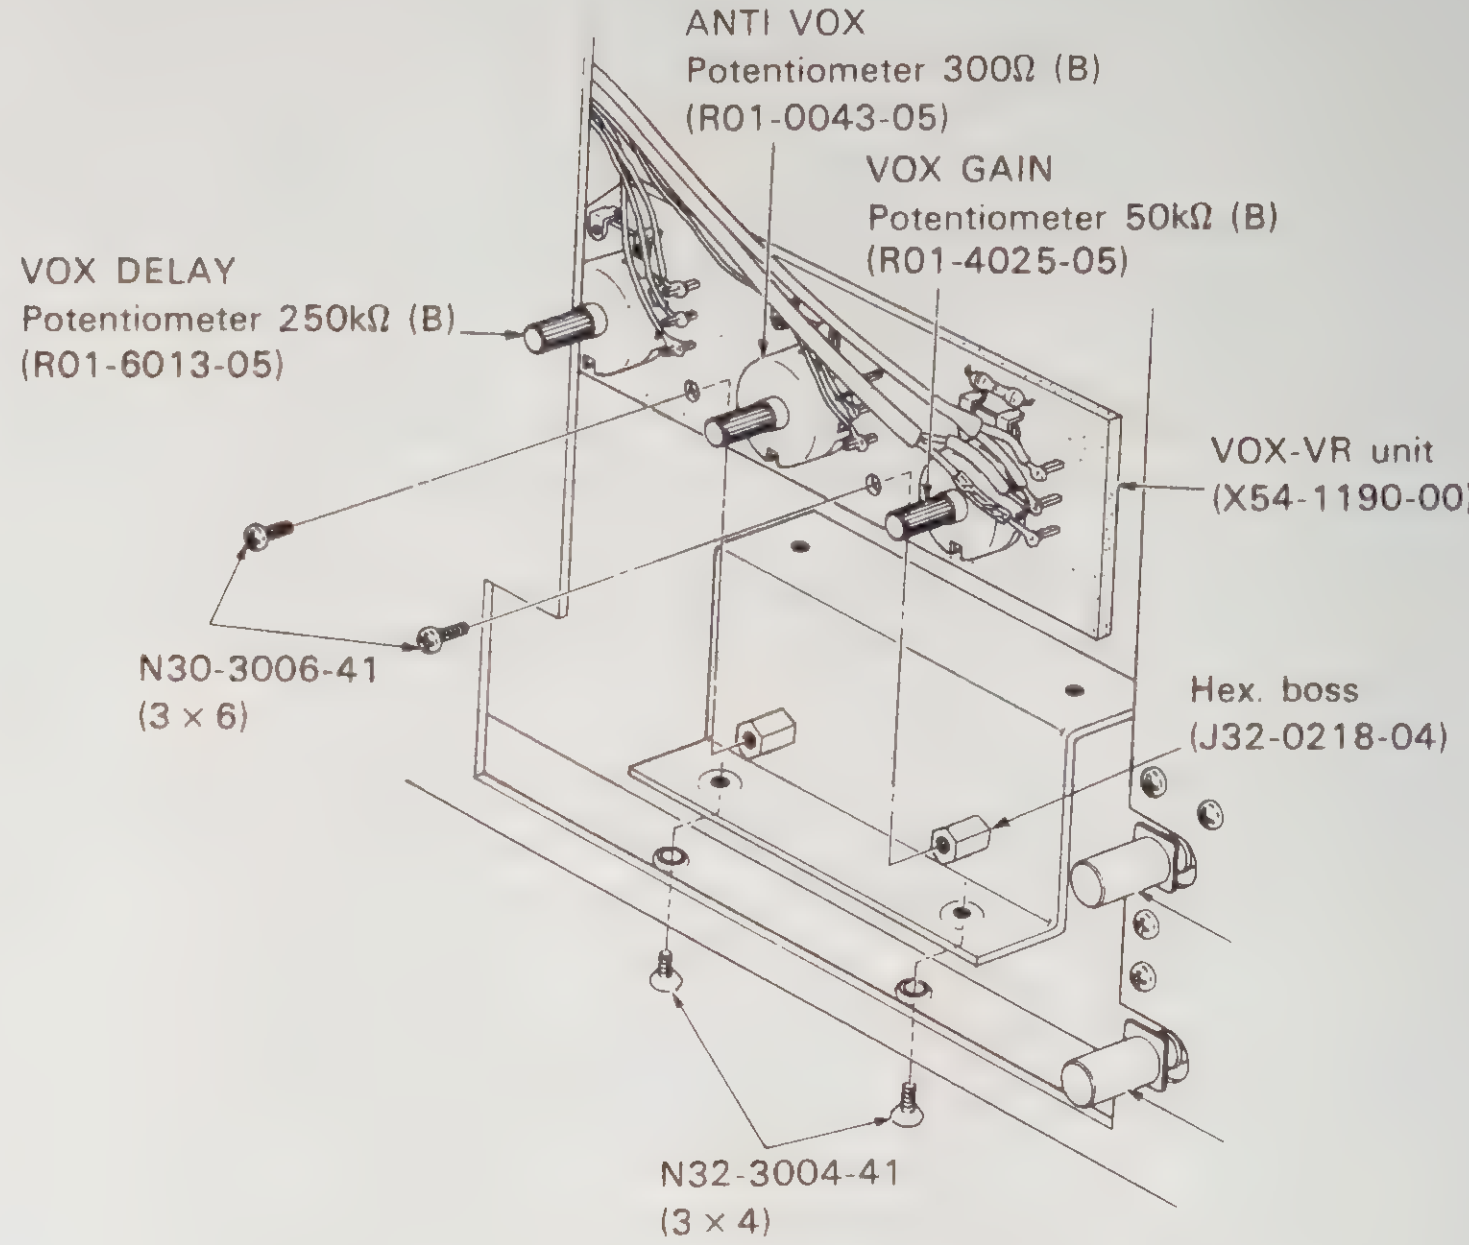

Fig. 17(a) Removing the VOX · VR unit

6. How to remove meter

1) Remove the upper and lower cases.
2) Remove the two screws, by which the meter is attached to the subpanel.

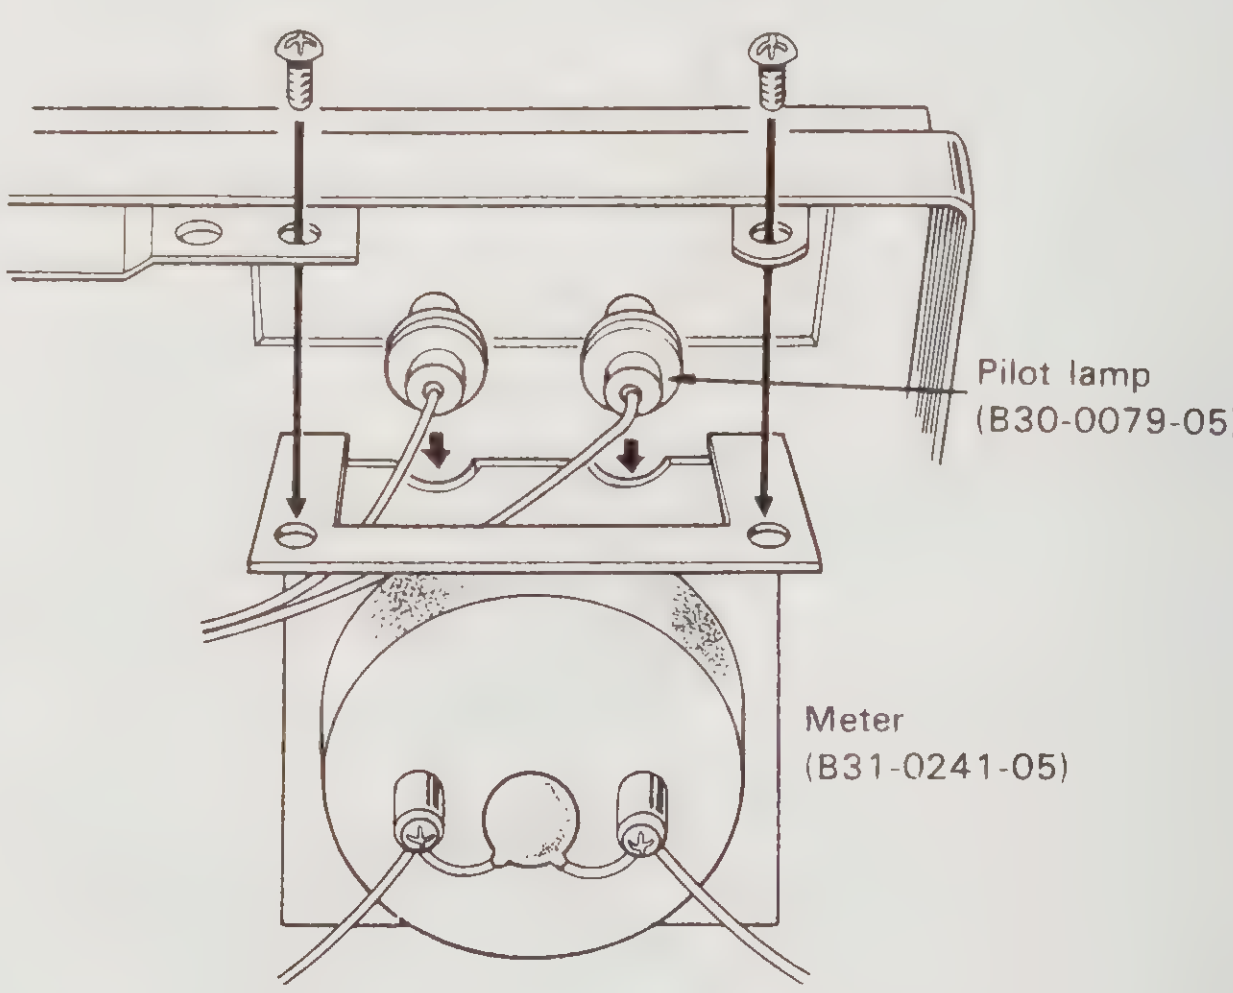

Fig. 17(b) Removing the meter

7. How to remove paddel switch

1) Remove all the knobs and dial plates from the front panel according to Item 1.
2) Remove the meter according to Item 6.
3) Extract the spring plate of the paddel switch up to the subpanel front, while pushing its tip with a screwdriver (refer to **Fig. 18**).
4) When the normal paddel switch is inserted into the subpanel from the front, it is fixed to the subpanel by means of the spring plate. To replace the knob of the paddel switch, insert the tip of a thin driver into a gap of the switch and detach the knob by utilizing the principle of the lever and then insert a normal knob (refer to **Fig. 18**).

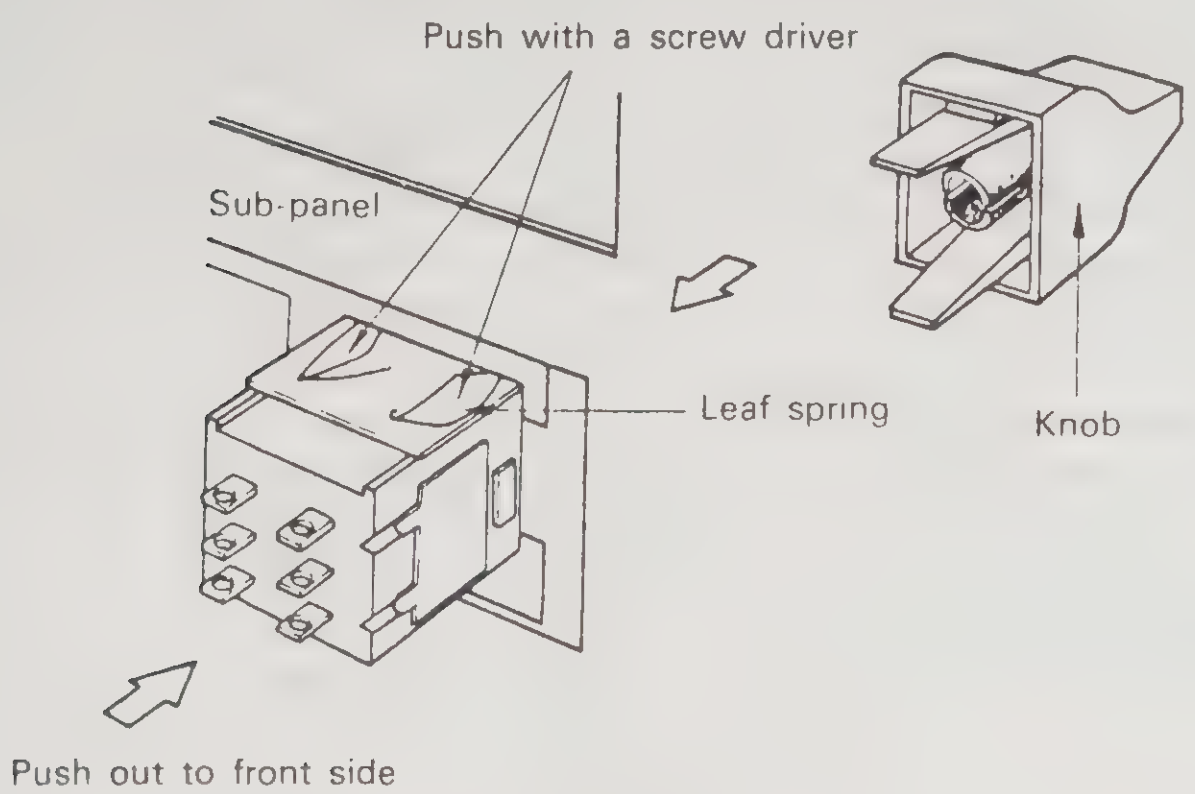

Fig. 18

8. How to disconnect lead from miniplug

According to the figure shown below, hold the pin with a thin screwdriver through the miniplug hole and pull the lead. The lead will be able to be disconnected from the miniplug.

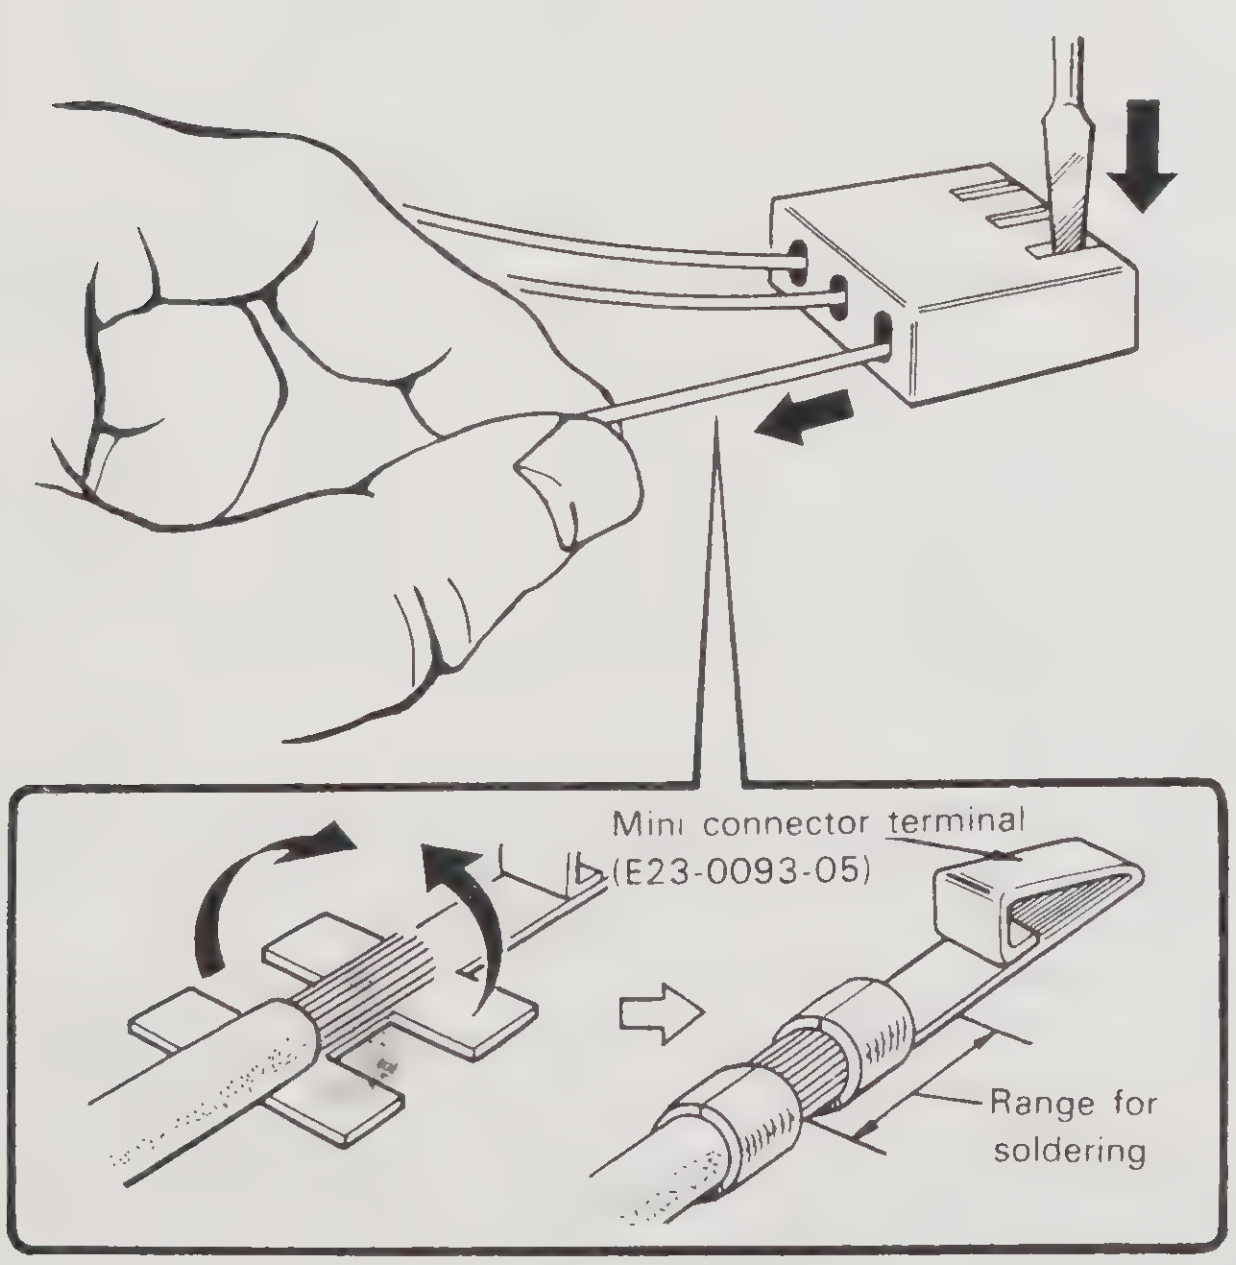

Fig. 19

9. Sectional view of VFO shaft

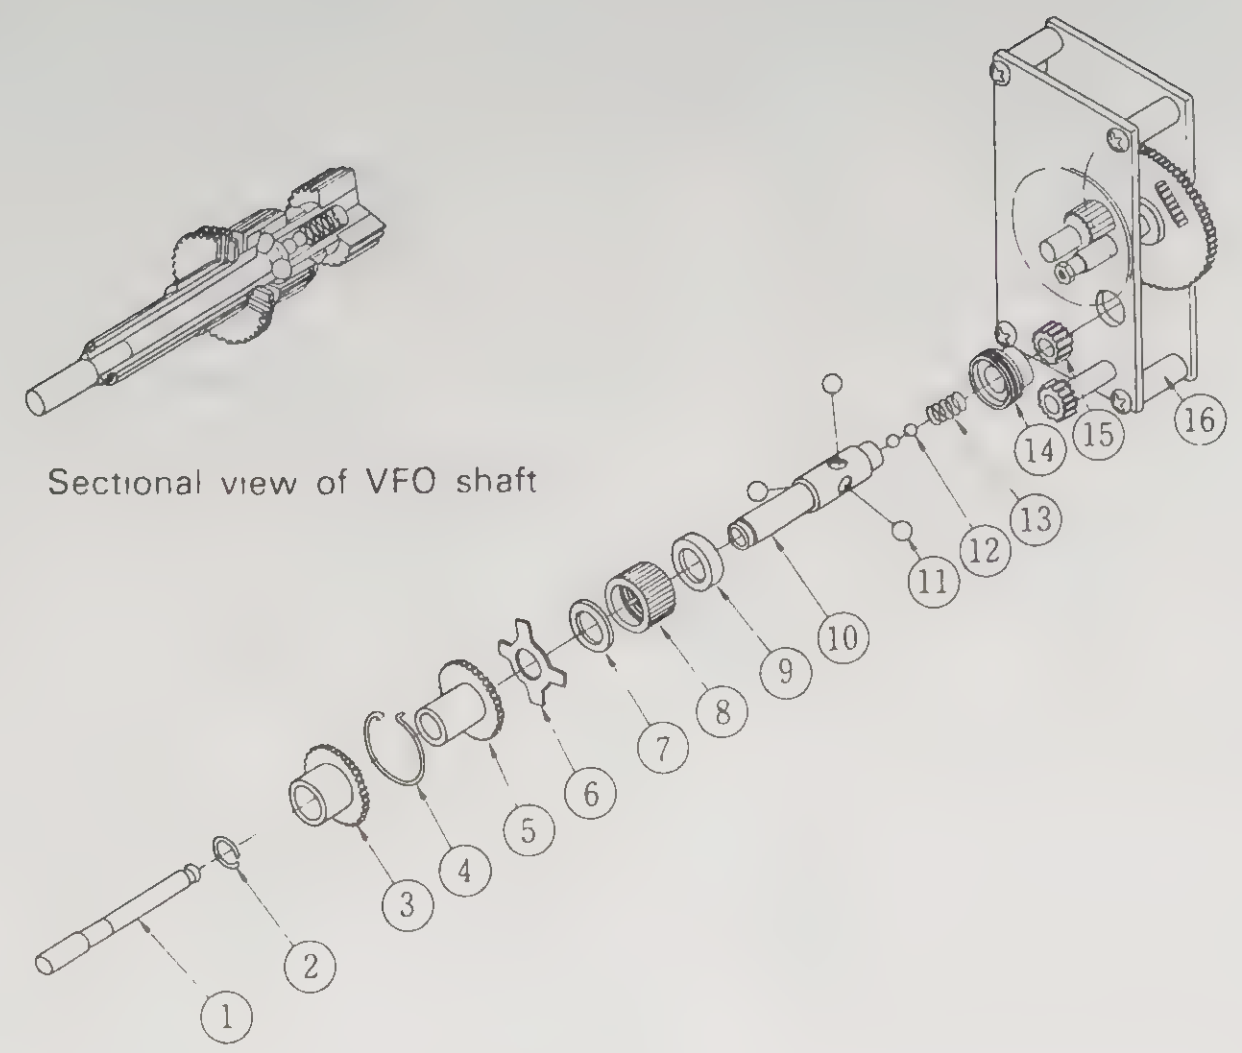

1. Knob axle
2. Coil washer
3. Differential gear B
4. Coil spring
5. Differential gear A
6. Plate spring
7. Washer A
8. Cap ring
9. Taper collar
10. Reduction axle
11. Steel ball A
12. Steel ball
13. Spring C
14. Bearing
15. First gear
16. Gear assembly

TROUBLESHOOTING

RECEIVER SECTION

Symptom	Condition	Service Point	Cause	Remedy
1. No power from power supply		1) Fuse 2) Power switch 3) AC cord	• Blown fuse • Defective switch • Broken wire around plug	• Refer to the next item. • Continuity check • Continuity check
2. Blown fuse		1) Low frequency unit (X49-1080-00) 2) B circuit	• Q7 2SA496, Q3 TA72dP defective • In contact with chassis.	• Disconnect B terminal lead and check • Check and repair
3. Non-receiving	• Noise can not be heard.	1) Speaker 2) AF-AVR unit 3) Phone jack	• Speaker defective • Q3 TA7201P defective • Poor contact	• Replace • Disconnect B terminal lead and check. • Continuity check
	• Noise can be heard.	1) AF GAIN variable resistor	• AF GAIN variable resistor VR4-1 10kΩ defective.	• Continuity check
		2) Each transistor	• Defective transistor	• Voltage check, replace
		3) VCO	• Regulated voltage power supply defective.	• Refer to PLL trouble-shooting.
		4) IF circuit (X48-1150-00)	• Deteriorated Q1, Q2, Q3 • IFT, T1, T2, T3, T4, T6, T7 mistuned or broken wire. • BPF mistuned or broken wire. • Bias circuit defective • Defective diode switch circuit for crystal filter.	• Voltage check and operation check according to level diagram. • Readjust and continuity check. • Check X'TAL X1, X2 • Check voltage in 14V line and AGC line. • Voltage check or operation check according to level diagram.
		5) RF, ANT circuit	• ANT and RF coil mistuned. • Poor contact of rotary switch • Broken wire of coaxial cable or RF ATT in ANT circuit • Poor contact of XVTR switch S19 • Short circuit of tuning variable capacitor • Deteriorated Q2, Q3, Q6, Q7	• Adjustment • Continuity check Continuity check • Continuity check • Disconnect lead from MD terminal in drive unit coil pack and check continuity of variable capacitor. • Bias check • Operation check according to level diagram
		6) Detector circuit (X48-1150-00)	• Unbalanced received carrier	• Adjust
4. S meter	• Pointer won't deflect	1) IF unit (X48-1150-00)	• Misadjusted semi-fixed variable resistor VR1 (10kΩ) for zero setting • Misadjusted semi-fixed variable resistor VR2 (500kΩ) for sensitivity setting • Malfunction of Q15 and Q16 (2SC733) in AGC circuit • Broken wire of RFC L10 and L11 (150μH)	• Adjust • Adjustment • Voltage check and replace • Continuity check
		2) Relay unit (X43-1190-00)	• Defective relay RL	• Continuity check
	• Pointer is kept deflected	1) AF.AVR unit (X49-1080-00) 2) IF unit (X48-1150-00)	• Reduced RF1 reference bias voltage • Deviated carrier balance VR3, TC3	• Readjust RF1 to 3.3V • Adjustment

Symptom	Condition	Service Point	Cause	Remedy
5. Marker is inoperative		1) Marker unit (X52-0005-01)	• Poor contact in FUNCTION switch S5-4 • Broken wire of coaxial cable connected to MO terminal • Broken wire of RFC, L1 (12mH) • Defective crystal oscillator element X1 (100kHz)	• Continuity check and voltage check at terminal 9 • Continuity check • Continuity check and voltage check of Q1, 2SC373 • Replace

TRANSMITTER SECTION

Symptom	Condition	Service Point	Cause	Remedy
1. No output is obtained		1) Final stage	• Deterioration of or mal-function of S2001 • Poor contact of relay RL1 • Poor contact of rotary switch S4 • Short circuit in loading variable capacitor VC2	• Voltage check or replacement check • Continuity check • Continuity check • Continuity check
		2) Oscillation stop in each oscillator	• Defective carrier VFO, heterodyne or crystal, etc.	• Refer to item of symptom of receiver section.
		3) RF unit	• Deteriorated drive tube V1 (12BY7A) or broken heater filament	• Voltage check
		4) IF unit (X48-1150-00)	• Broken wire of CAR-2 coaxial cable • Defective FET Q13SK35 (GR) • Poor contact or broken lead of MIC GAIN VR (10kΩ)	• Continuity check • Voltage check • Continuity check
2. No output is obtained		1) Final stage	• Deterioration or malfunction of S2001	• Voltage check or replacement check
		2) RF unit (X44-1150-00)	• Deteriorated vacuum tube	• Voltage check of replacement check
		3) IF unit and RF unit (X48-1150-00)	• Mistuned IFT coil pack	• Refer to the receiver section troubleshooting and the level diagram of trans-mitter section.
3. No Ip meter reading		1) Final stage	• Malfunction of S2001 • Poor contact in SG switch • Defective meter circuit	• Voltage check • Voltage check • Continuity check
4. No ALC meter reading		1) RF unit (X44-1150-00)	• Defective Q5 2SC1515 • Low drive voltage	• Voltage check • Refer to Symptoms 1 and 2.
		2) ALC circuit	• Short circuit in ALC circuit • Poor contact in relay of relay unit	• Continuity check • Continuity check
5. No HV meter reading		1) Power supply section	• Defective power supply	• Check power voltages
		2) Meter circuit	• Broken lead or voltage dividing resistors	• Continuity check
6. Standby switch is inoperative	(Including PTT)	1) FIX-VOX unit (X50-1350-00)	• Broken lead connected to VS or SS terminal • Defective Q9, 2SA562 or short circuit in D17, IN60	• Continuity check and voltage check • Voltage check
		2) Standby switch	• Poor contact in switch	• Continuity check and voltage check

TROUBLESHOOTING

COUNTER (DG-1: Option)

Symptom	Condition	Service Point	Cause	Remedy
1. Counter malfunctions (main body operation also abnormal)	• No lighting	1) COF terminal	• DC 1.2V appears due to defect in PLL circuit • Disconnect COF lead from terminal. If lights up, the counter is normal.	• Votlage check • Check
		2) VCO signal terminal	• No signal comes in	• Defective VCO oscillator circuit
	• Display becomes 9.000.0/ 19.000.0/ 29.000.0		• No carrier signal comes in	• Check signal system
	• Display won't be stabilized		• Level down of carrier or VCO signal • Unlocking of PLL circuit	• Level check • Readjust PLL coil
2. Counter malfunctions (main body normally operated)	• No lighting		• Interrupted 5V power source • Defective 5V supply line • Defective DC-DC converter • Poor contact with display unit • Defective decoder unit IC6, Q12-20 in counter mixer unit	• Check • Check • Check • Check • Check • Check
	• Display becomes 9.000.0/ 19.000.0/ 29.000.0	1) No input is applied to counter circuit	• Defect around 7.83MHz mixer circuit • Defect around SN76514N mixer circuit • Defective parts in LPF circuit • Defective wide-band amplifier (Q5～Q8)	• Check • Check • Check • Check
	• Display won't be stabilized	1) Insufficient input to counter circuit (X54-1160-00)	• Defect around 7.83MHz mixer circuit	• Check circuit
		2) Defective gate and reset latch pulse generator circuit	• Defective IC3～IC5 in counter circuit (X54-1160-00)	• Check circuit
	• Only one digit lights up	1) Oscillation stop of reference oscillator	• Defect around IC2 in X54-1150-00	• Operation check
		2) Stop of time base frequency divider	• Defect around IC3～IC5 in X54-1150-00	• Operation check
		3) Stop of scanning control circuit in multiplexer	• Defect around IC24～IC26 in X54-1160-00	• Operation check
		4) Stop of multiplexer circuit in multiplexer	• Defect around IC17～IC23 in X54-1160-00	• Operation check

PLL

Sy
1. Non ing i tran outp obta rega turni VFO
2. Unlo S typ coun oper
3. Unlo the b
4. VOF inope regar stopp VFO oscill (for e remo is rem

TROUBLESHOOTING

COUNTER (DG-1: Option)

Symptom	Condition	Service Point	Cause	Remedy
1. Counter mal-functions (main body operation also abnormal)	• No lighting	1) COF terminal	• DC 1.2V appears due to defect in PLL circuit • Disconnect COF lead from terminal. If lights up, the counter is normal.	• Votlage check • Check
		2) VCO signal terminal	• No signal comes in	• Defective VCO oscillator circuit
	• Display becomes 9.000.0/ 19.000.0/ 29.000 0		• No carrier signal comes in	• Check signal system
	• Display won't be stabilized		• Level down of carrier or VCO signal • Unlocking of PLL circuit	• Level check • Readjust PLL coil
2 Counter mal-functions (main body normally operated)	• No lighting		• Interrupted 5V power source • Defective 5V supply line • Defective DC-DC converter • Poor contact with display unit • Defective decoder unit IC6, Q12-20 in counter mixer unit	• Check • Check • Check • Check • Check • Check
	• Display becomes 9.000.0/ 19.000.0/ 29.000.0	1) No input is applied to counter circuit	• Defect around 7.83MHz mixer circuit • Defect around SN76514N mixer circuit • Defective parts in LPF circuit • Defective wide-band amplifier (Q5～Q8)	• Check • Check • Check • Check
	• Display won't be stabilized	1) Insufficient input to counter circuit (X54-1160-00)	• Defect around 7.83MHz mixer circuit	• Check circuit
		2) Defective gate and reset latch pulse generator circuit	• Defective IC3～IC5 in counter circuit (X54-1160-00)	• Check circuit
	• Only one digit lights up	1) Oscillation stop of reference oscillator	• Defect around IC2 in X54-1150-00	• Operation check
		2) Stop of time base frequency divider	• Defect around IC3～IC5 in X54-1150-00	• Operation check
		3) Stop of scanning control circuit in multiplexer	• Defect around IC24～IC26 in X54-1160-00	• Operation check
		4) Stop of multiplexer circuit in multiplexer	• Defect around IC17～IC23 in X54-1160-00	• Operation check

TROUBLESHOOTING

PLL

Symptom	Condition	Service Point	Cause	Remedy
1. None of receiving input and transmitting output are obtained regardless of turning of VFO	• Frequency is unchanged and no VCO output is obtained regardless of turning of VFO In S type, counter display goes out	1) Each unit of PLL, CAR, and VFO	• VOF (abbreviation for VCO-OFF) circuit is energized since no signal pulse is applied to phase detector in PD unit.	• Check pulse waveform and level at pin (1) and (3) of Q19MC 4044 • With pin (1), defective VCO and CAR systems, mixers and crystal oscillators in PD unit
		2) Lead of connector 3) VOF terminal voltage in PLL unit (0.1V or less normal)	• Oscillation stop of VCO • Oscillation stop of VFO or no input to PD unit • Oscillation stop of VFO or no input to PD unit • Oscillation stop of CAR or no input to PD unit	• With pin (3), defective VFO system • Check lead for continuity • Check lead for continuity • Check lead for continuity
2. Unlocking in S type, the counter is operative	• Frequency is unchanged regardless of turning of VFO VCO output is obtained	1) Each unit and varicap voltages in PPL unit	• Low level in each oscillator • Defective IC Q18, Q19 and Q20 in PD unit • Defective variable capacitance diodes in VCO unit • Defective 5V power supply	• Check each oscillator for proper level and waveform • Replace diode • Check 5V power supply (zener) in PL unit • Voltage check
3. Unlocking near the band edges	• Frequency is unchanged near the upper and lower band edges regardless of turning of VFO	1) Each unit and varicap voltages in PLL unit	• Core deviation in VCO coil	• Adjust VCO coil • Adjust BPF Refer to their adjusting procedure.
4. VOF circuit is inoperative regardless of stopping of VFO oscillation oscillation (for example, remote VFO is removed)	• The same condition as in unlocking	1) Waveforem measurement of Q15, pin 6 in PD unit 2) Operation check of Q15 in VCO unit	• Defective IC Q19 in PD unit • Defective D12, D13 and Q17 • Defective Q15 in VCO unit	• Replace IC, transistor and diode

TRANSI

MOD: CV
SG: OFF
Adjust CAI
and meast

NOTE: —
When SG
increases I

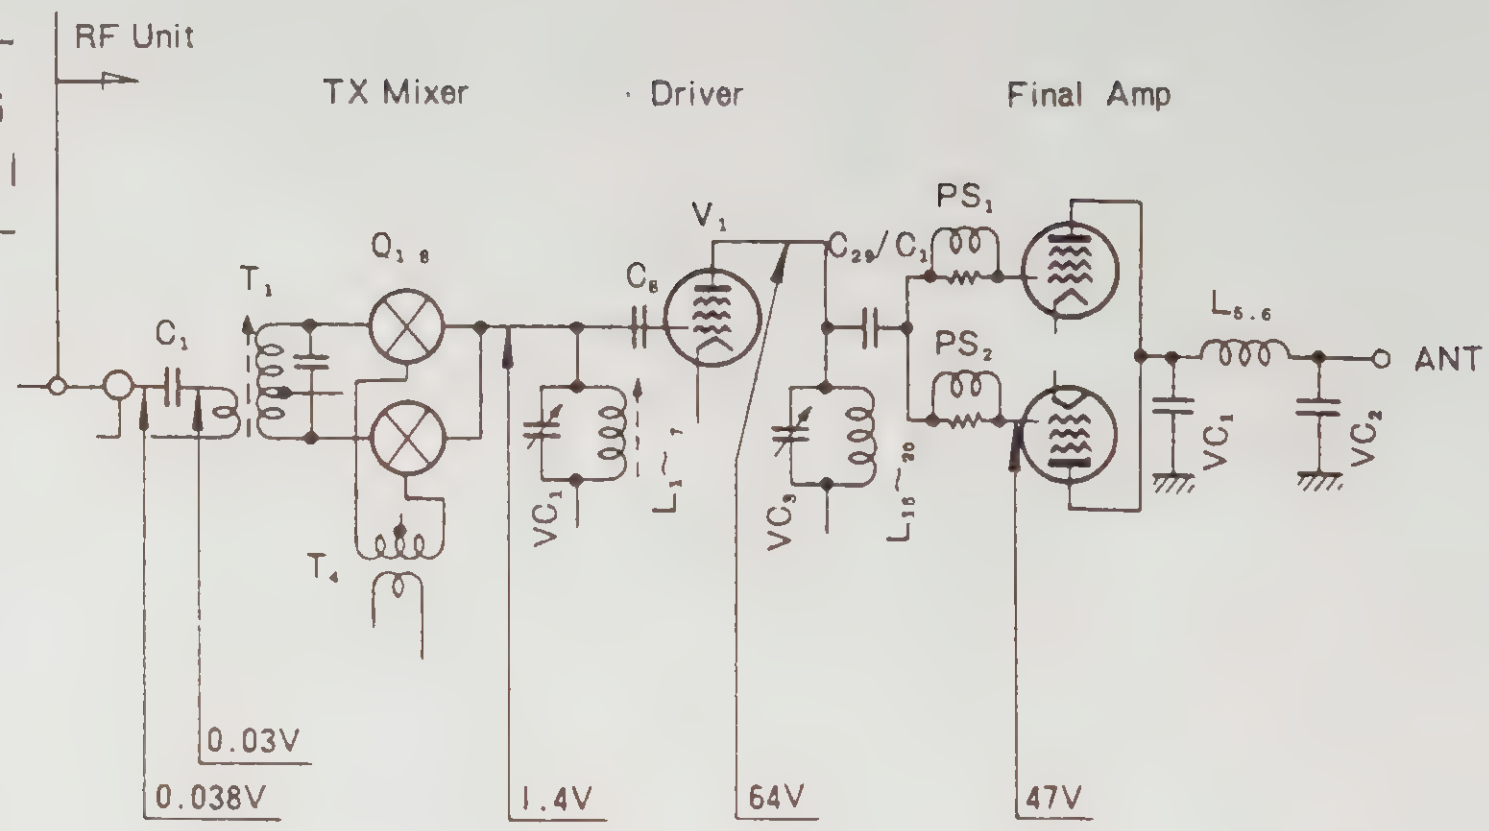

RECEIVI

MODE: C\
AGC: OFF
RF Gain: I

1. Apply
terminа
keep it
2. Connec
0.63V/
(50Ω S
3. In othe

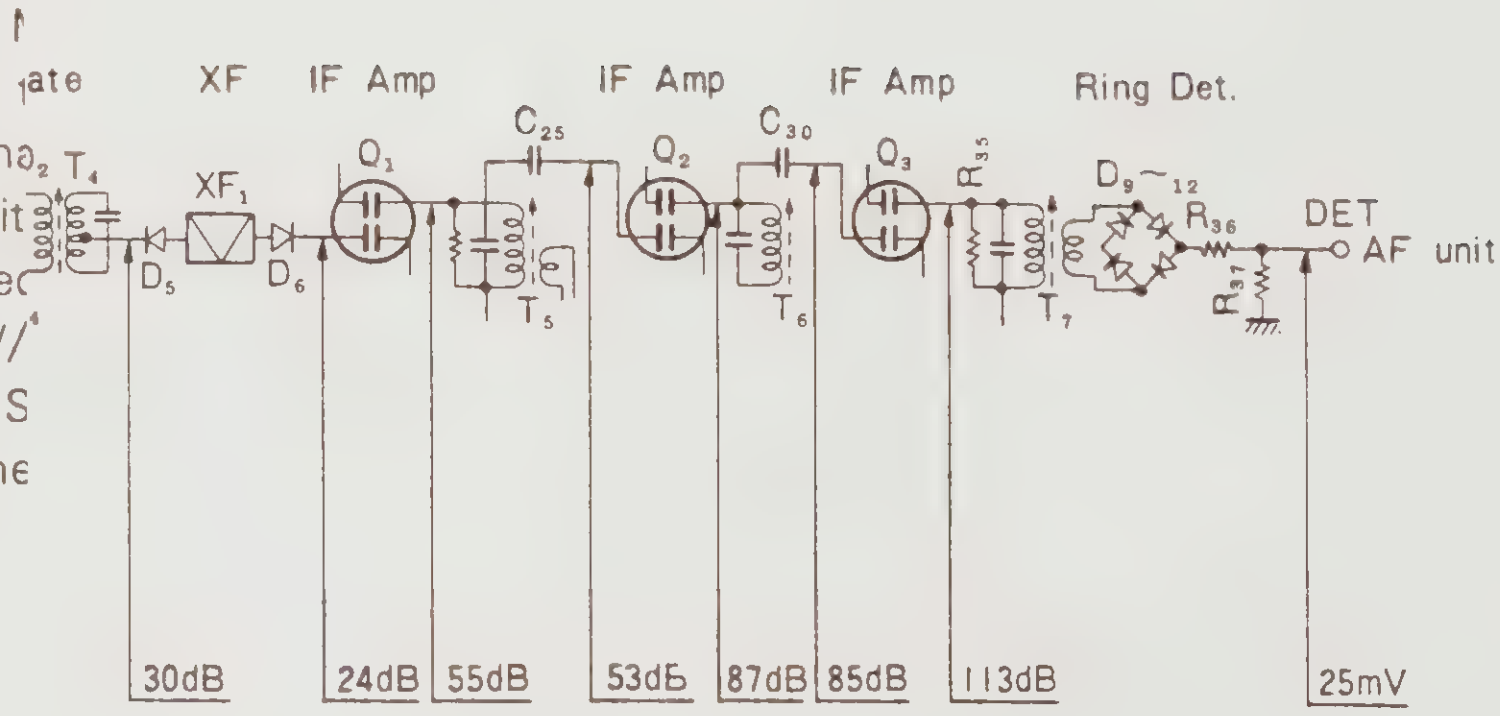

ADJUSTMENTS

GENERAL

The contents of the adjustment procedures of this transceiver are classified into formal adjustment at service benches and simplified adjustment using a voltmeter, AF and RF vacuum-tube voltmeters AG, and dummy load (AF and RF). The following adjustments require high precision measuring instruments such as a frequency counter, SSG, and sweep generator and so on. Thus, if such measuring instruments are unavailable, it is necessary to bring the transceiver to a place where such instruments are available and make adjustment while taking care not to touch the parts to be adjusted.

1. 2-1 carrier frequency adjustment (adjustment inside the CAR unit).
2. 2-5 IF trap coil adjustment and 5-2-2 trap coil adjustment (L24 and L25 in coil pack unit and T12 in VCO unit).
3. 2-8 S meter sensitivity adjustment (VR2 in IF unit).
4. 3-1 Standard oscillator adjustment of counter (trimmer TC1 in counter unit).
5. 5-1-1 BPF adjustment of PLL (T1, T2 and T3 in PD unit).

TEST EQUIPMENT REQUIRED

1. Voltmeter
1) Input resistance: More than 1MΩ
2) Voltage range: FS = AC/DC 1.5 to 1000V

NOTE:
High-precision circuit testers may be used. However, be careful since accurate reading is not obtained in high-impedance circuit measurement.

2. RF vacuum-tube voltmeter (RF VTVM)
1) Input impedance: More than 1MΩ and less than 20pF
2) Voltage range: FS = 10mV to 300V
3) Measurable frequency range: More than 50 MHz

NOTE:
When special accuracy is not required during adjustment (such as input level or ca-rier oscillation output in PLL circuit), a voltmeter or circuit tester may be substituted for RF VTVM by connecting it to the output of detector as mentioned later.

3. AF voltmeter
1) Measurable frequency: 50 Hz to 10 kHz
2) Input resistance: More than 1MΩ
3) Voltage range: FS = 10mV to 30V

4. AF generator (AG)
1) Frequency range: 200 Hz to 5 kHz
2) Output: Maximum 1V

NOTE:
The distortion factor of AF generator should be small.

5. AF dummy load
1) Impedance: 8Ω
2) Power: More than 3W

6. RF dummy load
1) Impedance: 50 to 75Ω
2) Power: Endurable against power of more than 100W
3) Applicable frequency: 1.8 to 30 MHz

The above-mentioned instruments may be used for simplified adjustment. For the precise adjustment, the following measuring instruments are additionally necessary.

7. Oscilloscope
Select equipment that has as high sensitivity as possible and permits external synchronization.

8. Slow sweep generator
1) Center frequency: 8.83 MHz
2) Frequency deviation: Maximum ±5 kHz
3) Output voltage: More than 0.1V
4) Sweep rate: At least 0.5 sec/cm

9. SSG
1) Oscillation frequency: 1.8 to 30 MHz
2) Output: 0 dB/μV ~ 120 dB/μV

NOTE:
Select an equipment that the oscillation frequency is stable in non-modulation and there are small level of frequency modulation components.

10. Frequency counter
1) Minimum input voltage: 50mV
2) Measurable frequency range: More than 40 MHz

11. Noise generator
Select an equipment that generates ignition-like noise containing high harmonics up to 30 MHz or more.

12. Directional coupler

LEVEL DIAGRAM

TRANSMITTER SECTION

MOD: CW
SG: OFF
Adjust CAR LEVEL for maximum indication of the ALC meter and measure signal level at each point.

NOTE:
When SG = ON, the level preceding the driver stage increases because of RF NFB.

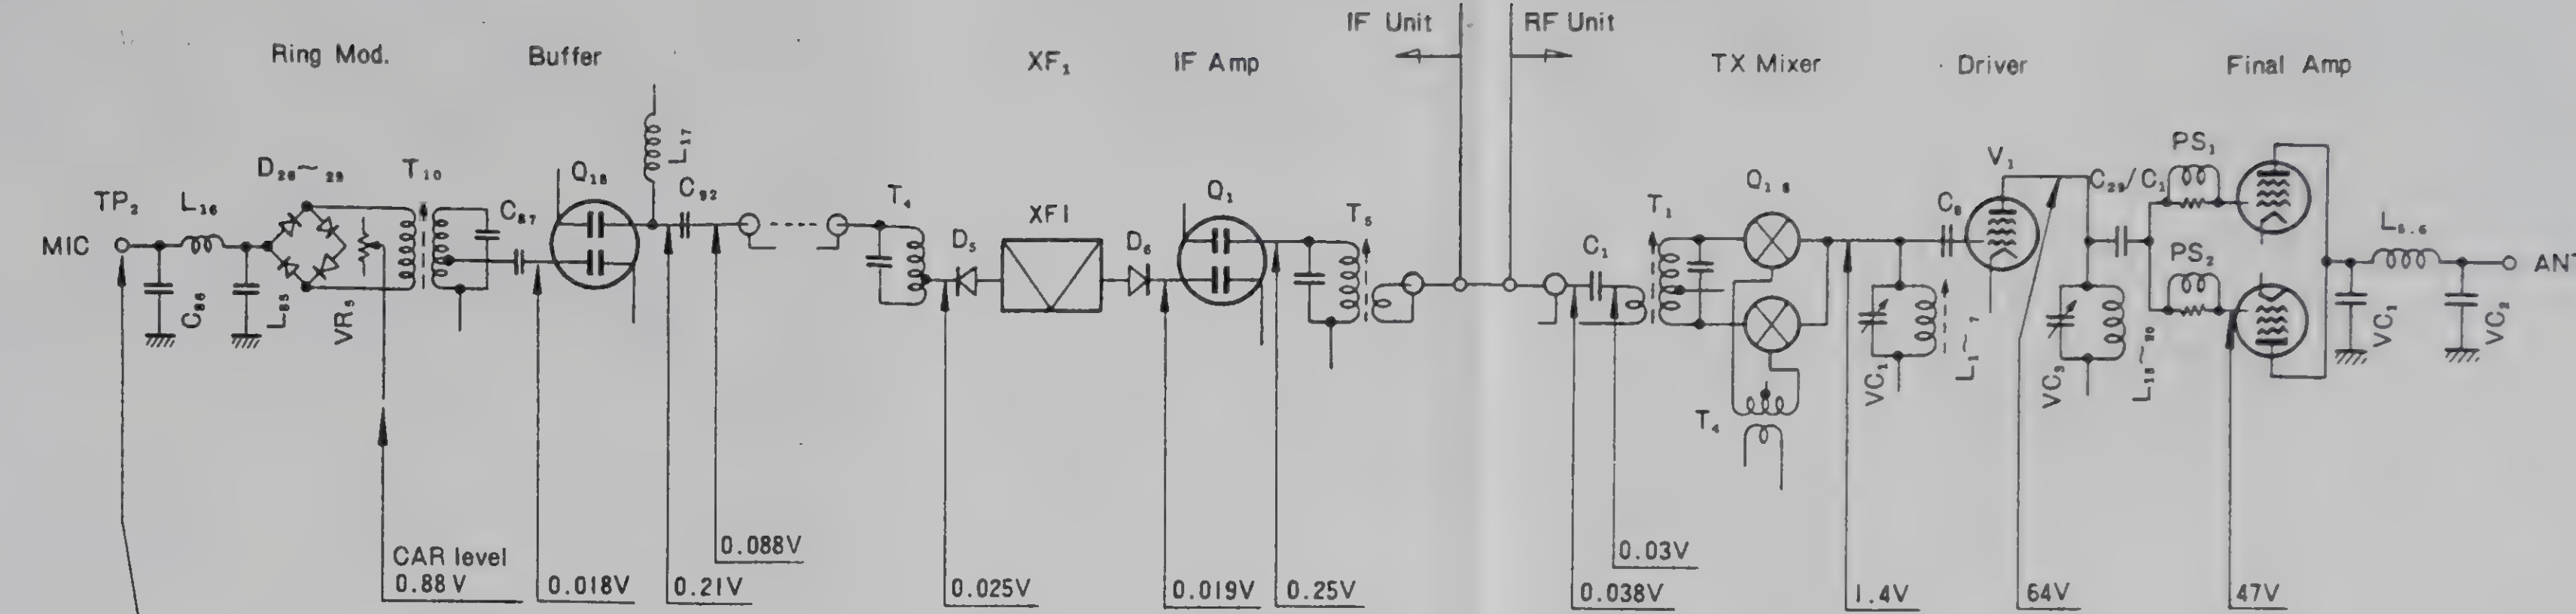

	DC voltage at reception
1.90	0.27V
3.75	0.24
7.15	0.27
14.175MHz	0.25
21.225	0.27
29.9	0.40

These levels are measured at 14.175 MHz

RECEIVER SECTION

MODE: CW
AGC: OFF
RF Gain: MAX

1. Apply the SSG signal (0 dBμ at 14.175 MHz) to ANT terminal. Adjust AF GAIN for 0.63V/8Ω AF output and keep it's position.
2. Connect SSG to each point and adjust SSG output for 0.63V/8Ω AF output. Next read out SSG output in dBμ. (50Ω SSG load open circuit voltage.)
3. In other band, measure the level in the same way.

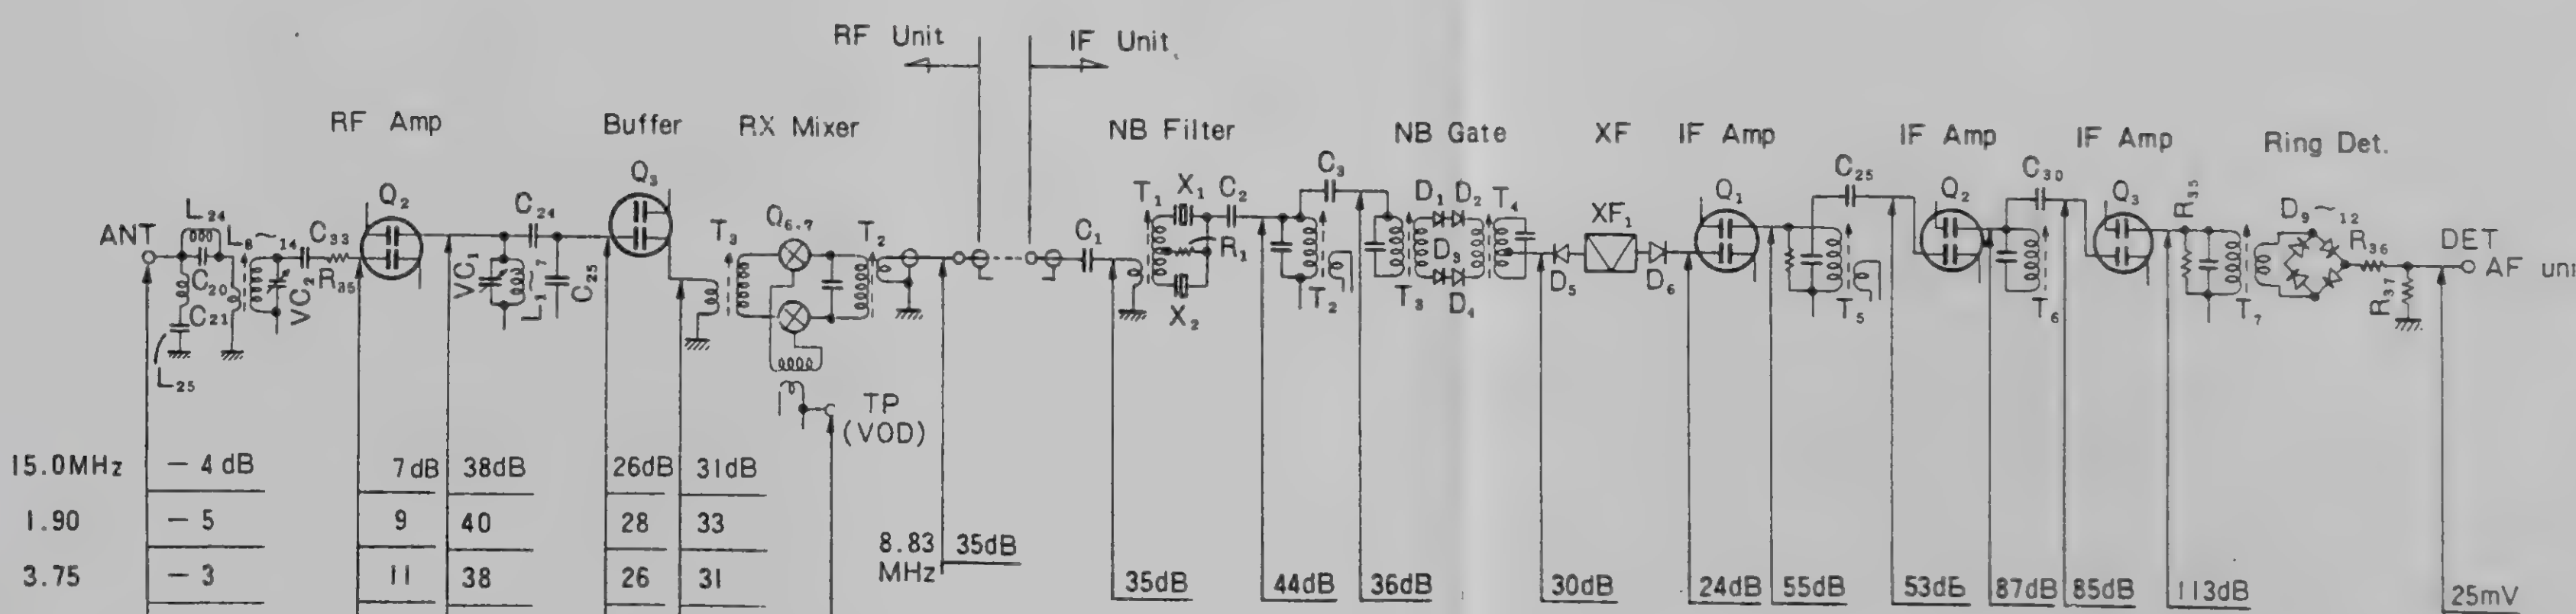

15.0MHz	−4 dB	7dB	38dB	26dB	31dB
1.90	−5	9	40	28	33
3.75	−3	11	38	26	31
7.15	−7	10	37	25	29
14.175	−0	10	40	27	32
21.225	−4	9	37	24	29
29.0	8	5	32	26	30

	VCO level
15.0MHz	1.06V
1.90	0.94
3.75	1.10
7.15	1.17
14.175	0.95
21.225	1.13
29.0	0.87

ADJUSTMENTS

GENERAL

The contents of the adjustment procedures of this transceiver are classified into formal adjustment at service benches and simplified adjustment using a voltmeter, AF and RF vacuum-tube voltmeters AG, and dummy load (AF and RF). The following adjustments require high precision measuring instruments such as a frequency counter, SSG, and sweep generator and so on. Thus, if such measuring instruments are unavailable, it is necessary to bring the transceiver to a place where such instruments are available and make adjustment while taking care not to touch the parts to be adjusted.

1. 2-1 carrier frequency adjustment (adjustment inside the CAR unit).
2. 2-5 IF trap coil adjustment and 5-2-2 trap coil adjustment (L24 and L25 in coil pack unit and T12 in VCO unit).
3. 2-8 S meter sensitivity adjustment (VR2 in IF unit).
4. 3-1 Standard oscillator adjustment of counter (trimmer TC1 in counter unit).
5. 5-1-1 BPF adjustment of PLL (T1, T2 and T3 in PD unit).

TEST EQUIPMENT REQUIRED

1. Voltmeter
1) Input resistance: More than 1MΩ
2) Voltage range: FS = AC/DC 1.5 to 1000V

NOTE:
High-precision circuit testers may be used. However, be careful since accurate reading is not obtained in high-impedance circuit measurement.

2. RF vacuum-tube voltmeter (RF VTVM)
1) Input impedance: More than 1MΩ and less than 20pF
2) Voltage range: FS = 10mV to 300V
3) Measurable frequency range: More than 50 MHz

NOTE:
When special accuracy is not required during adjustment (such as input level or ca-rier oscillation output in PLL circuit), a voltmeter or circuit tester may be substituted for RF VTVM by connecting it to the output of detector as mentioned later.

3. AF voltmeter
1) Measurable frequency: 50 Hz to 10 kHz
2) Input resistance: More than 1MΩ
3) Voltage range: FS = 10mV to 30V

4. AF generator (AG)
1) Frequency range: 200 Hz to 5 kHz
2) Output: Maximum 1V

NOTE:
The distortion factor of AF generator should be small.

5. AF dummy load
1) Impedance: 8Ω
2) Power: More than 3W

6. RF dummy load
1) Impedance: 50 to 75Ω
2) Power: Endurable against power of more than 100W
3) Applicable frequency: 1.8 to 30 MHz

The above-mentioned instruments may be used for simplified adjustment. For the precise adjustment, the following measuring instruments are additionally necessary.

7. Oscilloscope
Select equipment that has as high sensitivity as possible and permits external synchronization.

8. Slow sweep generator
1) Center frequency: 8.83 MHz
2) Frequency deviation: Maximum ±5 kHz
3) Output voltage: More than 0.1V
4) Sweep rate: At least 0.5 sec/cm

9. SSG
1) Oscillation frequency: 1.8 to 30 MHz
2) Output: 0 dB/μV ~ 120 dB/μV

NOTE:
Select an equipment that the oscillation frequency is stable in non-modulation and there are small level of frequency modulation components.

10. Frequency counter
1) Minimum input voltage: 50mV
2) Measurable frequency range: More than 40 MHz

11. Noise generator
Select an equipment that generates ignition-like noise containing high harmonics up to 30 MHz or more.

12. Directional coupler

ADJUSTMENTS

PREPARATORY WORK

1. Remove the upper and lower cases according to the figure below. When making adjustment with the side face of the set up, be sure to position the final stage at the upper side. Otherwise, the ventilation effect of the final stage, cooling effect, is deteriorated and the final tube may be deteriorated.

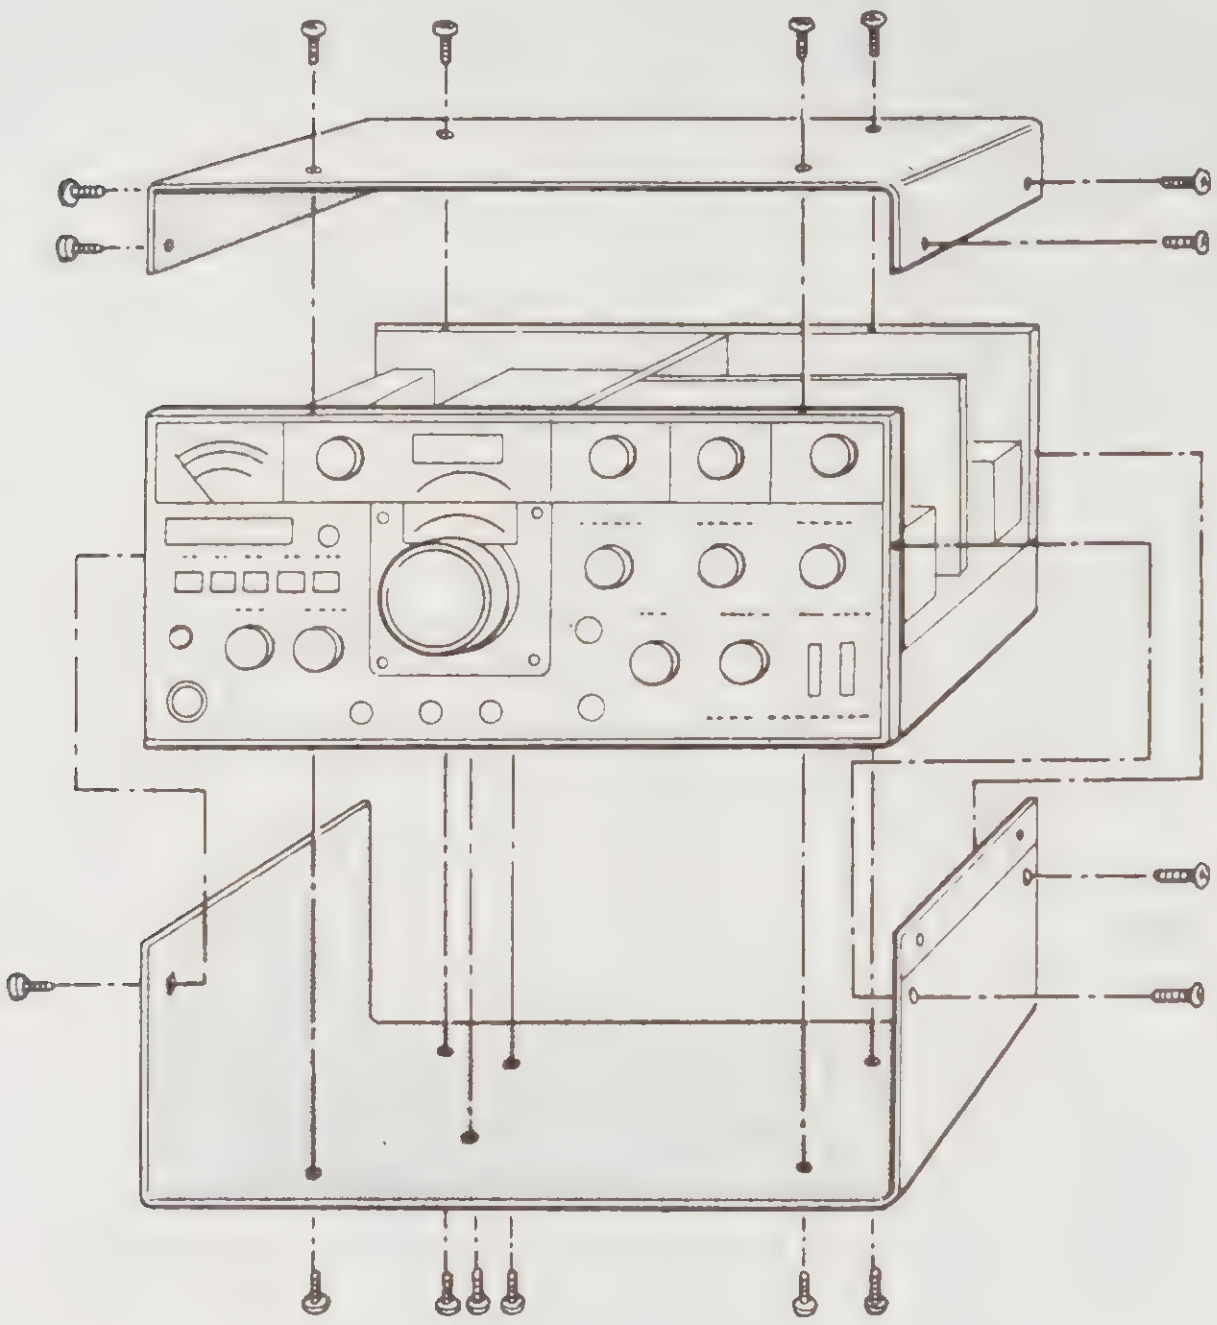

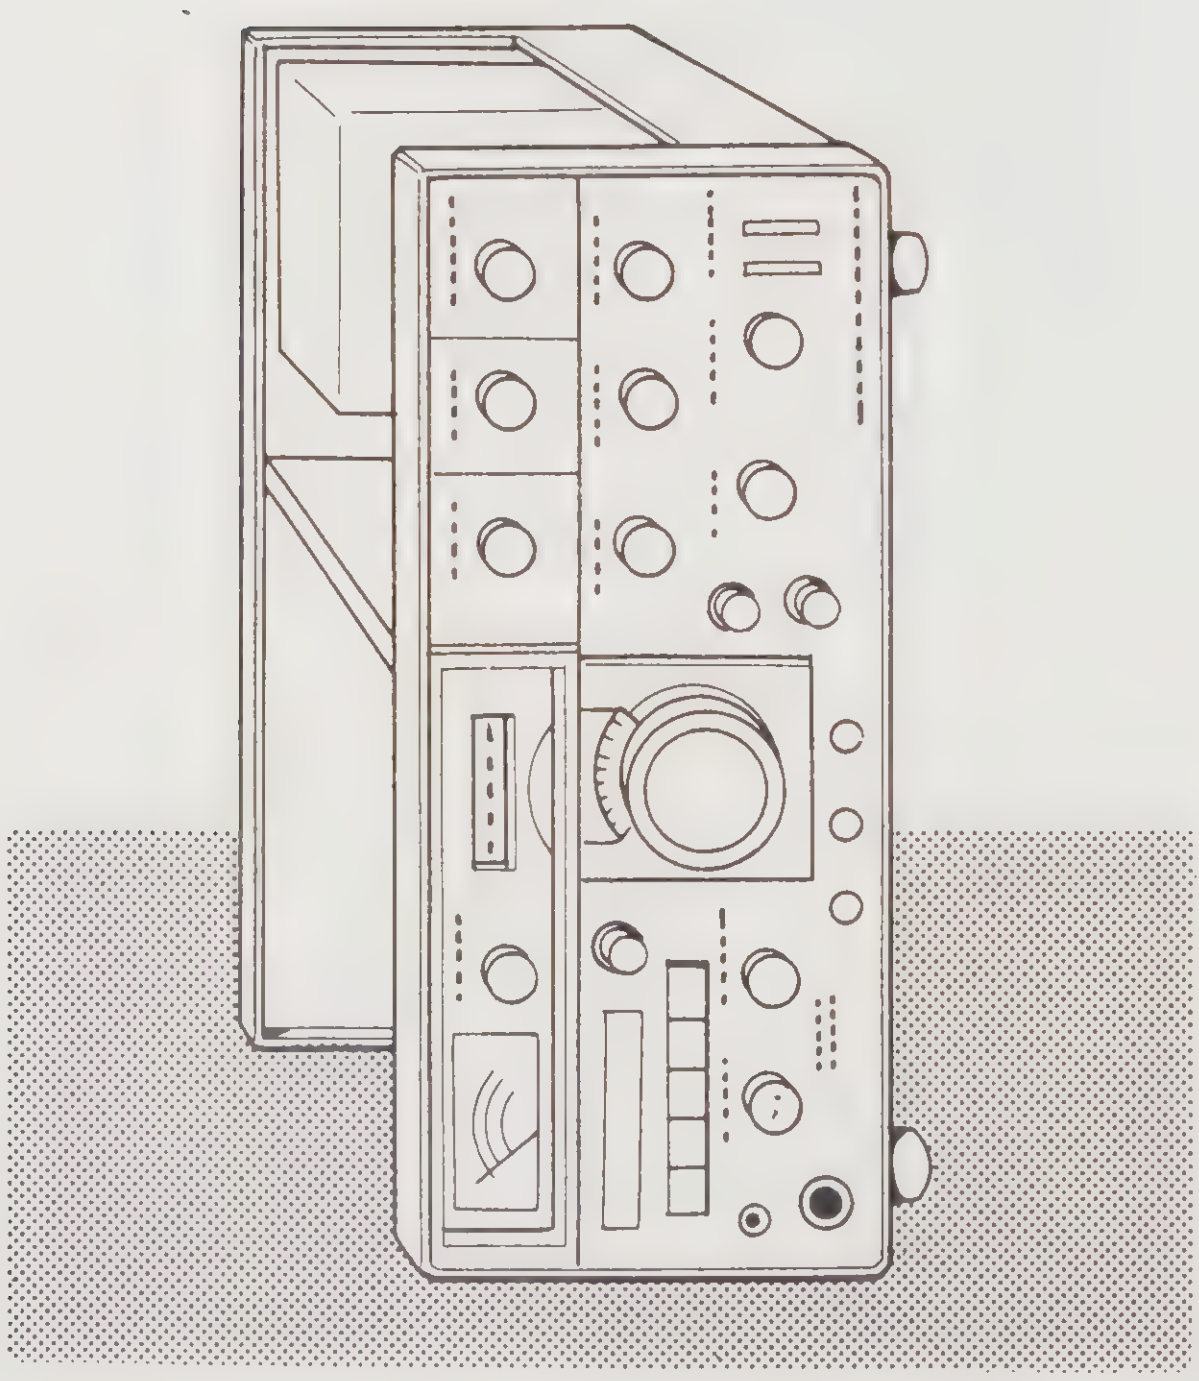

2. Unless otherwise specified, set the respective knobs to the following positions.
   1) Front panel

MODE	USB
FUNCTION	VFO
RF GAIN	MAX
HEATER	OFF
VOX	MAN
NB	OFF
MONI	OFF
AGC	FAST
PROCESSOR	OFF
RF ATT	OFF
RIT	OFF
IF SHIFT	O (Center)
DH	OFF
STBY	REC
POWER	ON

   2) Rear panel

SG SW	OFF
X VERTER SW	OFF

1. Adjustment of Power Supply

1-1. 9V adjustment

1. Measuring instrument used: Voltmeter
2. Adjusting procedure
   Connect the voltmeter between the 9V terminal and chassis on AF-AVR unit (X49-1080-00) and adjust VR4 on AF AVR unit until 9V is obtained (refer to **Fig. 20**).

AF-AVR

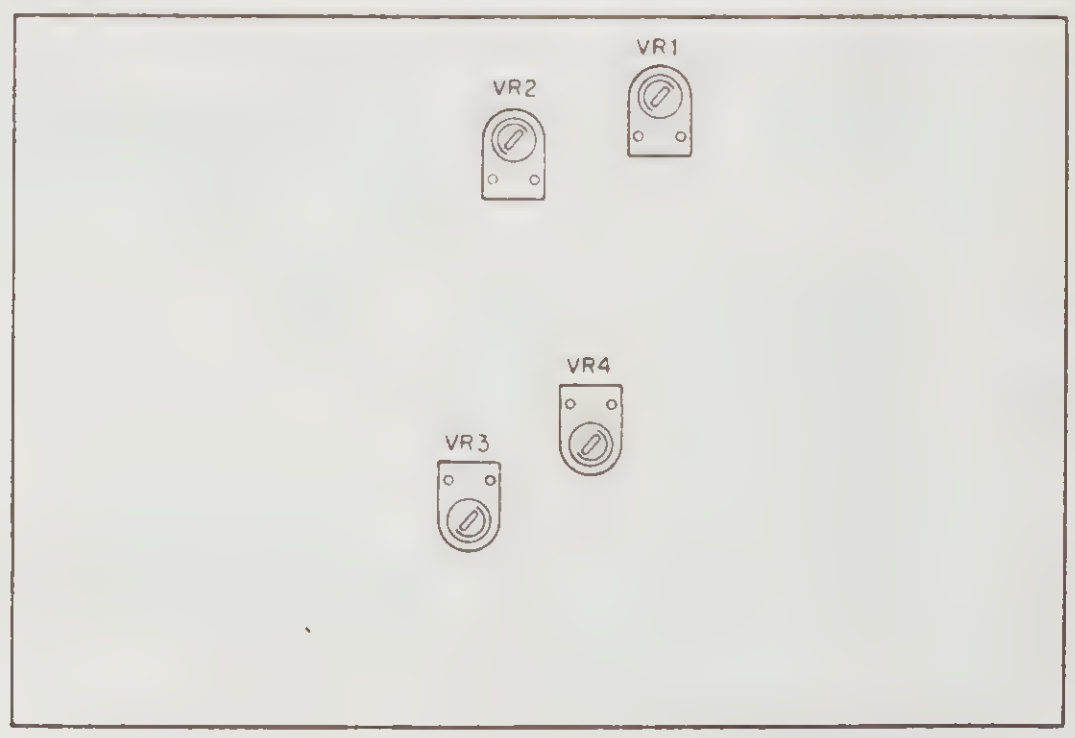

Fig. 20 AF-AVR unit

1-2. RF1 (3.3V) adjustment

1. Measuring instrument used: Voltmeter
2. Adjusting procedure
   Connect the voltmeter between RF1 terminal and chassis on AF-AVR unit (X49-1080-00) and adjust VR1 on AF-AVR unit until the meter reads 3.3V.

2. Adjustment of Receiver Section

2-1. Carrier unit adjustment

1. Measuring instruments used
   1) RF VTVM
   2) Frequency counter
2. Adjusting procedure
   DRIVE: Center (12 o'clock position)
   1) Connect RF VTVM to TP5 in IF unit (X48-1150-00) and adjust oscillation coil T1 in CAR-1 unit (X50-1310-00) until the meter reads 50mV (refer to **Fig. 21**). (refer to **Fig. 24** IF unit)

CAR-1

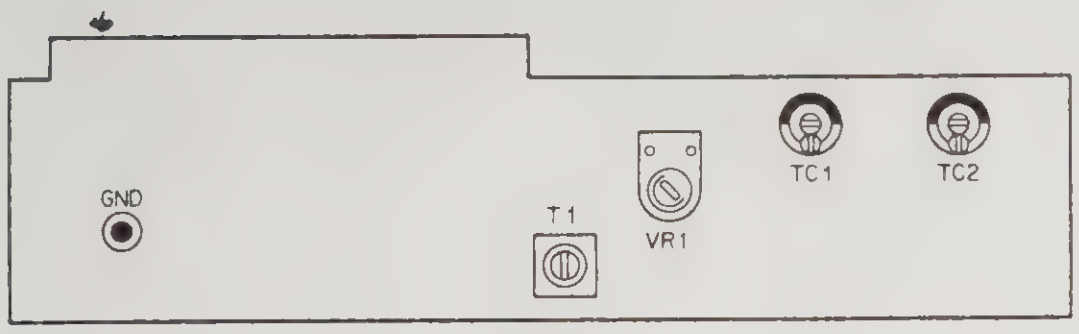

CAR-2

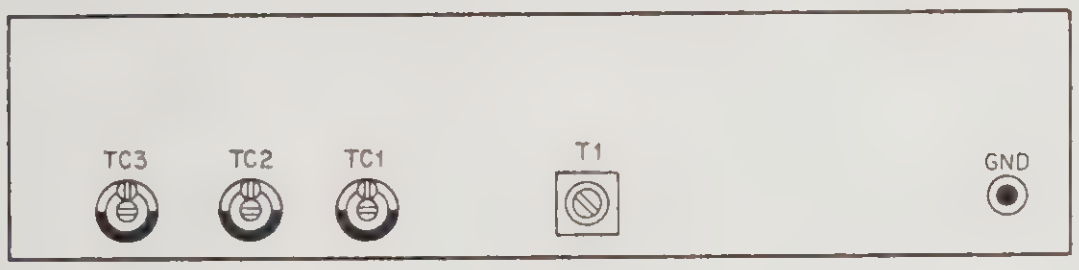

Fig. 21 CAR unit

2) Set the MODE switch to CW and the STBY switch to SEND and adjust oscillation coil T1 in CAR 1 unit (X50-1320-00) similarly.
3) Connect the frequency counter to TP5 in IF unit and make adjustment as shown below, while changing over the MODE and STBY switches.

MODE SW	STBY SW	ADJ	ADJ FREQ
USB	REC	USB(TC2)	8831.500KHz
LSB	REC	LSB(TC1)	8828.500 〃
FSK SPC	SEND	TC 1	8830.700 〃
FSK NARRW MRK	SEND	TC 2	8830.530 〃
FSK WIDE MRK	SEND	TC 3	8829.850 〃

NOTE:
When changing over from FSK SPC to FSK MRK, or vice versa, open or short the RTTY key on the rear panel. For change-over from NARROW to WIDE, or vice versa, use the switching connector (E31-0037-05) in CAR ASSY unit (X60-1000-00) and after adjustment set it to NARROW (refer to **Fig. 11**).

2-2. Voltage adjustment of VCO

1. Measuring instrument used: Voltmeter
2. Adjusting procedure
   1) Connect the voltmeter to TP4 in VCO unit (X50-1330-00) of PLL unit (X60-1010-00) (refer to **Fig. 22**).
   2) Set VFO scale to 250 and check if the voltmeter reading is within 2.9 to 3.2V, while changing over bands.

NOTE:
For the detailed adjusting procedure, refer to the adjusting method of PLL ASSY unit described later.

VCO

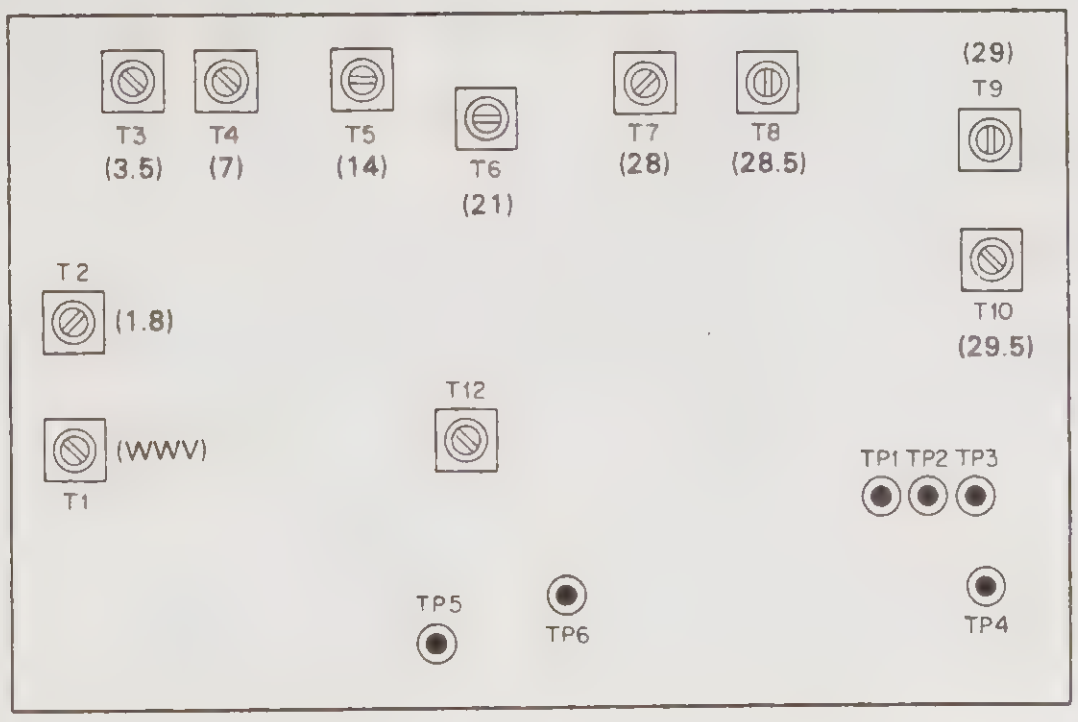

Fig. 22 VCO unit

2-3. Adjustment of antenna and MIX coil

1. Measuring instrument used
   SSG (or built-in marker)
   Since the tuned point may be deviated due to the shift of antenna impedance, be sure to terminate the antenna with 50 ohms.
2. Adjusting procedure
   DRIVE: Center (12 o'clock position)
   Apply SSG output (or marker signal) at 60 dB to the antenna terminal and adjust the coil pack unit (X44-1140-00) in the following procedure of bands for maximum AF output (S meter reading) and maximum sensitivity. Reduce the SSG output suitably as the sensitivity increases (refer to **Table 1**, **Fig. 23**).

COIL PACK

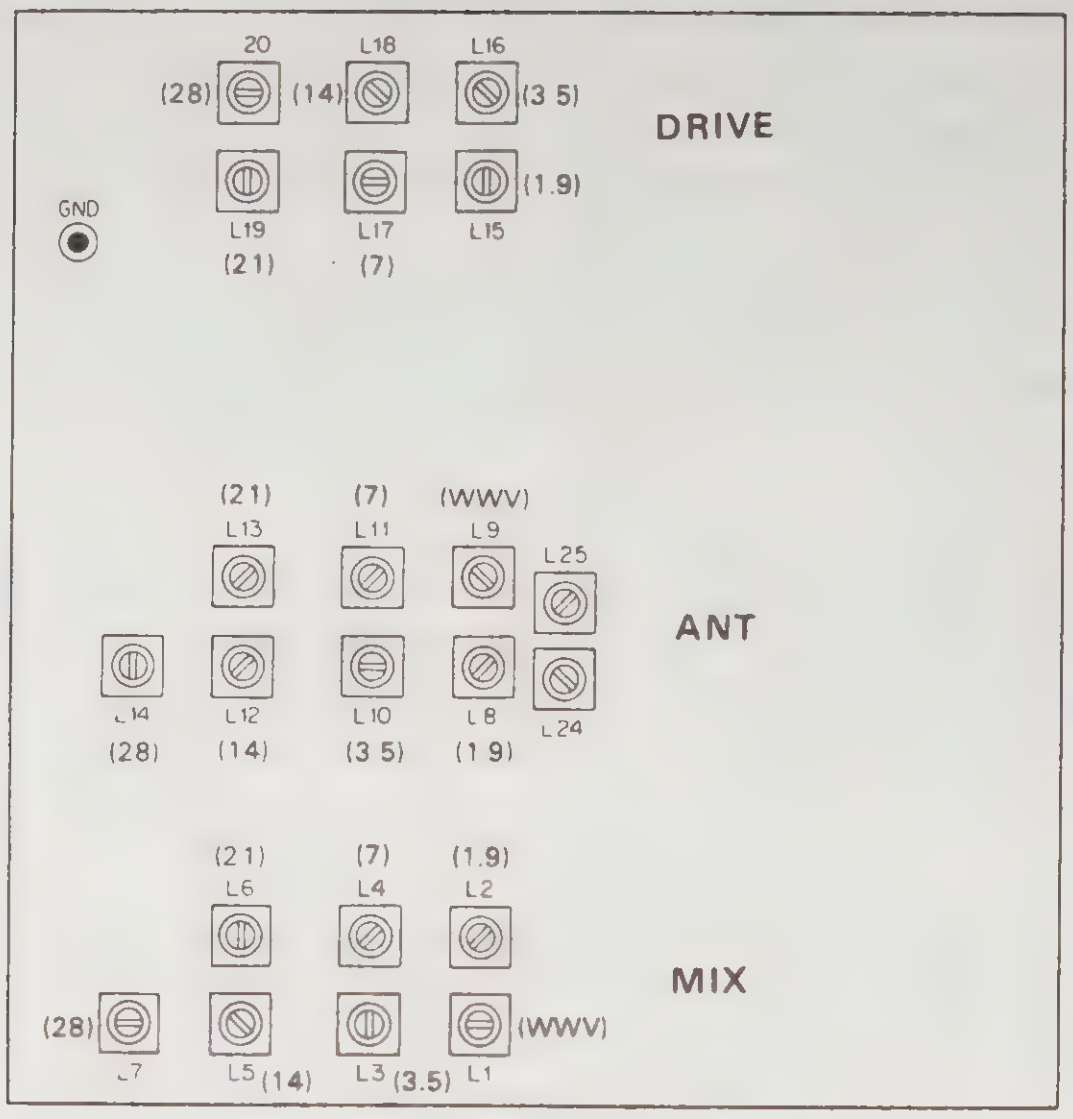

Fig. 23 Coil pack unit

Adjusting sequence	BAND	VFO scale
1	1.8	100
2	3.5	250
3	7	150
4	14	175
5	WWV	0 (15.0MHz)
6	21	225
7	28.5	500

Table 1

2-4. IFT adjustment

1. Measuring instrument used: SSG (or marker)
2. Adjusting procedure
   1) Apply a signal of 14.175 MHz at 40 dB (or marker) to the antenna terminal from SSG.
   2) Adjust T1 to T7 in IF unit (X48-1150-00) and T2 in RF unit (X44-1150-00) until S meter reads maximum value (refer to **Fig. 24** and **Fig. 25**).

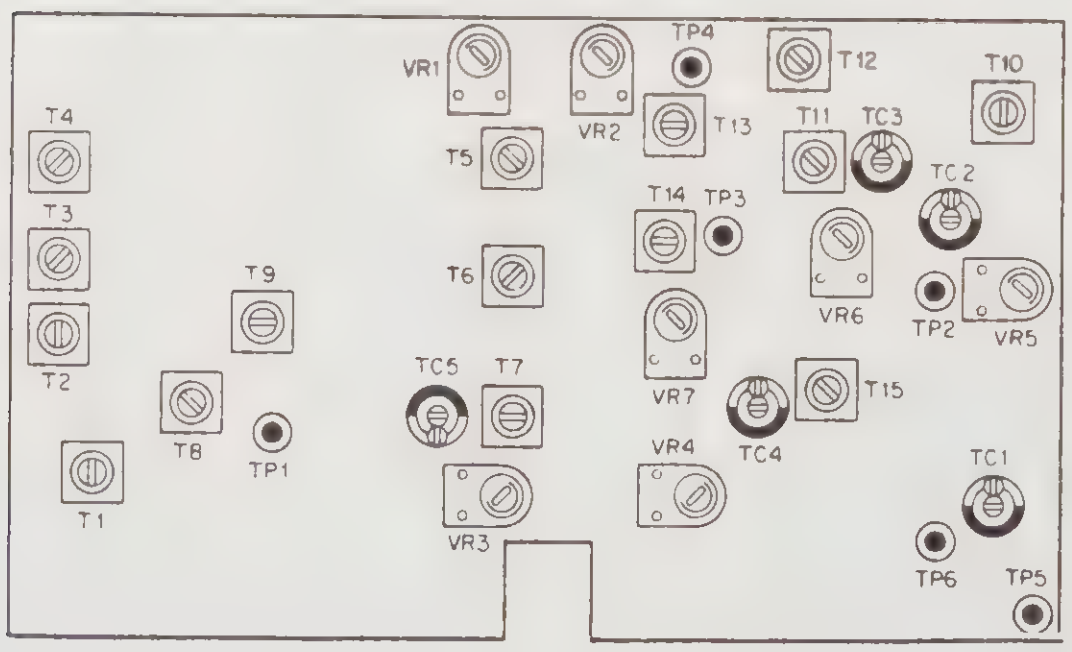

Fig. 24 IF unit

RF

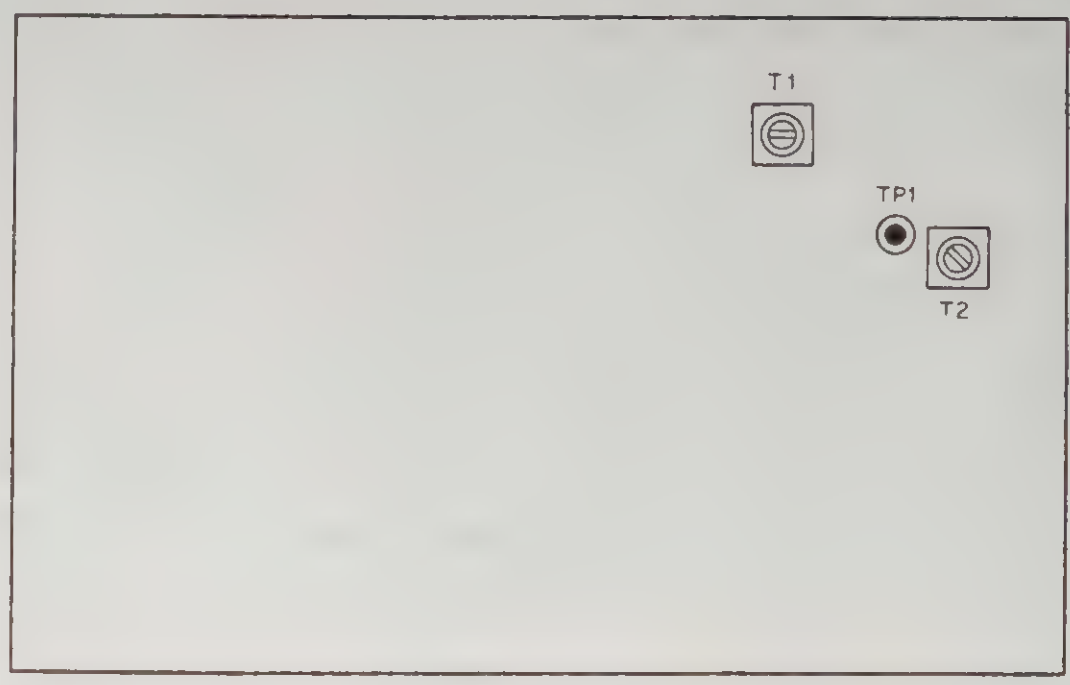

Fig. 25 RF unit

2-5. Adjustment of IF trap coil

1. Measuring instruments used
   1) SSG
   2) AF VTVM
   3) Dummy load for AF
2. Adjusting procedure
   BAND: 7 MHz
   VFO scale: 300
   1) Make connection as shown in **Fig. 26**, and adjust receiving sensitivity at maximum. Then, while applying a signal of 8830 kHz at approx. 100 dB from SSG, adjust L24 and L25 in the coil pack unit (X44-1140-00) alternately and repeat the same procedure two or three times. Until S meter reading becomes minimum. When S meter pointer does not deflect, make adjustment until AF output becomes minimum (refer to **Fig. 23** "Coil pack unit")

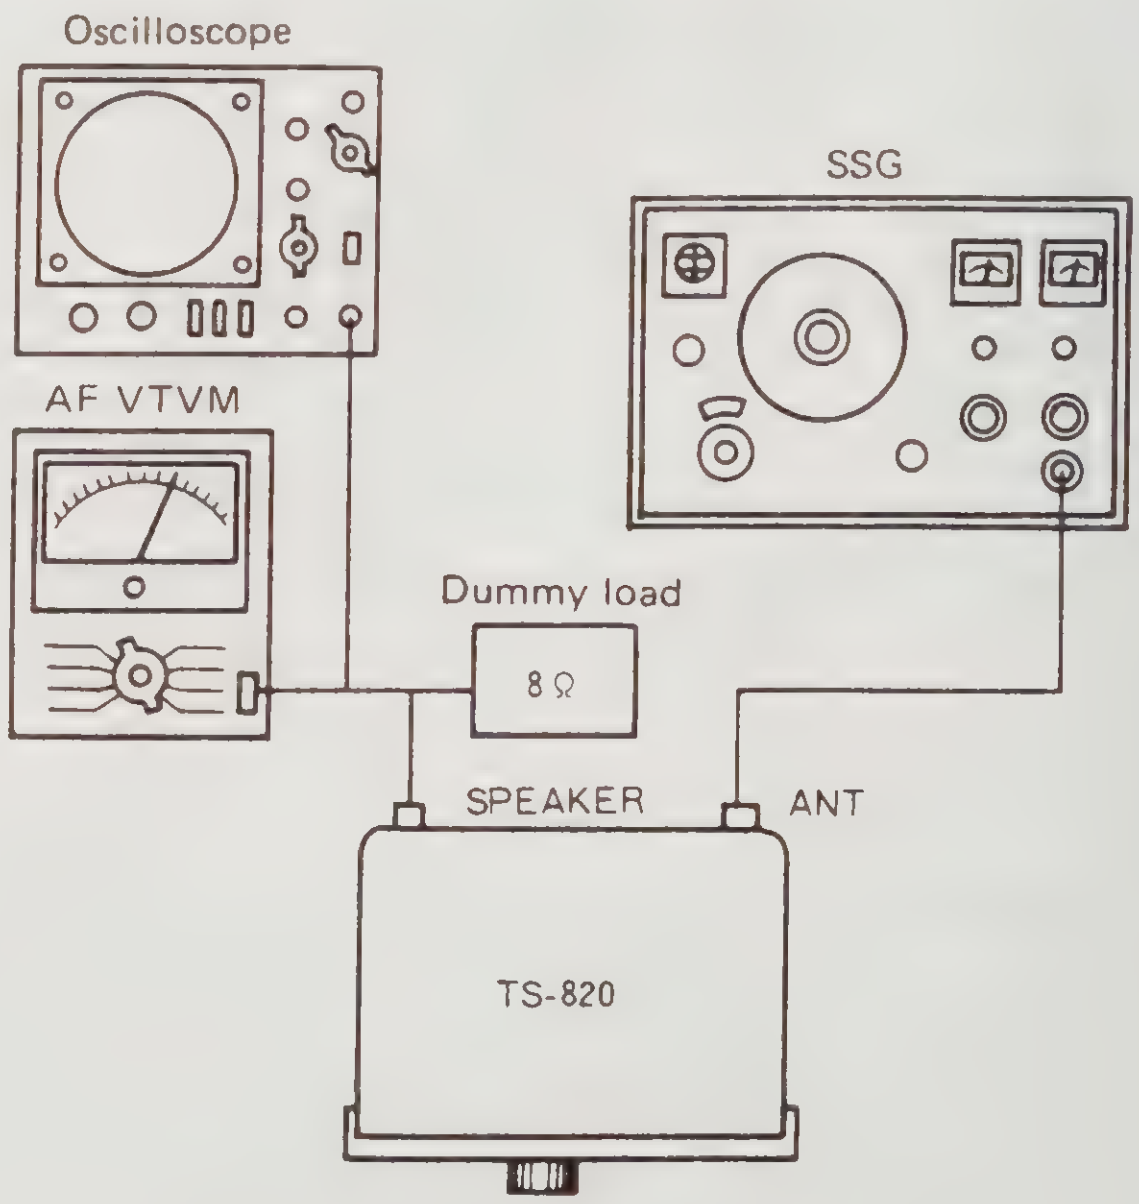

Fig. 26 Adjustment of IF trap coil

2-6. Carrier balance adjustment

1. Measuring instrument used: RF VTVM
2. Adjusting procedure
   IF SHIFT: O (center)
   1) Connect RF VTVM to IF OUT terminal on the rear panel.
   2) Turn the RF GAIN knob fully counterclockwise and adjust VR3 and TC5 in IF unit (X48-1150-00) alternately until the output becomes minimum (refer to **Fig. 24**).

2-7. Adjustment of noise blanker (NB) circuit

1. Measuring instrument used
   1) Voltmeter
   2) Noise generator
   3) Oscilloscope
2. Adjusting procedure

Simplified adjustment:

1) After receiving marker signal and turning ON NB switch, adjust T8 and T9 until the terminal voltage at TP1 on IF unit (X48-1150-00) becomes minimum (refer to **Fig. 24**).

Formal adjustment:

1) After making the simplified adjustment, connect the noise generator to the antenna and adjust drive VC until the noise output becomes maximum. In this case, set the S meter reading within S5 to S7.
2) Turn ON NB switch and connect the oscilloscope to the cathode side of D13 in IF unit. Adjust T1 in IF unit until the waveform changes from Figure A to Figure B (refer to **Fig. 27**).

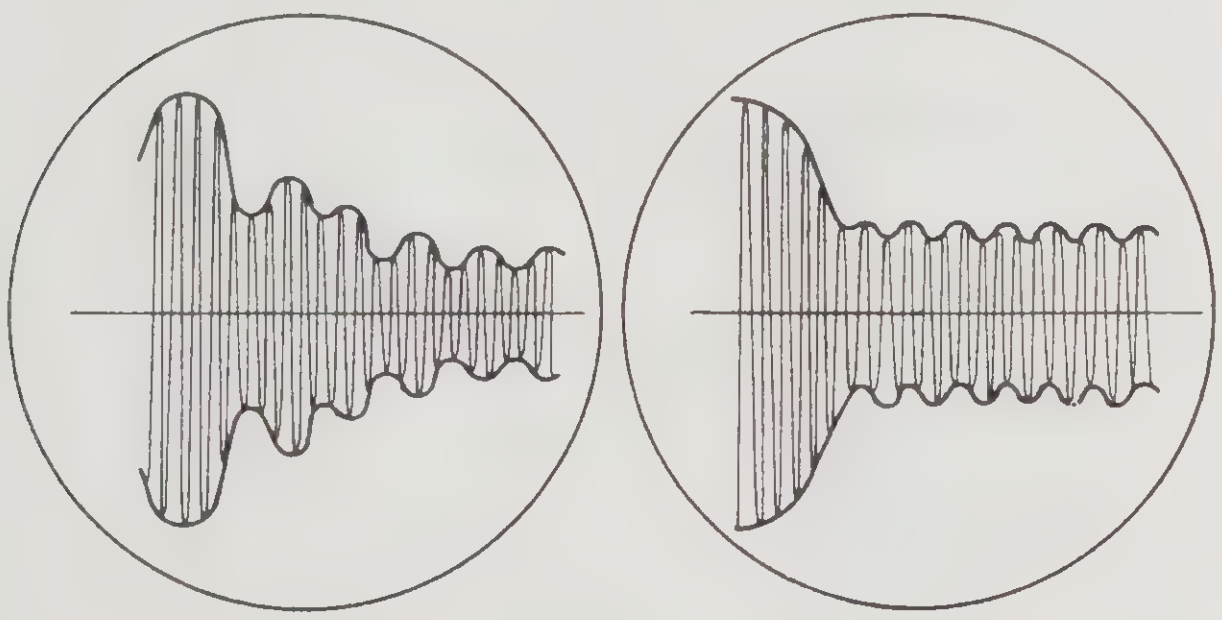

(a) Before adjustment (b) After adjustment

Fig. 27 Adjustment of noise blanker

3) Then, fine adjust T1, T3, T8 and T9 so that noise from the speaker becomes small, while taking care not to make waveform on the oscilloscope deviate from that shown in Fig. B greatly.
4) Turn ON RF switch and ATT switch and further fine readjust T1, T3, T8 and T9. Even when the RF and ATT switches are ON, the noise blanker should be effective.
5) In final stage, make sure that the receiving gain is not reduced greatly.

2-8. Adjustment of S meter

1. Measuring instrument used: SSG
2. Adjusting procedure
   1) After adjusting each section until sensitivity becomes minimum, adjust VR1 in IF unit (X48-1150-00) under no signal condition, thus making zero point adjustment of S meter (refer to **Fig. 24**).
   2) Connect SSG to the antenna terminal and apply 0 dB input. Adjust T6 in IF unit until S meter just starts deflecting at 0 dB.
   3) Set the output of SSG to 40 dB and adjust VR2 in IF unit until S meter reads S9.

2-9. RIT adjustment

1. Measuring instrument use: Unnecessary (use the built-in marker)
2. Adjusting procedure
   1) Set the RIT knob just to O (center) and turn ON RIT switch.
   2) Receive the maker signal and turn VFO until a beat of approx. 1 kHz is generated.
   3) Turn OFF RIT switch and adjust VR2 in AF AVR unit (X49-1080-00) until the beat frequency is kept unchanged when RIT switch is turned ON and OFF (refer to **Fig. 28**).

AF-AVR

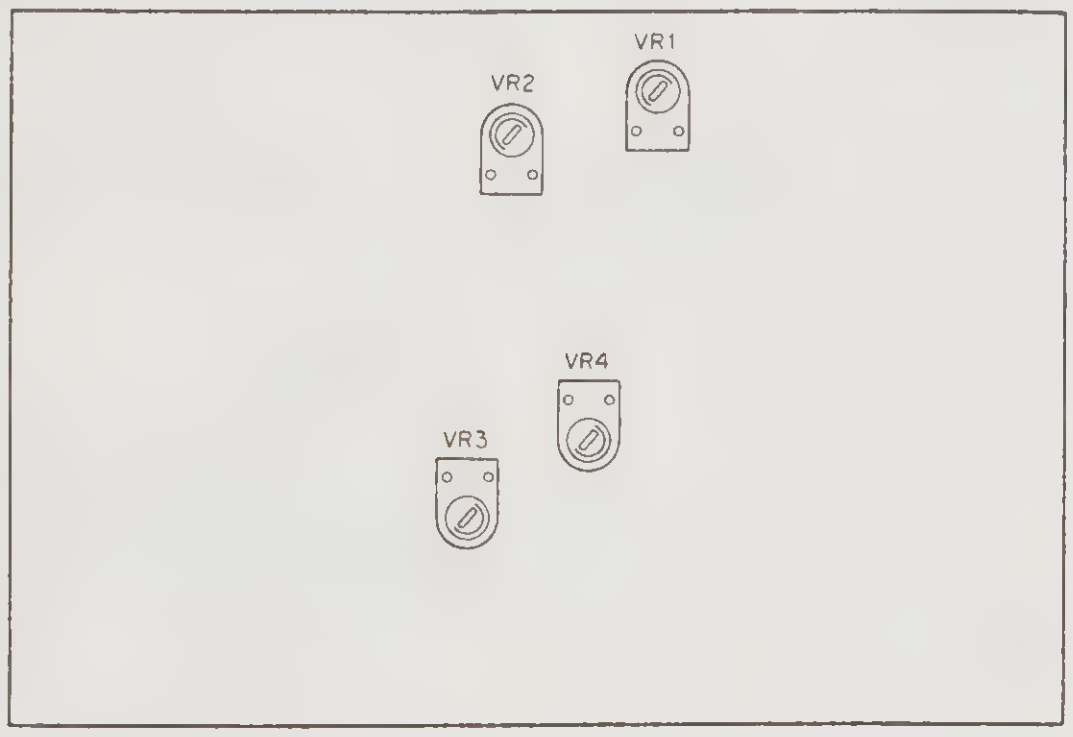

Fig. 28 AF • AVR unit

2-10. Adjustment of marker frequency

1. Measuring instrument used: Frequency counter
2. Adjusting procedure
   1) Connect the counter to the collector of Q4 in the marker unit (X52-0005-01) and open the MS terminal.
   2) Set the FUNCTION switch to CAL 25 kHz and adjust TC1 in the marker unit for 100,000 Hz ± 1 Hz (refer to **Fig. 29**).

Fig. 29 MARKER unit

2-11. VFO adjustment

1. Measuring instruments used
   1) TF VTVM
   2) Frequency counter
2. Adjusting procedure

Adjustment of oscillation frequency
Set the FUNCTION switch to VFO and connect the frequency counter to VFO terminal (No. 13) on FIX VOX unit (X50-1350-00). Set VFO to 0 division and check if the oscillation frequency is 5.50 MHz. Then, set VFO to 500 division and check if the oscillation frequency is 5.00 MHz. If the frequency deviates from 5.50 MHz, correct it with TC1 in VFO unit; if the frequency deviates from 5.00 MHz correct it with L1 in VFO unit. Since TC1 and L1 affect mutual oscillation frequencies, repeat the above-mentioned adjustment three or four times (refer to **Fig. 30** and **31**).

Adjustment of output voltage
Set the VFO to the 250 division. Then, connect RF VTVM to VFO (No. 13) terminal in FIX-VOX unit and adjust trimmer TC2 in VFO unit until the output voltage becomes 0.6V

FIX • VOX

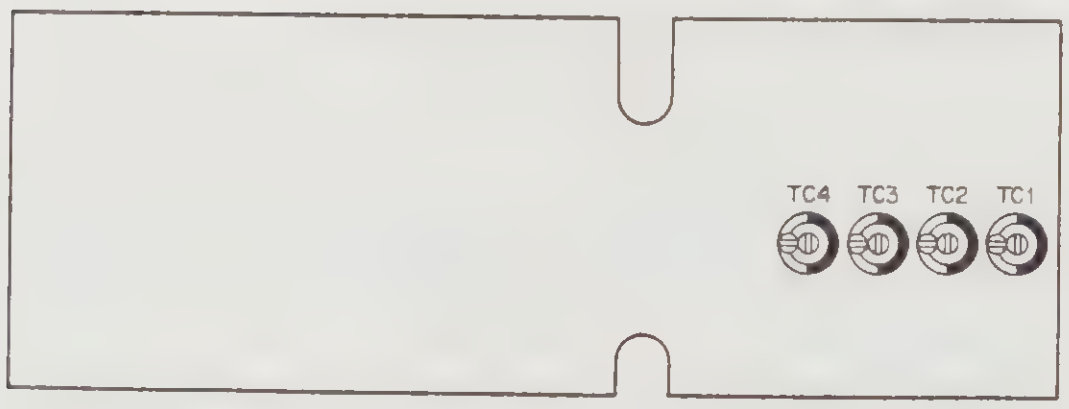

Fig. 30 FIX • VOX unit

VFO

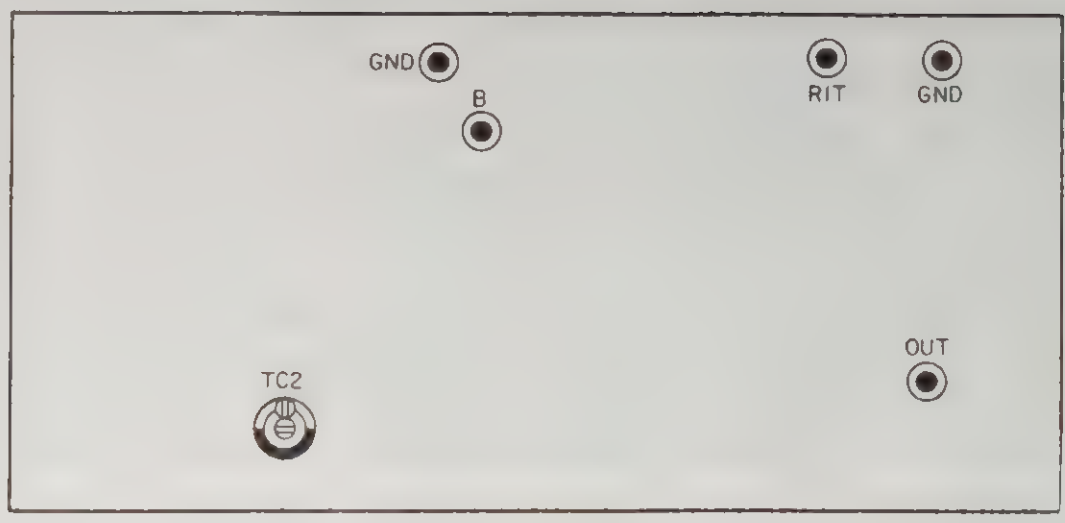

Fig. 31 VFO unit

3. Adjustment of Counter (DG-1: Optional)

3-1. Frequency adjustment of counter standard oscillator

Simplified adjustment:

1 Measuring instrument used: Counter and calibration cable
2. Adjusting procedure
   1) Insert the 1 pin plug side of the accessory counter calibration cable into X-VERTER IN terminal on the body rear panel and its 3-pin terminal side into the 3-pin terminal at the top of counter.

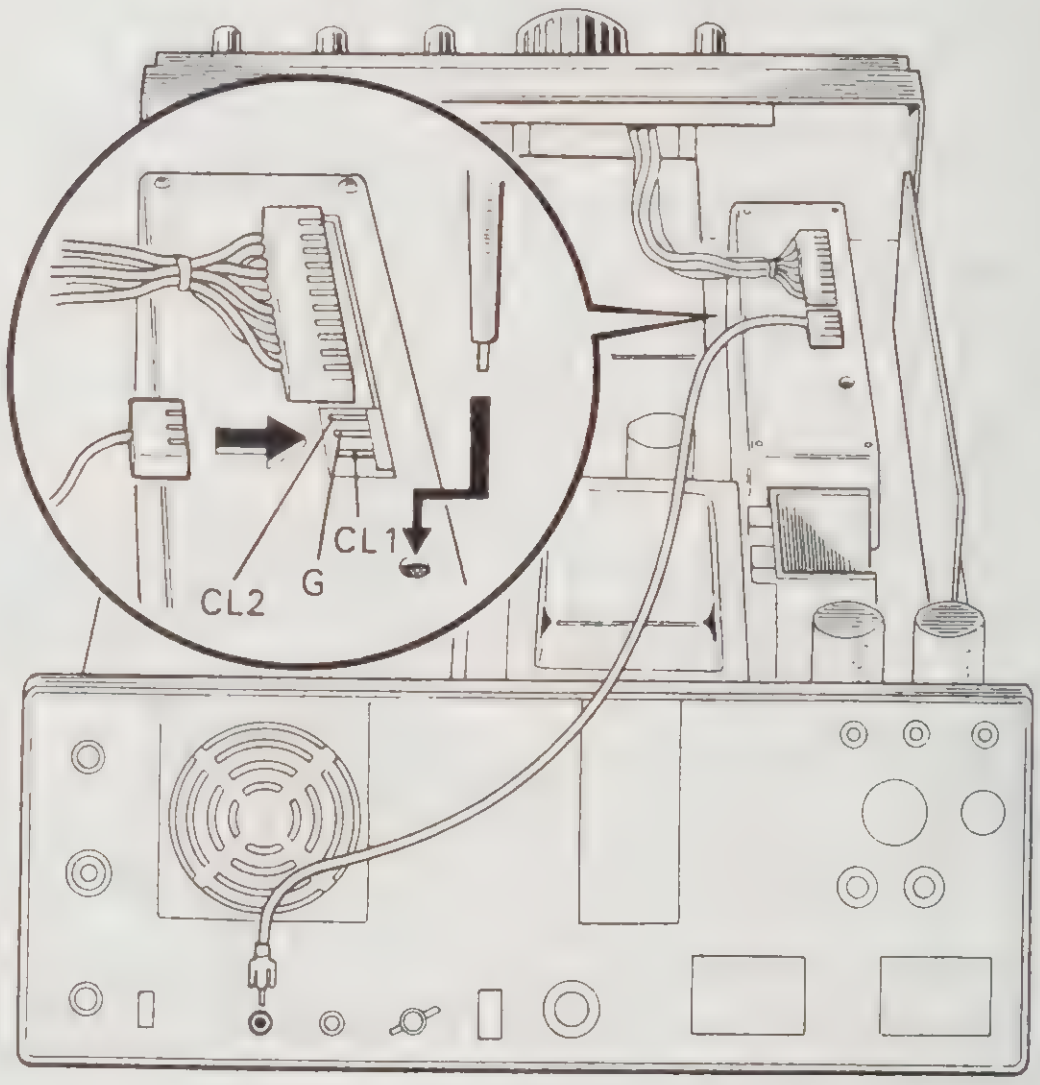

Fig. 32 Adjustment of counter standard oscillator frequency

   2) Set the BAND switch to WWV and connect the antenna to the set. While receiving a WWV signal of 15 MHz adjust trimmer TC1 at the top of the counter unit so that zero beat is obtained between this signal and 1 MHz signal connected in Item 1).

NOTE:

(1) Although zero beat can be checked through the speaker, adjustment by watching S meter reading is more accurate. S meter pointer vibrates on both near sides of the actual zero beat point. This corresponds to approx. 1 to 3 Hz. At the zero beat point, the pointer vibration becomes slowest.

(2) The adjustable range by TC1 is 1 MHz ± 20 Hz. In rough adjustment, receive a WWV signal of 15 MHz and set the counter reading within 15.000.0 and 14.999.9.

Formal adjustment:
1. Measuring instrument used: Frequency counter
2. Adjusting prrocedure
   1) Short circuit between CL2 and G in counter unit (X60-1020-00) and connect the output between G and CL1 to the frequency counter.
   2) Adjust the trimmer TC1 in the counter mix unit for 1 MHz ± 5 Hz (refer to **Fig. 33**).

COUNTER MIXER

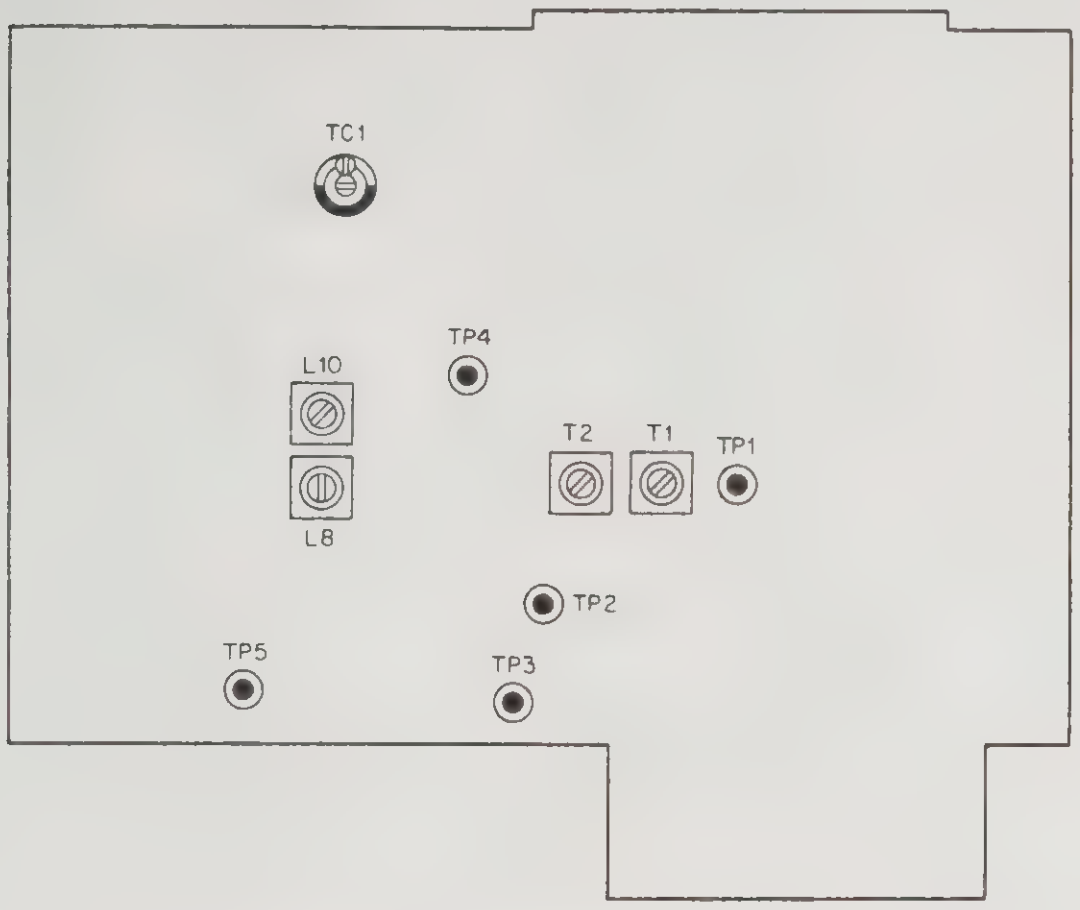

Fig. 33 Counter mixer unit (DG-1: Option)

3-2. Adjustment of counter input level
1. Measuring instrument used: RF VTVM
2. Adjusting procedure
   1) Connect RF VTVM to TP6 in IF unit (X48-1150-00) and adjust TC1 in IF unit for 0.1V (refer to **Fig. 24**).
   2) Connect RF VTVM to TP2 in the counter mixer unit (X48-1150-00) and adjust T1 and T2 in the same unit until the peak value is obtained (output is approx. 0.12 to 0.2V) (refer to **Fig. 33**).

NOTE:
In this case, apply a carrier voltage of 0.1V to the CCR terminal of the counter unit (by adjusting TC1 in IF unit).

4. Adjustment of Transmitter Section

4-1. Adjustment of drive coil
1. Measuring instrument used
   RF dummy load (50Ω)
   Since the tuned point deviates due to shift of the antenna impedance, be sure to connect this unit.
2. Adjusting procedure
   MODE: CW
   DRIVE: Center (12 o'clock position)
   METER: ALC
   1) Set BAND switch to 1.8 MHz and set STBY switch to SEND. Adjust T10 in IF unit (X48-1150-00), T1 in RF unit (X44-1150-00) and 1.8 MHz band drive coil in the coil pack unit (X44-1140-00) until ALC meter reads maximum (refer to **Fig. 23, 24, 25**).
   2) Adjust the drive coil of each band until ALC meter reads maximum. The adjusting sequence and adjustment frequency are the same as in Item 2-3 "Adjustment of Antenna MIX coil".

NOTE:
Make this adjustment at the same time as the adjustment of the receiving coil pack until the peak values of transmitting and receiving signals do not deviate from each other.

4-2. BIAS adjustment
1. Measuring instrument used: Unnecessary
2. Adjusting procedure
   Set the meter switch to IP and adjust the BIAS VR on the rear panel to 60mA.

4-3. Adjustment of carrier suppression
1. Measuring instrument used
   1) RF VTVM
   2) RF dummy load
   3) Directional coupler
2. Adjusting procedure
   1) Make connection as shown in **Fig. 34** and adjust 14.175 MHz EW until full power is obtained.

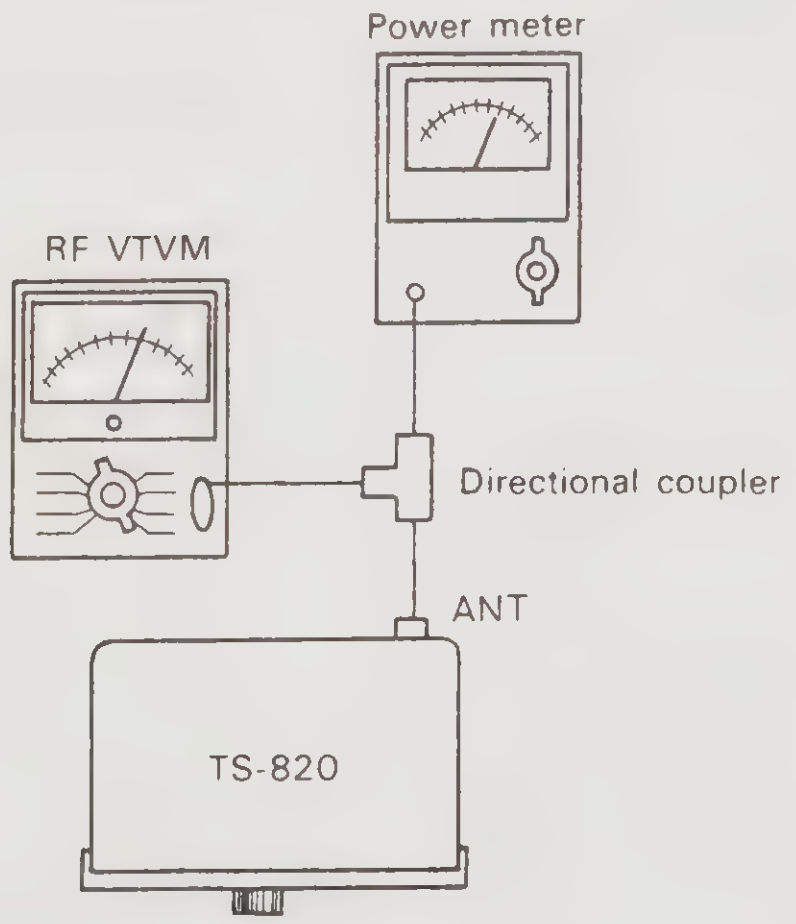

Fig. 34 Adjustment of carrier suppression

   2) Switch over MODE switch to USB and adjust VR5 and TC2 in IF unit (X48-1150-00) alternately until RF VTVM reads minimum. Also, make adjustment until the USB and LSB levels become the same (refer to **Fig. 24**).

4-4. Neutralization adjustment
1. Measuring instruments used
   1) RF VTVM
   2) RF dummy load

2. Adjusting procedure
   MODE: CW
   SG SW: ON
   Neutralizing variable capacitor: Half-inserted position
   1) In **Fig. 34**, make adjustment until maximum output is obtained at 21.225 MHz.
   2) Turn OFF the SG switch and adjust the neutralizing capacitor until RF VTVM reads minimum.

4-5. Adjustment of carrier point

1. Measuring instruments used
   1) AG
   2) RF VTVM
   3) RF dummy load
   4) Directional coupler
2. Adjusting procedure
   1) In **Fig. 35**, connect AG to MIC terminal and apply an input of 1500 Hz at 5 mV.

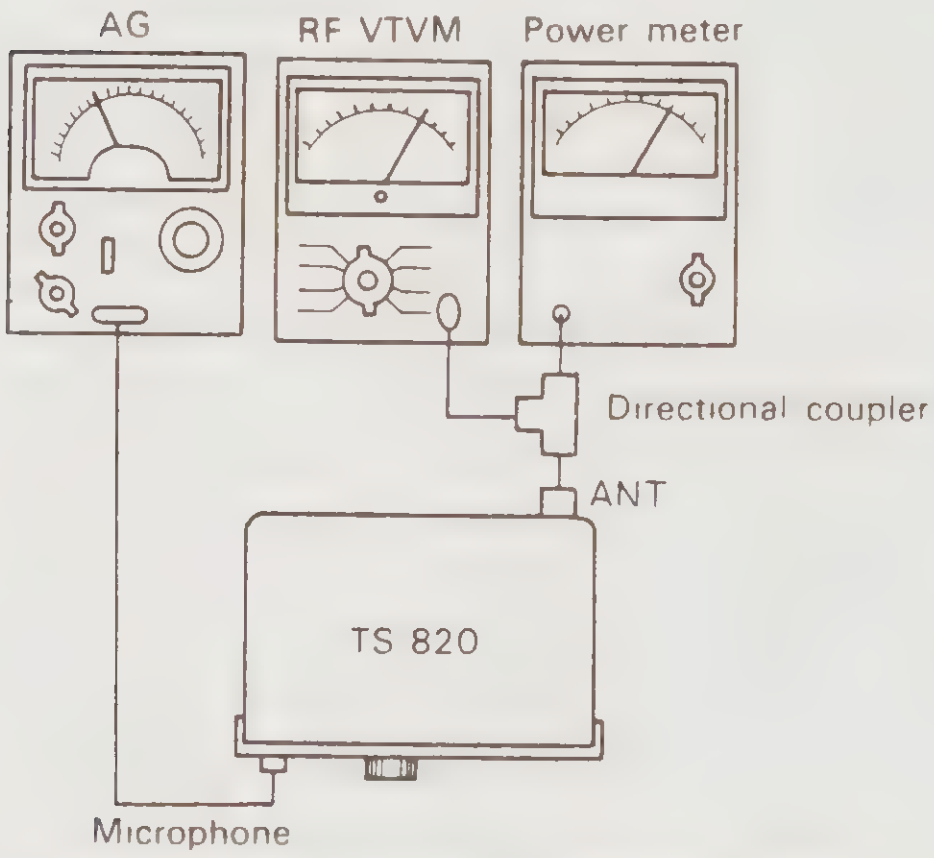

Fig. 35 Adjustment of carrier point

   2) Adjust DRIVE, PLATE and LOAD until maximum output is obtained.
   3) Adjust MIN GAIN until output becomes 50W and set the AG frequency to 250 Hz. Adjust VR1 in CAR1 unit (X50-1310-00) until RF VTVM reading is kept unchanged even when the MODE switch is changed over from USB to LSB and vice versa (refer to **Fig. 36**).
   4) Apply 5mV (at 1.5 kHz) signal to the microphone terminal and adjust MIC GAIN VR to obtain 50 Watts output. Then, shifting the signal frequency to 300 Hz or 2800 Hz and adjust TC1 (in LSB) and TC2 (in USB) so that RF VTVM reading is the same level.

CAR-1

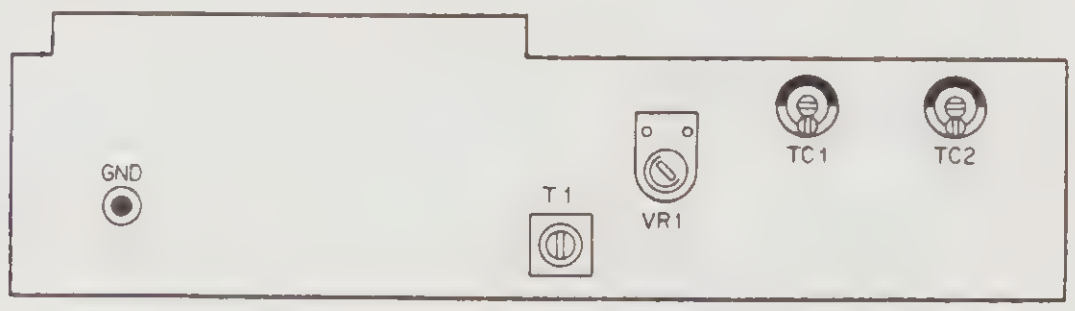

Fig. 36 CAR 1 unit

4-6. Adjustment of speech processor

1. Measuring instruments used
   1) AG
   2) AF VTVM
   3) Oscilloscope
   4) RF VTVM
   5) Frequency counter
2. Adjusting procedure
   1) MODE .... USB
      COMP LEVEL .. Full clockwise
      PROCESSOR ... PULL
      METER .... COMP
      MIC GAIN .. Center
      SG SW....... OFF
      ST BY .... SEND
   2) Connect a frequency counter to TP3. Adjust TC-4 to obtain the oscillation frequency of 451.4 kHz watching the counter readout.
   3) Apply a signal with the frequency of 1 kHz and the output of 0.3 mV into MIC JACK using an audio signal generator. Adjust T11, T12, T13, and T14 to obtain maximum level at TP-2.
   4) Set the audio signal generator to 1 mV, and adjust TC-3 and VR-6 to obtain maximum level at TP-2.

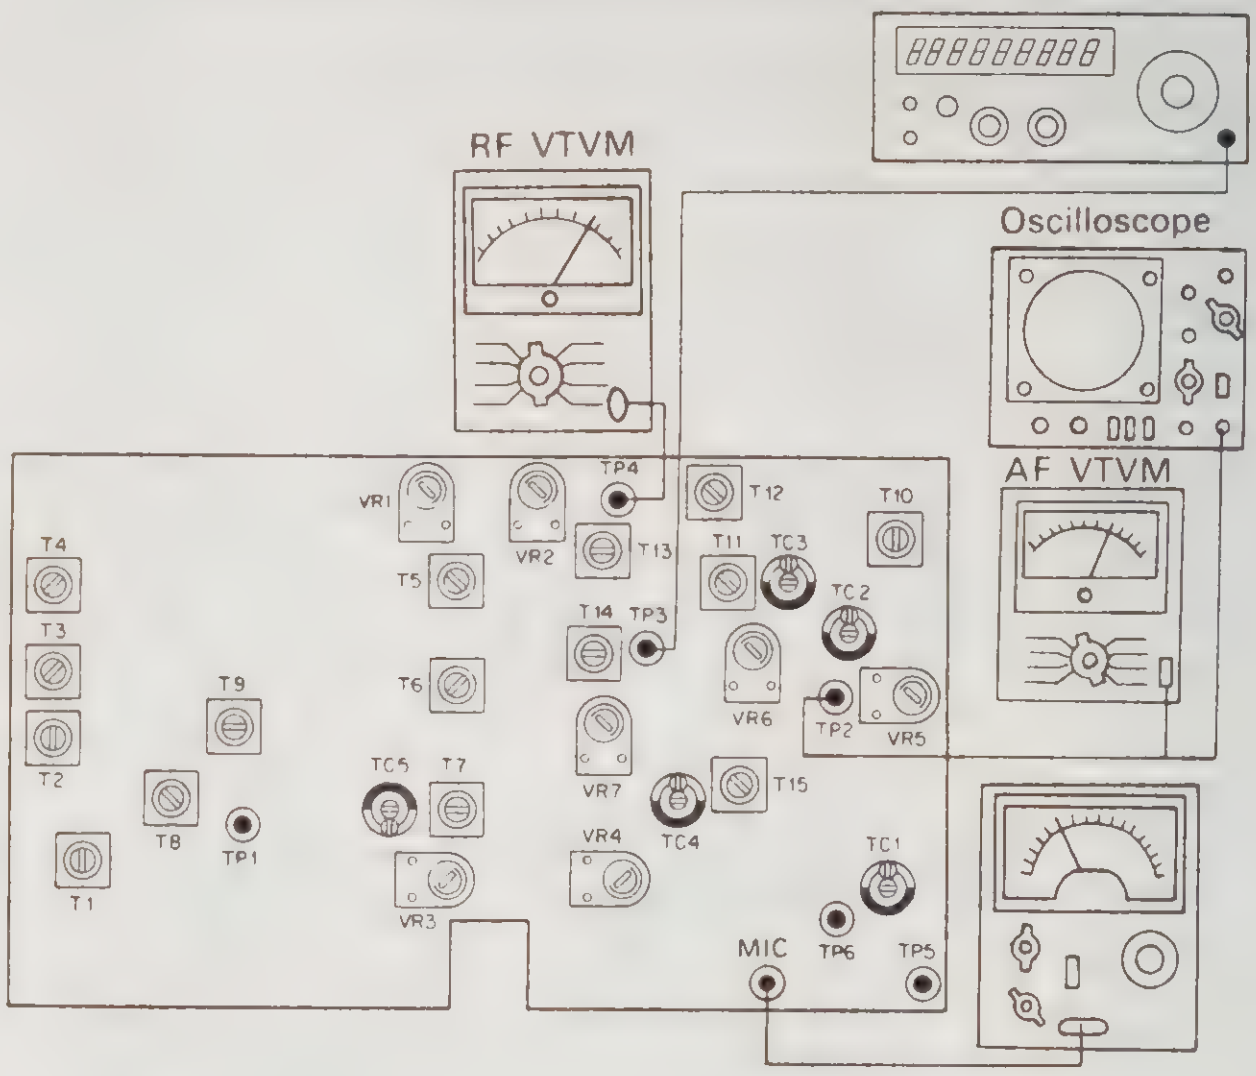

Fig. 37 Adjustment of speech processor

   5) Set the output of the audio signal generator to 0.3 mV at 1 kHz and make a note of the level at TP-2. Adjust finely TC-4 so that the level at TP-2 goes down to −6dB when the generator is set to 300 Hz. Adjust the oscillation frequency to below 451.5 kHz, and the level at TP-2 to become −6dB for the first time when the oscillation frequency is gradually increased from around 450 kHz.
   6) Give the MIC jack a signal with 10 mV at 1 kHz. Adjust VR-7 to obtain the same level at TP-2 regardless of whether the PROCESSOR switch is turned to NORMAL or PROCESSOR position.
   7) After completing these adjustments, set the generator output to 0.3 mV. When the generator frequency is swept from 400 Hz to 2 kHz, the TP2 level deflection from the level at 1 kHz should be within +1 dB ~ −5 dB. The noise level measured at TP2 should be 10 mV or less with the MIC input shorted-circuited by 47 kΩ.
   8) Confirm that the COMP LEVEL METER pointer indicates the range within 20 ~ 40 dB when giving MIC input a 10 mV – signal at 1 kHz.

4-7. Adjustment of monitoring level

1. Measuring instruments used
   1) RF dummy load
   2) AG
   3) AF VTVM
   4) AF dummy load
2. Adjusting procedure

Simplified adjustment:

1) Set the FUNCTION switch to CAL 25 kHz and take a beat of approx. 1000 Hz. Set AF variable resistor to a desired volume.
2) Apply a voice signal to the MIC terminal, turn ON the MON switch, and set STBY switch to SEND. Adjust VR4 in IF unit (X48-1150-00) until the monitor output level becomes nearly the same as the maximum output during calibration (refer to **Fig. 24**).

Formal adjustment:

1) If **Fig. 38**, make adjustment until full power is obtained at 14.175 MHz, CW, and set the MODE switch to SSBè (or LSB).

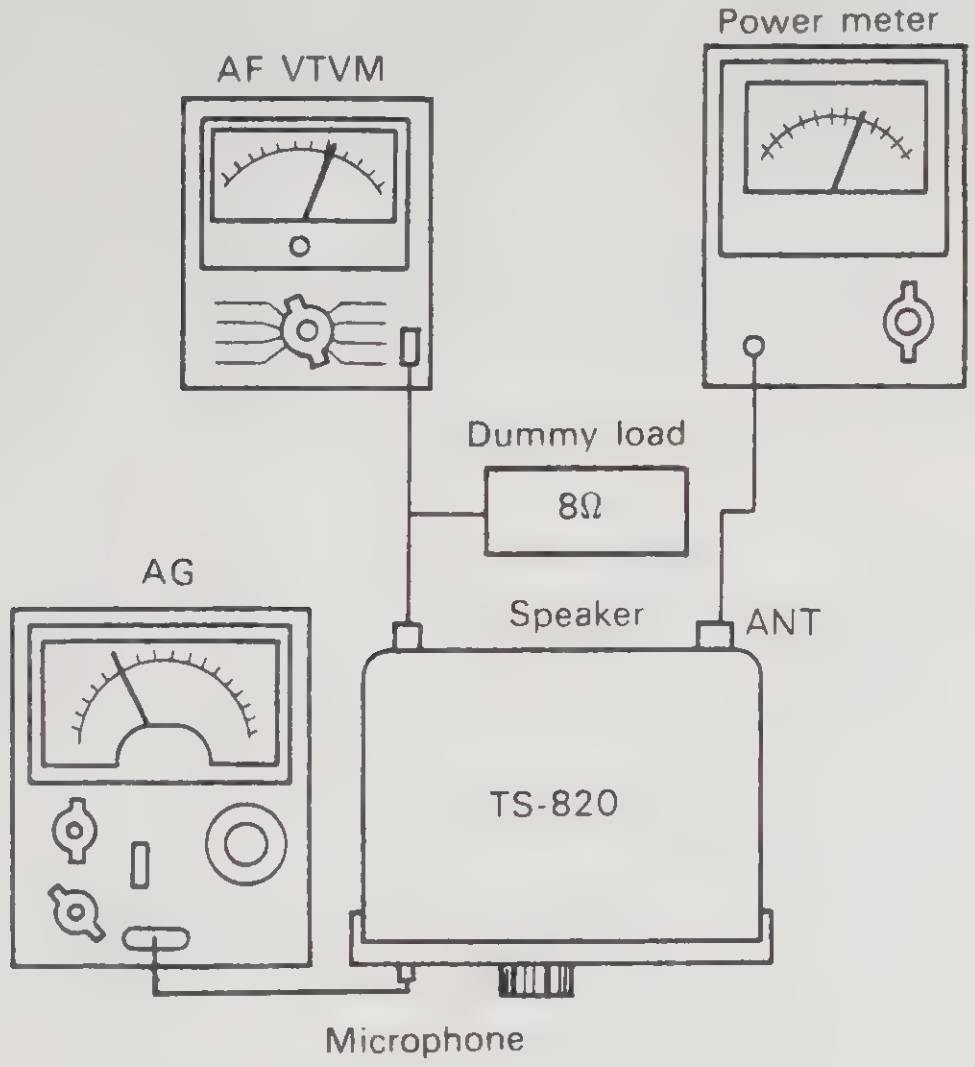

Fig. 38 Adjustment of monitor level

2) Apply a signal of 1000 Hz at 5 mV from AG to the MIC terminal and set the FUNCTION switch to CAL 25 kHz. Adjust AF GAIN until the AF output level becomes 0.63V when AGC is turned ON in receiving condition.
3) Then, turn ON the MON switch and set the STBY switch to SEND. Adjust VR4 in IF unit (X48-1150-00) until the monitor output level becomes 0.63V.

4-8. Adjustment of VOX operation

1. Measuring instruments used
   1) AG
   2) Microphone
   3) RF dummy load
2. Adjusting procedure
   SG SW: OFF
   VOX: ON
   MODE: SSB
   1) Connect AG to the MIC terminal and apply a signal of 1500 Hz at 5 mV. Adjust VOX GAIN VR until the relay is operated.
   2) Adjust VOX DELAY VR, and make sure that the time constant changes in VOX. Then, adjust the time constant for approx. 1 sec.
   3) Connect the microphone to the MIC terminal and keep the microphone approx. 10 cm or less away from the speaker. Set the FUNCTION switch to CAL 25 kHz and receive a signal. Turn ANTI VOX VR until VOX fluctuation is stopped.

4-9. Adjustment of side tone

1. Measuring instruments used
   1) AF VTVM
   2) Oscilloscope
   3) AF dummy load (8Ω)
   4) Key (shorting lead also usable)
2. Adjusting procedure
   SG SW: OFF
   MODE: CW
   AF VR: 12 o'clock position
   STBY: SEND
   1) In **Fig. 39**, adjust VR3 in AF • AVR unit (X49-1080-00) until AF output becomes 50 mW (0.63 V/8Ω) with the key down (refer to **Fig. 28**).

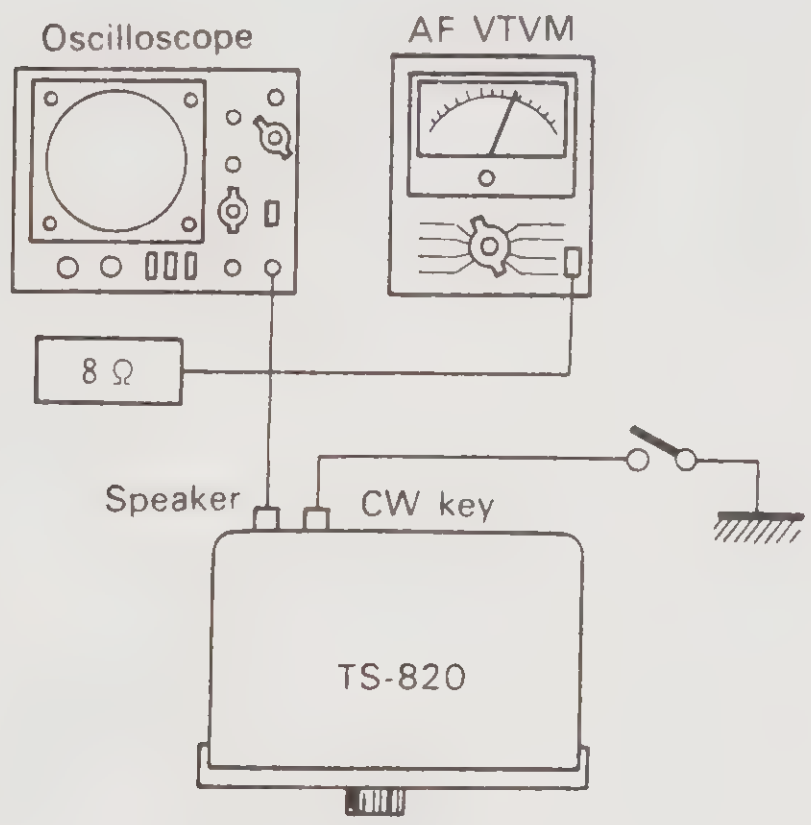

Fig. 39 Adjustment of side tone

4-10. Adjustment of RF meter

1. Measuring instrument used: RF dummy load
2. Adjusting procedure
   SG SW: ON
   MODE: CW
   BAND: 14
   1) Connect the RF dummy load to the antenna and make adjustment until the transmitting output becomes maximum at 14.175 MHz.
   2) Set the meter switch to RF and adjust RF VR on the rear panel until the RF meter reads 250 mA on the IP scale.

5. PLL Adjustment

5-1. Adjustment of PD unit

5-1-1. BPF adjustment

1. Measuring instruments used
   1) Oscilloscope
   2) Sweep generator
   3) Detector (refer to **Fig. 40**)

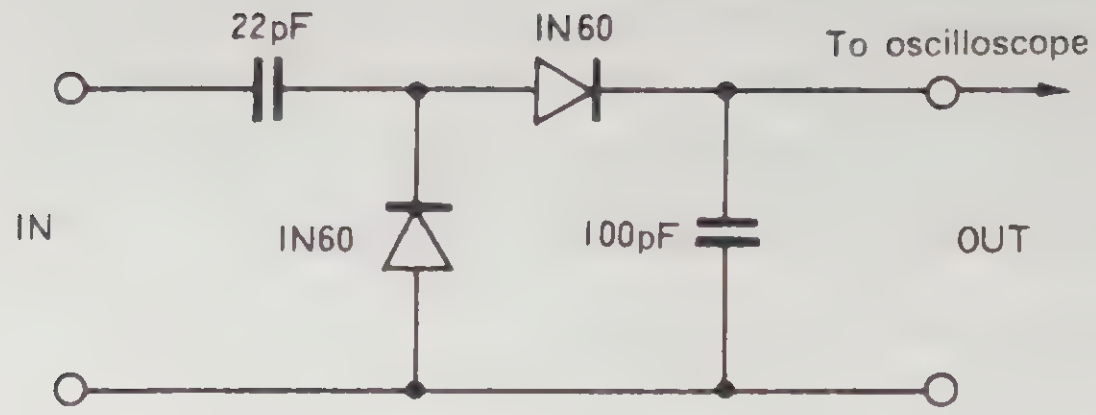

Fig. 40 Detector

2. Preparatory work
Extract PLL unit from the body, remove the shield cover and disconnect connector PLL-1. When this connector is disconnected, the ground of the unit is floated partially. Thus, connect the shielding case in PD unit to the body (TS-820) with a suitable clip wire. Set the band to the desired position.
3. Adjusting procedure
   1) Connect the detector to TP1 (or TP2) in PD unit (X50-1340-00) and connect its output to the oscilloscope (refer to **Fig. 41**).
   2) Ground TP3 in PD unit and connect the sweep generator output to CIB-BND connector terminals
   3) Adjust T1 (red), T2 (yellow) and T3 (red) in PD unit until the output waveform becomes as shown in **Fig. 42**.

PD

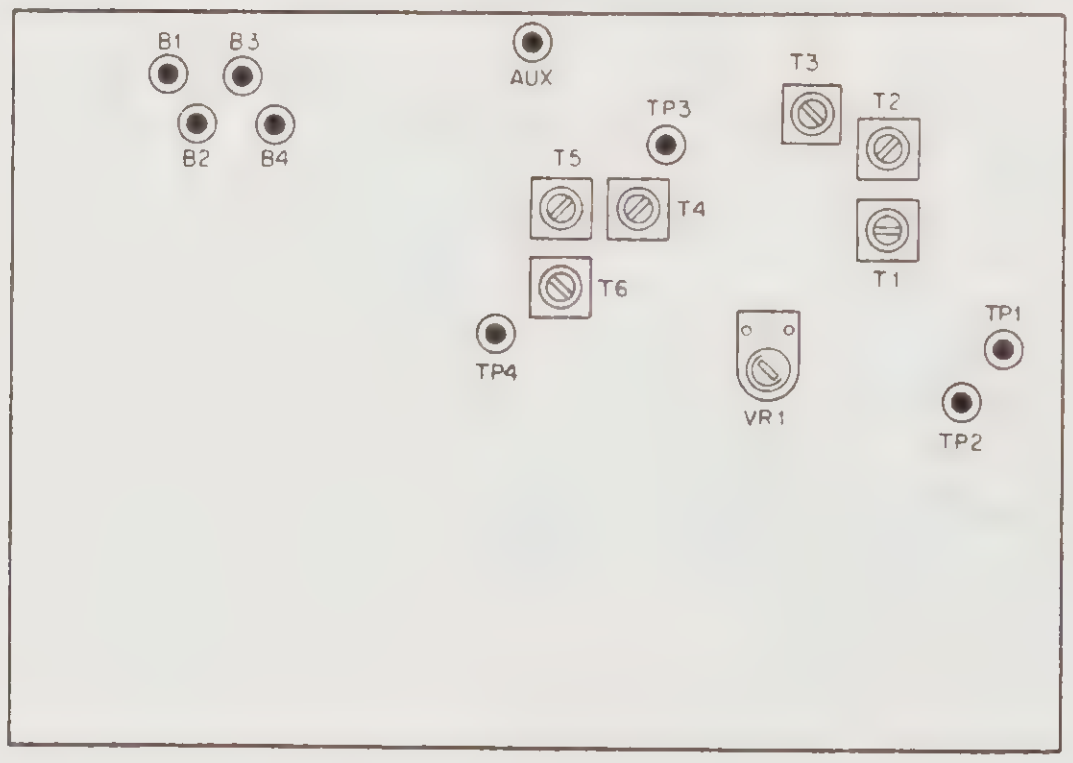

Fig. 41 PD unit

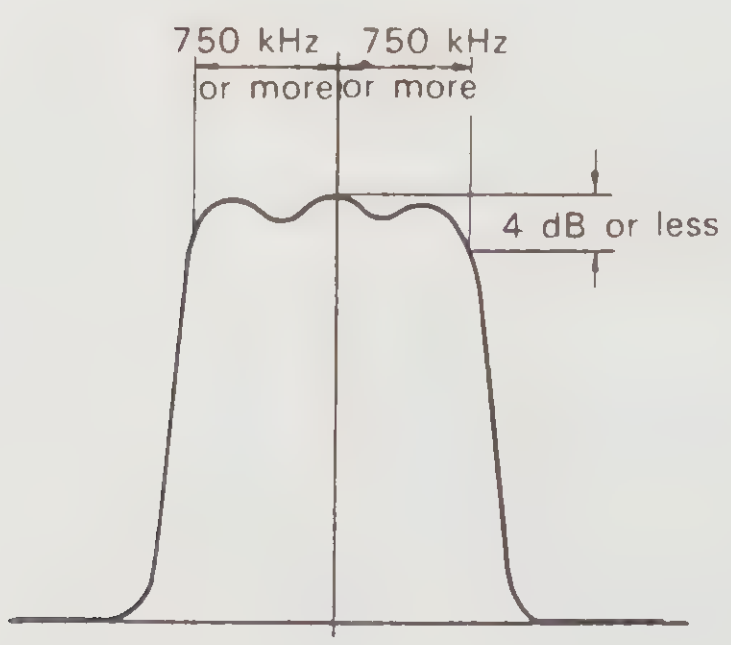

Fig. 42 Output waveform

NOTE:
(1) This band width should be 5.25 MHz ± 750 kHz or more and the valley depth should be 4 dB or less.
(2) Set the oscilloscope to maximum sensitivity and set the sweep output to as low output level as possible.

5-1-2. Adjustment of balance VR
1. Measuring instruments used
   1) SSG
   2) RF VTVM
2. Preparatory work
   1) Follow the same procedure as in 5-1-1.
   2) Disconnect connect PLL-3 and set the band to the desired position within 21 to 29.5.
3. Adjusting procedure
Apply a signal of 8.83 MHz within 106 to 108 dB from SSG between connector terminals CIB and GND and adjust VR1 until the output of RF VTVM connected to TP1 (or TP2) becomes minimum dip (refer to **Fig. 41**).

5-2. Adjustment of VCO unit

5-2-1. Adjustment of VCO coil

Simplified adjustment:
1. Measuring instrument used: Voltmeter
2. Adjusting procedure
   1) Connect the voltmeter to TP4 in VCO unit (X50-1330-00). Keep the slide switch in VCO unit to NOR side (refer to Fig. 22).
   2) Set the VFO scale to 250 and adjust oscillation coils T1 through T10 until the voltmeter reads 3.2V.

NOTE:
(1) When VFO is changed from 0 to 500, the voltmeter reading should changed proportionally.
(2) In a band more than 21 MHz, there are two tuned points of 3.2V. The proper tuned point is obtained when the core is inserted into the printed circuit board side. In an improper tuned point, the voltage is kept unchanged regardless of turning of VFO.

Formal adjustment:
1. Measuring instrument used: Frequency counter
2. Adjusting procedure
   1) Turn the slide switch S1 in VCO unit (X50-1330-00) to TUN side and connect the counter between TP5 and TP6 (GND).
   2) Adjust the individual coils shown in the following list to the relevant set frequencies.
   3) Short circuit between TP1 and TP2 in VCO unit and measure frequency. Then, short circuit between TP2 and TP3 and readjust frequency, and check if the difference between two frequencies lies in the variable range shown in the following list.

Band	Coil	Set frequency	Variable range
WWV	T 1	24.08 MHz	±450 kHz or more
1.8	T 2	10.88 MHz	±330 kHz or more
3.5	T 3	12.58 MHz	±350 kHz or more
7	T 4	16.08 MHz	±400 kHz or more
14	T 5	23.08 MHz	±500 kHz or more
21	T 6	30.08 MHz	±500 kHz or more
28	T 7	37.08 MHz	±500 kHz or more
28.5	T 8	37.58 MHz	±500 kHz or more
29	T 9	38.08 MHz	±500 kHz or more
29 5	T10	38.58 MHz	±500 kHz or more
AUX	T11	Received signal +8.83 MHz	±500 kHz or more

Table 2

5-2-2. Adjustment of trap coil

1. Measuring instruments used
   1) SSG
   2) AF VTVM
2. Adjusting procedure
   1) Connect SSG through a capacitor to the cathode side (the line connected to R28, 47Ω) of diodes D1 to D11 in VCO unit (X50-1330-00) under receiving condition.
   2) Set the BAND switch to 29.5 position, and receive a signal of 8.83 MHz from SSG and then make arrangement so that a suitable beat comes out of AF output. Adjust TR in VCO unit until the beat output becomes minimum.

TS-820 MODIFICATION FOR MARINE BAND (2.134 MHz)

1. Receiver section
   Set the driver knob to the center position. Adjust the ANT coils and RF coils to obtain maximum sensitivity at 2.0 MHz. As a result, the frequency range of 1.80 MHz ~ 2.136 MHz can be covered.
2. Transmitter section
   1) Set the driver knob to the center position. Adjust the drive coil to obtain maximum output power at 2.0 MHz.
   2. Remove two capacitors C4 (390 PF) and C31 (12 PF) of the plate VC and install a 330 PF (3 kV) capacitor.
   3) Remove the load fixed capacitor C26 (220 PF). By these modifications, the frequency range of 1.86 MHz ~ 2.15 MHz can be covered.

REFERENCE DATA

Counter Mix Unit IC6 (μPB2490)

Truth Value List (8 segments)

	Input					Output							
	BI	D	C	B	A	a	b	c	d	e	f	g	h
B	L	×	×	×	×	L	L	L	L	L	L	L	L
0	H	L	L	L	L	H	H	H	H	H	H	L	L
1	H	L	L	L	H	L	L	L	L	L	L	L	H
2	H	L	L	H	L	H	H	L	H	H	L	H	L
3	H	L	L	H	H	H	H	H	H	L	L	H	L
4	H	L	H	L	L	L	L	L	L	L	H	H	H
5	H	L	H	L	H	H	L	H	H	L	H	H	L
6	H	L	H	H	L	H	L	H	H	H	H	H	L
7	H	L	H	H	H	H	H	H	L	L	H	L	L
8	H	H	L	L	L	H	H	H	H	H	H	H	L
9	H	H	L	L	H	H	H	H	H	L	H	H	L
10	H	H	L	H	L	L	L	L	L	L	L	L	L
11	H	H	L	H	H	L	L	L	L	L	L	L	L
12	H	H	H	L	L	L	L	L	L	L	L	L	L
13	H	H	H	L	H	L	L	L	L	L	L	L	L
14	H	H	H	H	L	L	L	L	L	L	L	L	L
15	H	H	H	H	H	L	L	L	L	L	L	L	L

× = H or L

Character shape

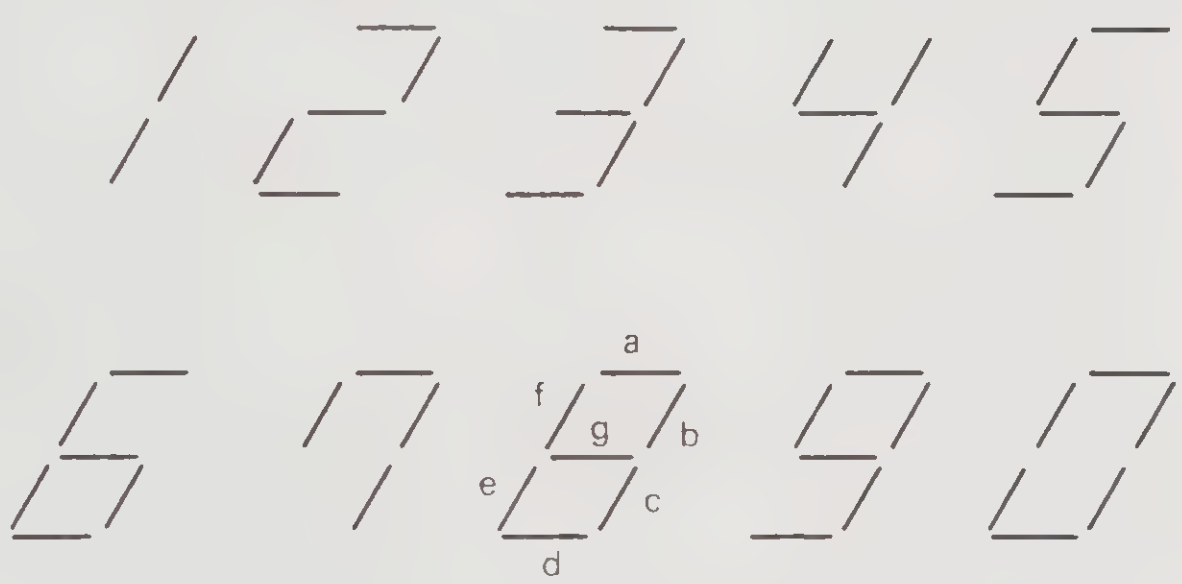

CIRCUIT DIAGRAM / PC BOARD

▼ IF (X48-1150-00)

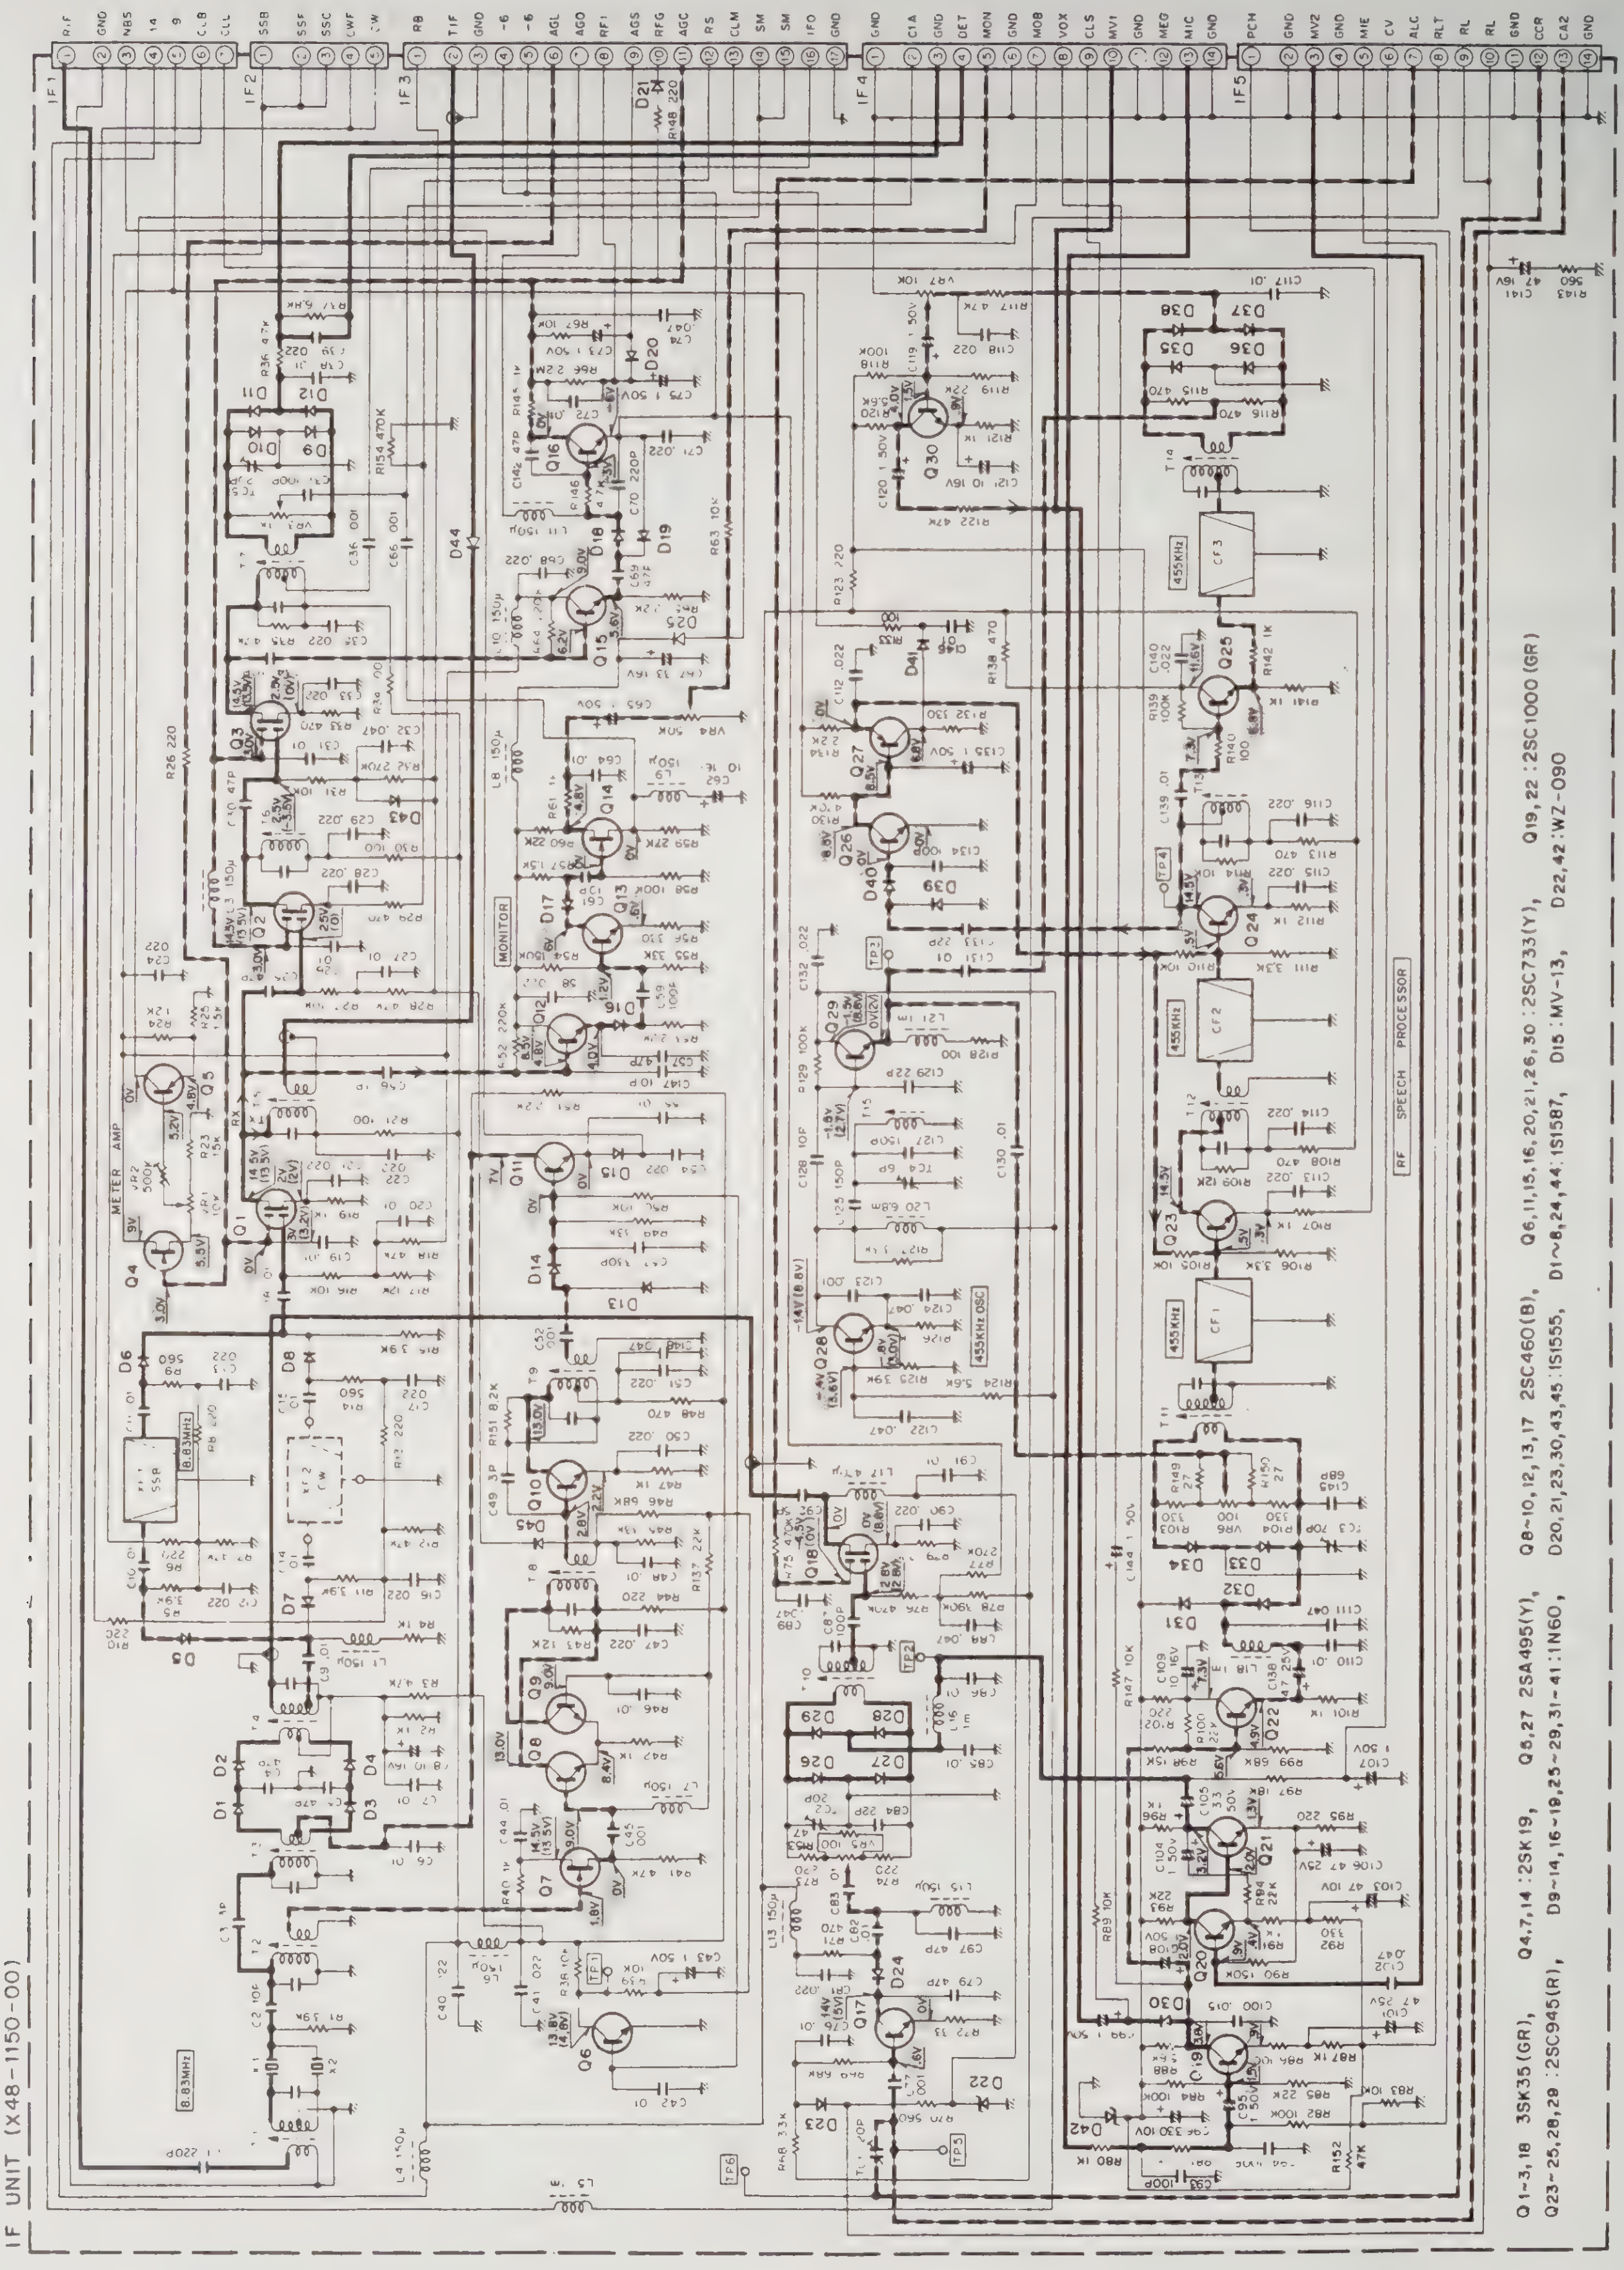

CIRCUIT DIAGRAM / PC BOARD

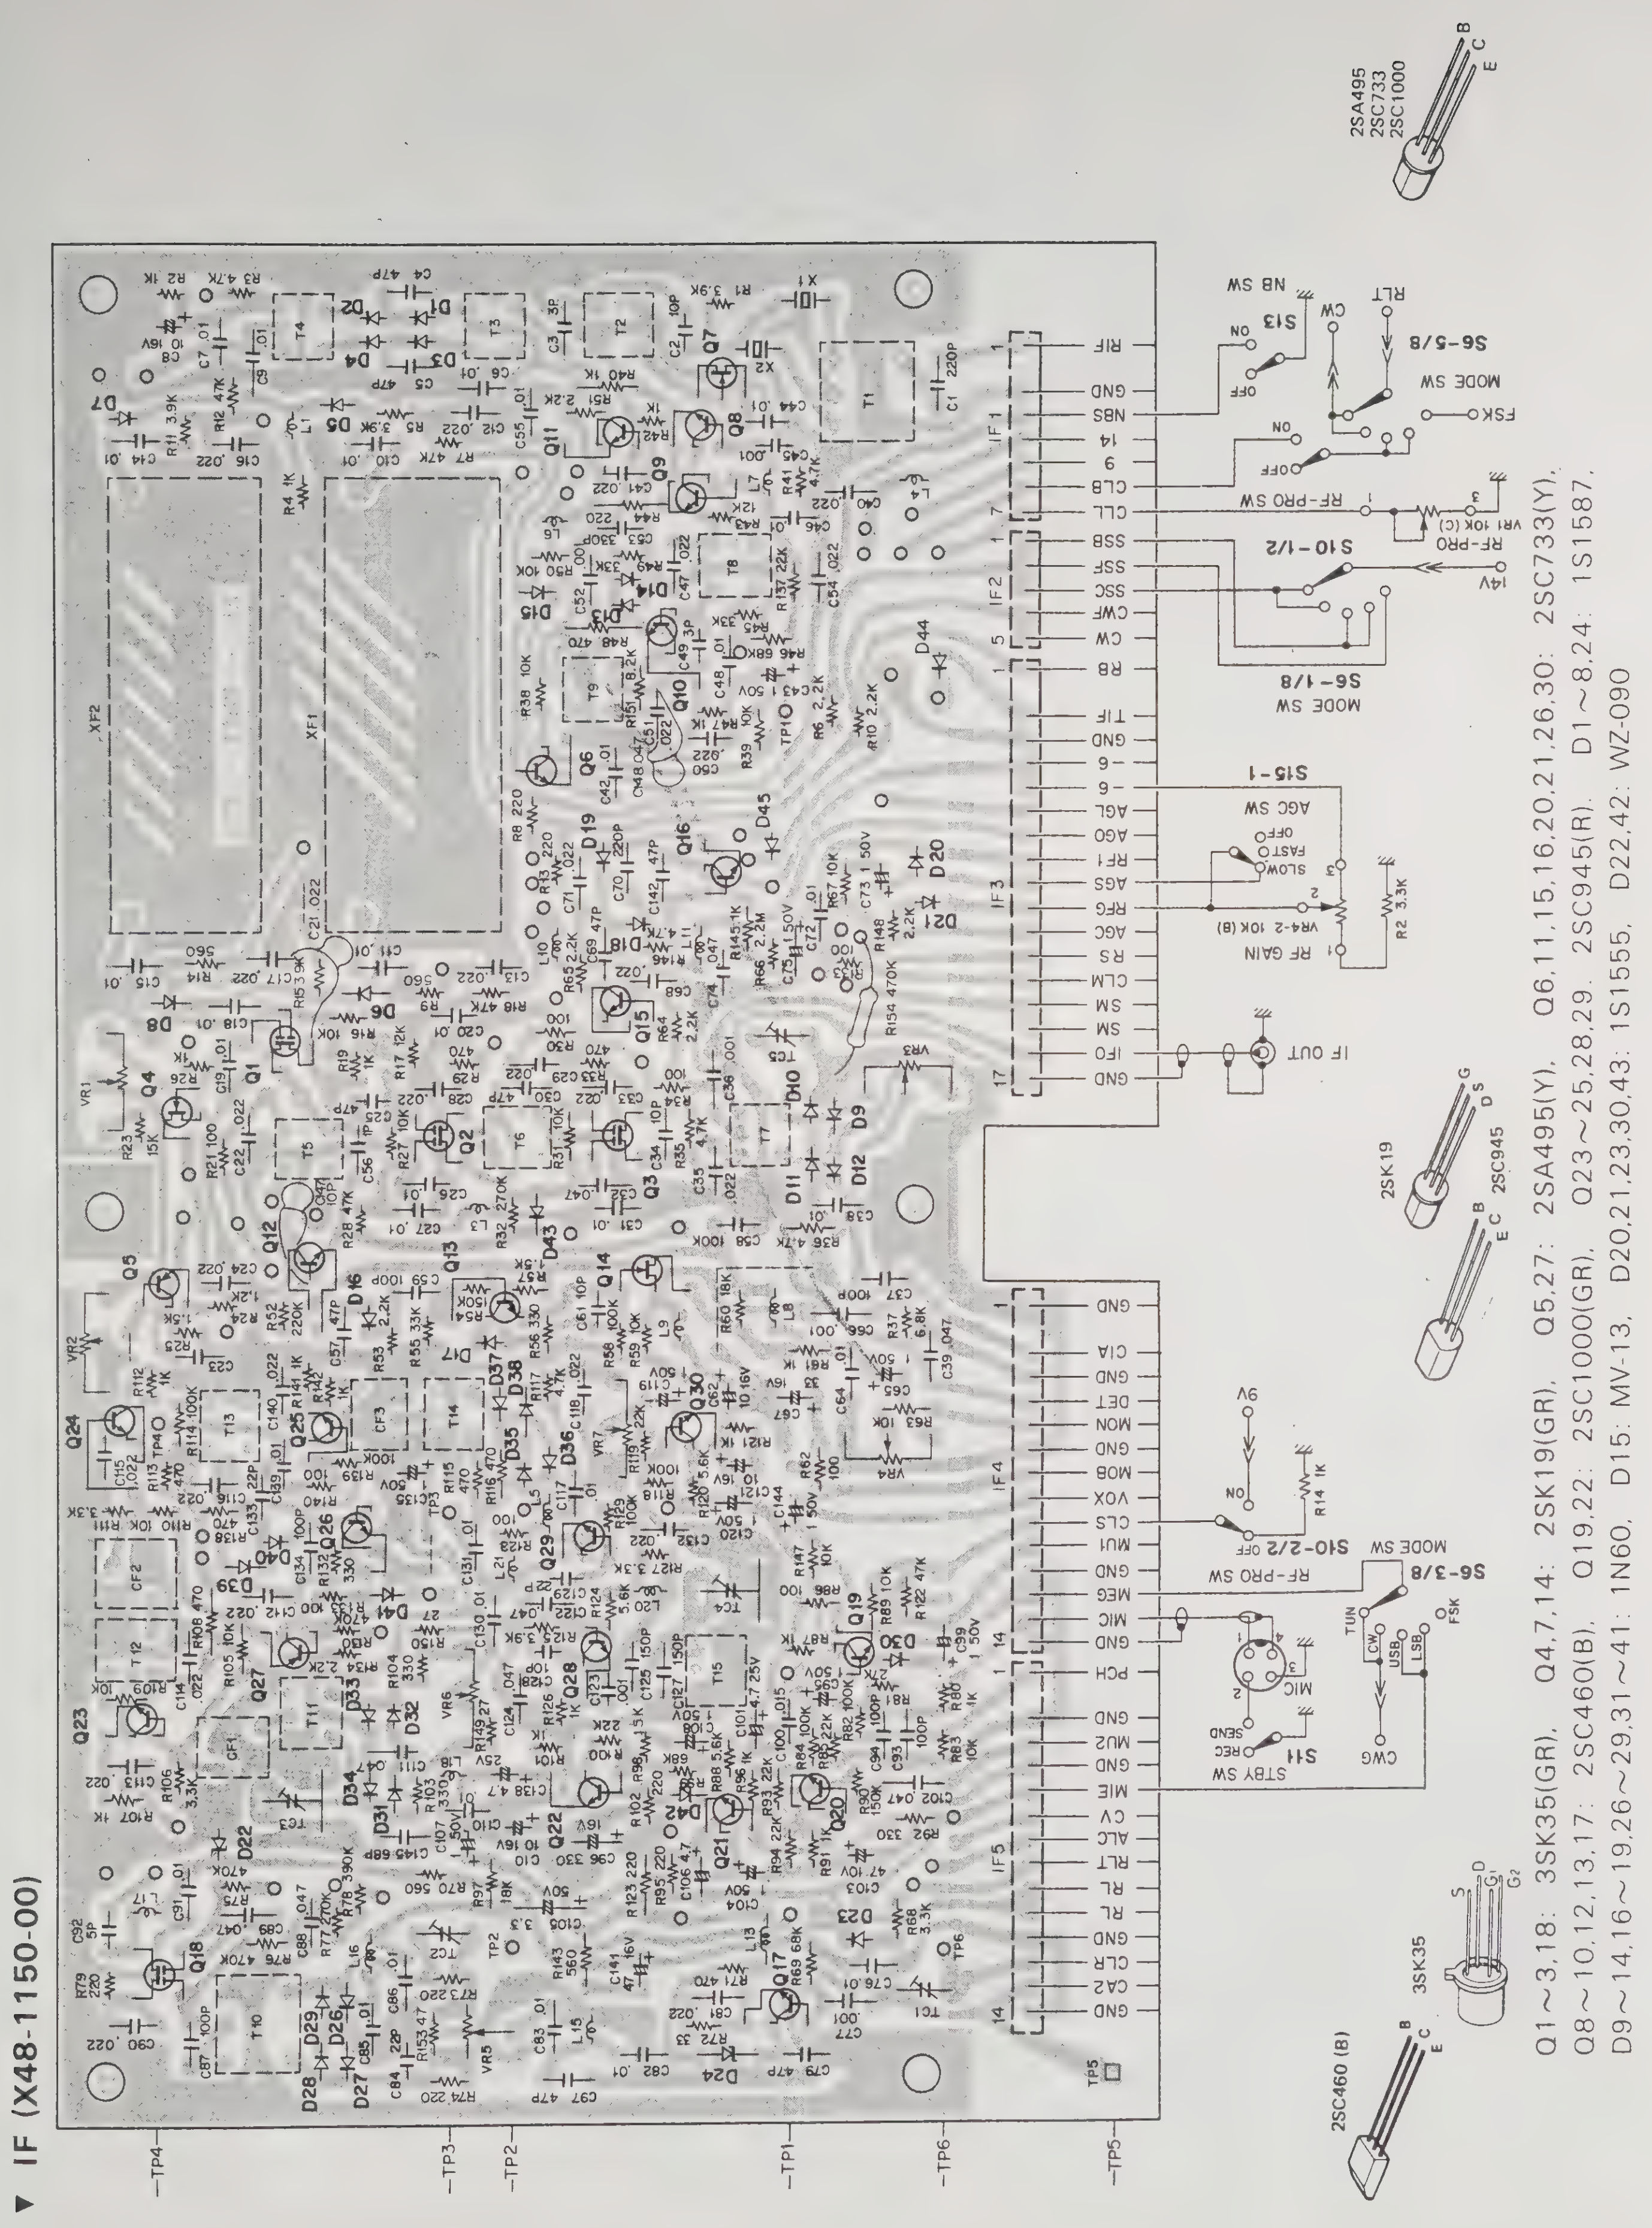

CIRCUIT DIAGRAM / PC BOARD

▼ RF (X44-1150-00)

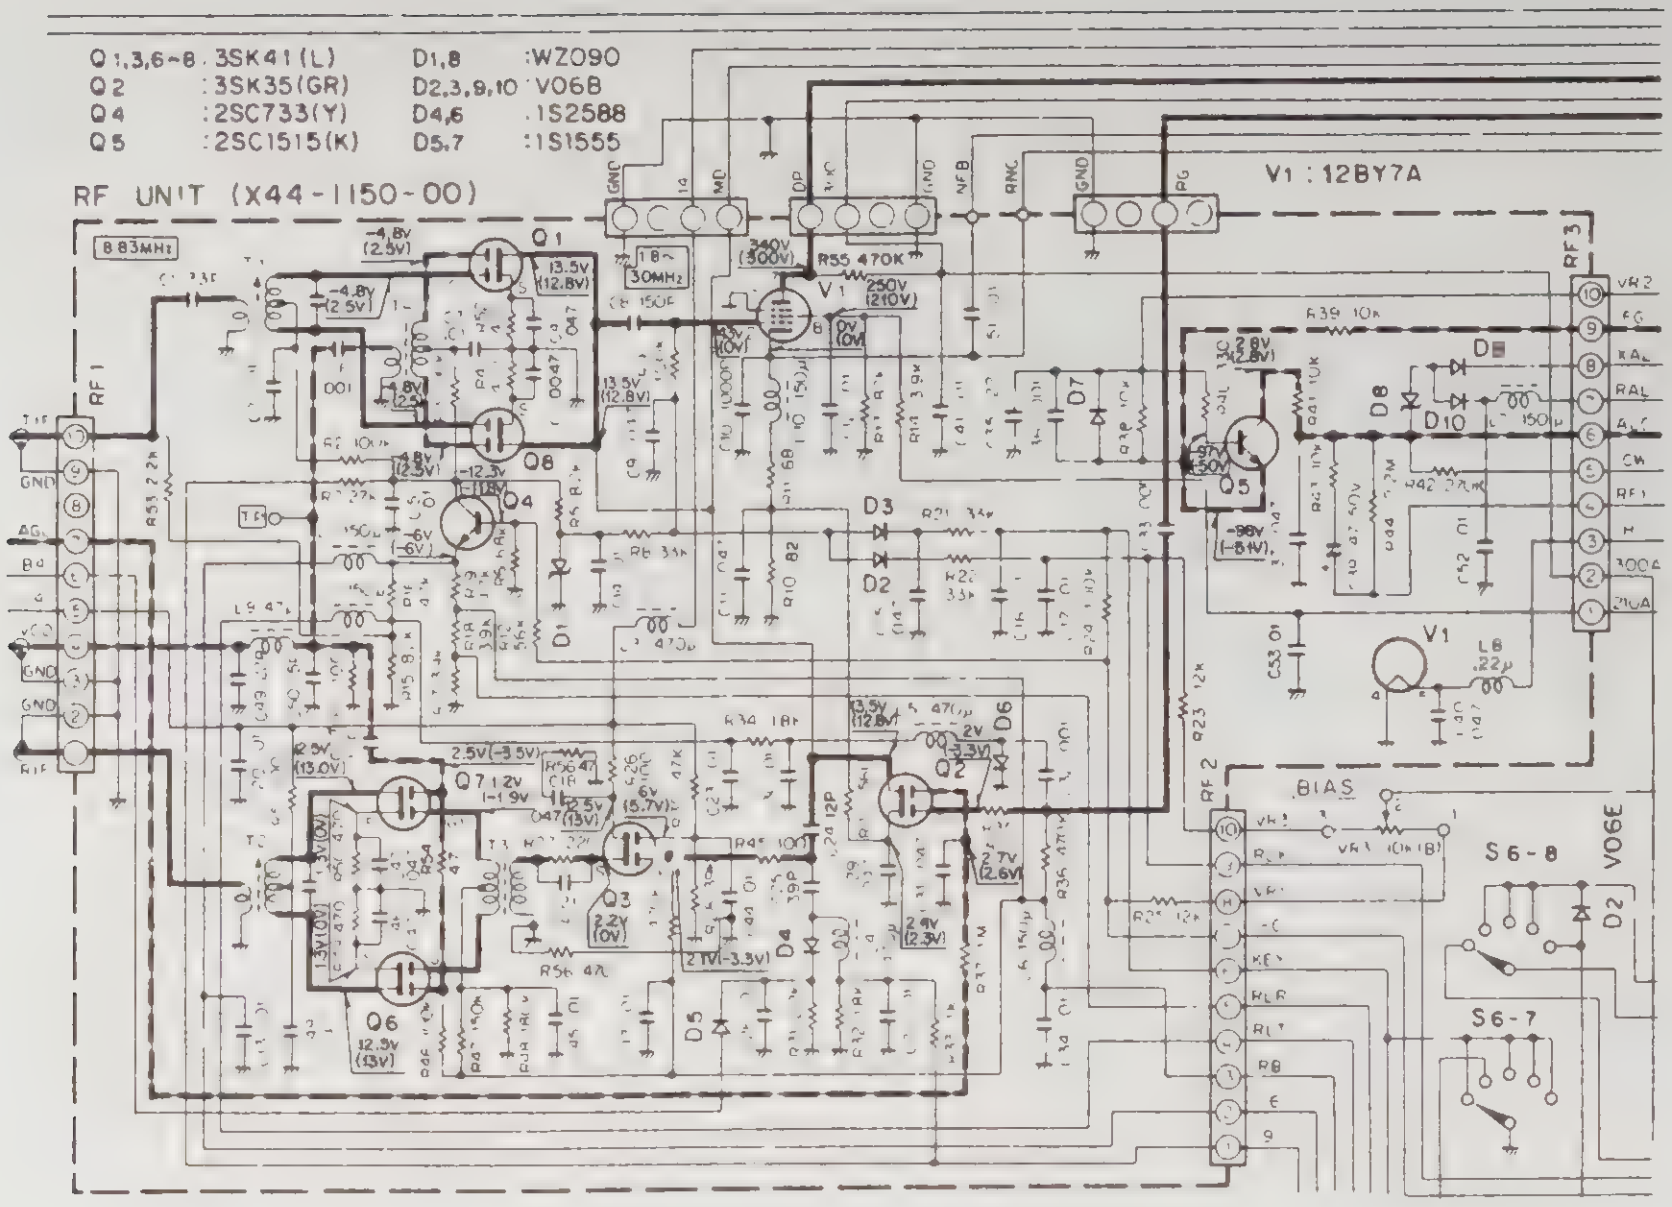

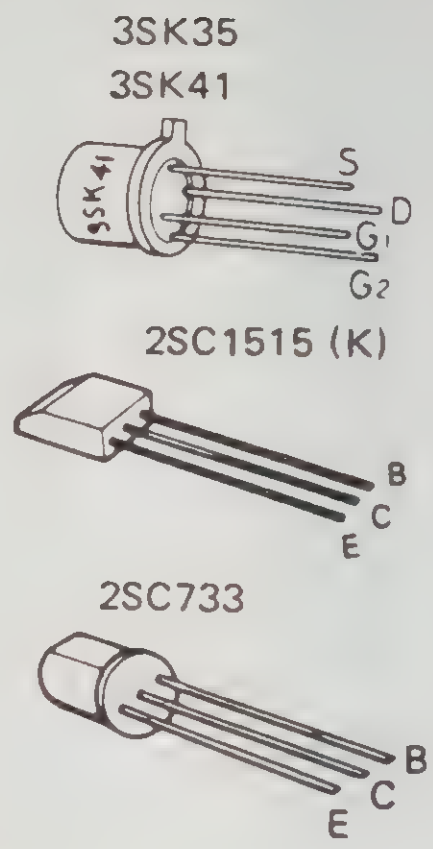

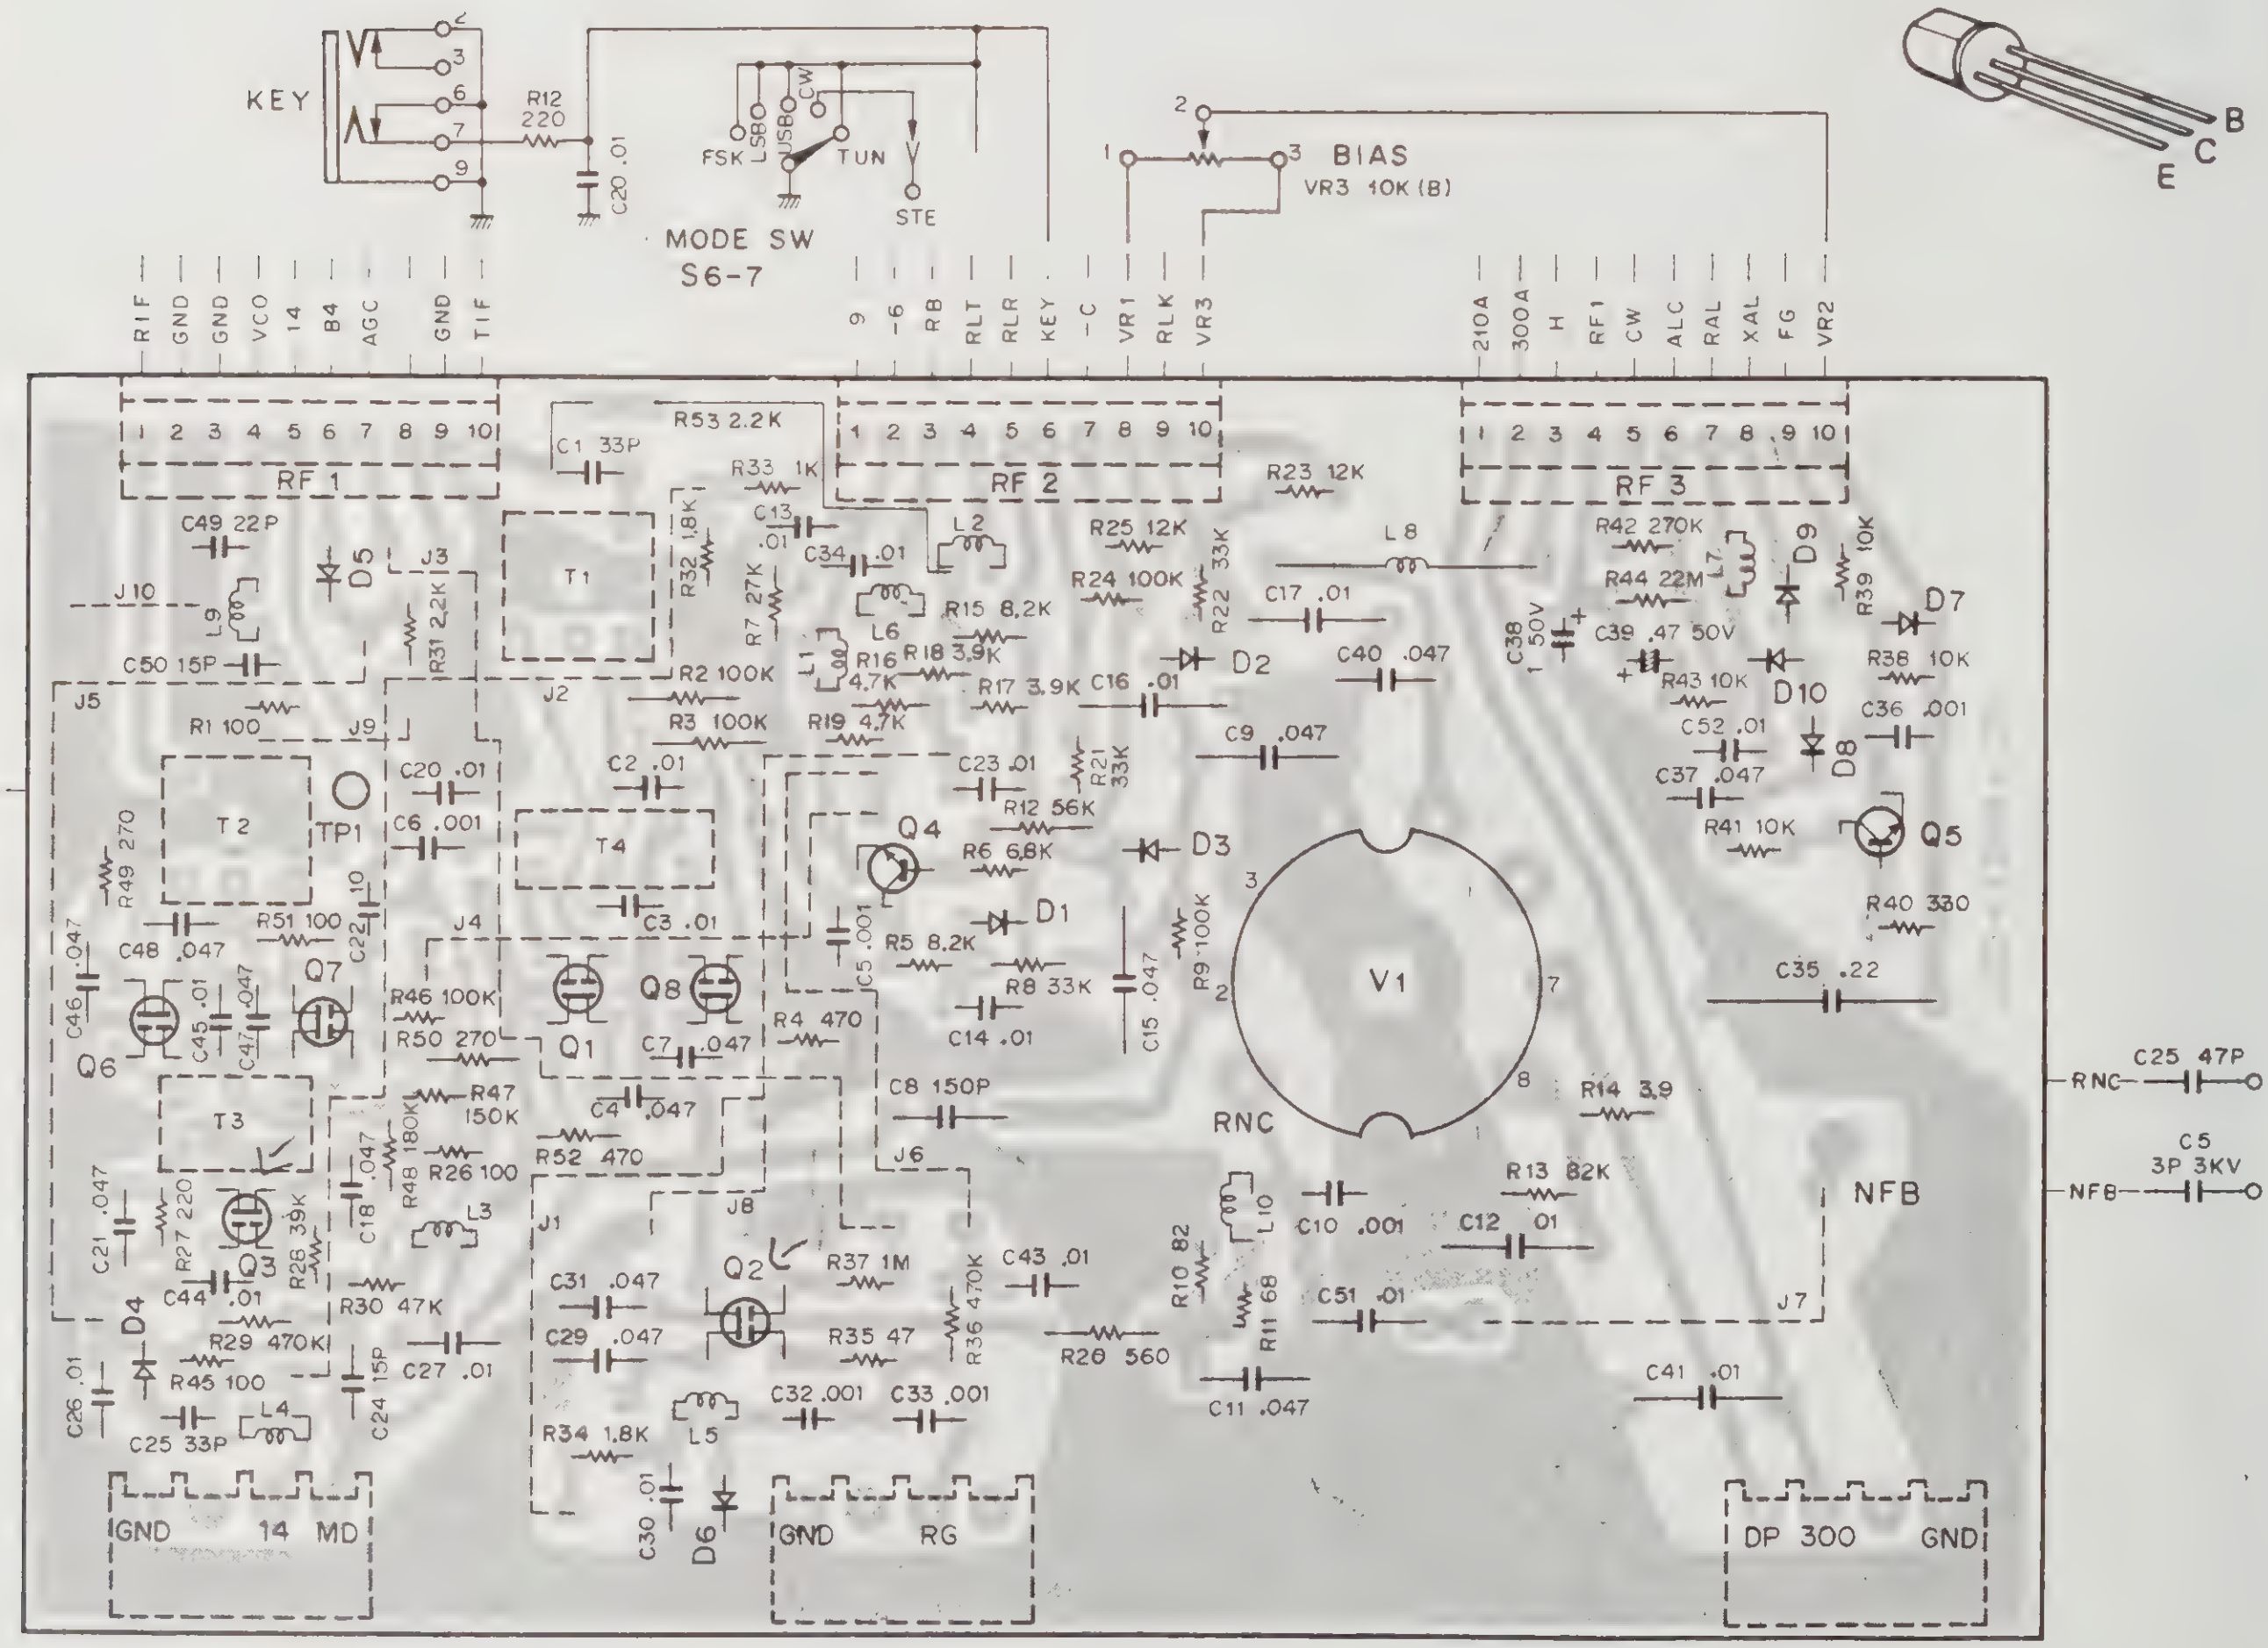

Q1,3,6～8: 3SK41(L), Q2: 3SK35(GR), Q4: 2SC733(Y), Q5: 2SC1515K(K), D1,8: WZ-090, D2,3,9,10: V06B, D4,6: 1S2588, D5,7: 1S1555, V1: 12BY7A

▼ AF-AVR (X49-1080-00)

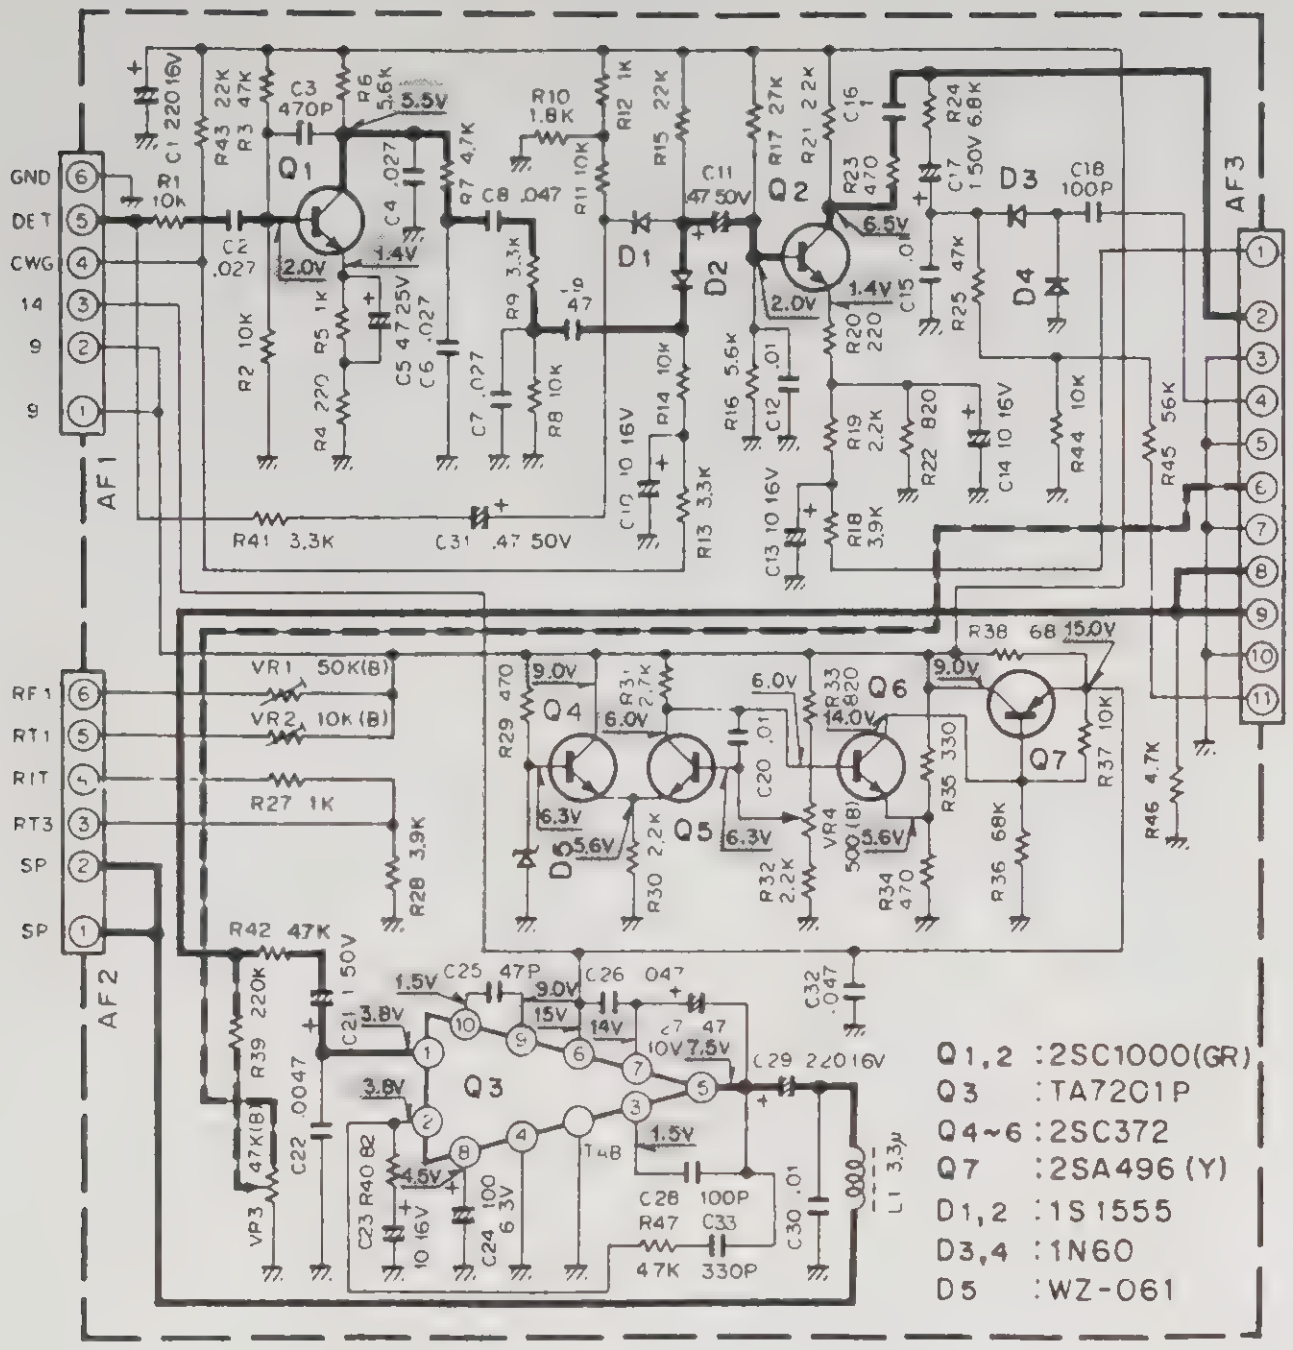

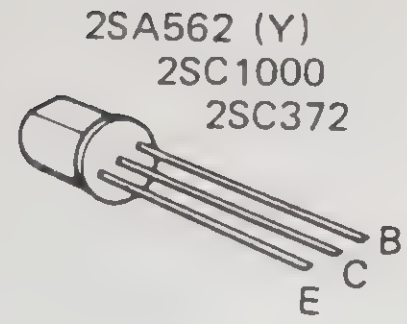

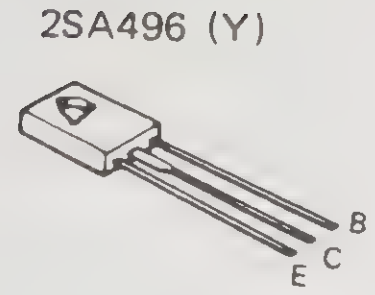

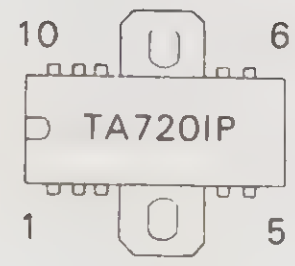

▼ AF-AVR (X49-1080-00)

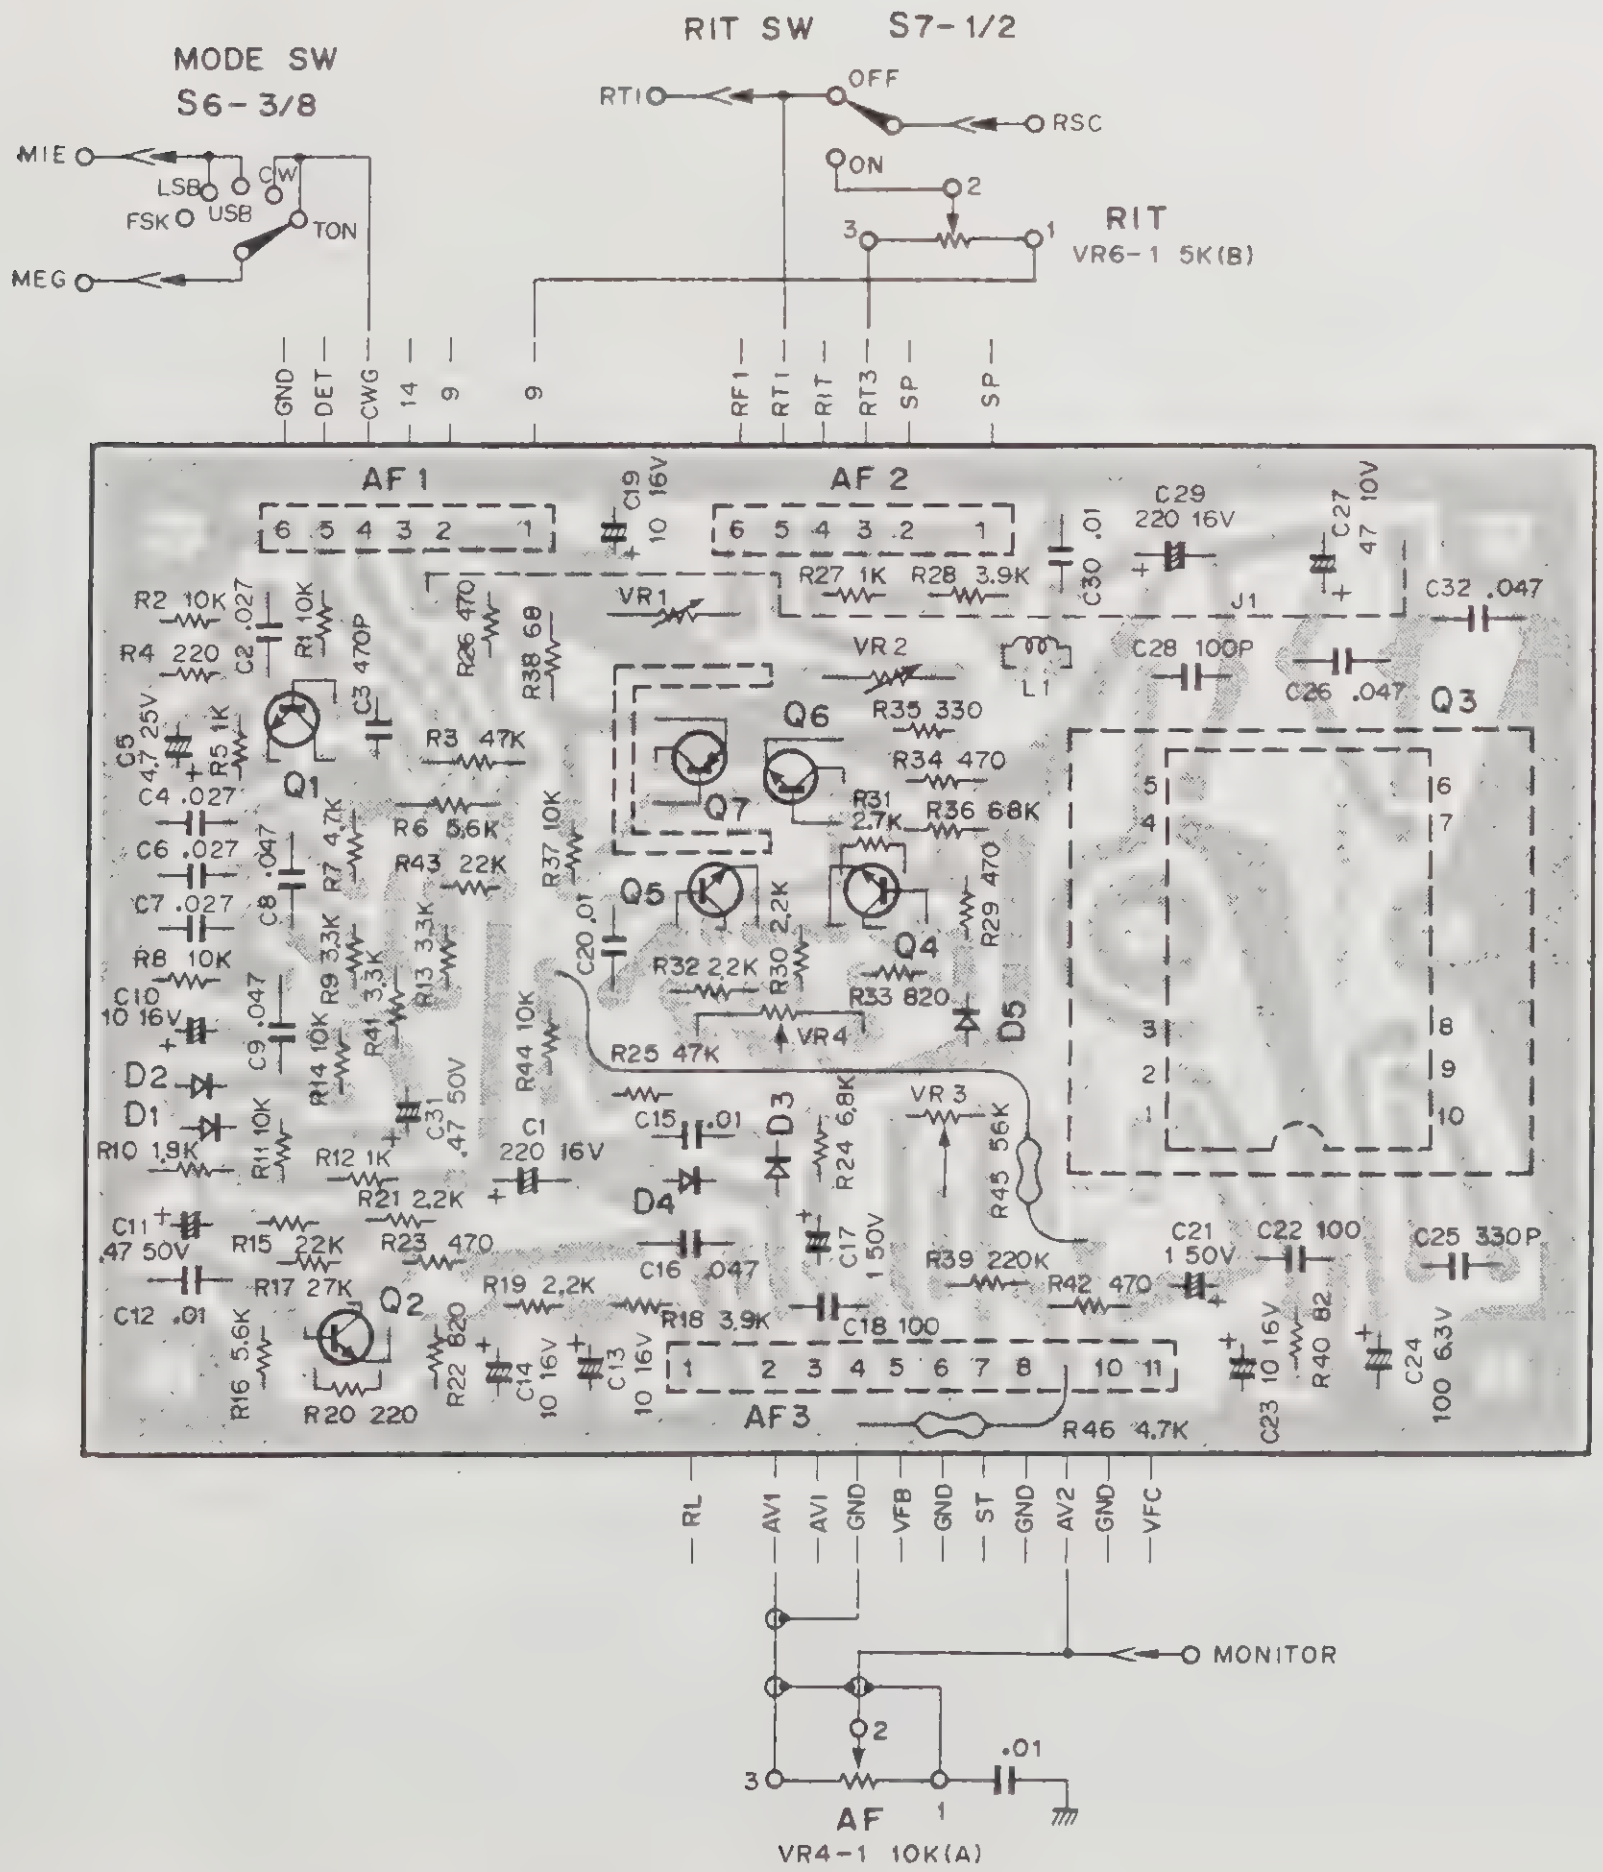

Q1,2: 2SC1000(GR)
Q3: TA7201P
Z4~6: 2SC372
Q7: 2SA496(Y)
D1,2: 1S1555
D3,4: 1N60
D5: WZ-061

CIRCUIT DIAGRAM / PC BOARD

▼ CAR ASSY (X60-1000-00)

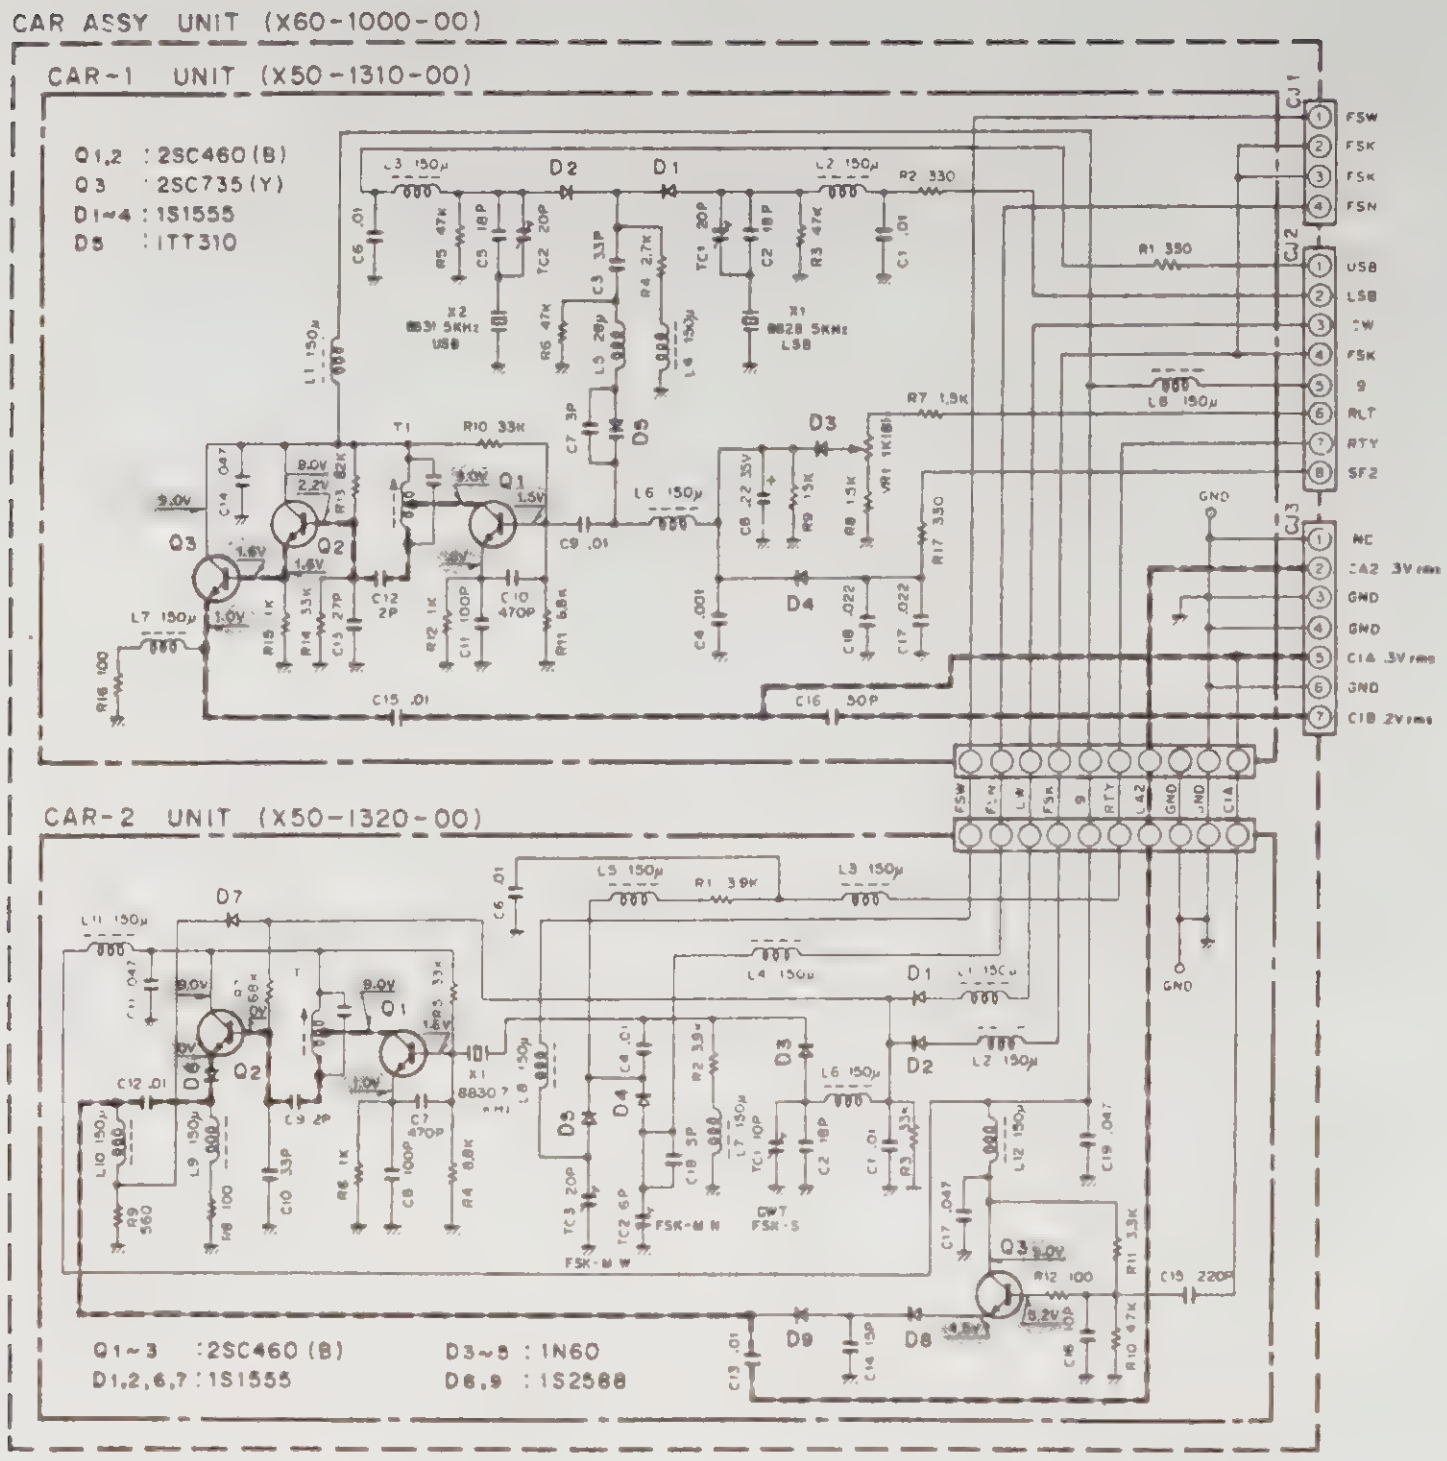

CAR FREQ

MODE	FREQ (KHz)	OSC
LSB	8828.5	CAR1
USB	8831.5	CAR1
CW(TX)	8830.7	CAR2
CW(RX)	8831.5	CAR1
FSK Ⓢ	8830.7	CAR2
FSK Ⓜ N	8830.53	CAR2
FSK Ⓜ W	8829.85	CAR2
FSK (RX)	8828.5	CAR1

2SC460 (B)

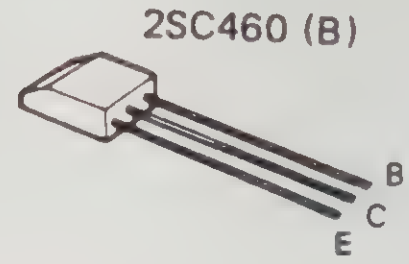

2SC735



▼ CAR-I (X50-1310-00)

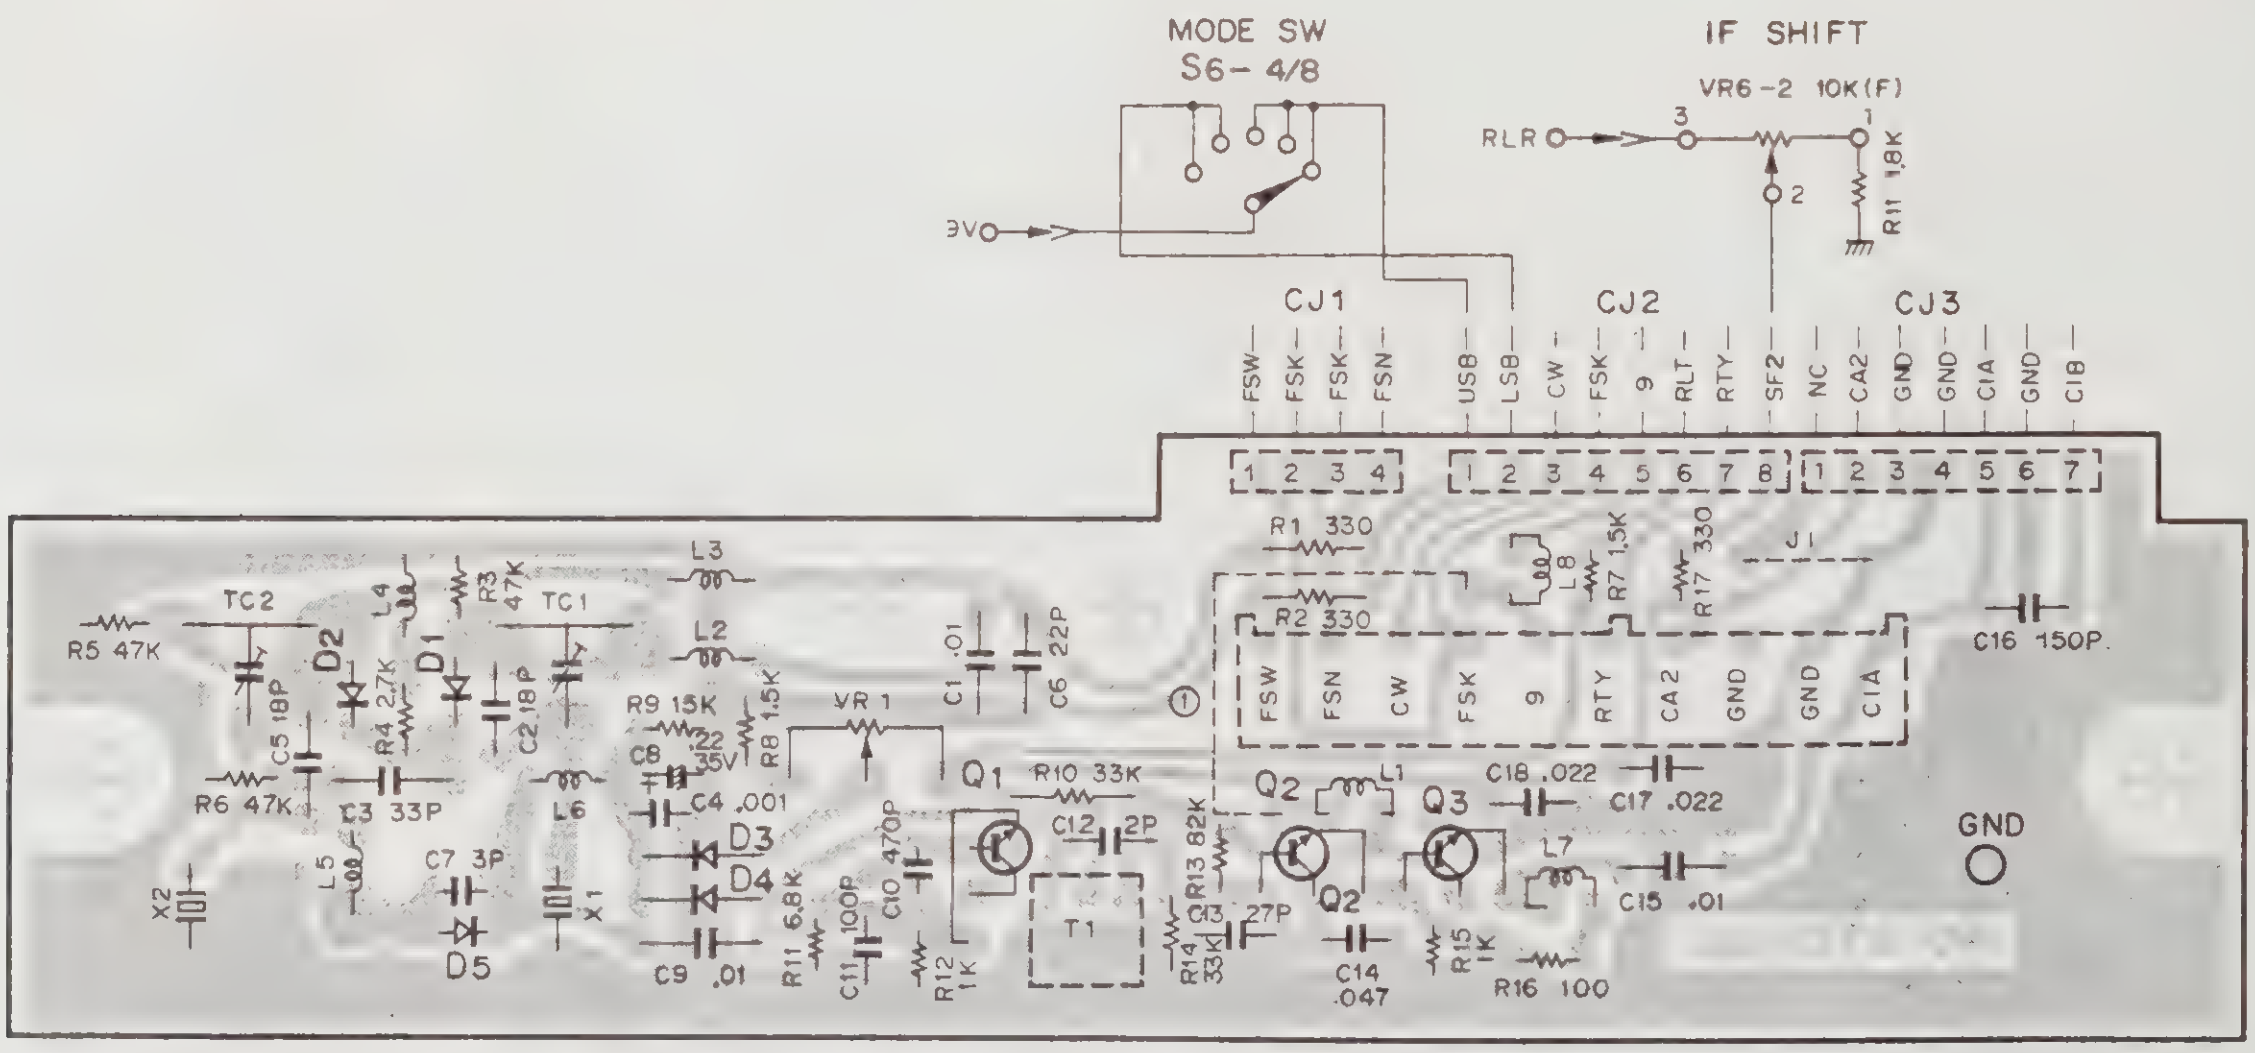

Q1,2: 2SC460(B), Q3: 2SC735(Y), D1~4: 1S1555, D5: ITT310

▼ CAR-II (X50-1320-00)

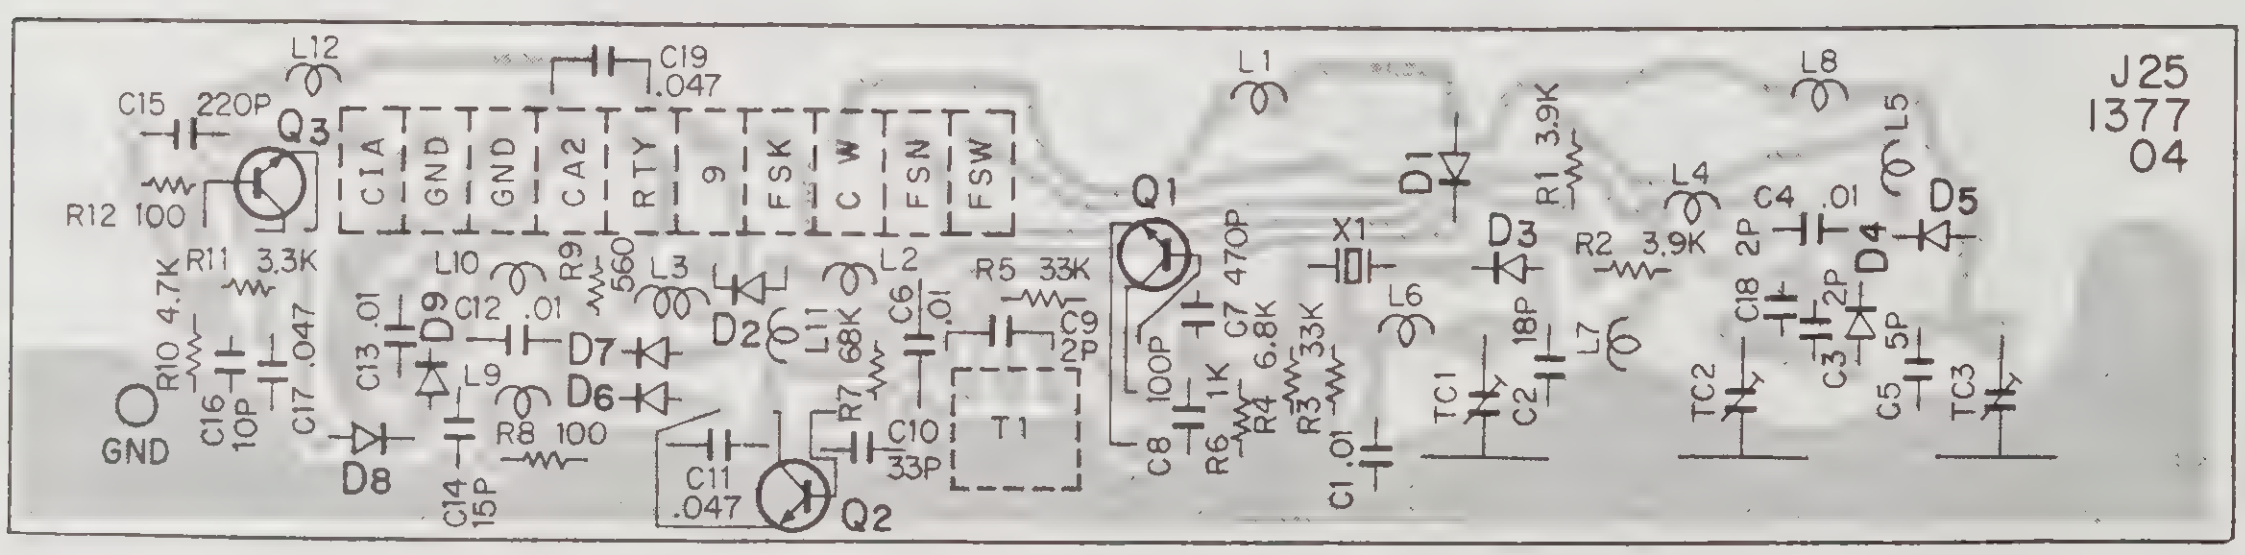

Q1~3: 2SC460(B), D1,2,6,7: 1S1555, D3~5: 1N60, D8,9: 1S2588

CIRCUIT DIAGRAM / PC BOARD

▼ FIX • VOX (X50-1350-00)

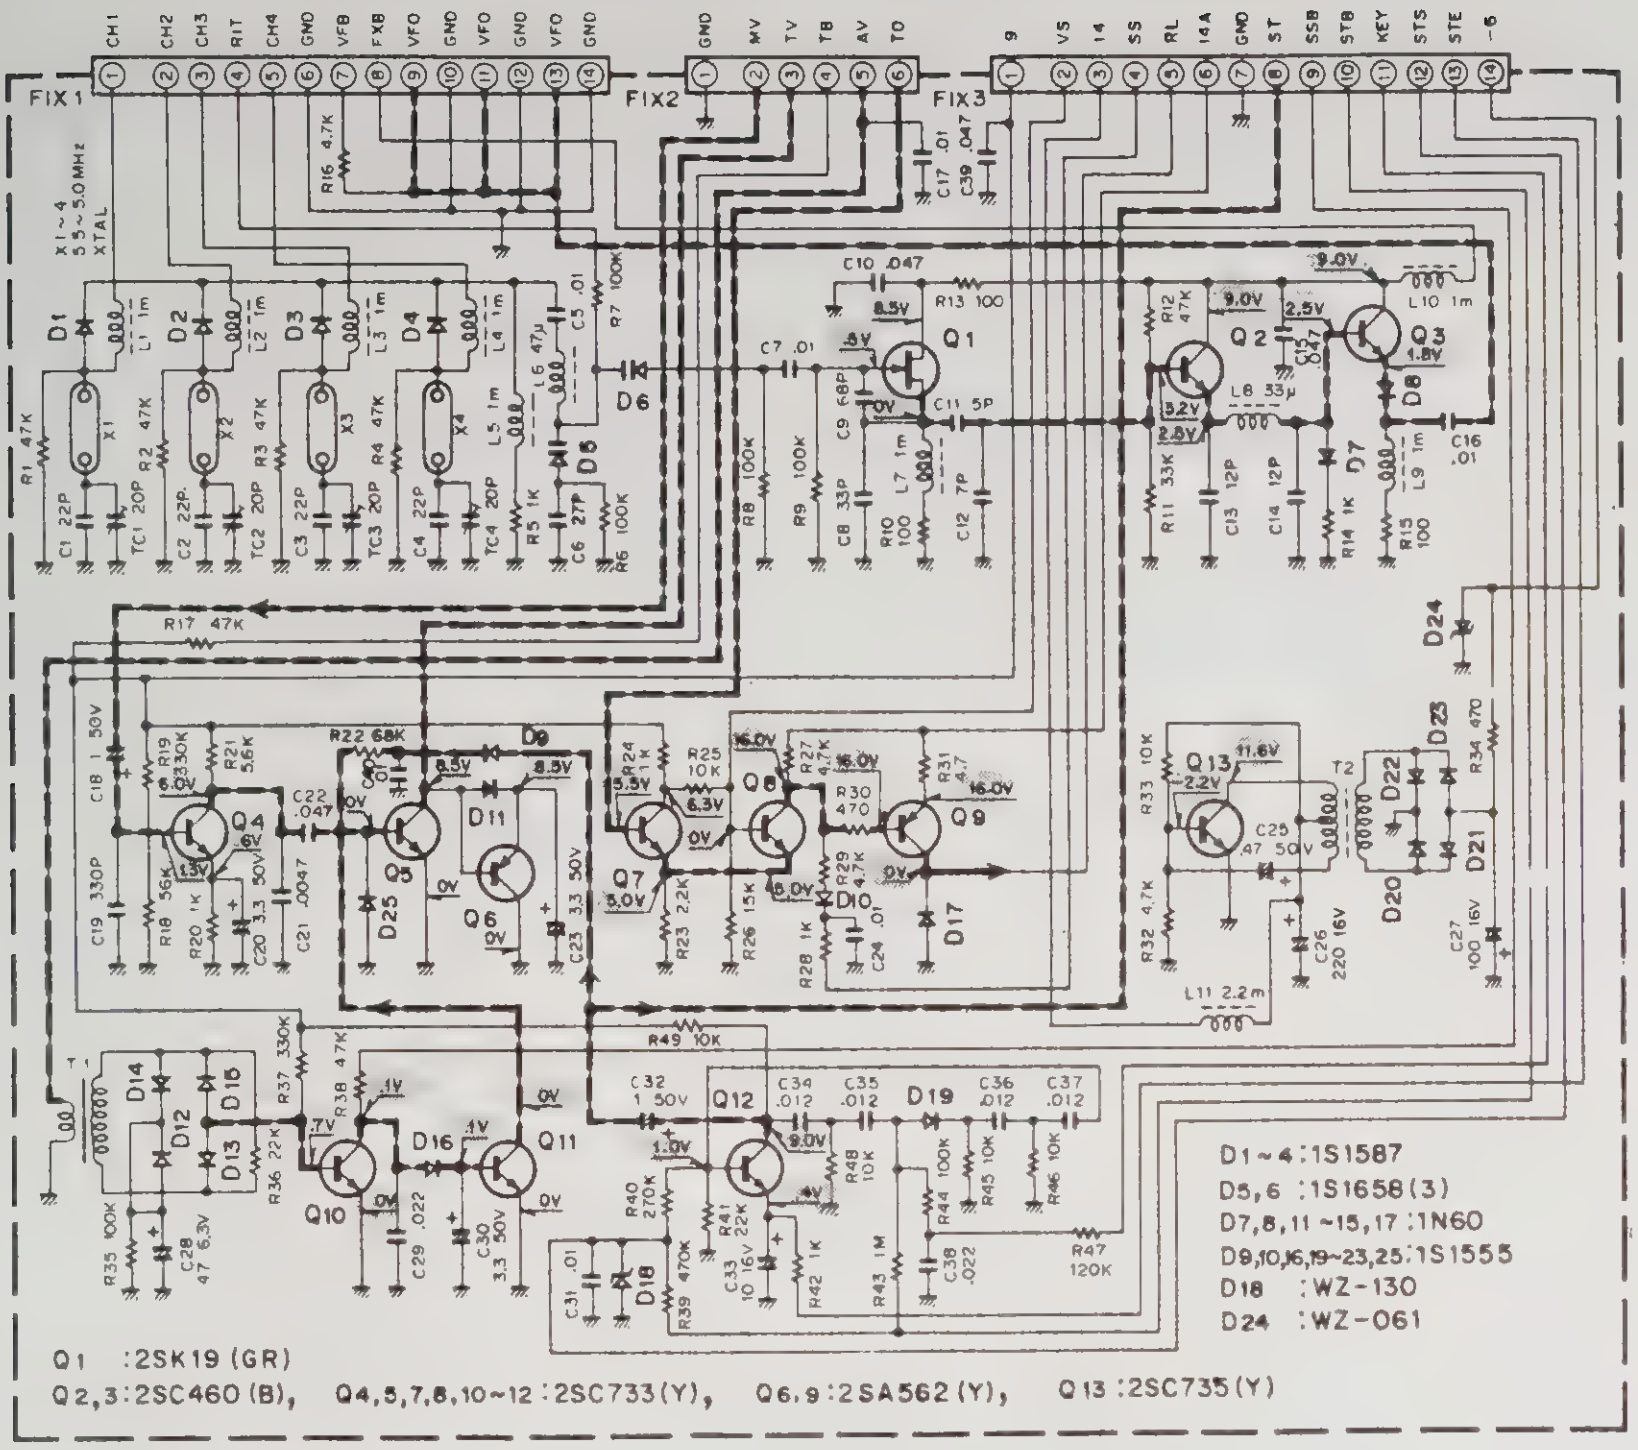

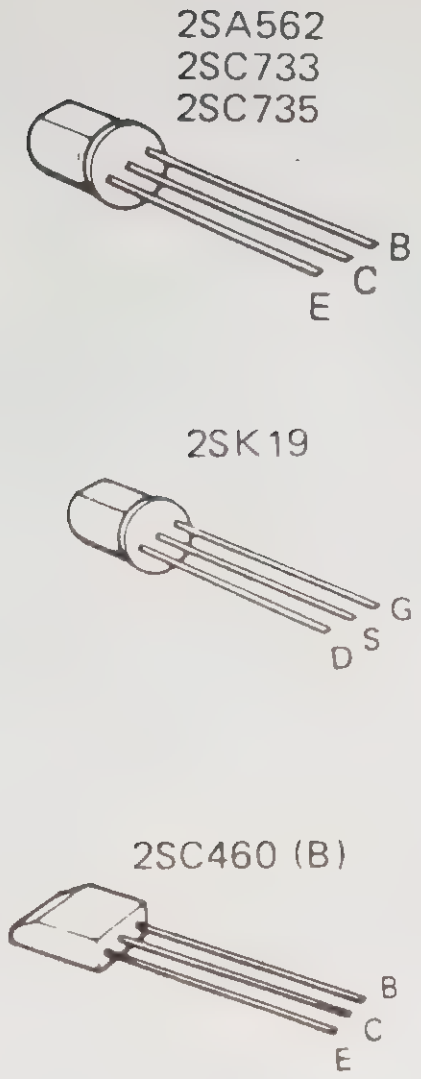

▼ FIX VOX (X50-1350-00)

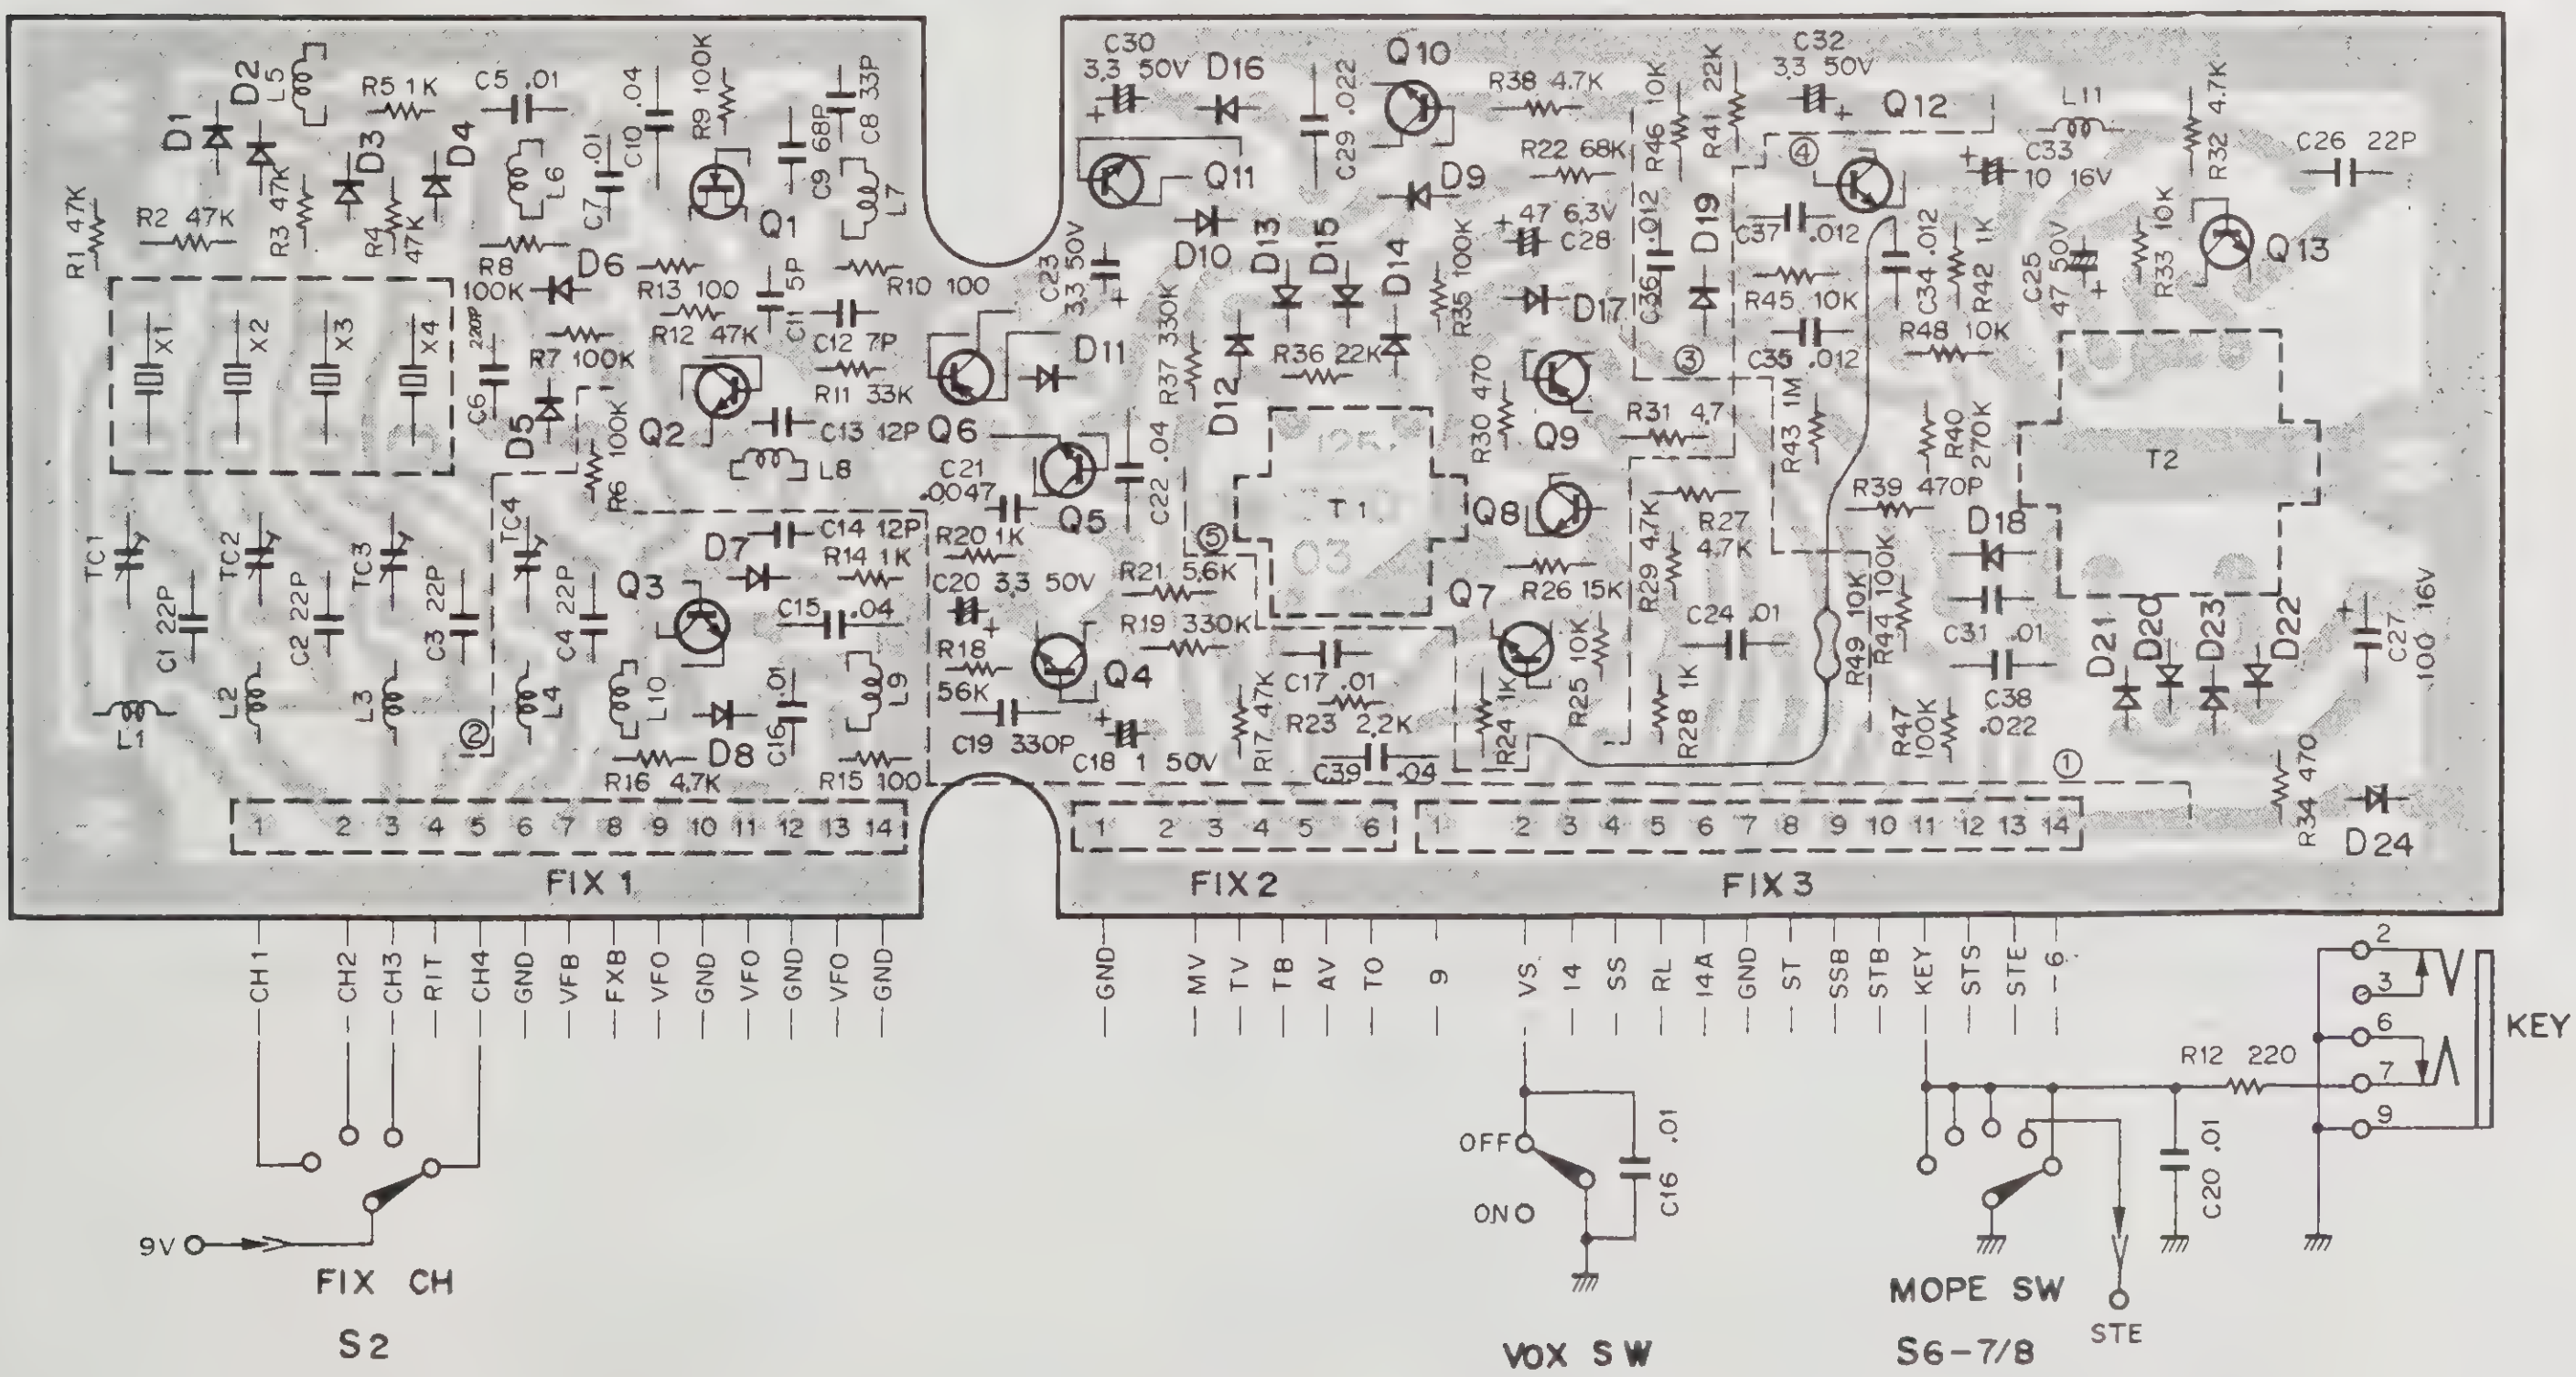

Q1: 2SK19(GR), Q2,3: 2SC460, Q4,5,7,8,10～12: 2SC733(Y), Q6,9: 2SA562(Y), Q13: 2SC735(Y), D1～4: 1S1587, D5,6: 1S658-2, D7,8,10,15,17: 1N60, D9,16,19～23: 1S1555, D18: WZ-130, D24: WZ-061

CIRCUIT DIAGRAM / PC BOARD

▼ VFO (X40-1110-00)

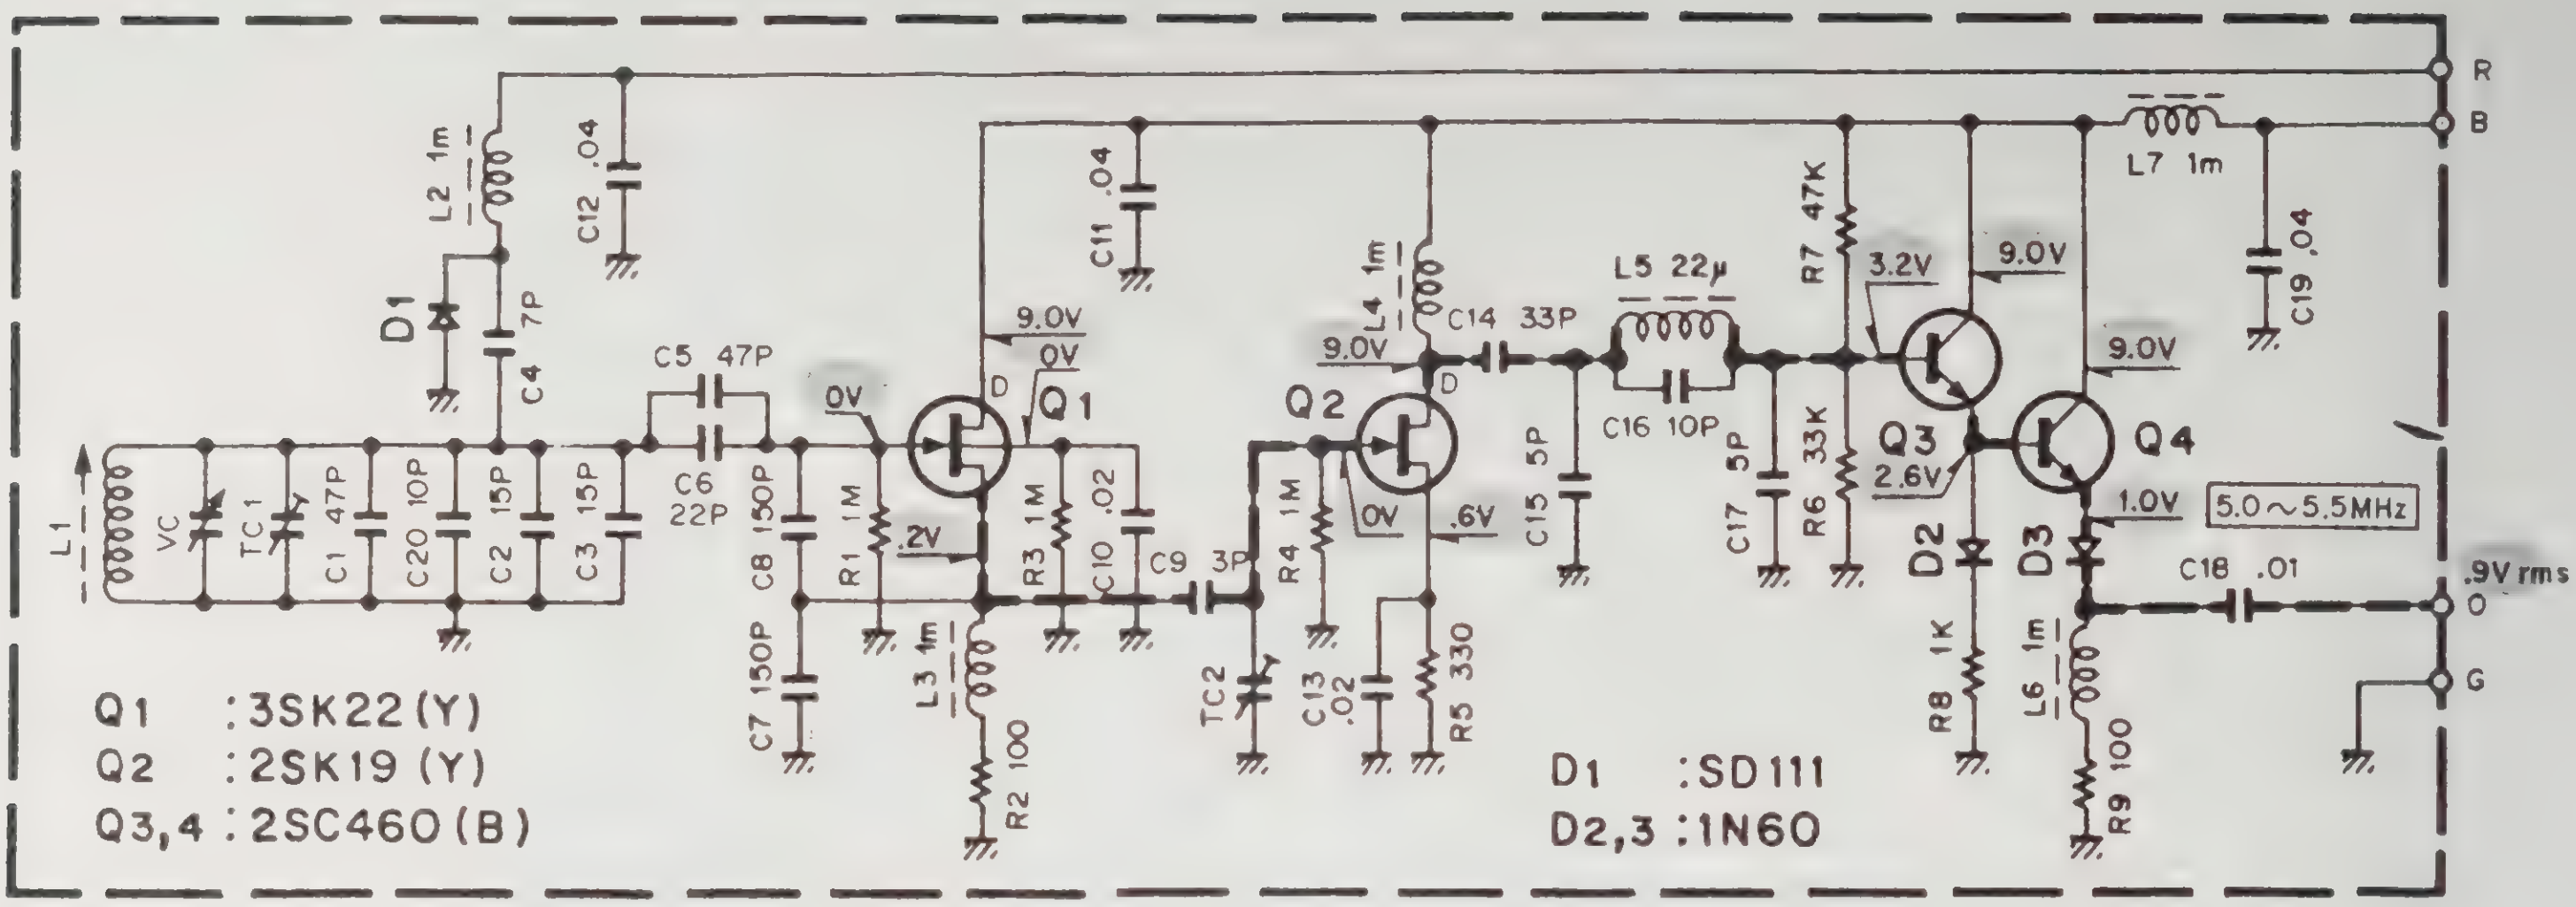

▼ VFO (X40-1110-00)

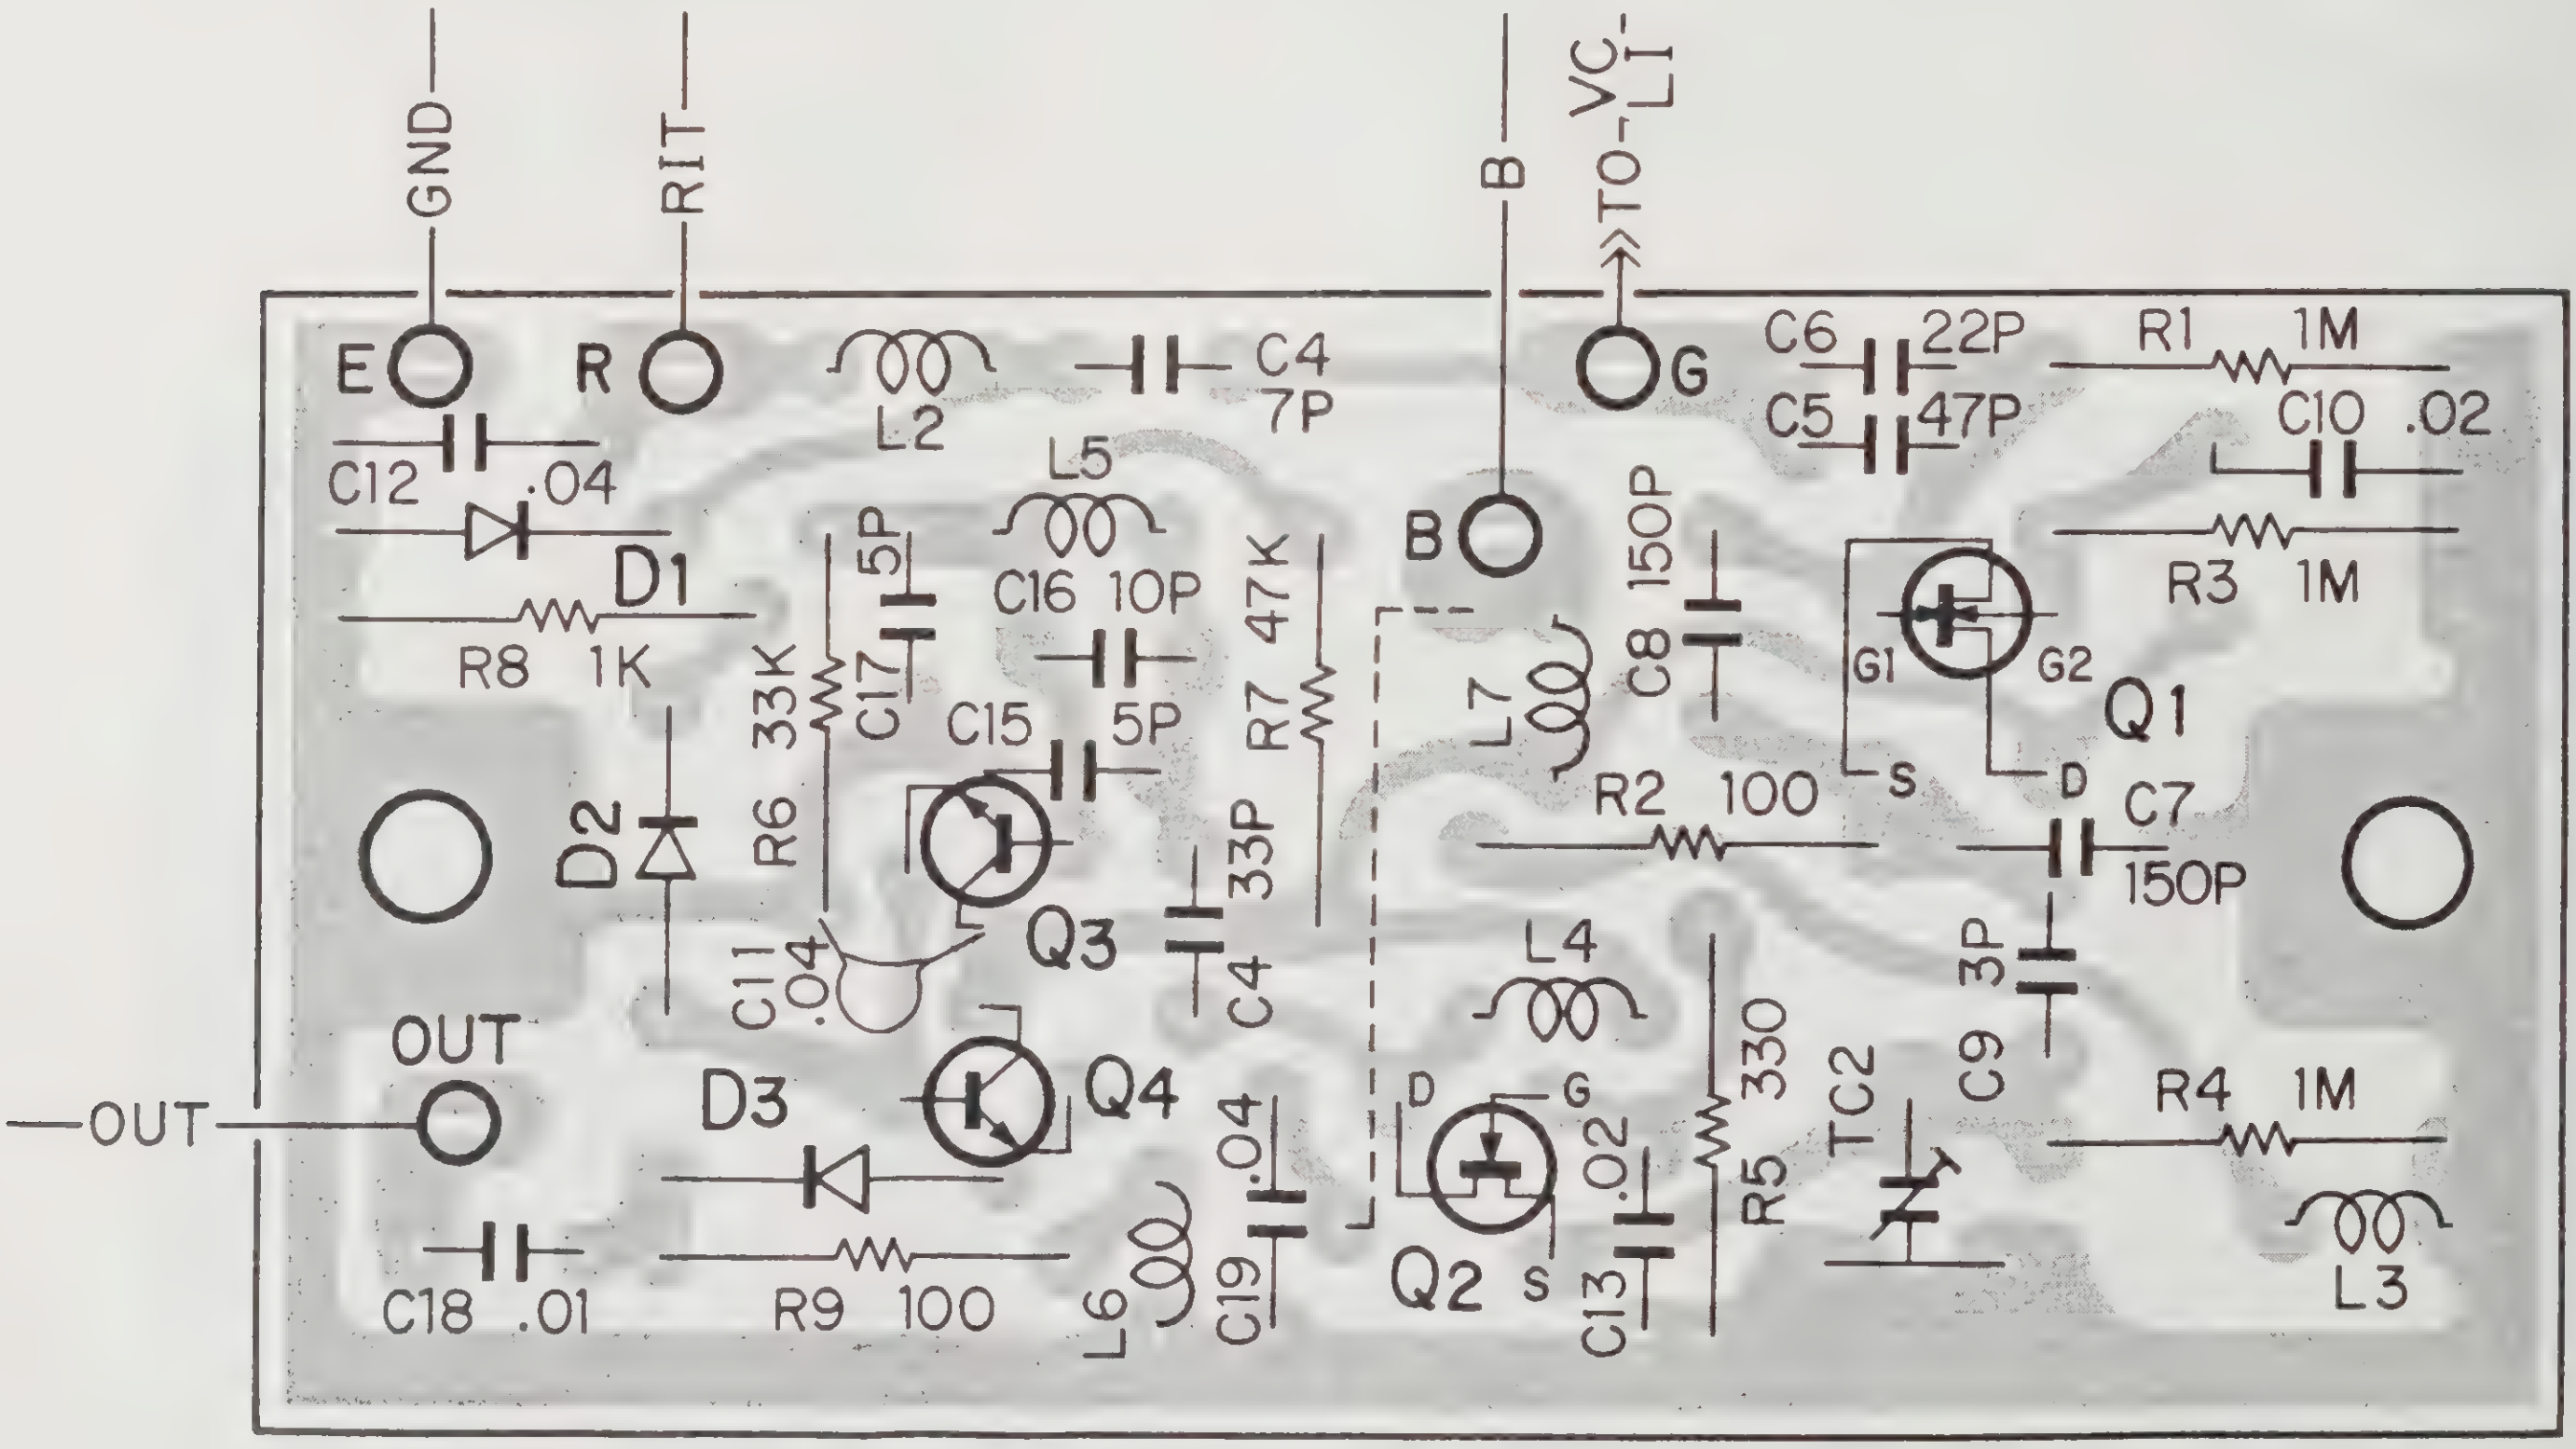

Q1: 3SK22(Y), Q2: 2SK19(Y), Q3,4: 2SC460(B), D1: SD111, D2,3: 1N60

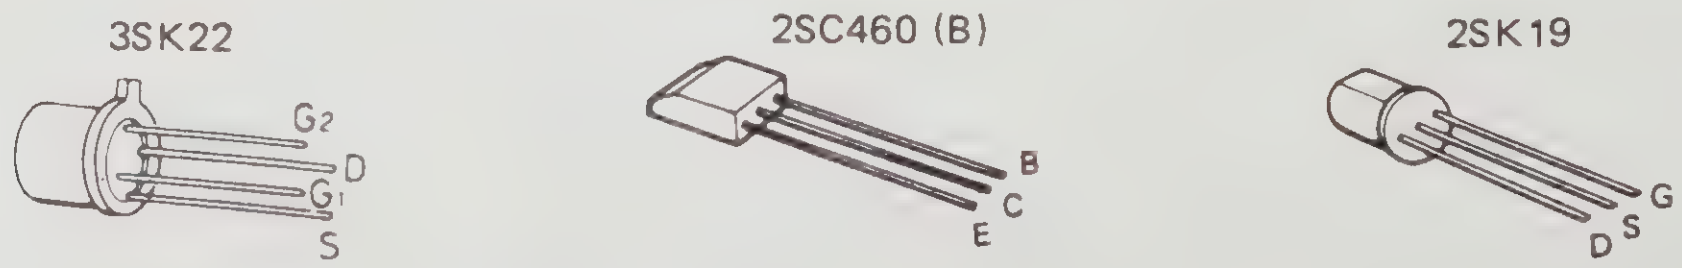

CIRCUIT DIAGRAM / PC BOARD

▼ COIL PACK (X44-1140-00)

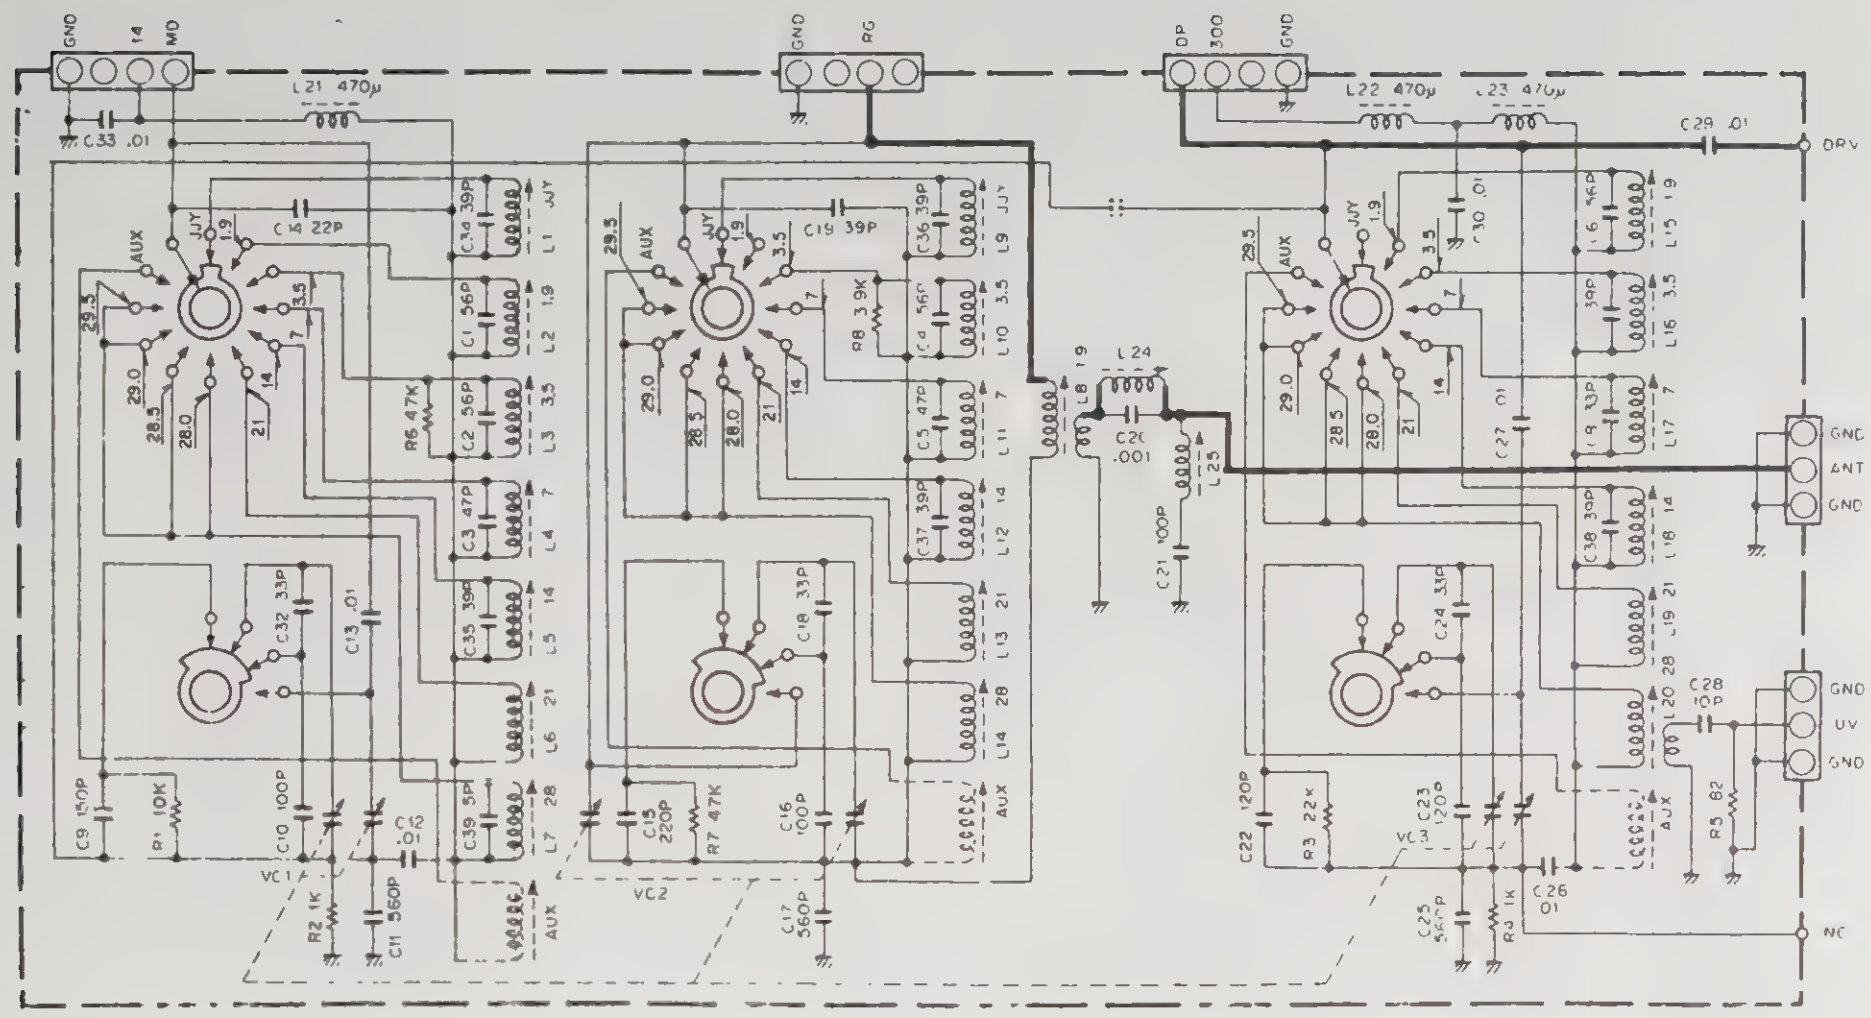

▼ COIL PACK (X44-1140-00)

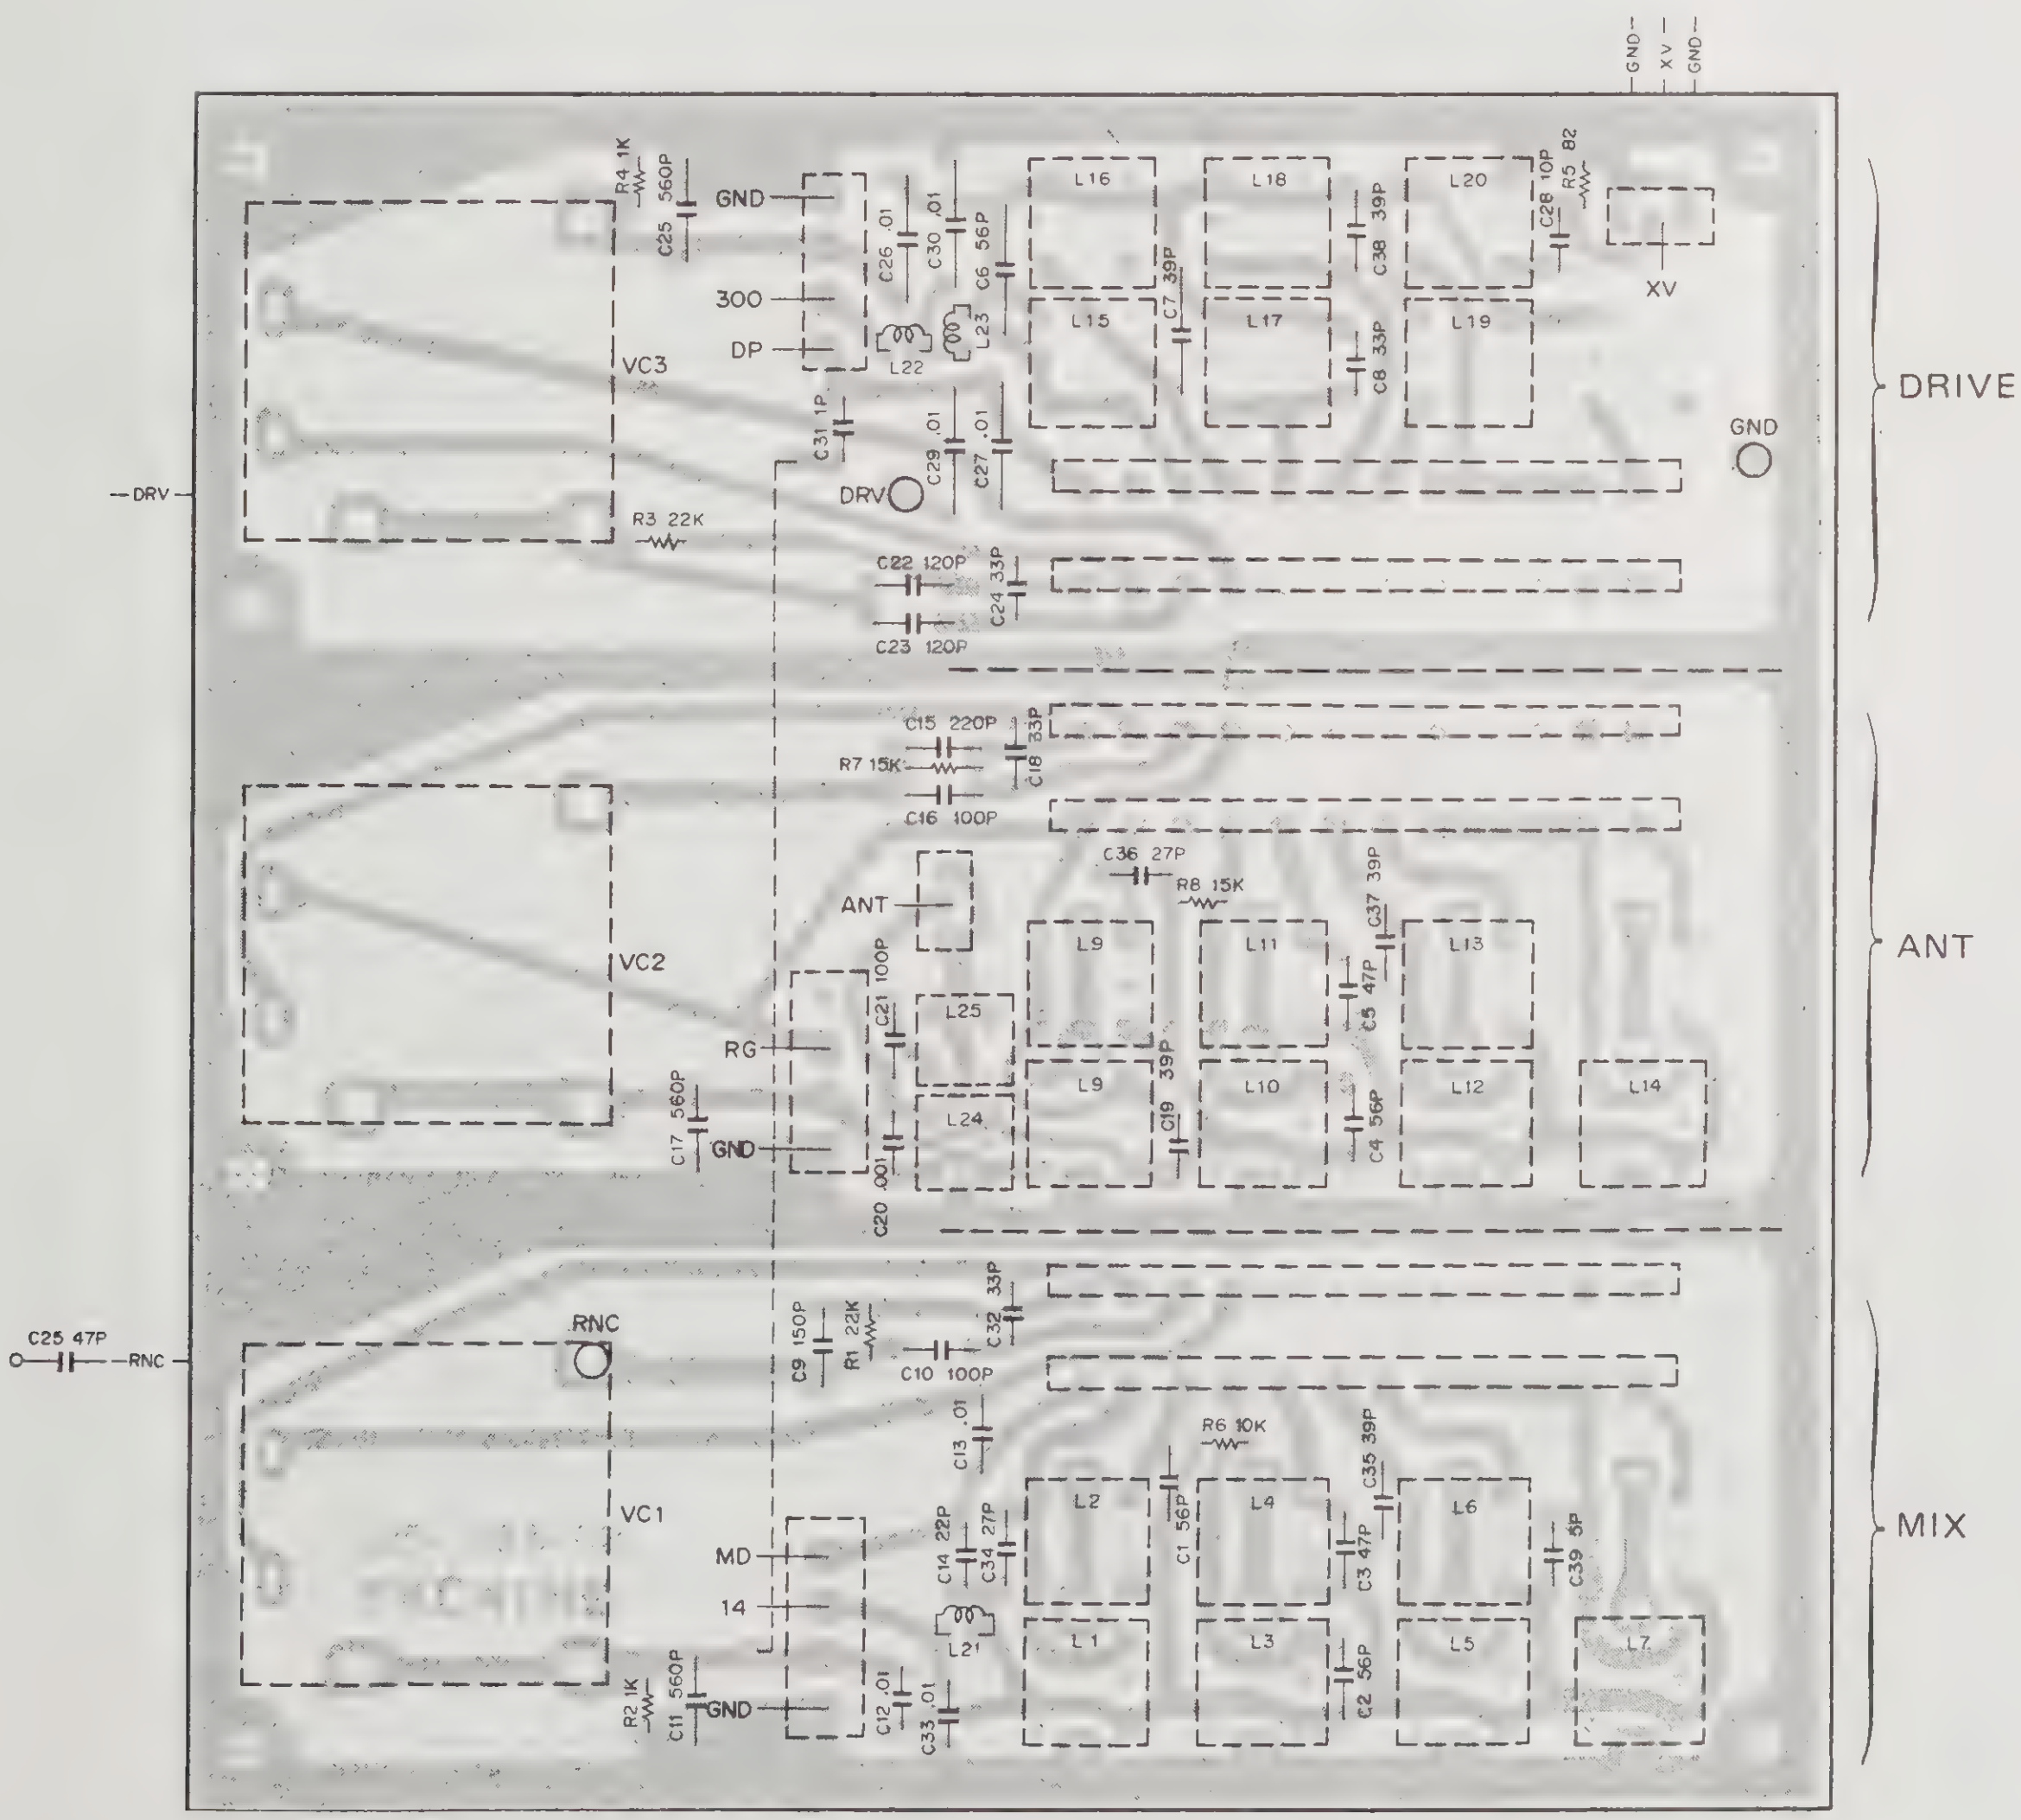

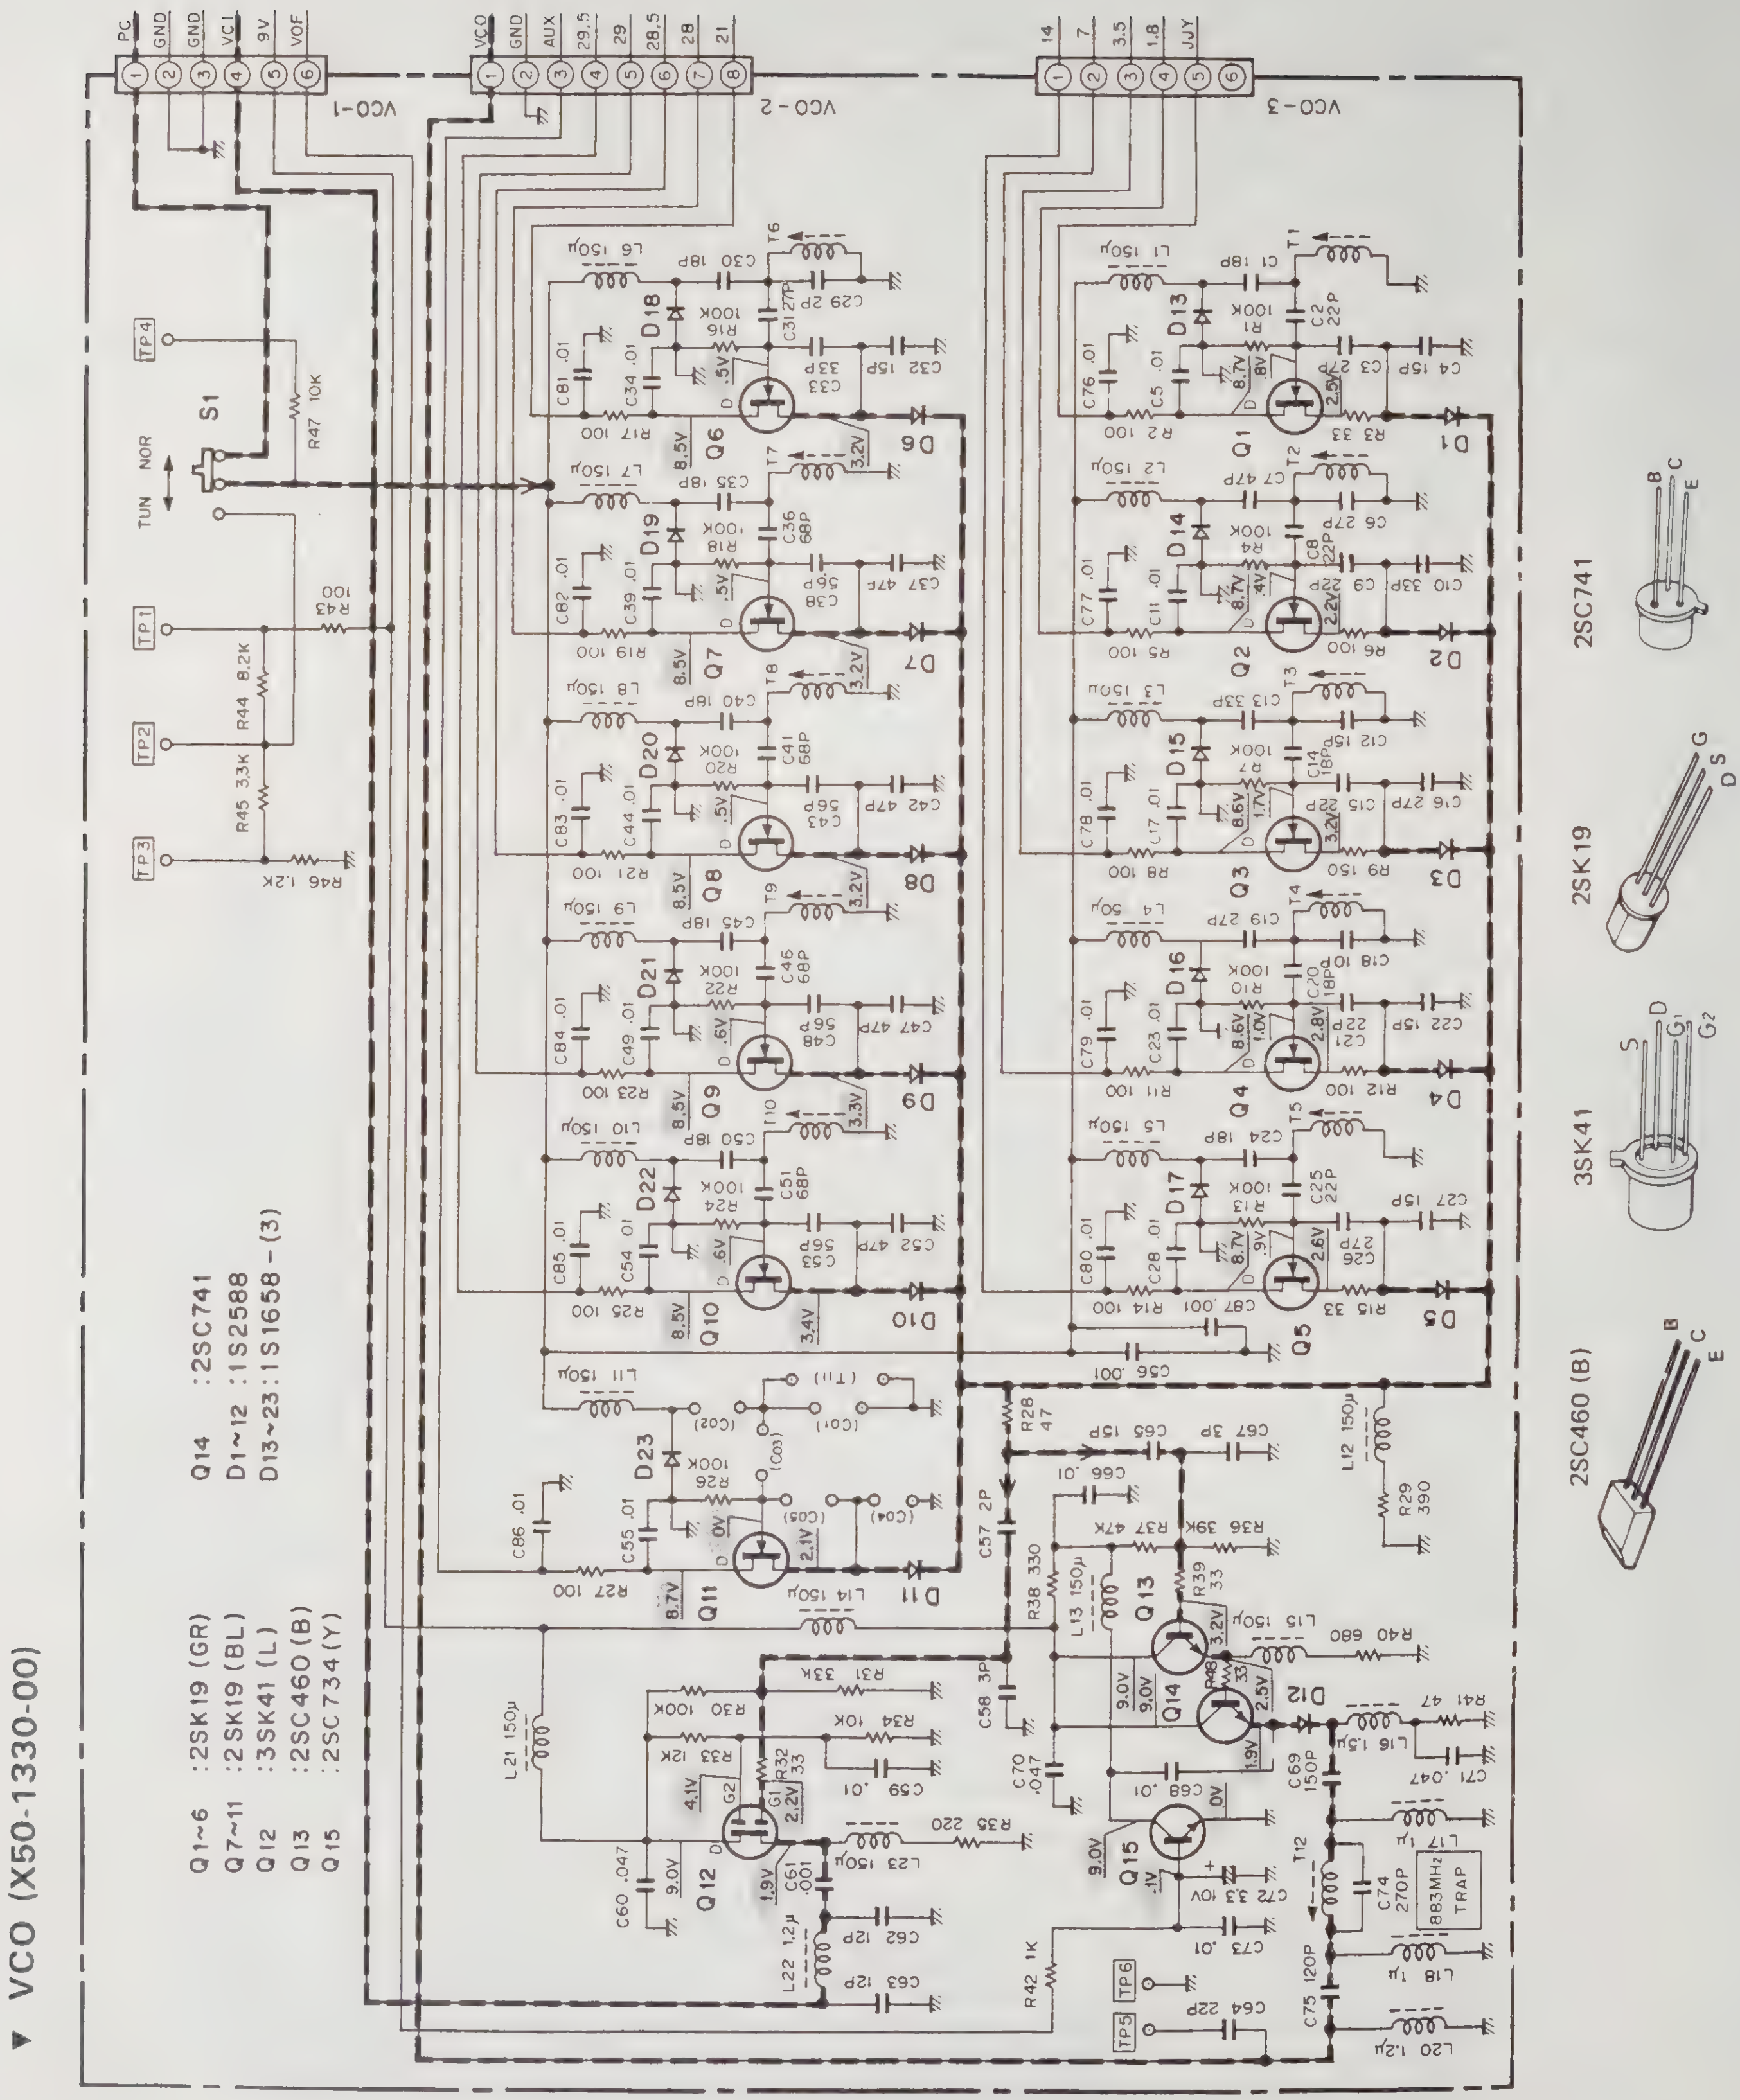
▼ VCO (X50-1330-00)
Q1~6 :2SK19 (GR)
Q7~11 :2SK19 (BL)
Q12 :3SK41 (L)
Q13 :2SC460 (B)
Q15 :2SC734 (Y)
Q14 :2SC741
D1~12 :1S2588
D13~23 :1S1658 - (3)
VCO-1
VCO-2
VCO-3
2SC741
2SK19
3SK41
2SC460 (B)

▼ VCO (X50-1330-00)

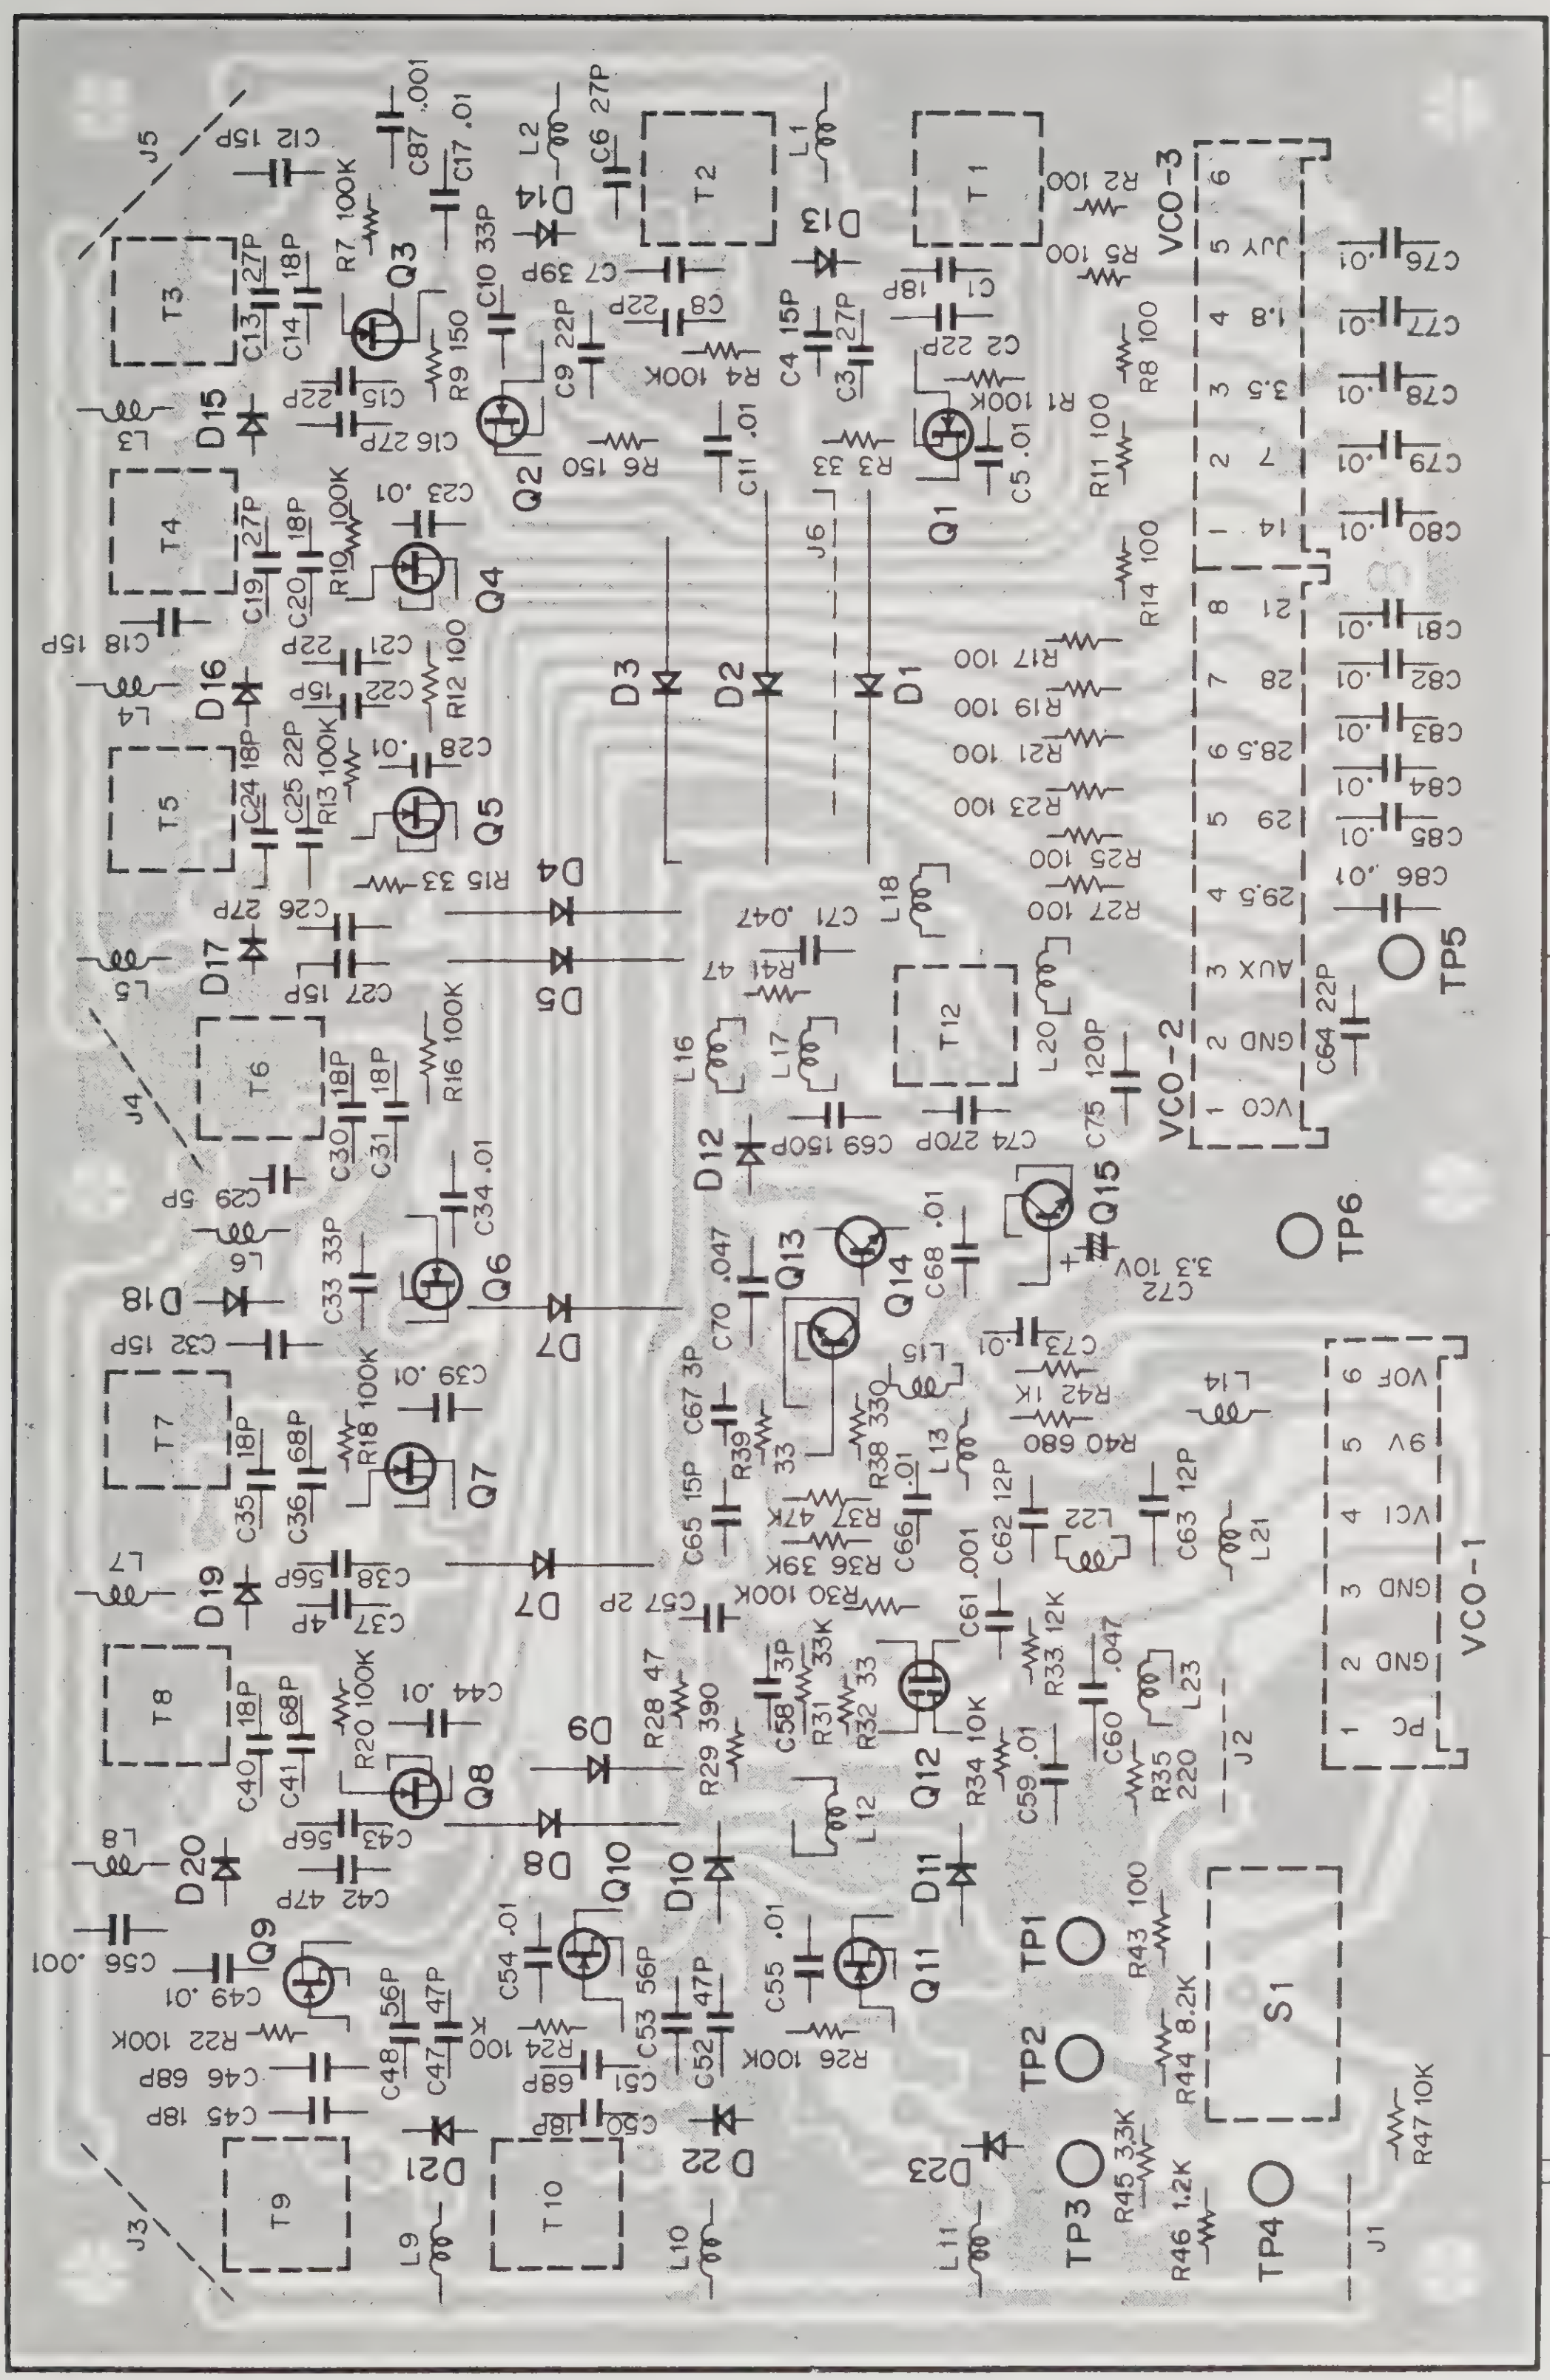

Q1～11: 2SK19(BL), Q12: 3SK41(L), Q13,15: 2SC460(B), Q14: 2SC741, D1～12: 1S2588, D13～23: 1S1658-2

CIRCUIT DIAGRAM / PC BOARD

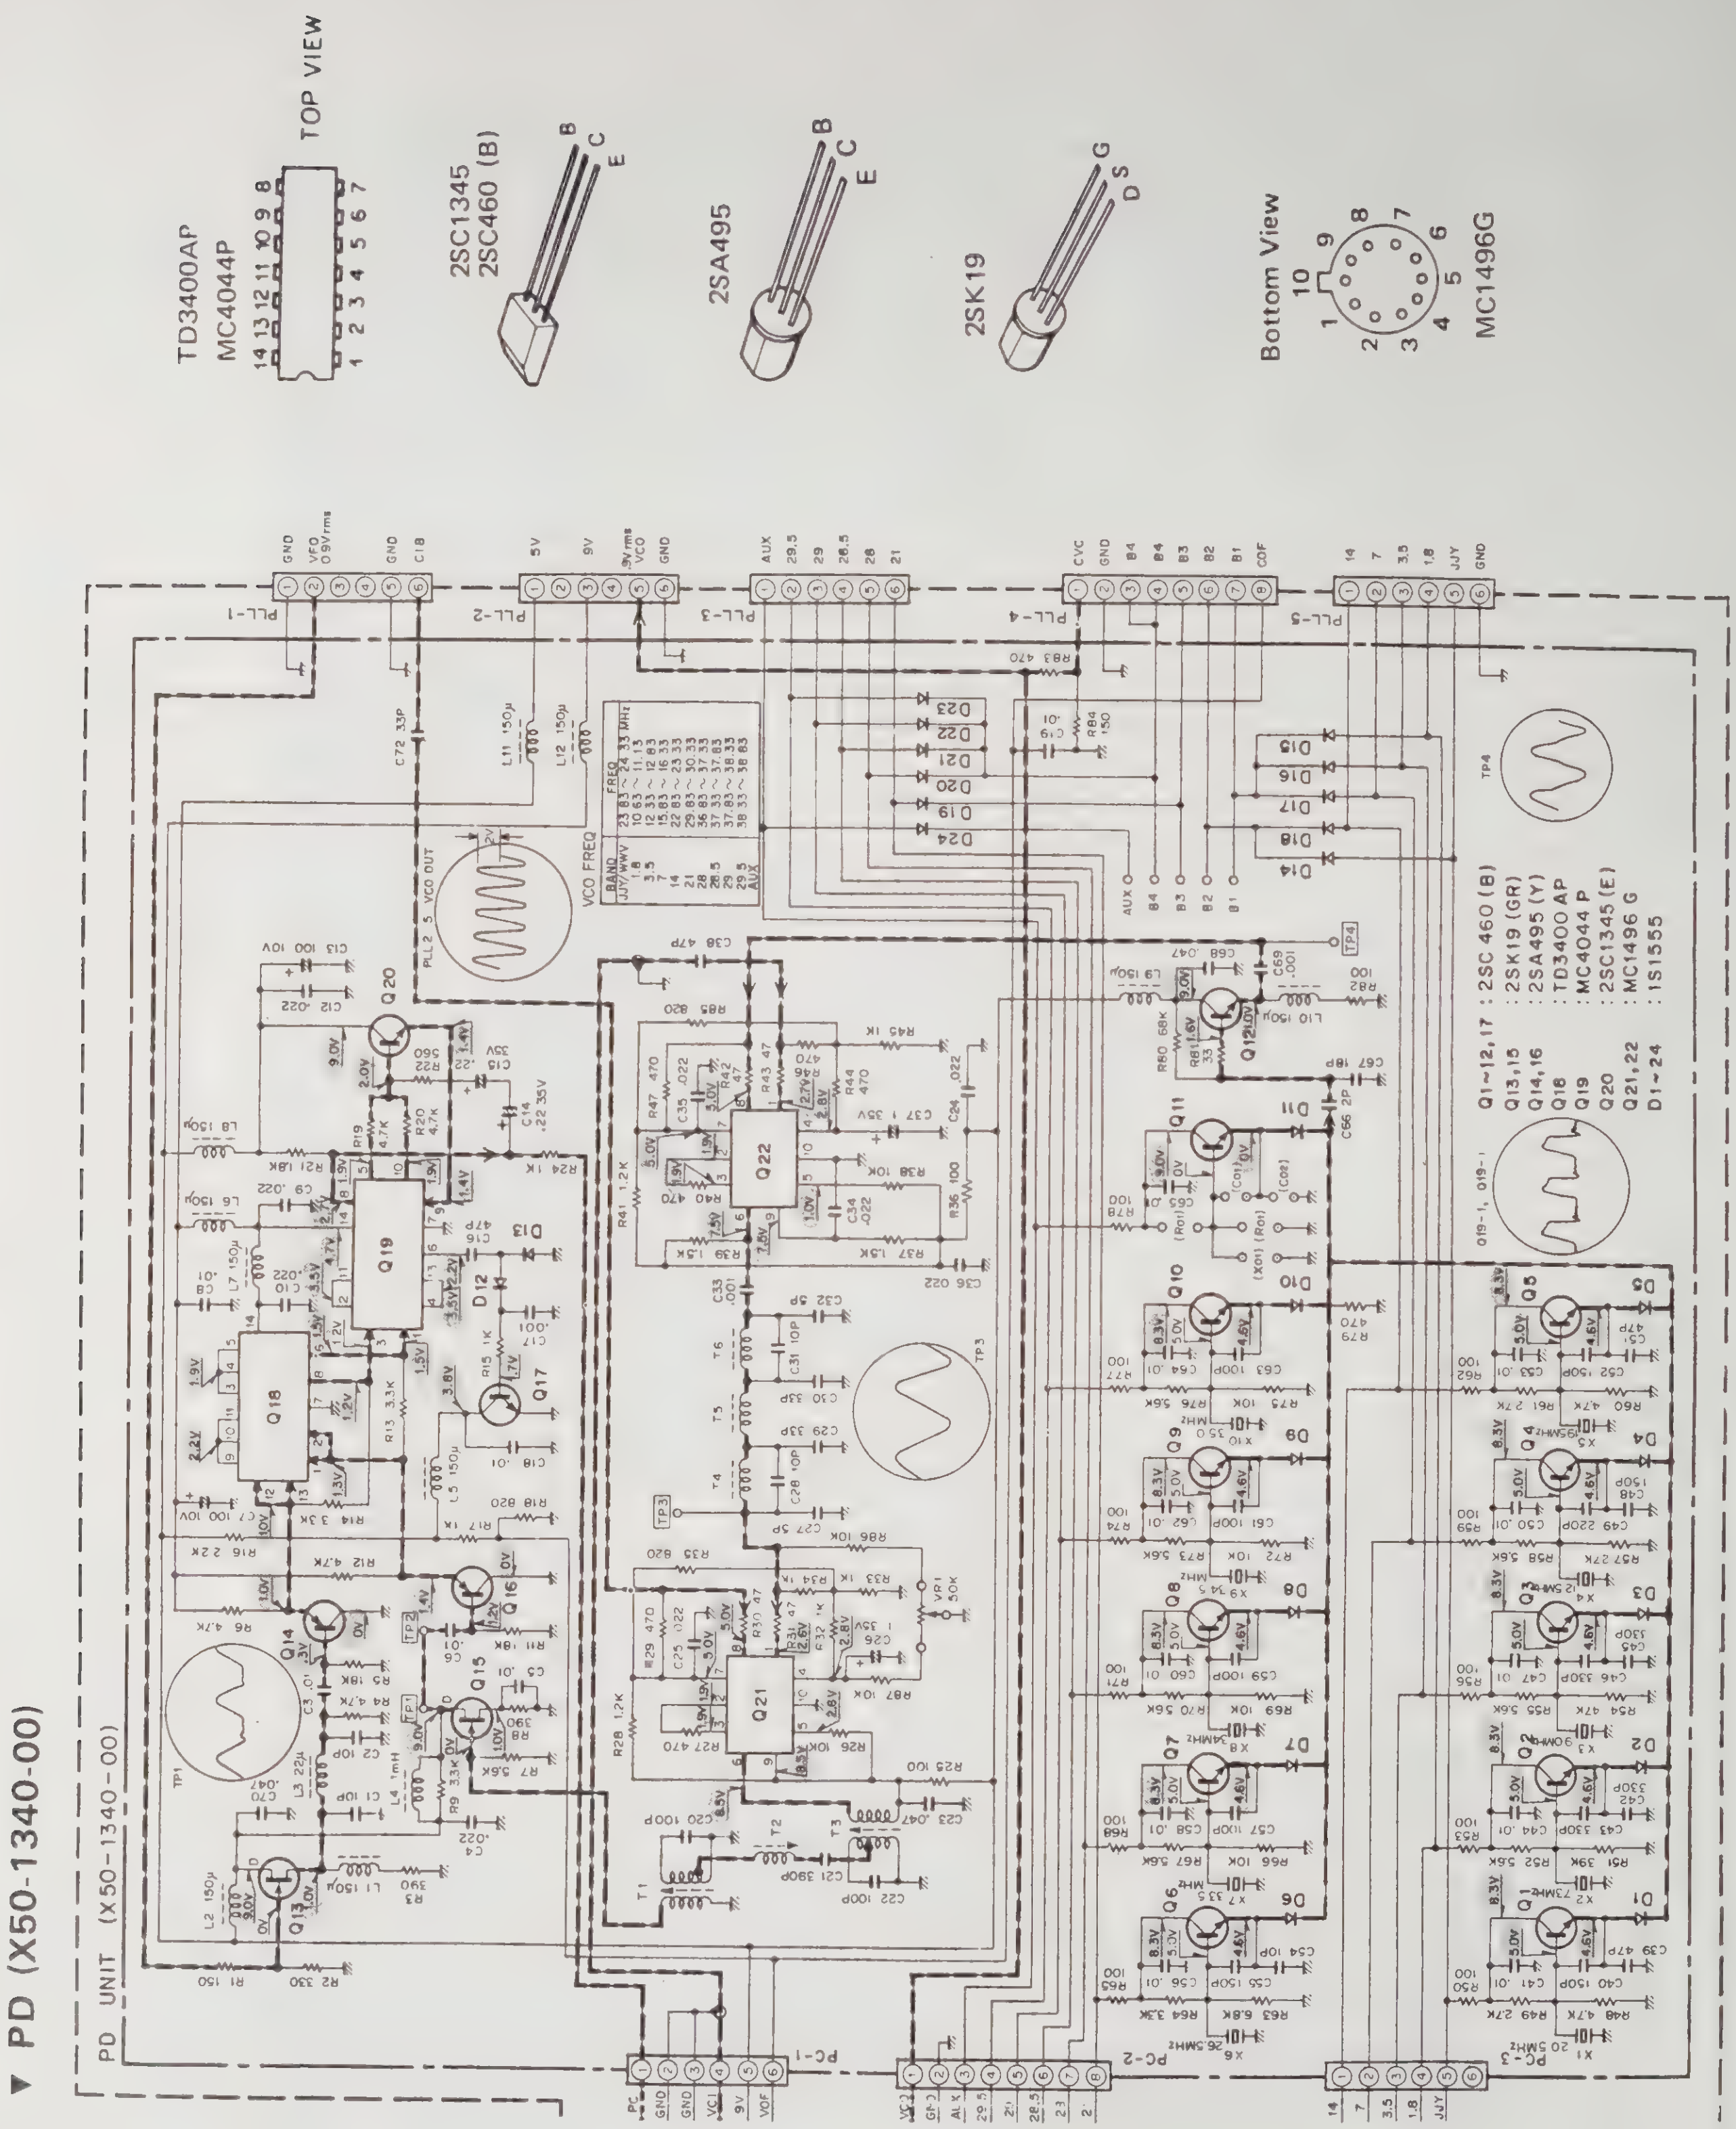

CIRCUIT DIAGRAM / PC BOARD

▼ PD (X50-1340-00)

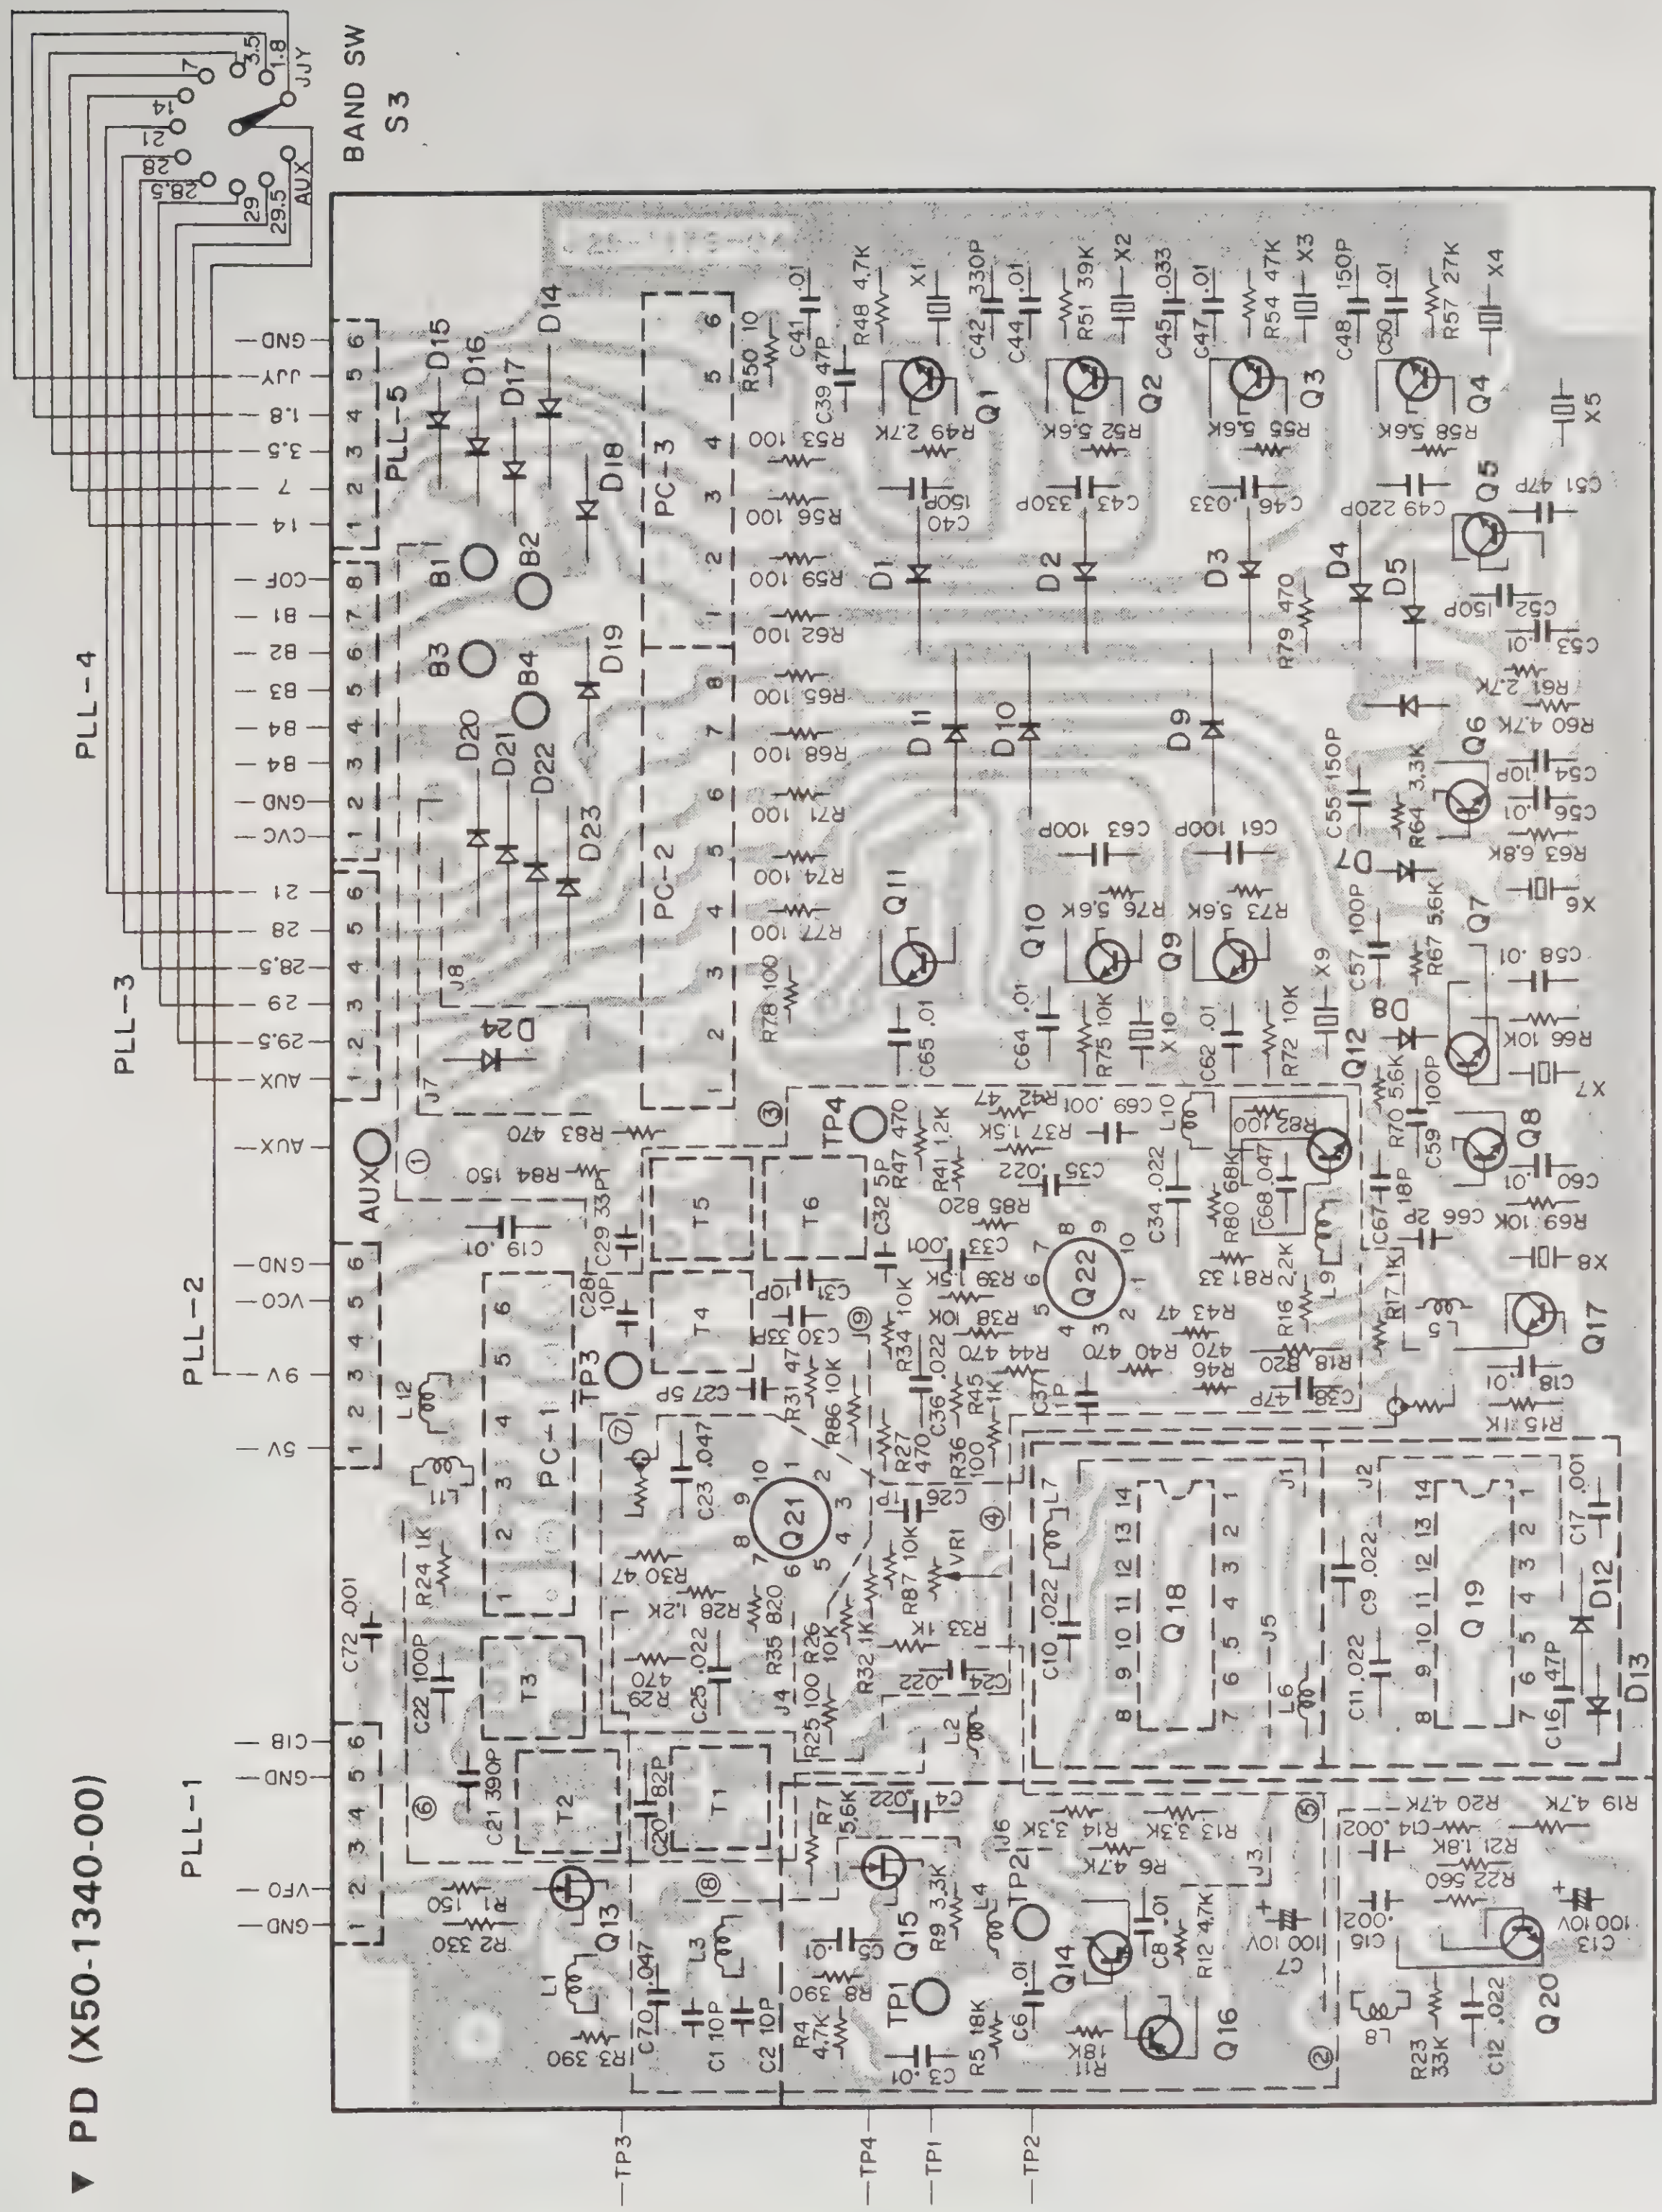

Q1~12,17: 2SC460(B), Q13,15: 2SK19(GR), Q14,16: 2SA495(Y), Q18: TD3400AP, Q19: MC4044P, Q20: 2SC1345(E), Q21,22: MC1496G, D1~24: 1S1555

CIRCUIT DIAGRAM / PC BOARD

▼ FINAL (X56-1200-00)

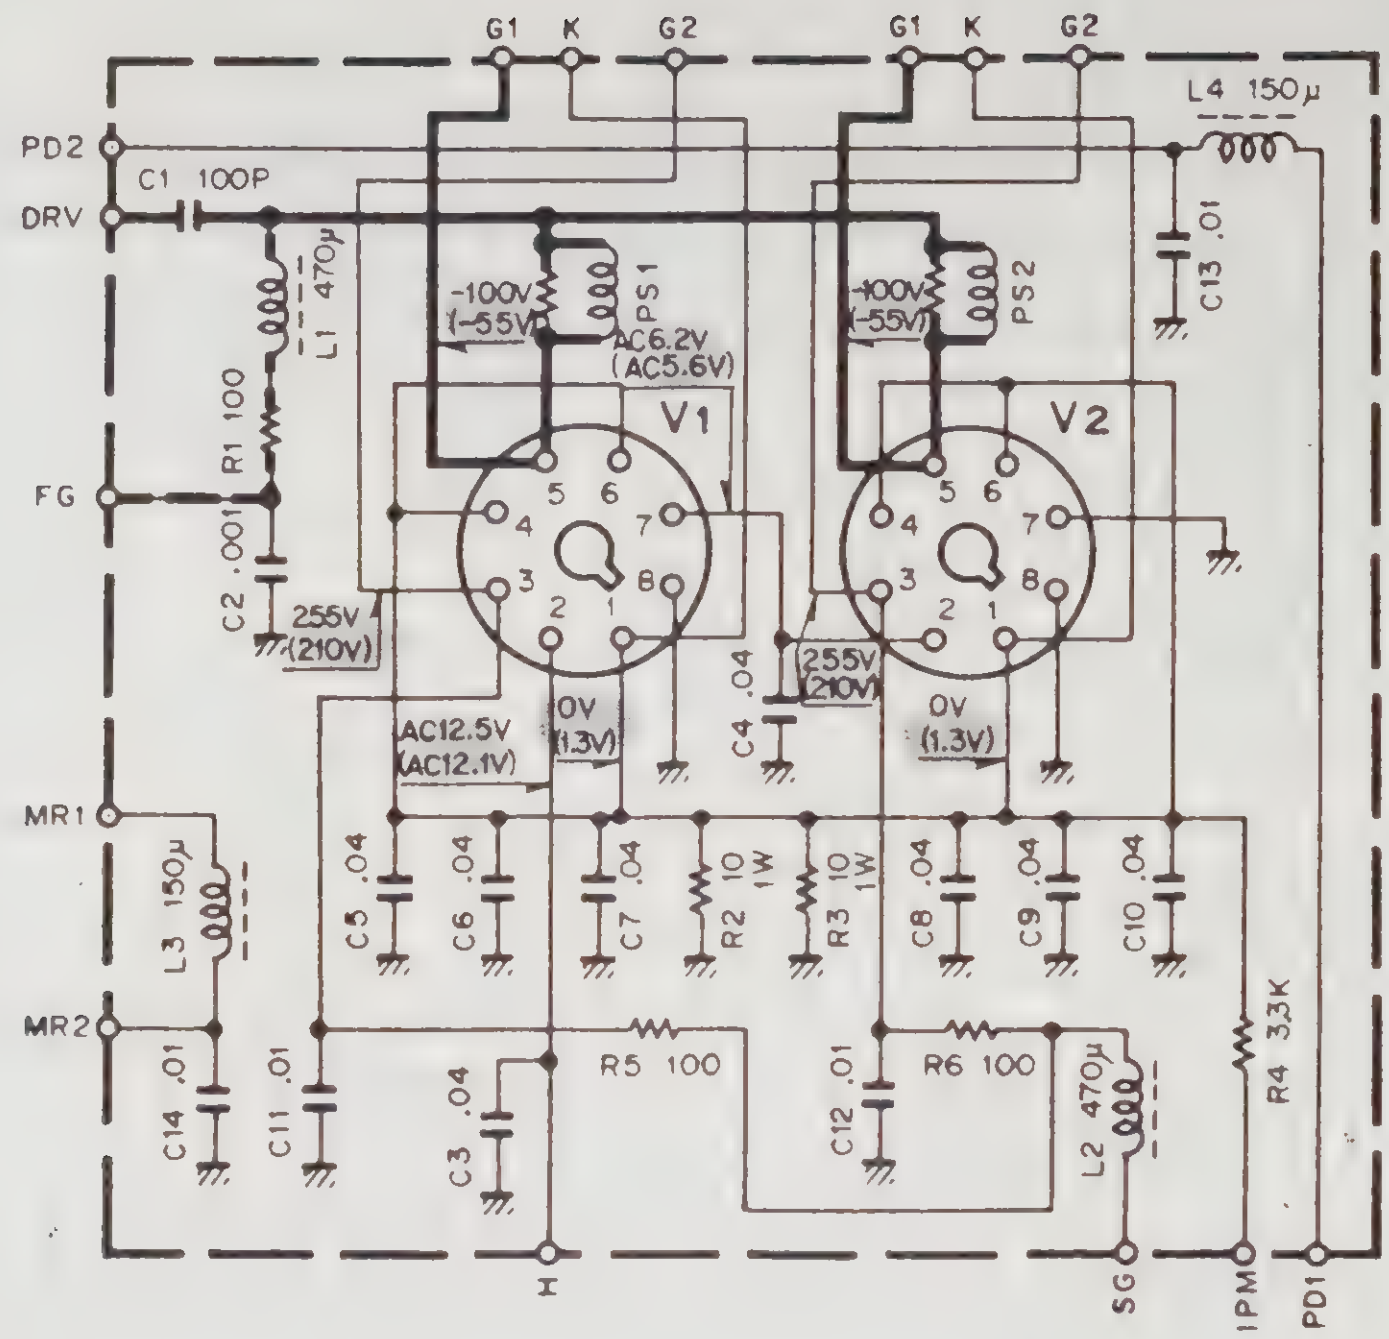

▼ FINAL (X56-1200-00)

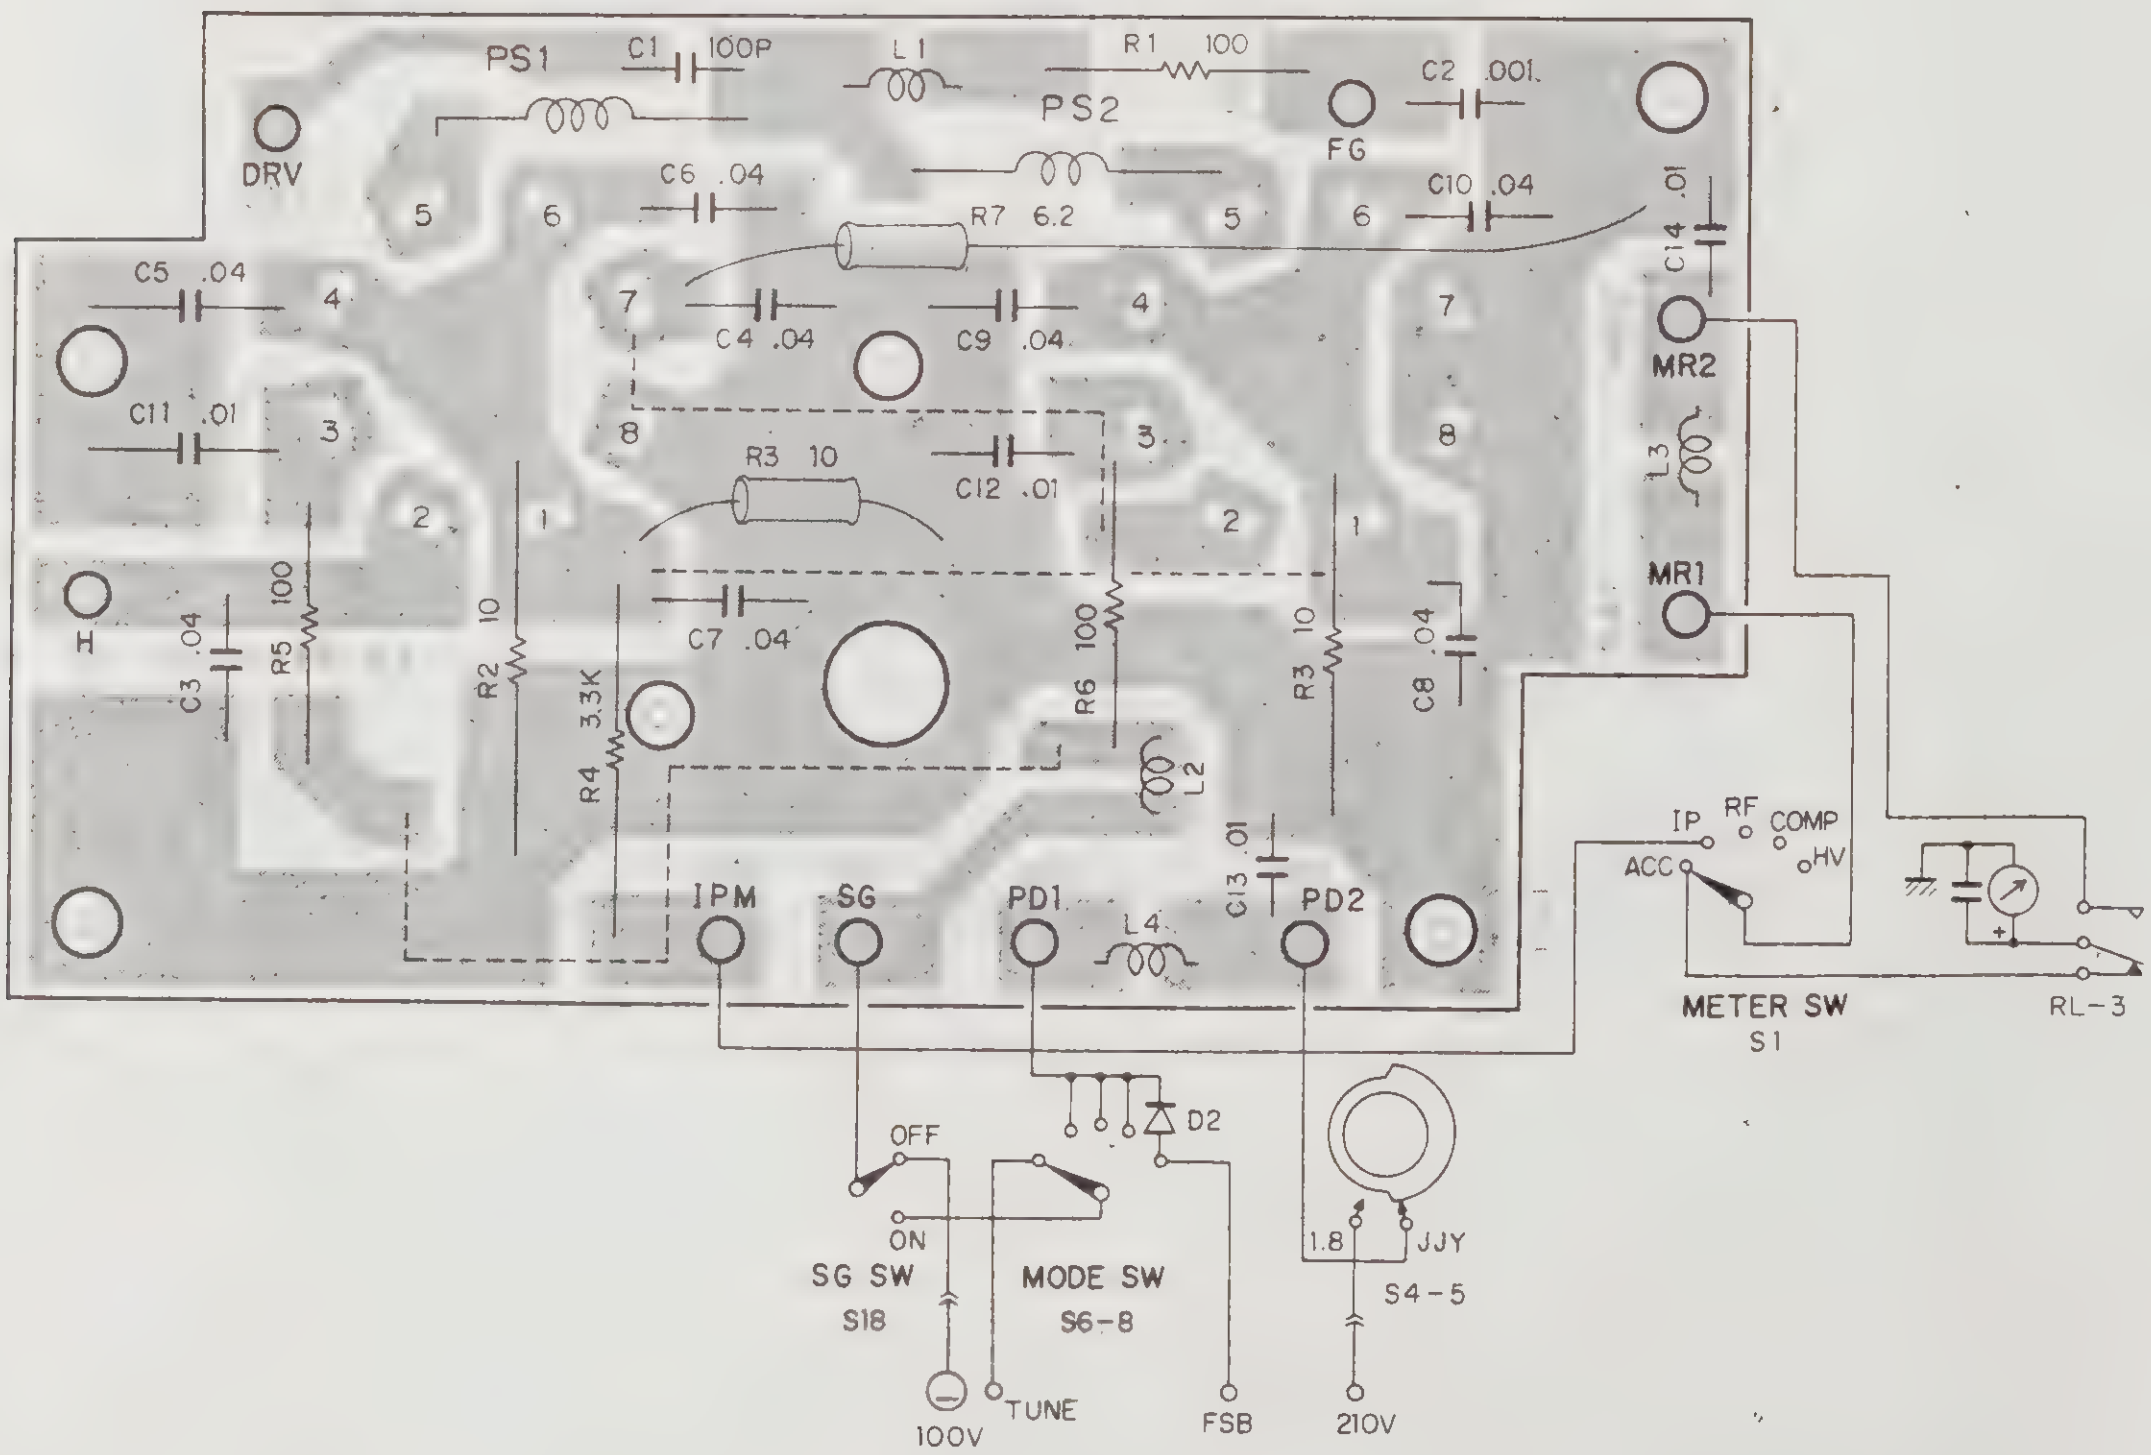

▼ RECTIFIER (X43-1090-02)

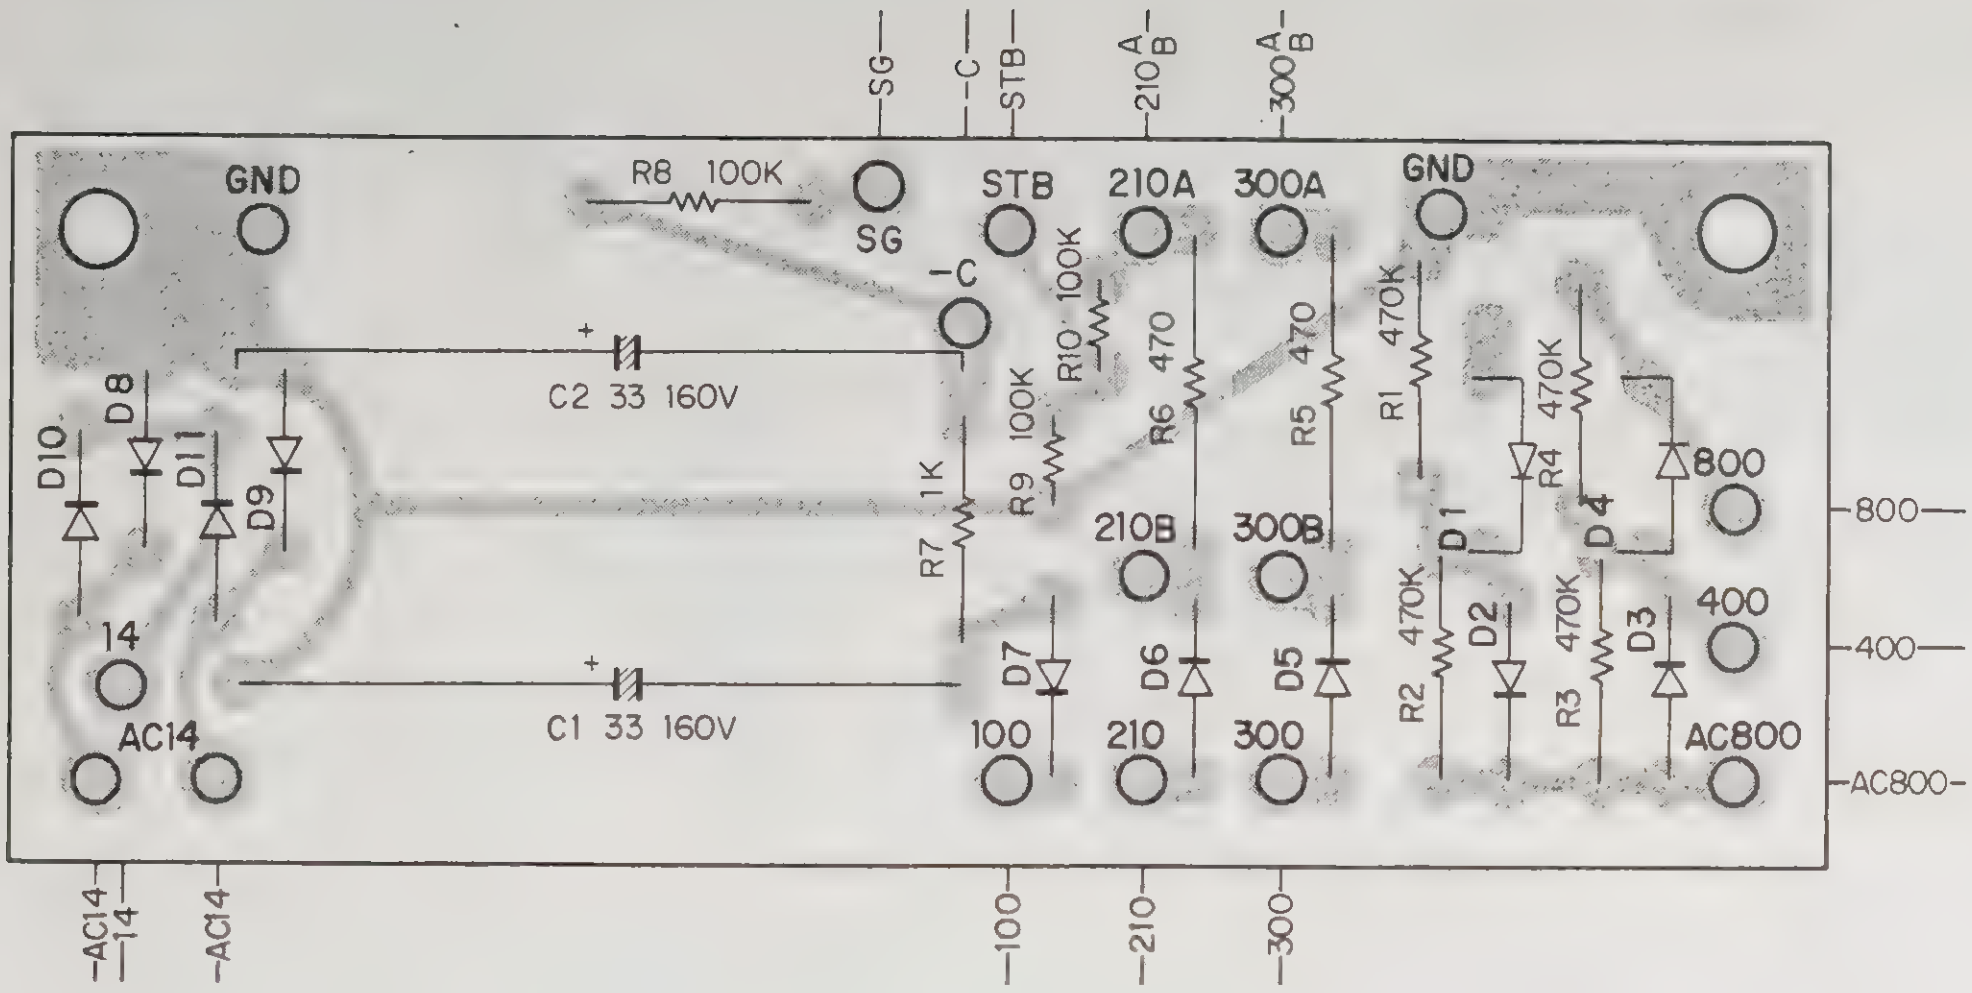

D1～6: V08J, D7: V06E, D8～11: V03C

▼ INDICATER (X54-1180-00)

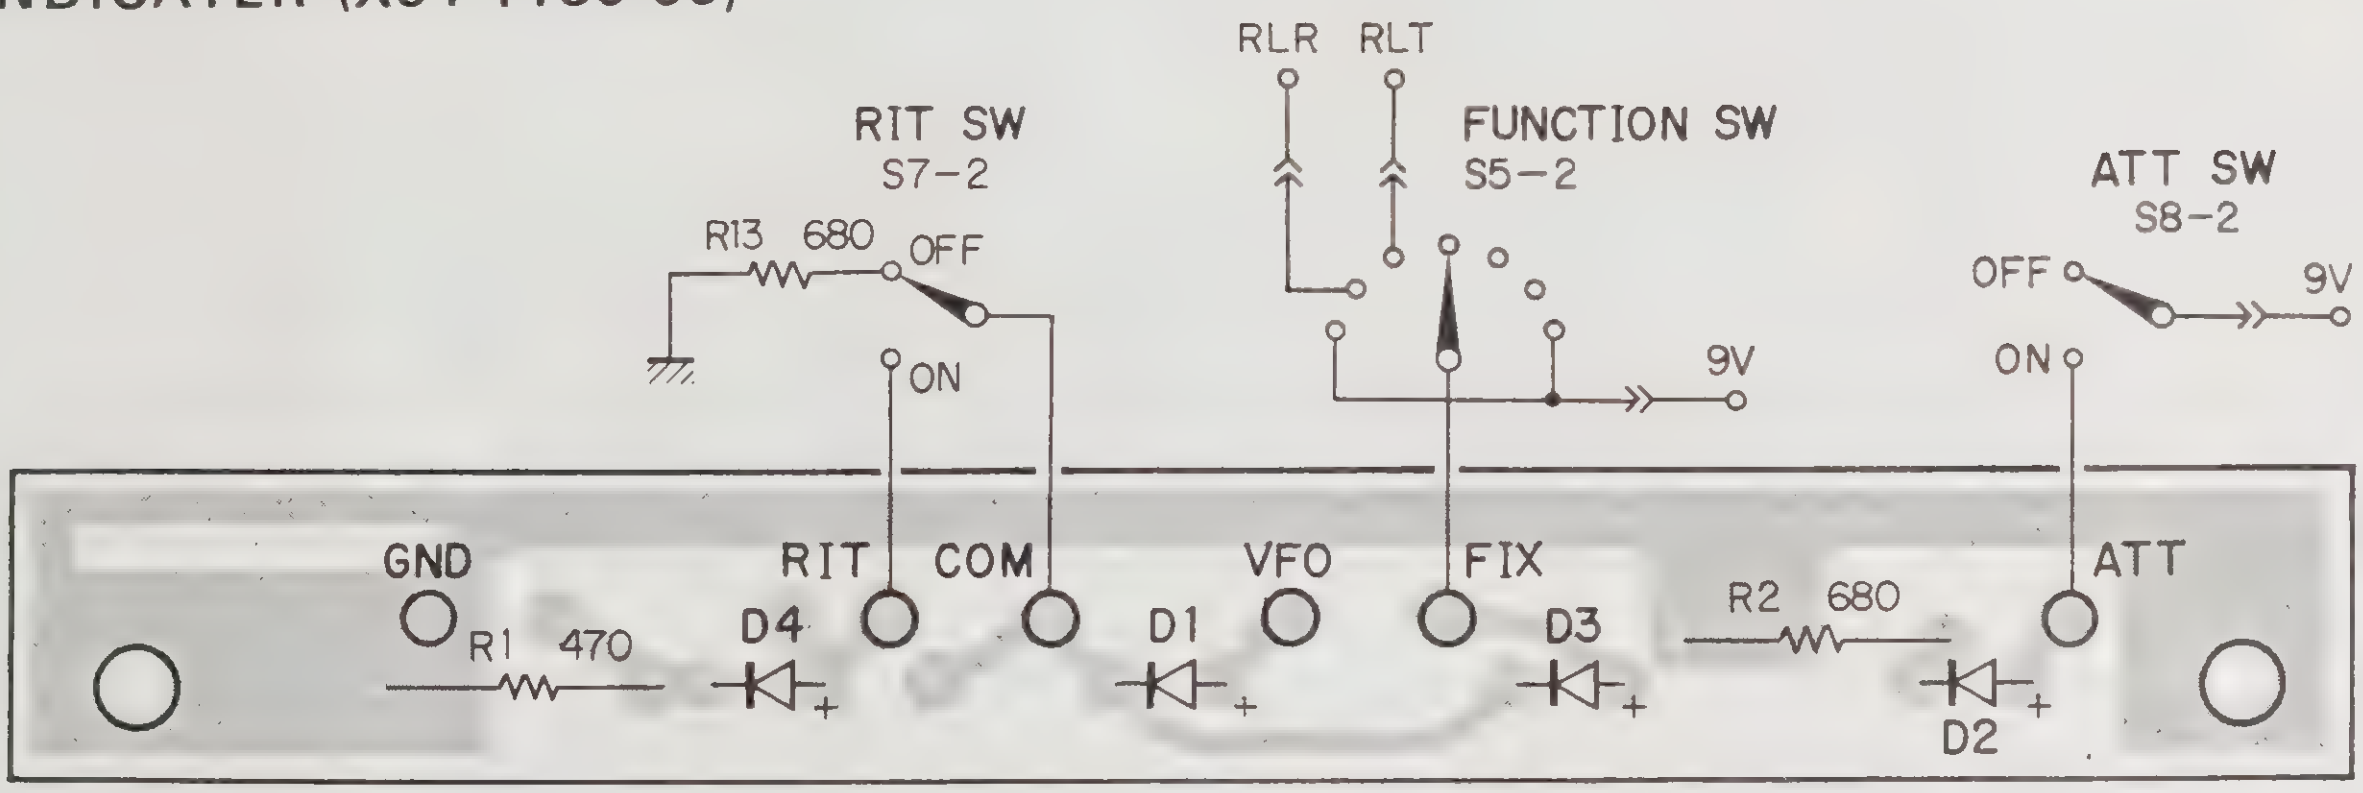

D1～4: SEL-103W

▼ MARKER (X52-0005-01)

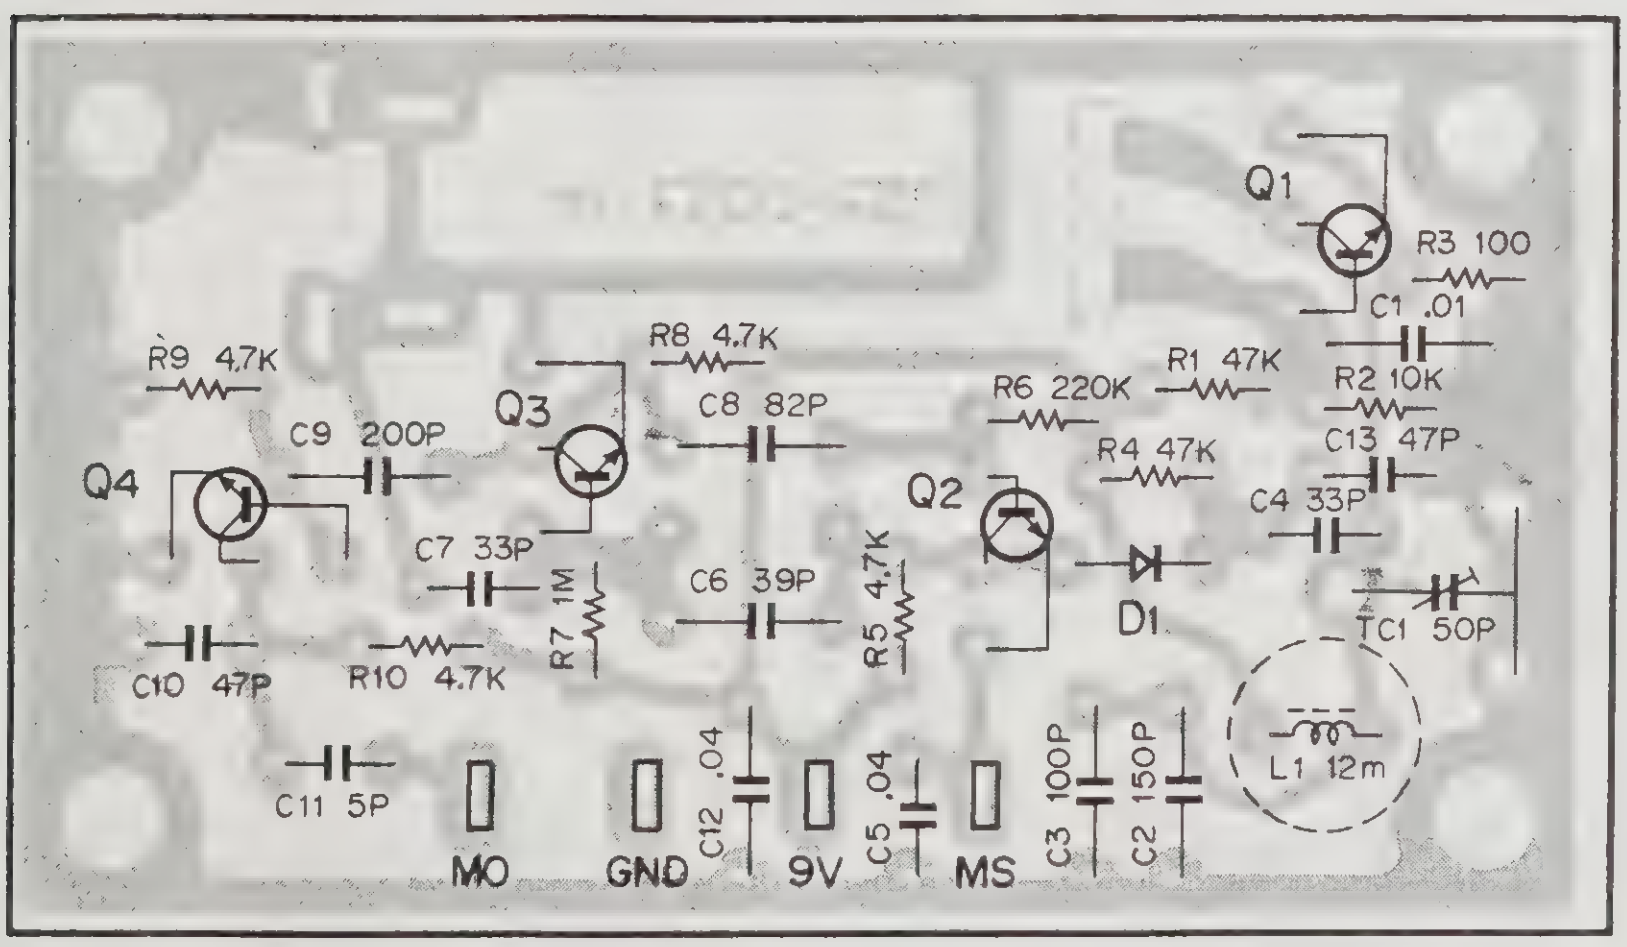

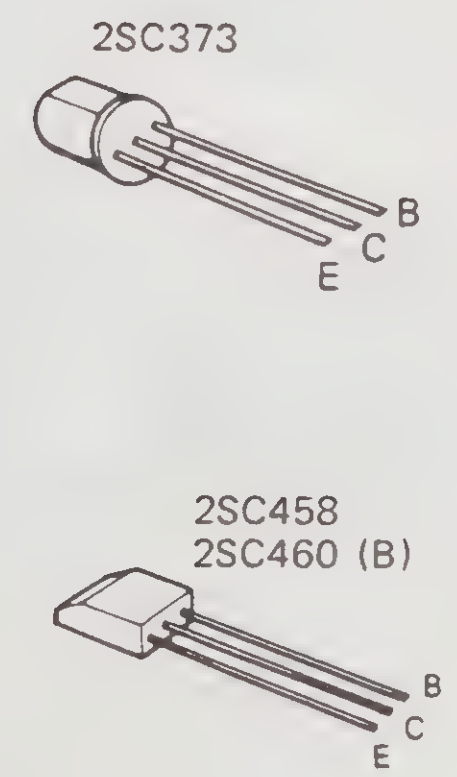

Q1,4: 2SC373 or 2SC458(B), Q2,3: 2SC373, D1: 1N60

PC BOARD

▼ RELAY (X43-1190-00)

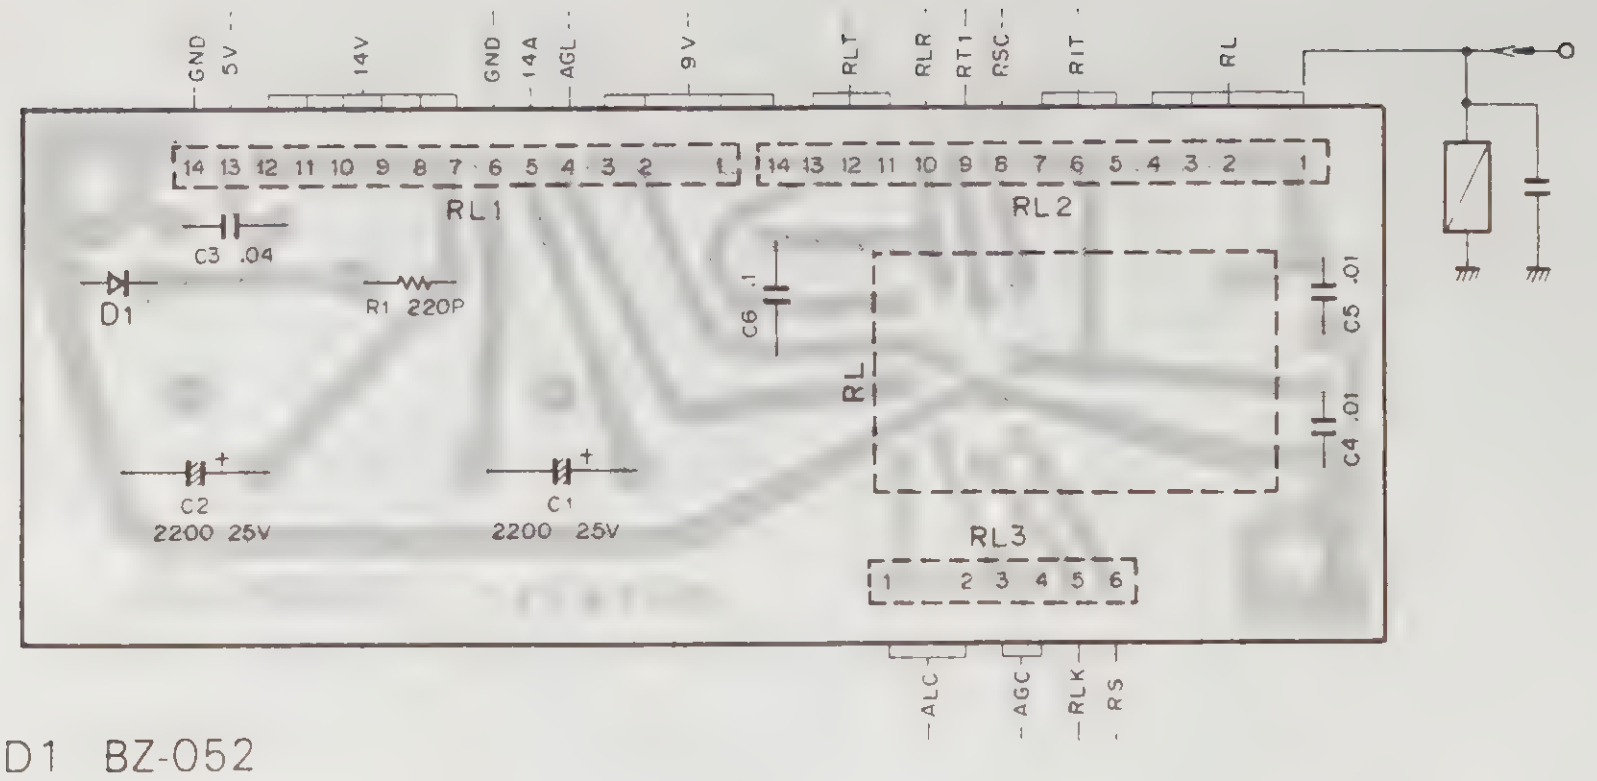

D1 BZ-052

▼ VOX-VR (X54-1190-00)

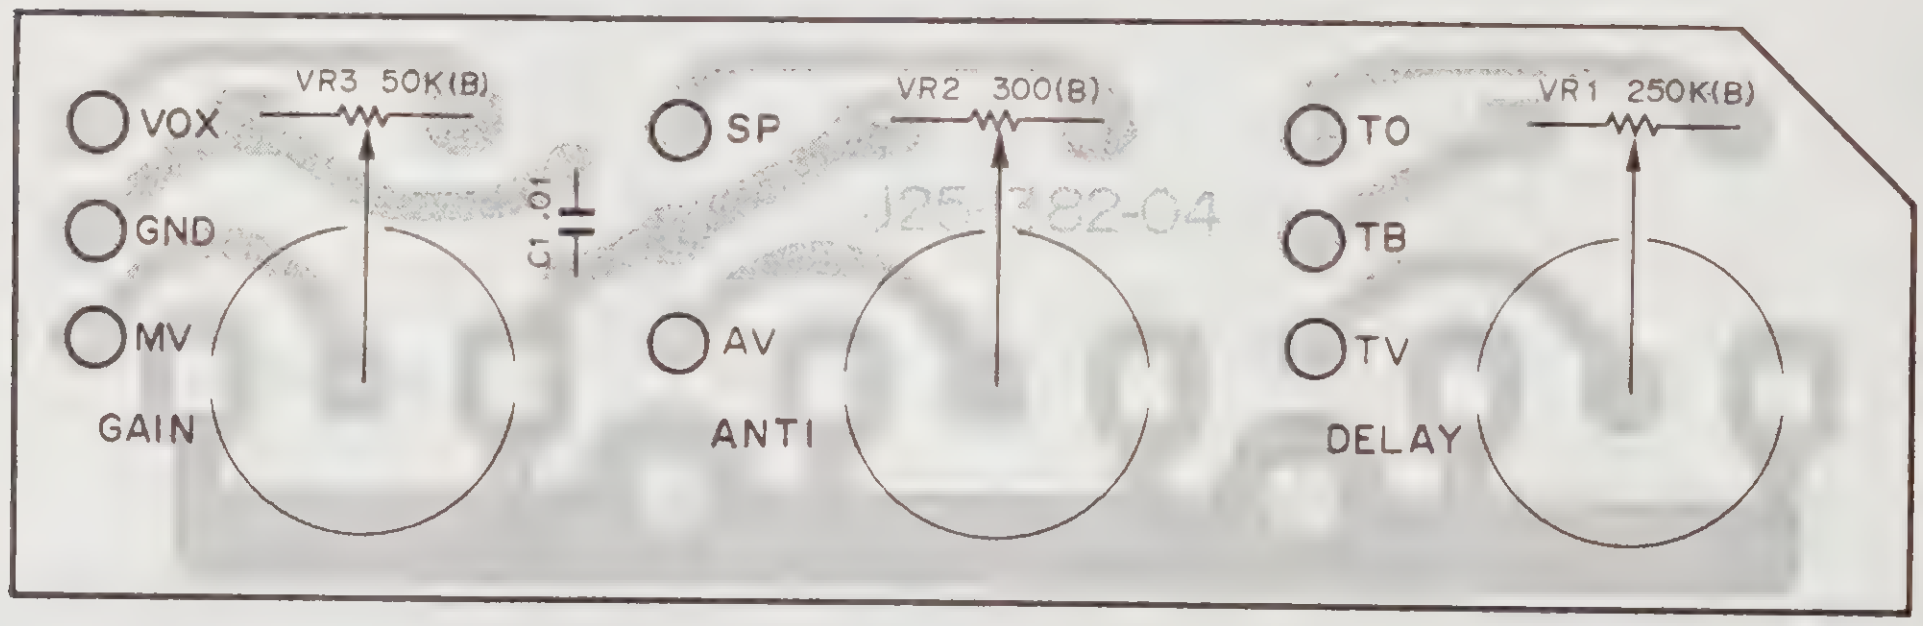

▼ HV (X43-1110-00)

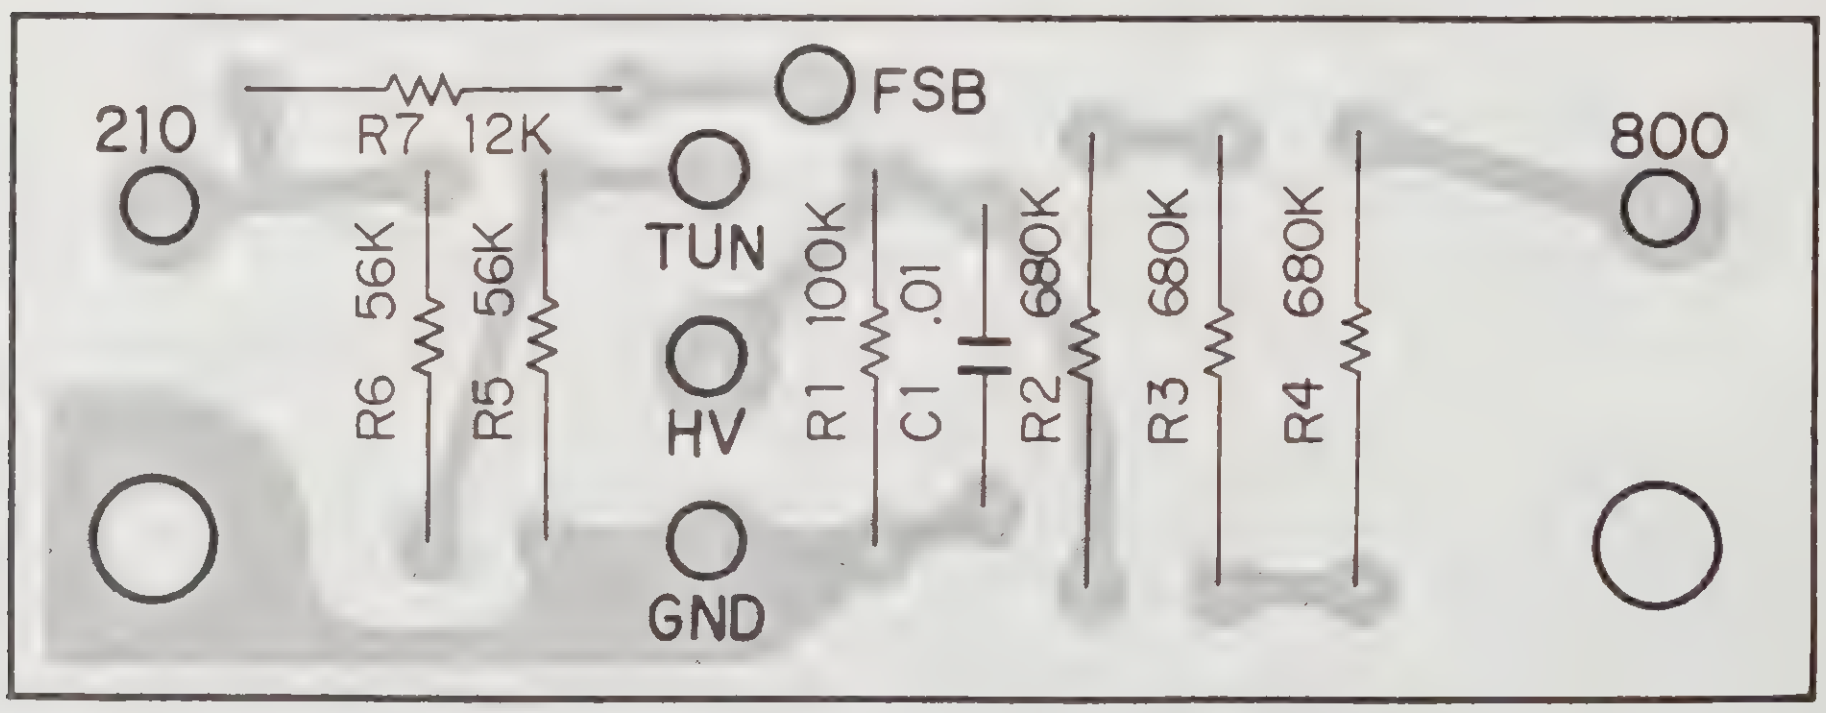

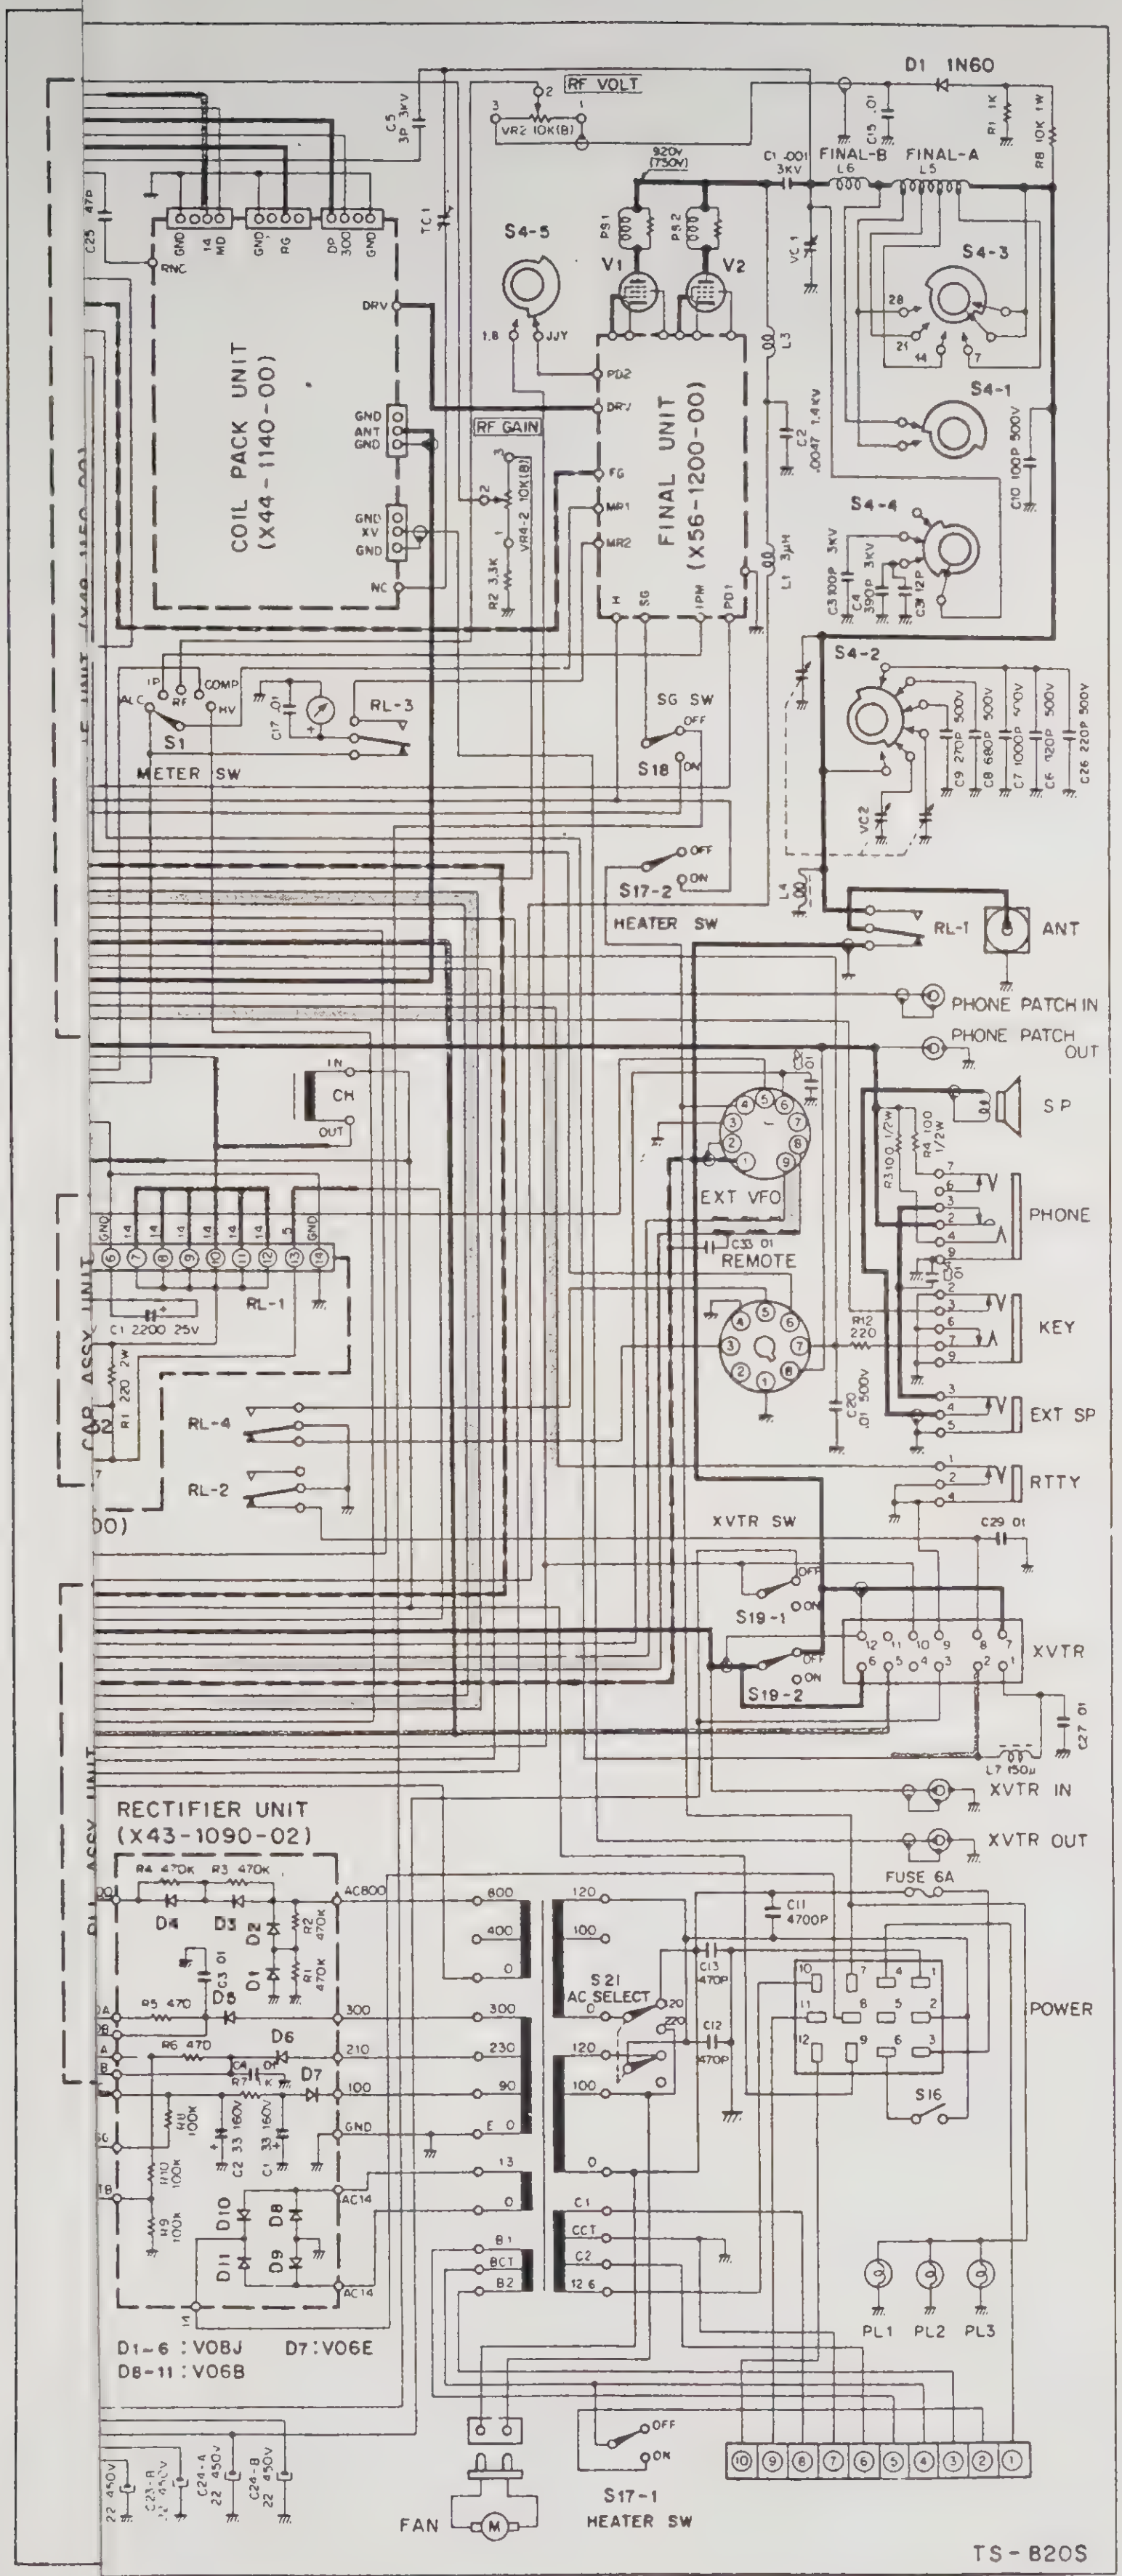

DG-1 (option) Installed.

PC BOARD

▼ RELAY (X43-1190-00)

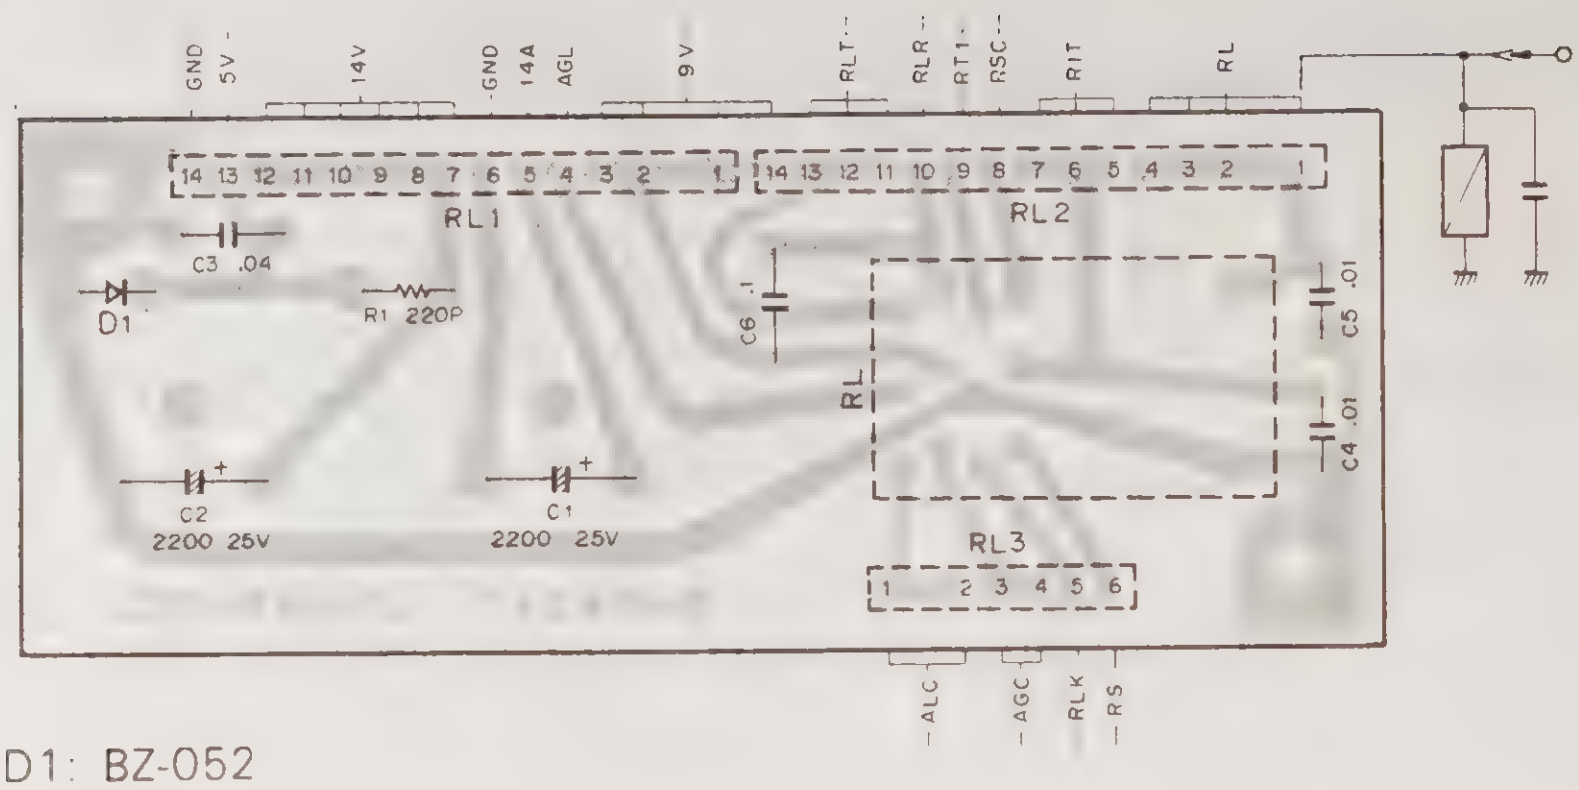

D1: BZ-052

▼ VOX-VR (X54-1190-00)

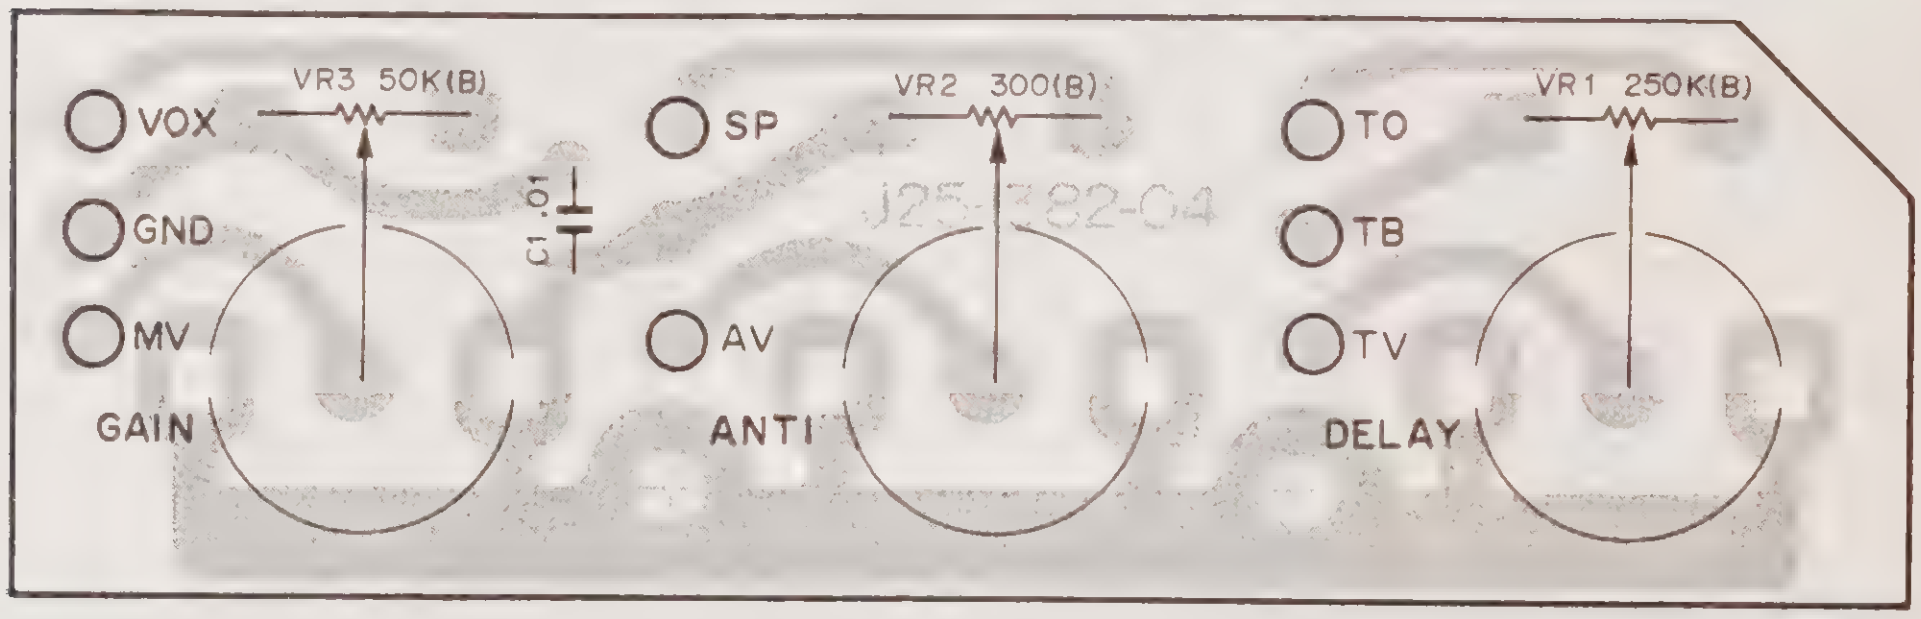

▼ HV (X43-1110-00)

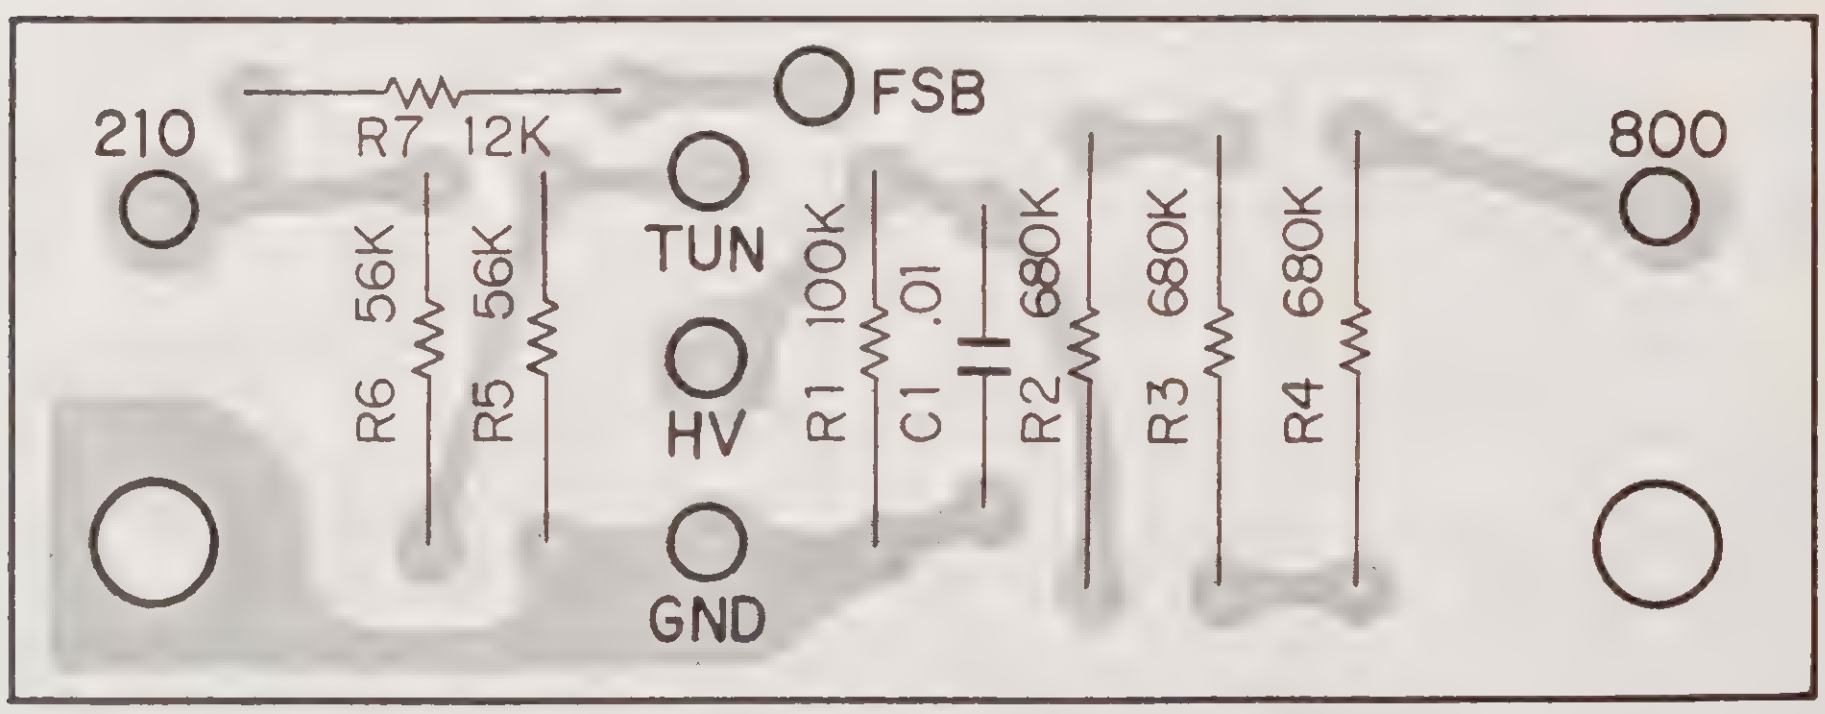

SCHEMATIC DIAGRAM

——— SIGNAL - - - - - - CONTROL SIGNAL, ——— COMMON POWER SOURCE, - - - - - - TB,RB,CONTROL POWER SOURCE, VOLTAG (TRANSMISSION)

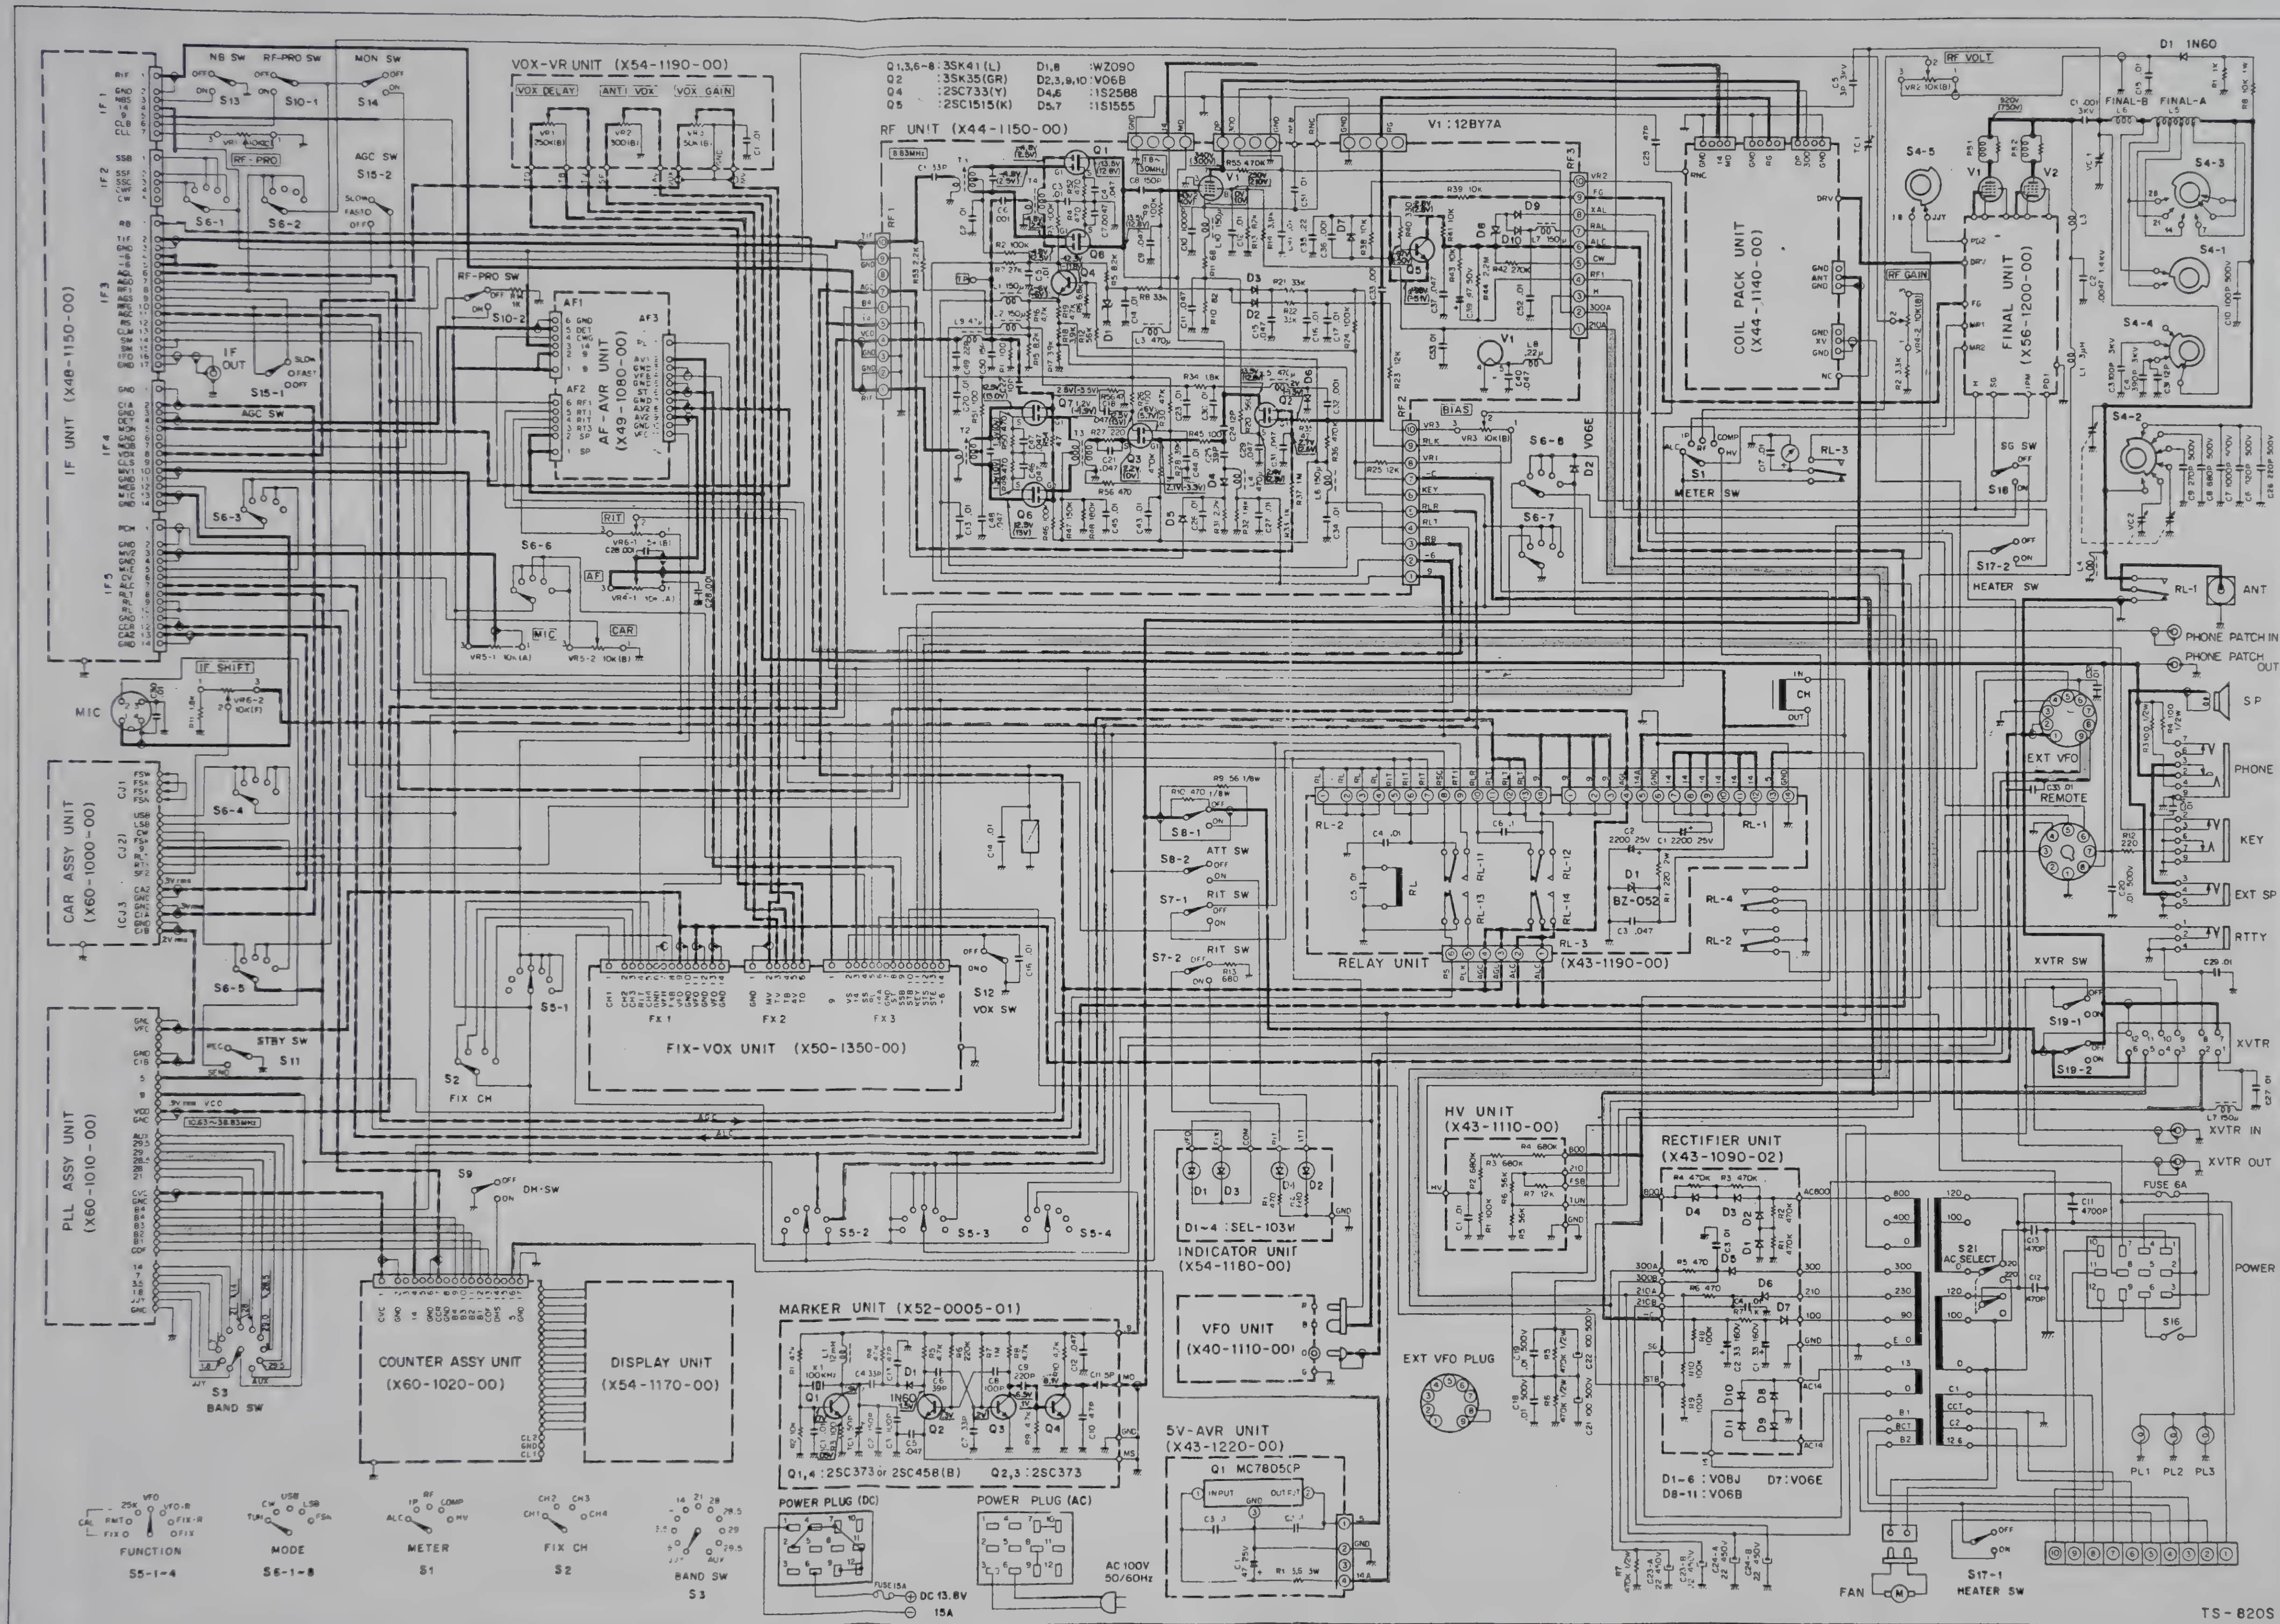

DG-1 (option) Installed.

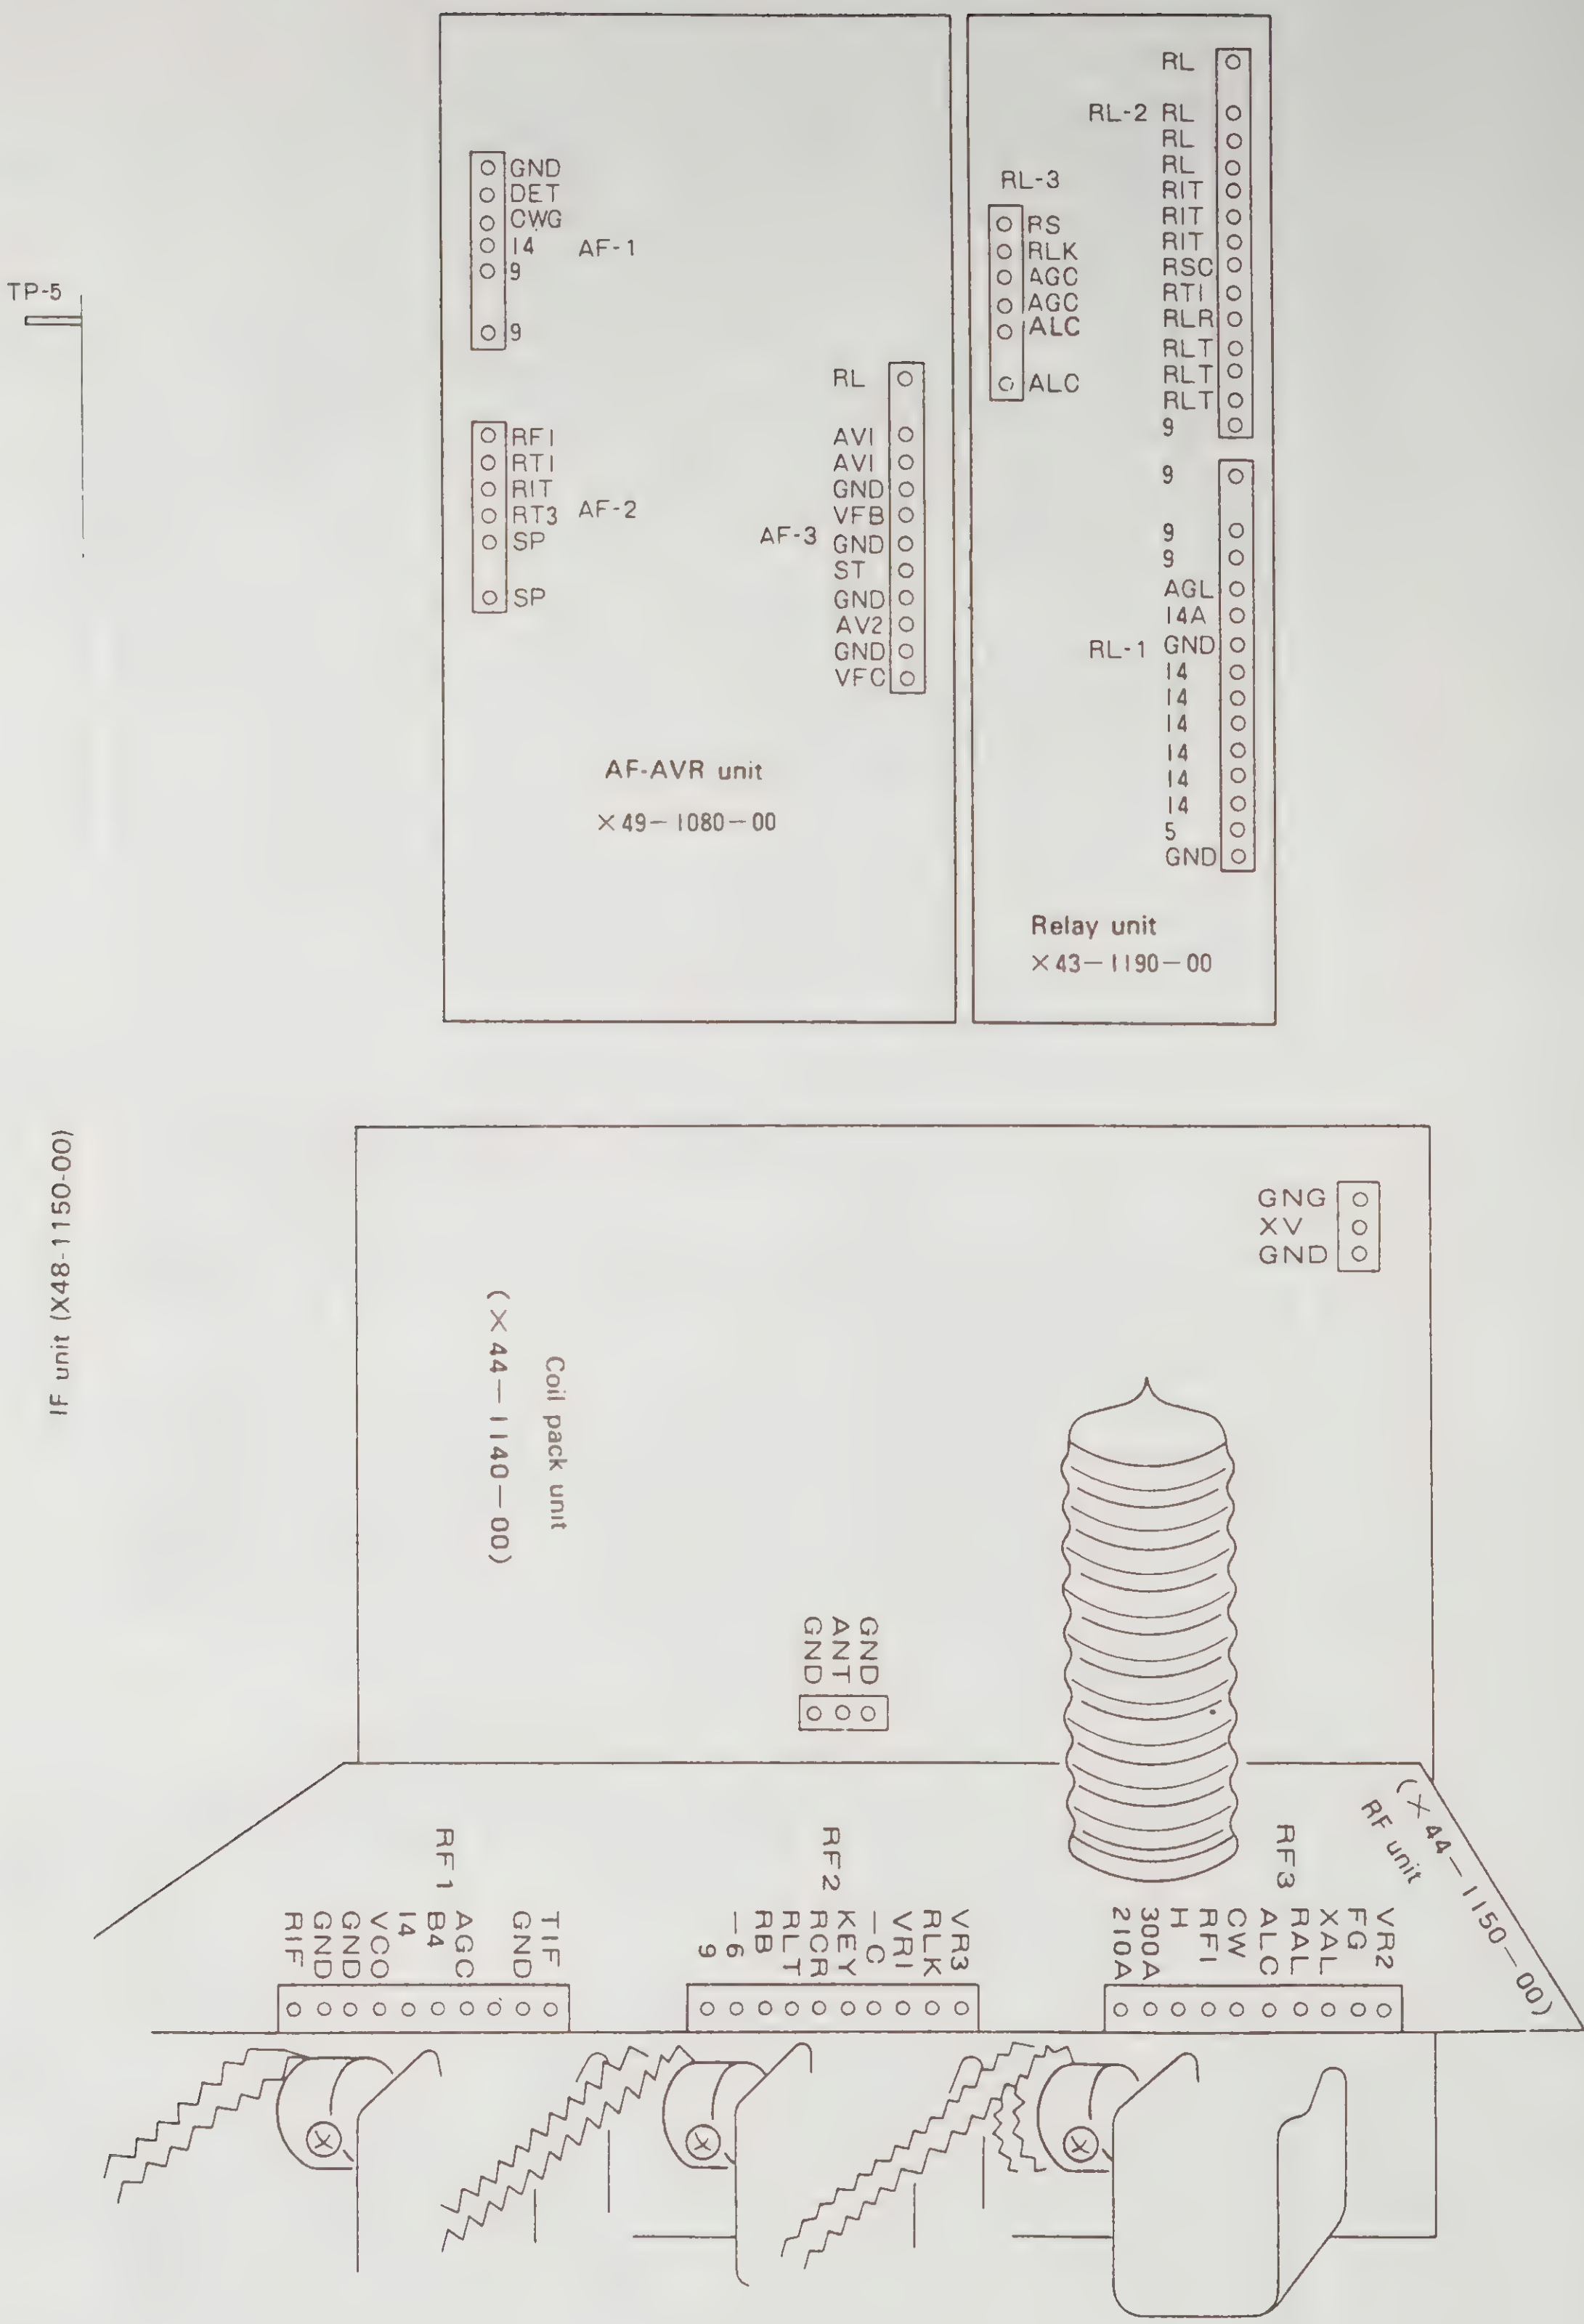
TP-5
IF unit (X48-1150-00)
GND
DET
CWG
14
9
9
AF-1
RFI
RTI
RIT
RT3
SP
SP
AF-2
RL
AVI
AVI
GND
VFB
GND
ST
GND
AV2
GND
VFC
AF-3
AF-AVR unit
×49−1080−00
RL-3
RS
RLK
AGC
AGC
ALC
ALC
RL
RL-2
RL
RL
RL
RIT
RIT
RIT
RSC
RTI
RLR
RLT
RLT
RLT
9
9
9
9
AGL
14A
RL-1
GND
14
14
14
14
14
14
5
GND
Relay unit
×43−1190−00
GNG
XV
GND
Coil pack unit
(×44−1140−00)
GND
ANT
GND
(×44−1150−00)
RF unit
RF1
TIF
GND
AGC
B4
14
VCO
GND
RIF
RF2
VR3
RLK
VRI
−C
KEY
RCR
RLT
RB
−6
9
RF3
VR2
FG
XAL
RAL
ALC
CW
RFI
H
300A
210A

POWER SOURCE, VOLTAG, (TRANSMISSION)

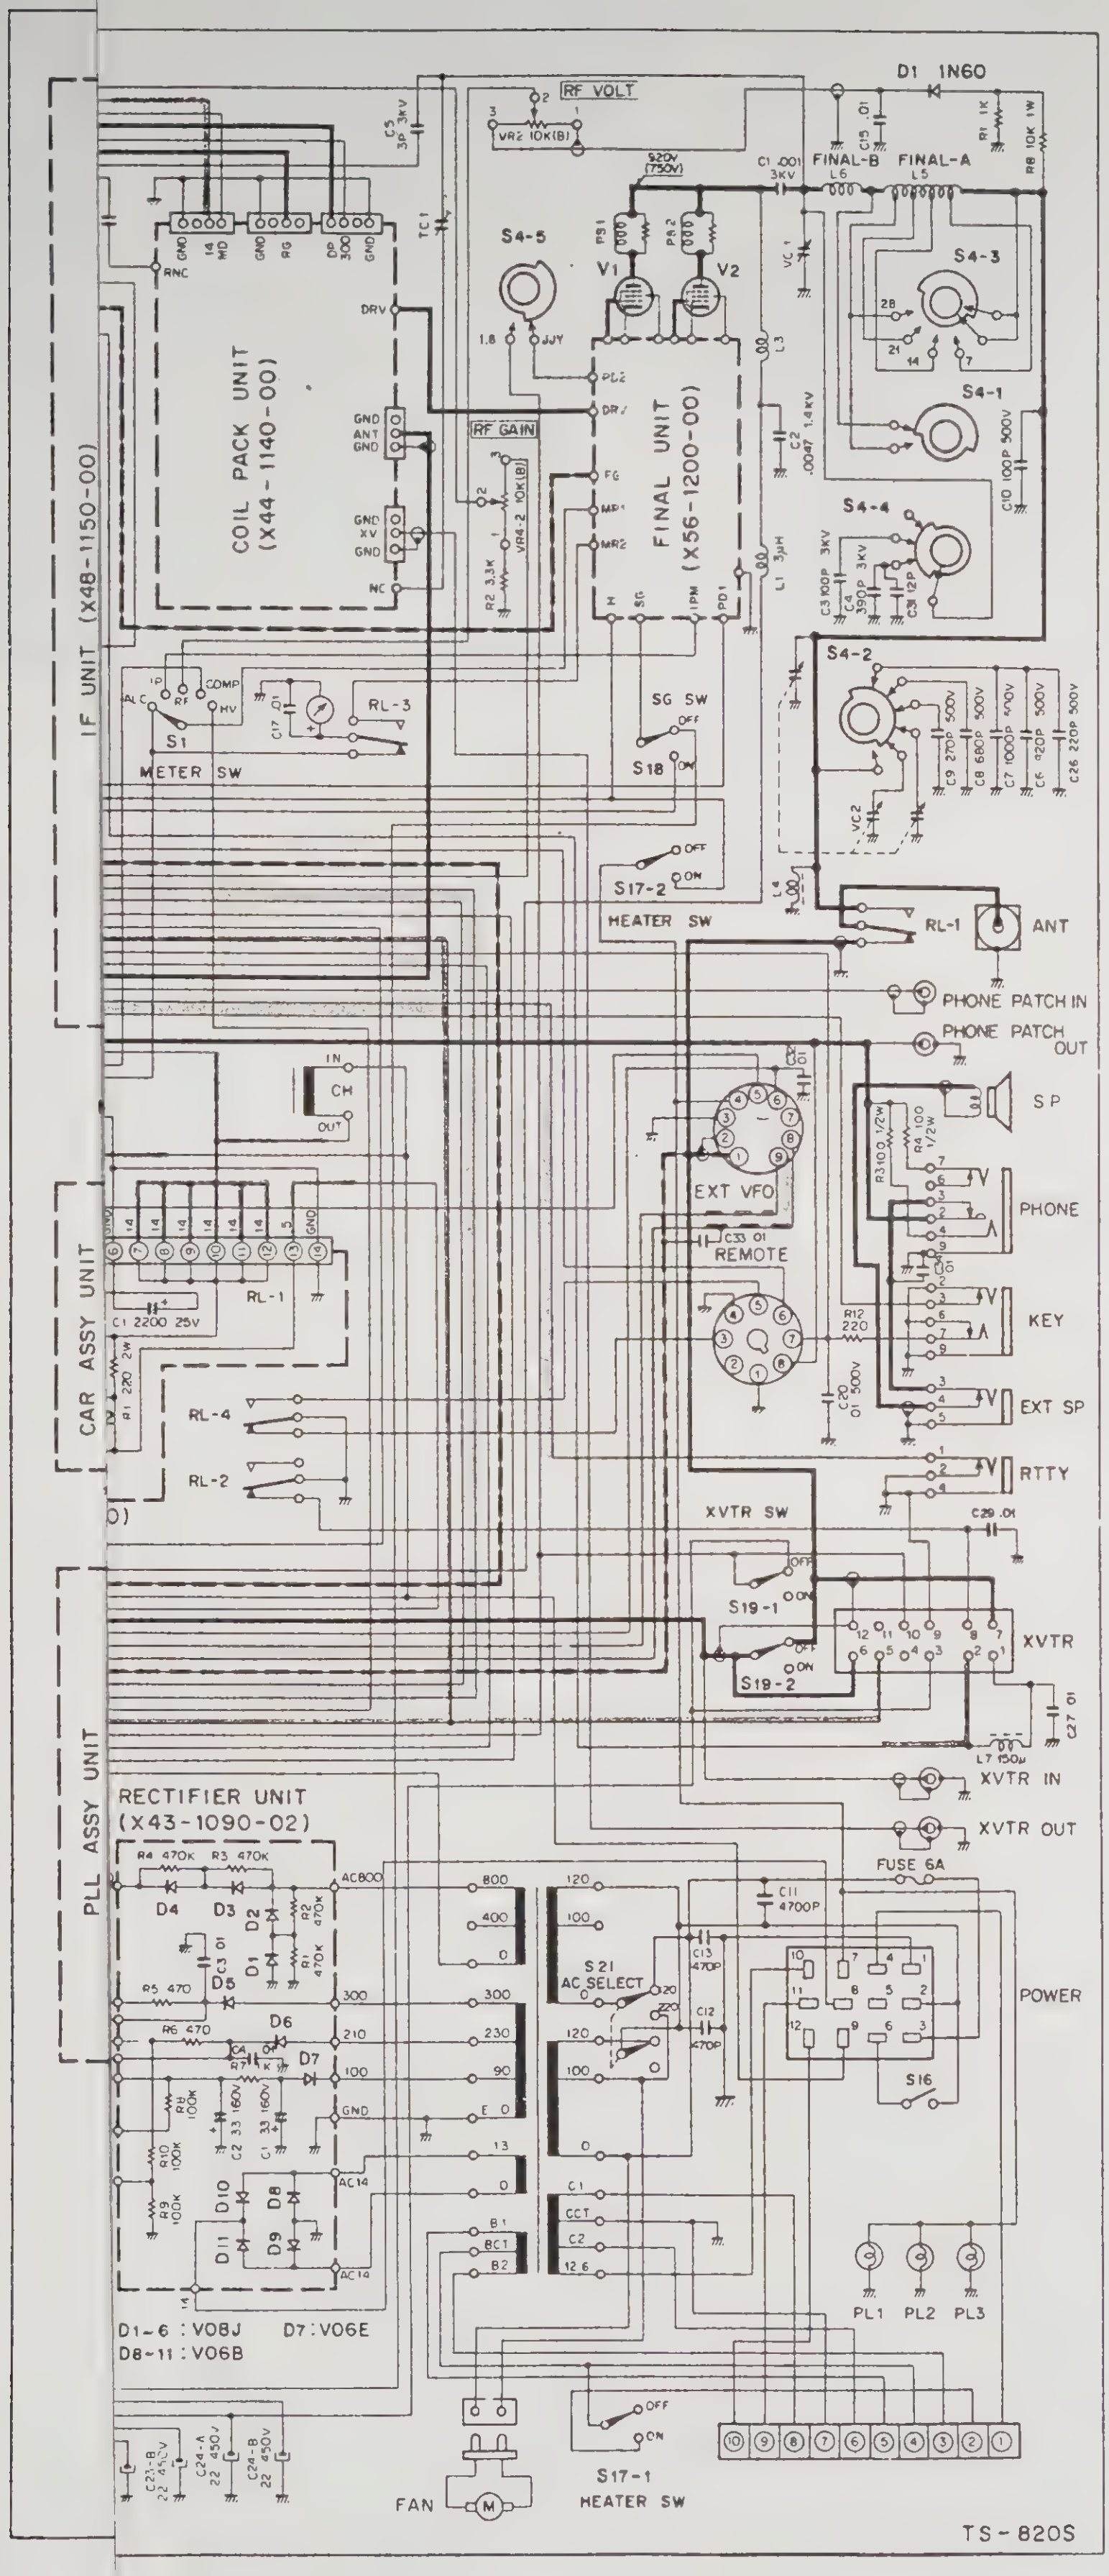

DG-1 (option) Installed.

CONNECTOR TERMINALS

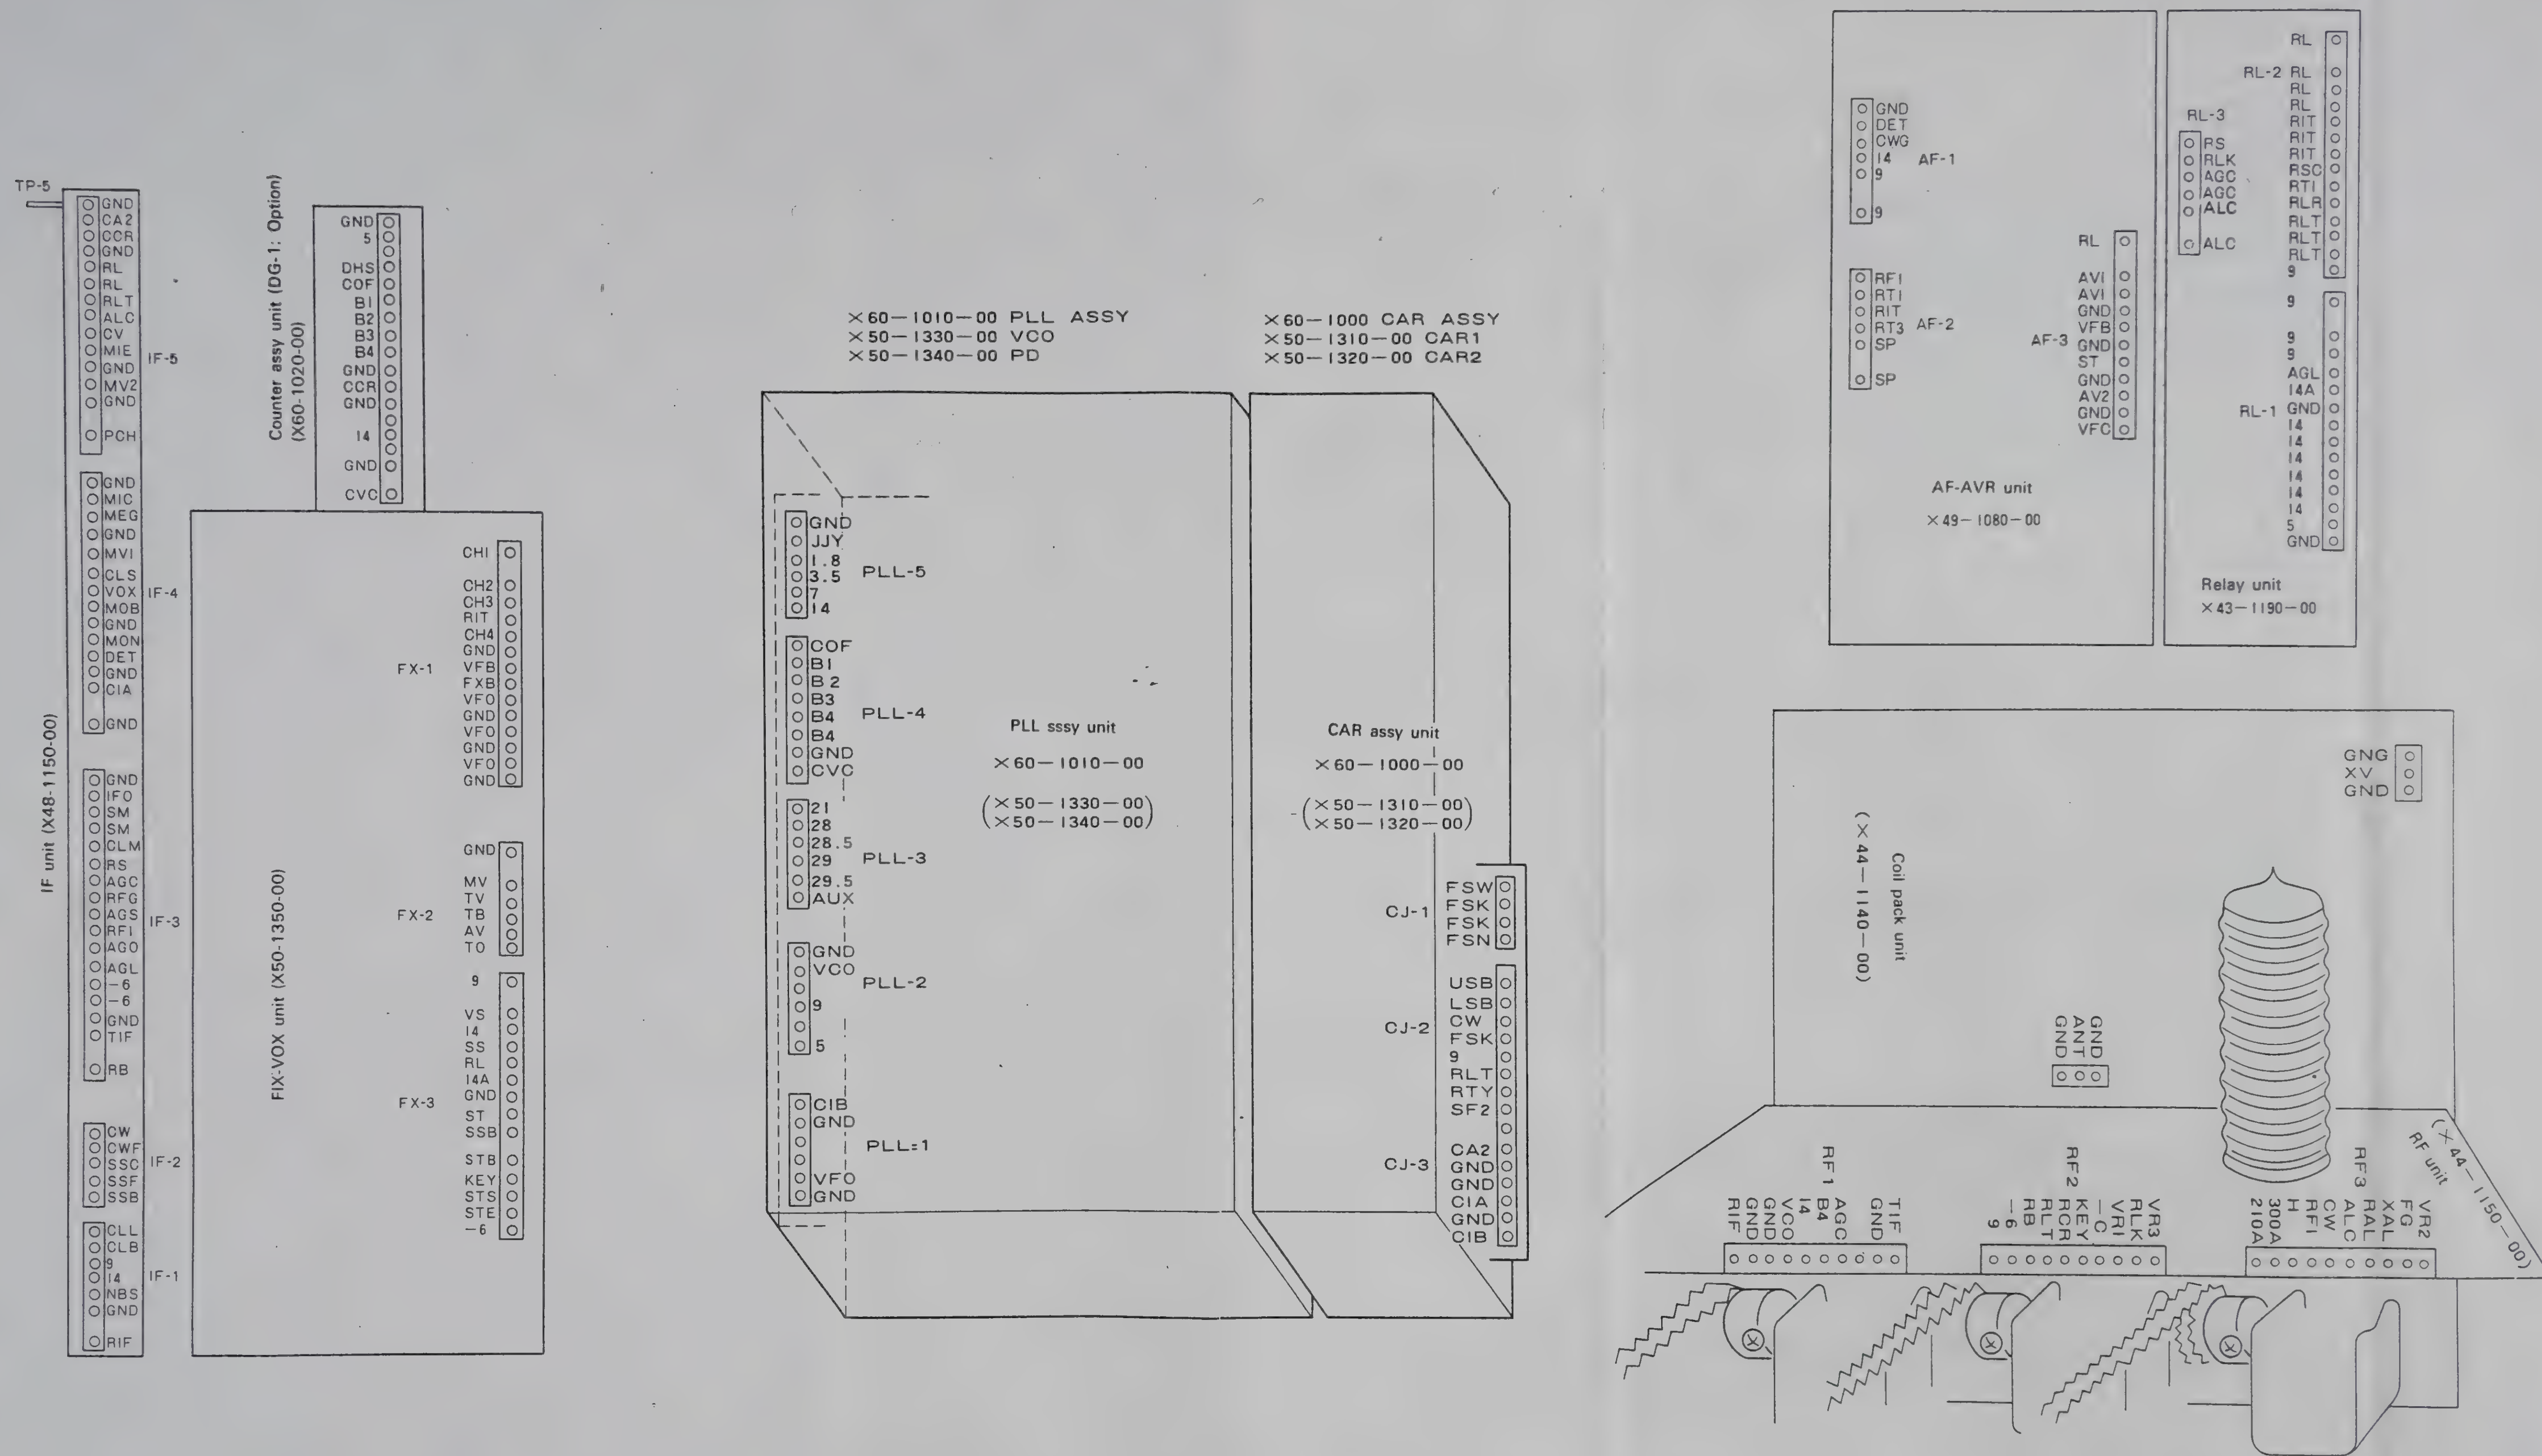

SCHEMATIC DIAGRAM

——— SIGNAL - - - - - - - CONTROL SIGNAL, ——— COMMON POWER SOURCE, - - - - - - - - - TB,RB,CONTROL POWER SOURCE, VOLTAG, (TRANSMISSION)

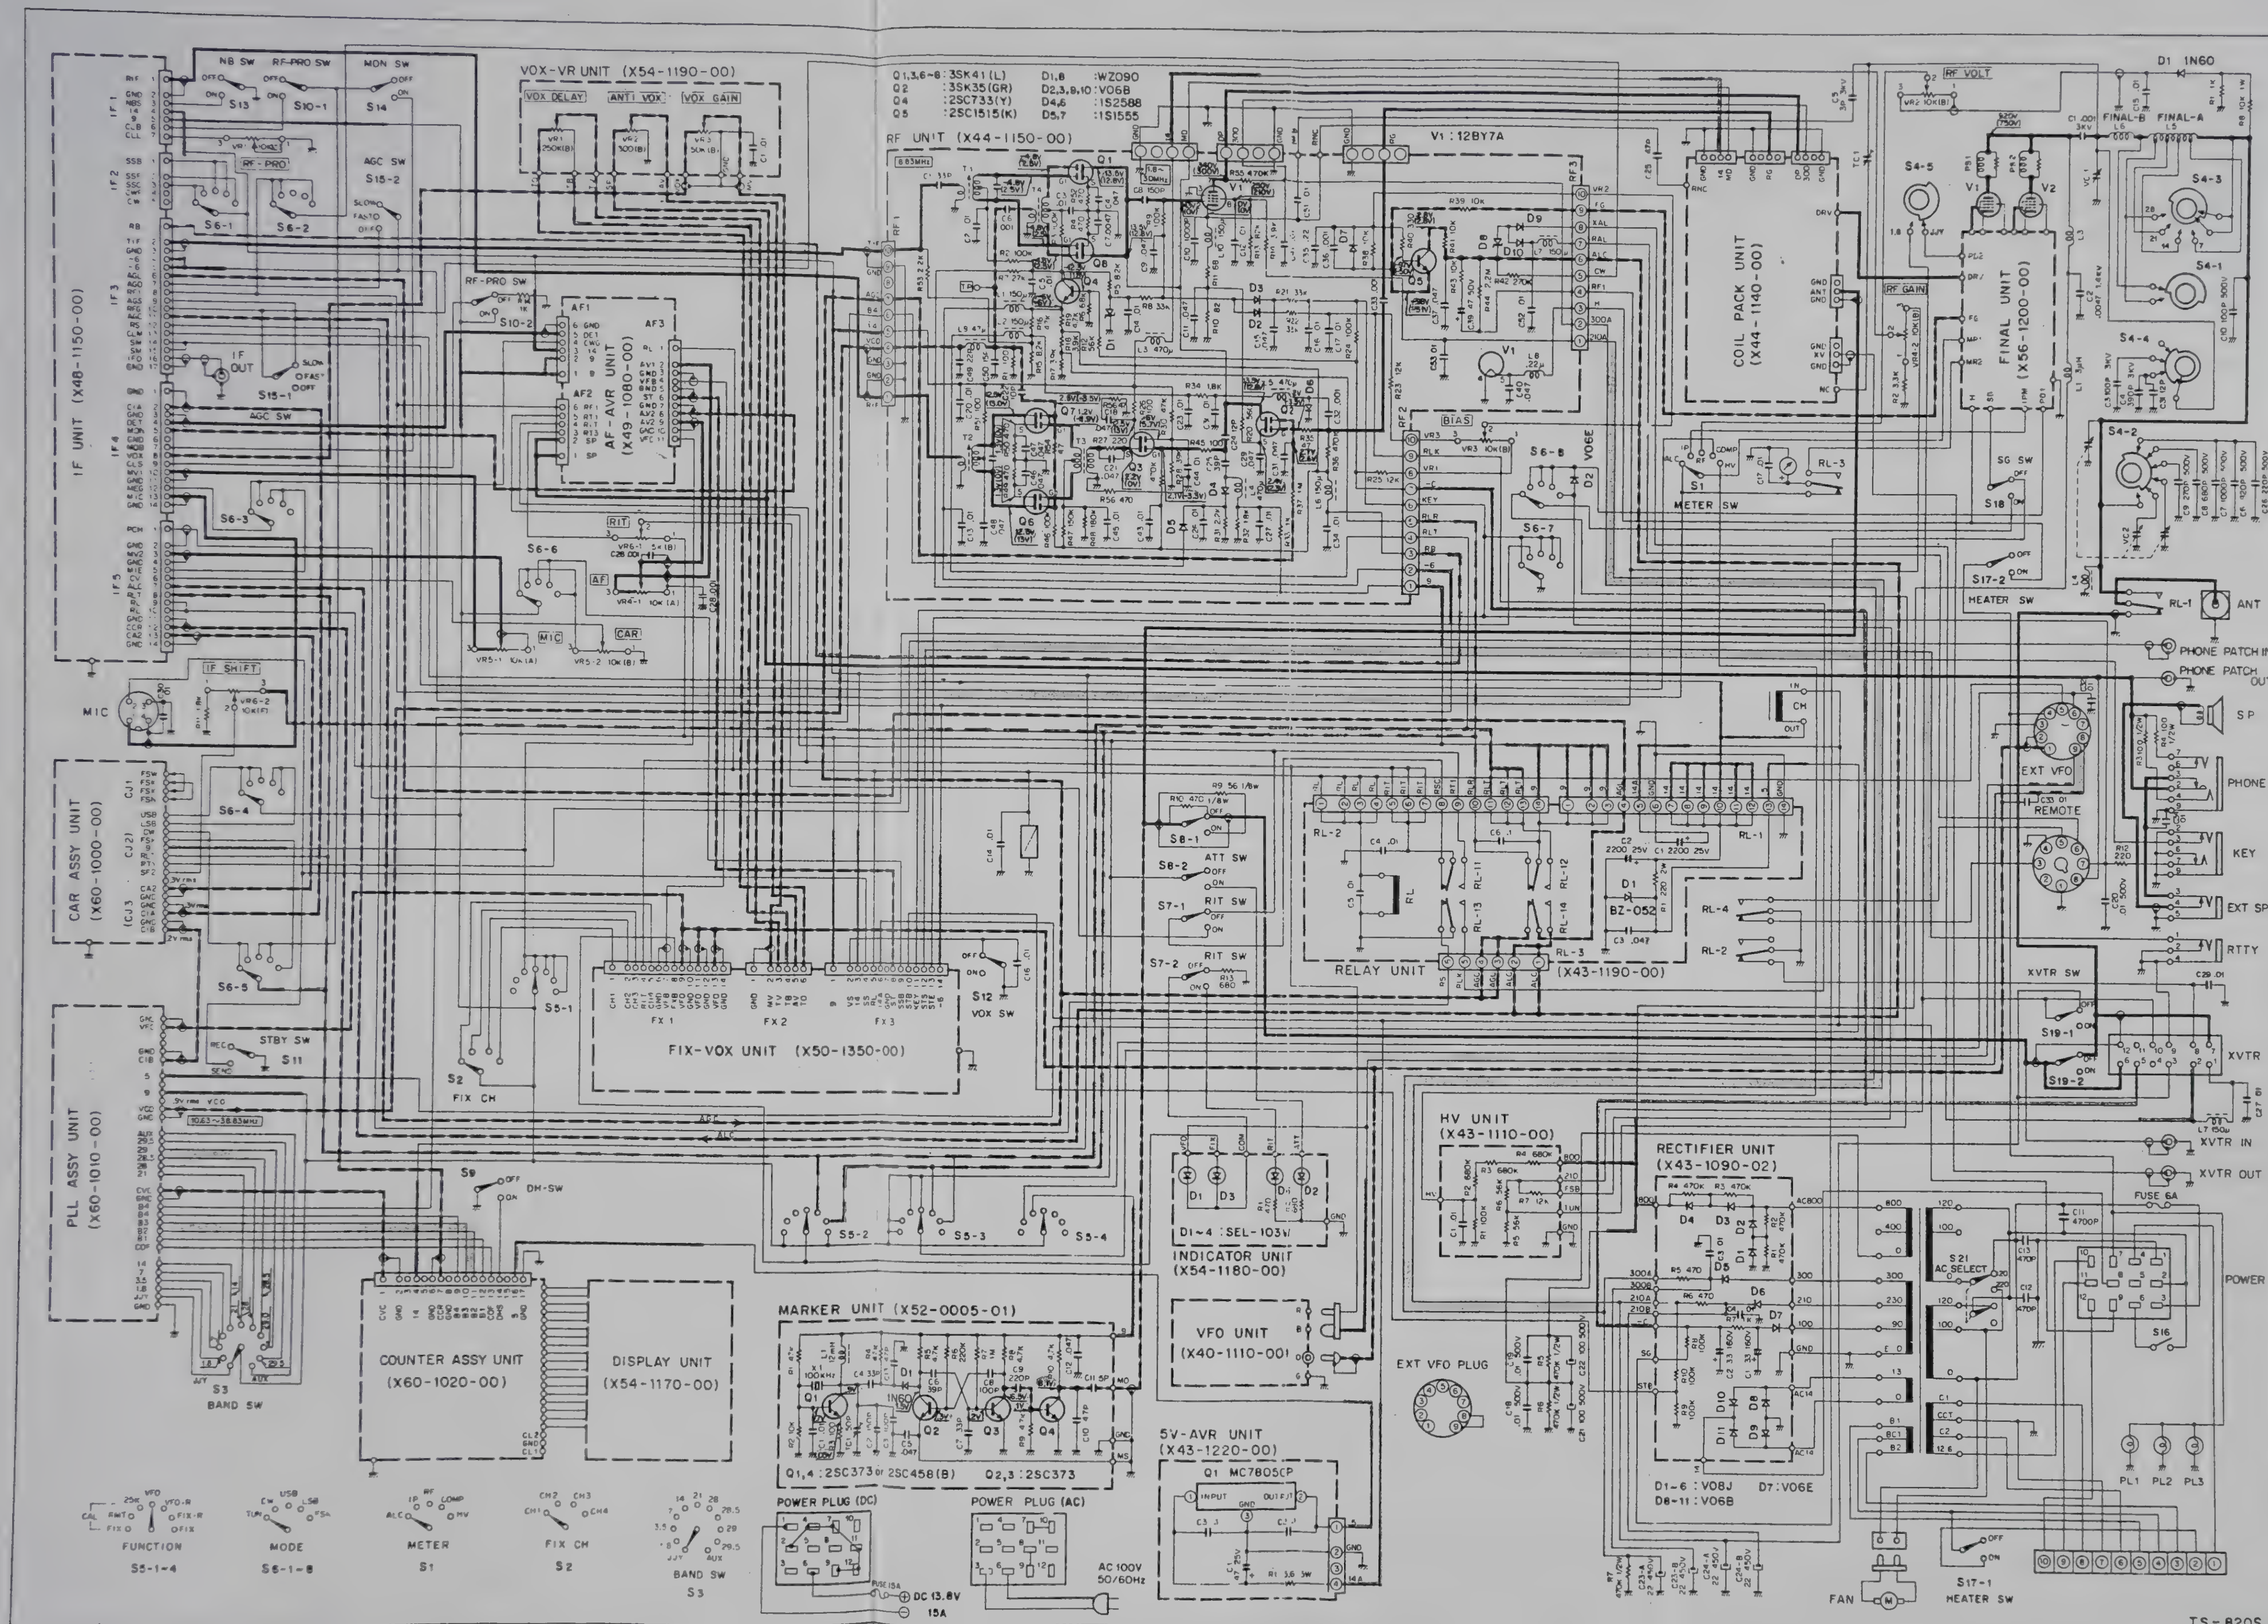

DG-1 (option) Installed.

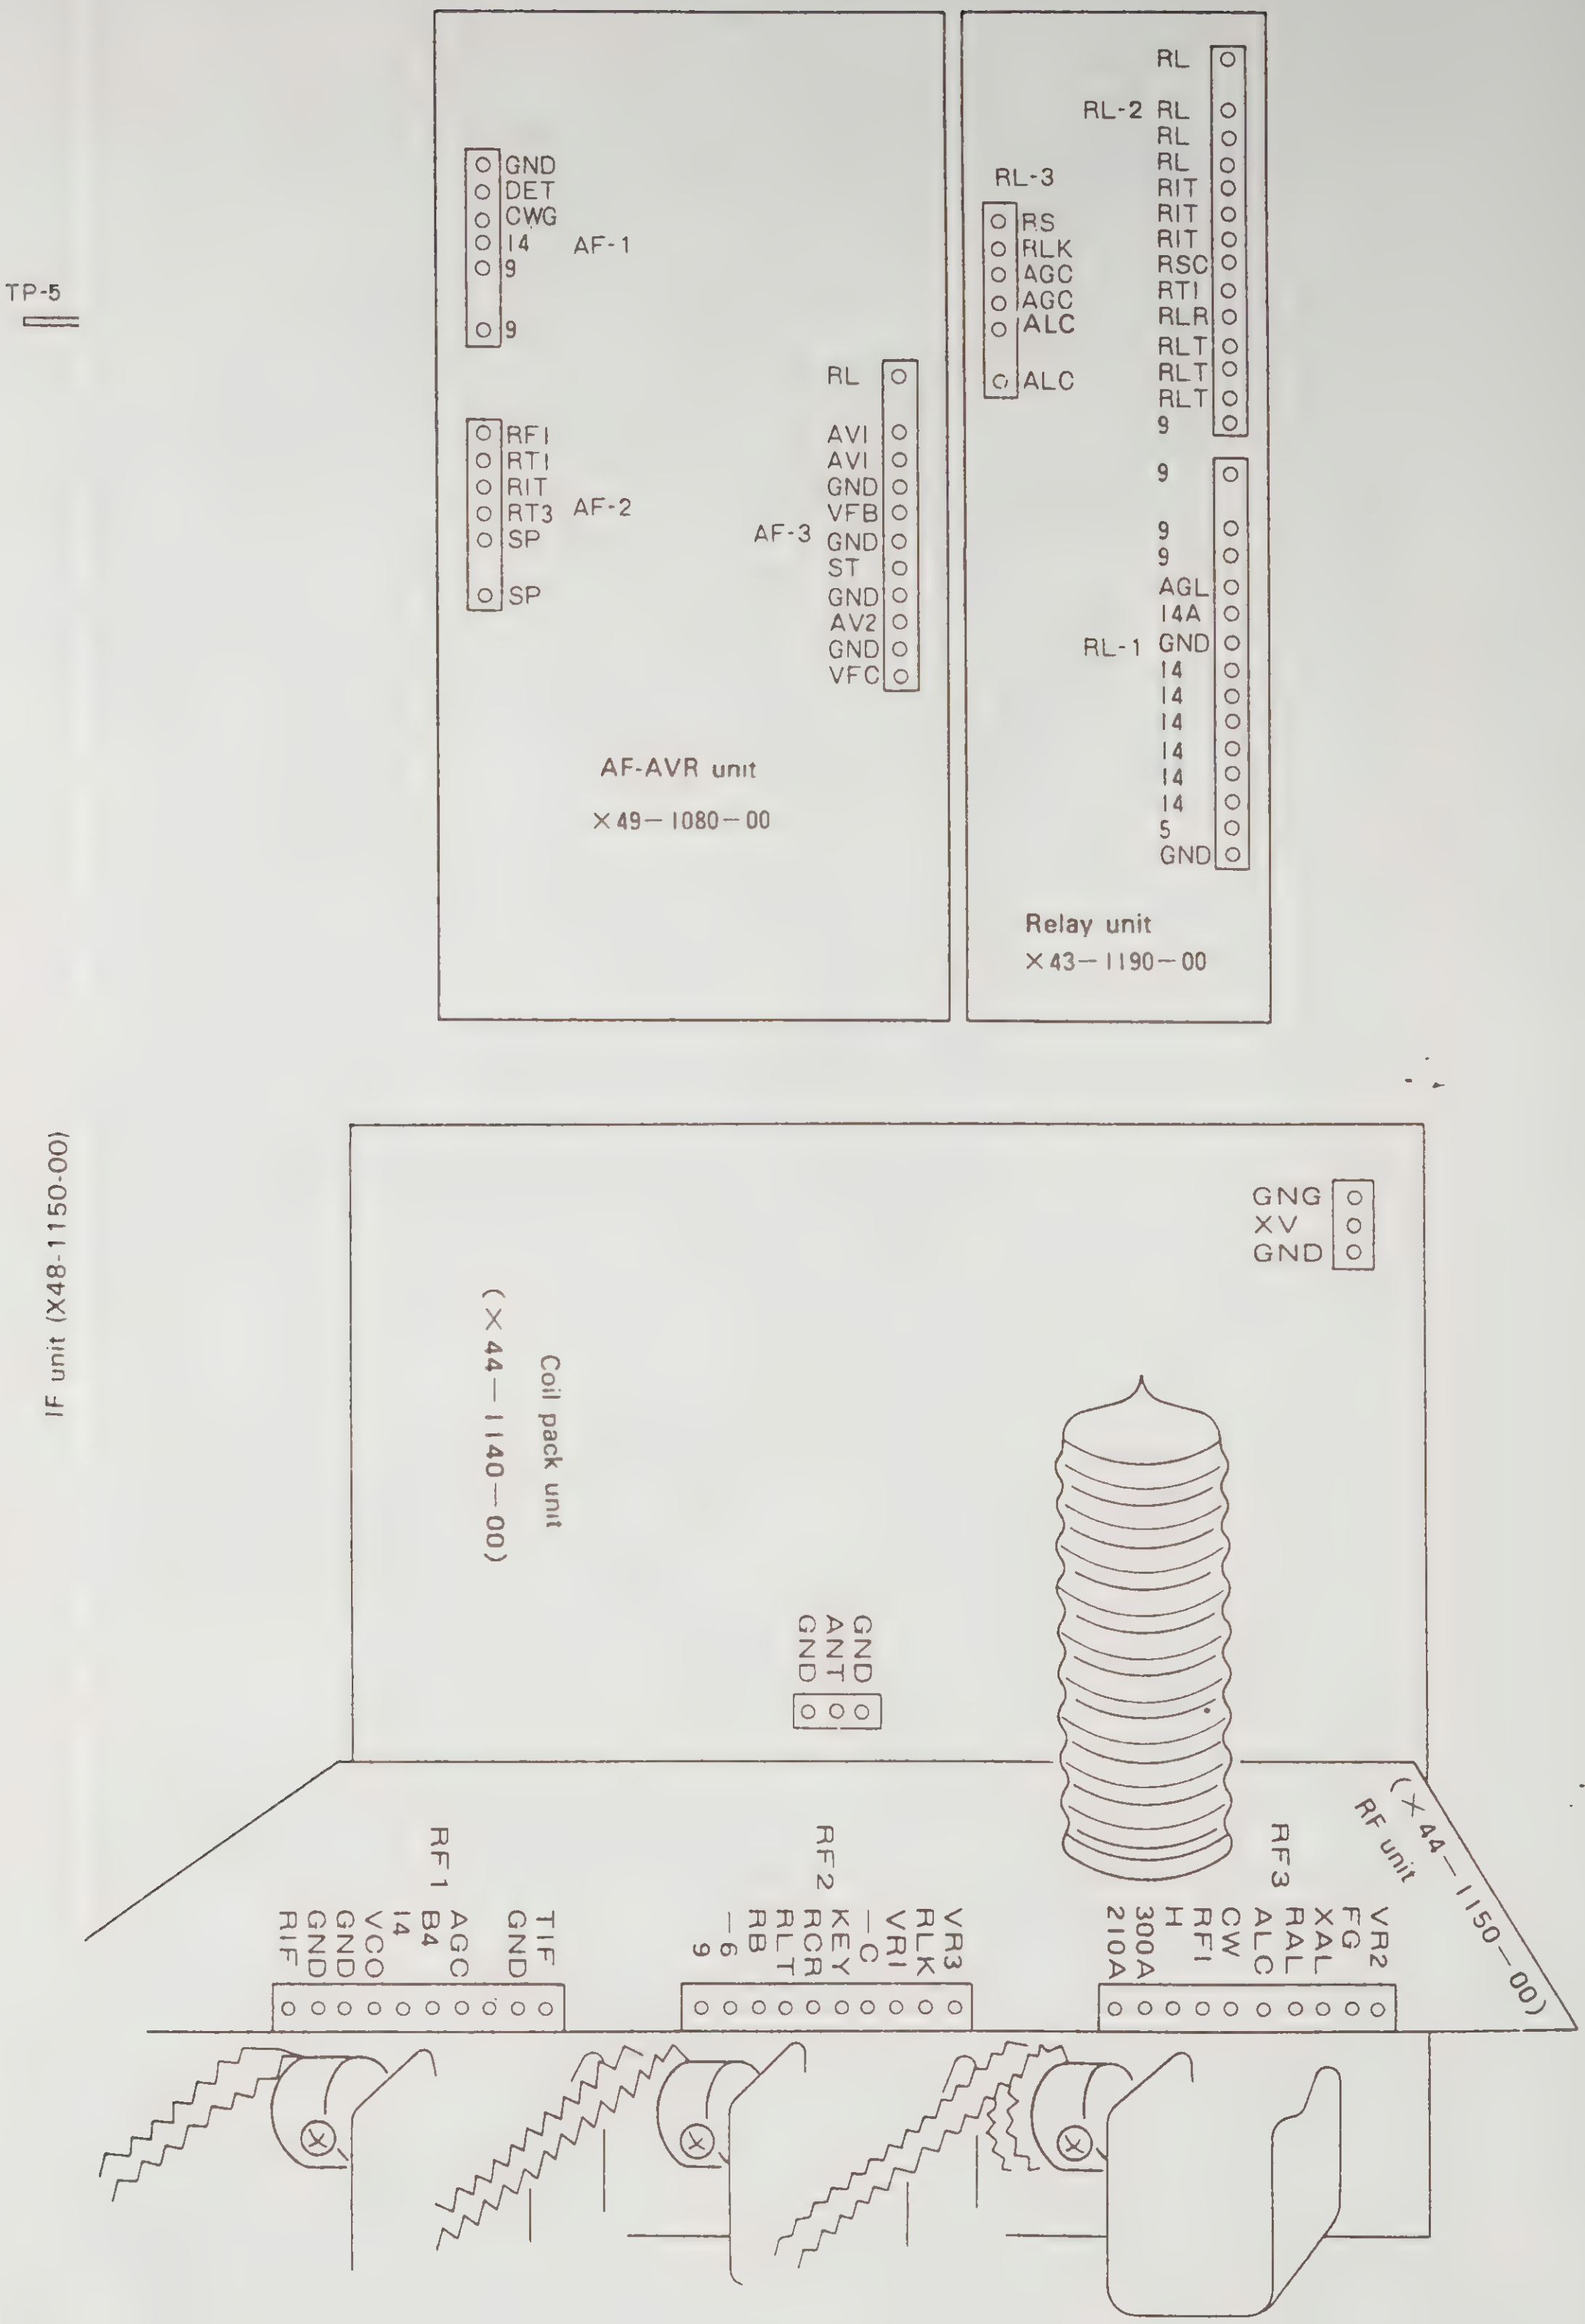
TP-5
GND
DET
CWG
14
9
AF-1
9
RFI
RTI
RIT
RT3
SP
AF-2
SP
RL
AVI
AVI
GND
VFB
AF-3
GND
ST
GND
AV2
GND
VFC
AF-AVR unit
X49-1080-00
RL
RL-2
RL
RL
RL
RIT
RIT
RIT
RSC
RTI
RLR
RLT
RLT
RLT
9
RL-3
RS
RLK
AGC
AGC
ALC
ALC
9
9
9
AGL
14A
RL-1
GND
14
14
14
14
14
14
5
GND
Relay unit
X43-1190-00
IF unit (X48-1150-00)
Coil pack unit
(X44-1140-00)
GNG
XV
GND
GND
ANT
GND
RF unit
(X44-1150-00)
RF1
TIF
GND
AGC
B4
14
VCO
GND
GND
RIF
RF2
VR3
RLK
VRI
-C
KEY
RCR
RLT
RB
-6
9
RF3
VR2
FG
XAL
RAL
ALC
CW
RFI
H
300A
210A

VFO-820

SPECIFICATIONS

OSCILLATION FREQUENCY:
5.0 to 5.5 MHz

OSCILLATION CIRCUIT:
VFO: Clapp Oscillator

OUTPUT VOLTAGE:
1 volt ± 3 dB (across a 470 ohm load).

FREQUENCY STABILITY:
Within ±100 Hz per 30 minutes after 3 minutes of warm-up.

SOLID STATE COMPLEMENT:
2 transistors
2 FET's
6 diodes

POWER REQUIREMENTS:
The VFO-820 receivers power from the TS-820.
12.6 VAC, 40 ma. 12.6 VDC, 40 ma. 9.0 VDC, 25 ma.

DIMENSIONS:
6.5″ wide × 6.0″ high × 7.5″ deep (excluding feet).

WEIGHT:
6.6 lbs. (shipping weight 8.36 lbs.)

BLOCK DIAGRAM

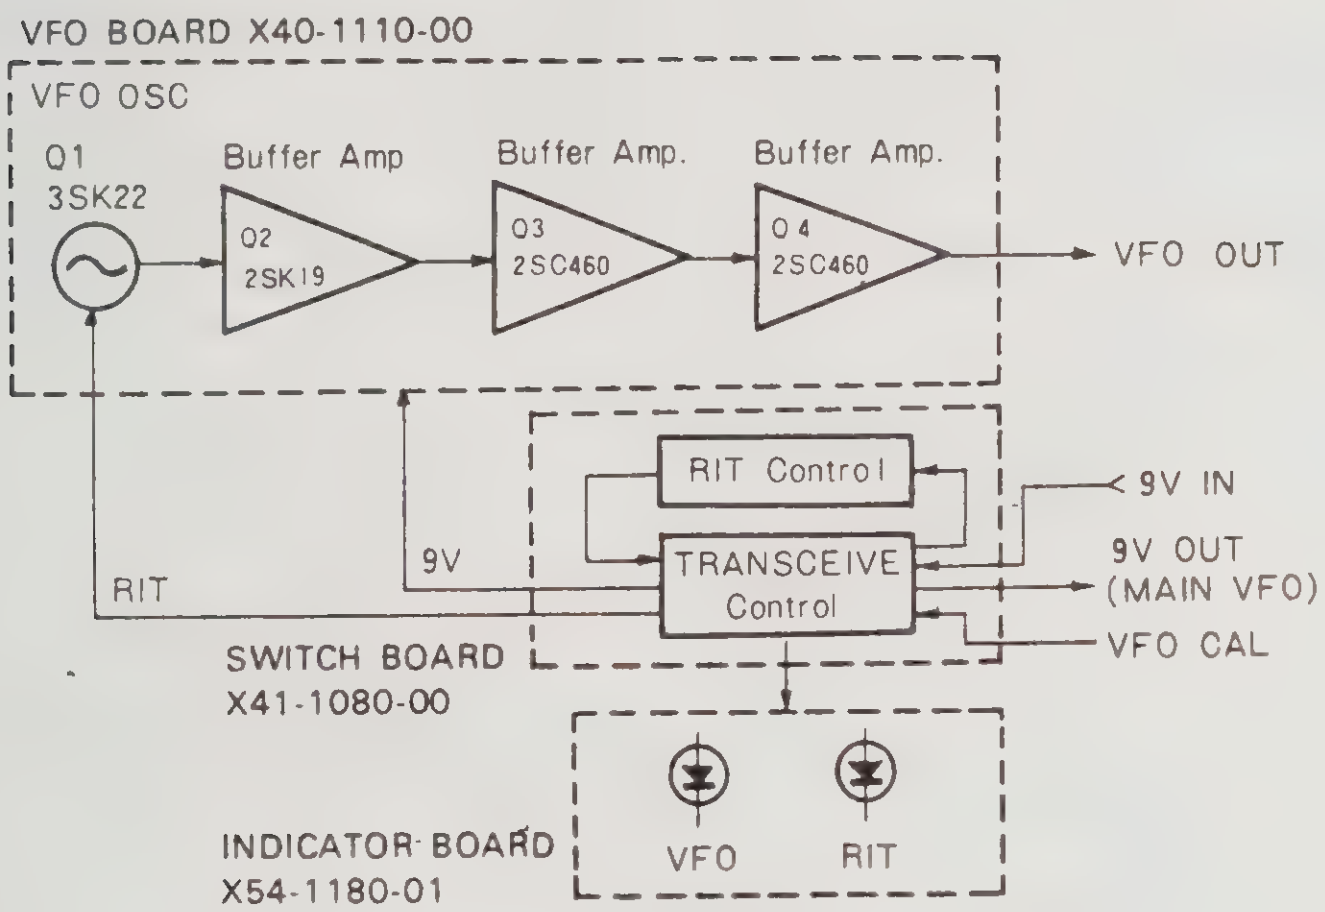

CONNECTION WITH TS-820

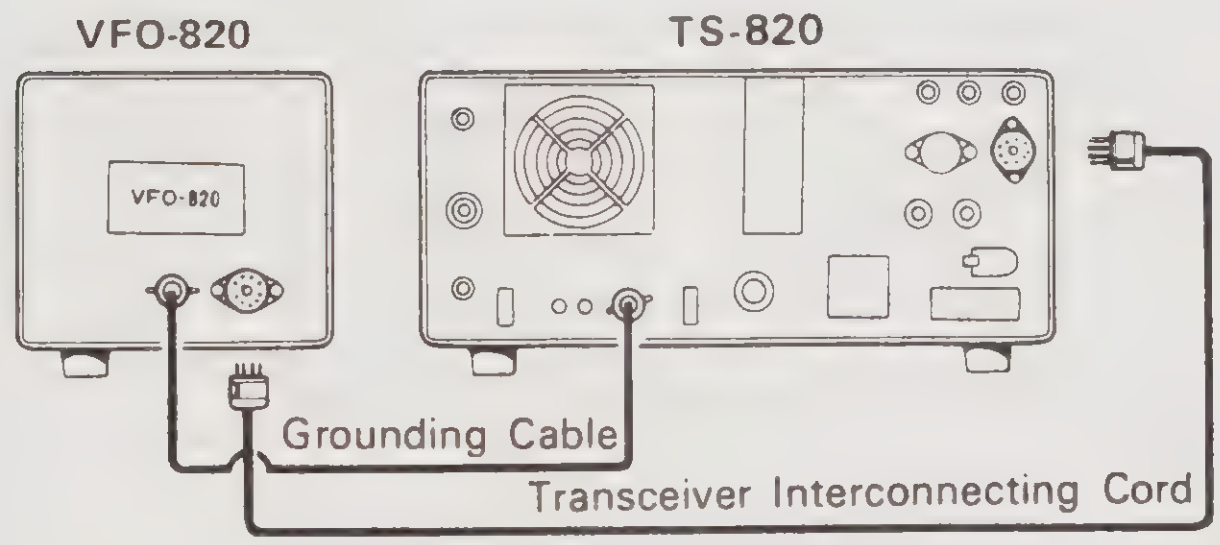

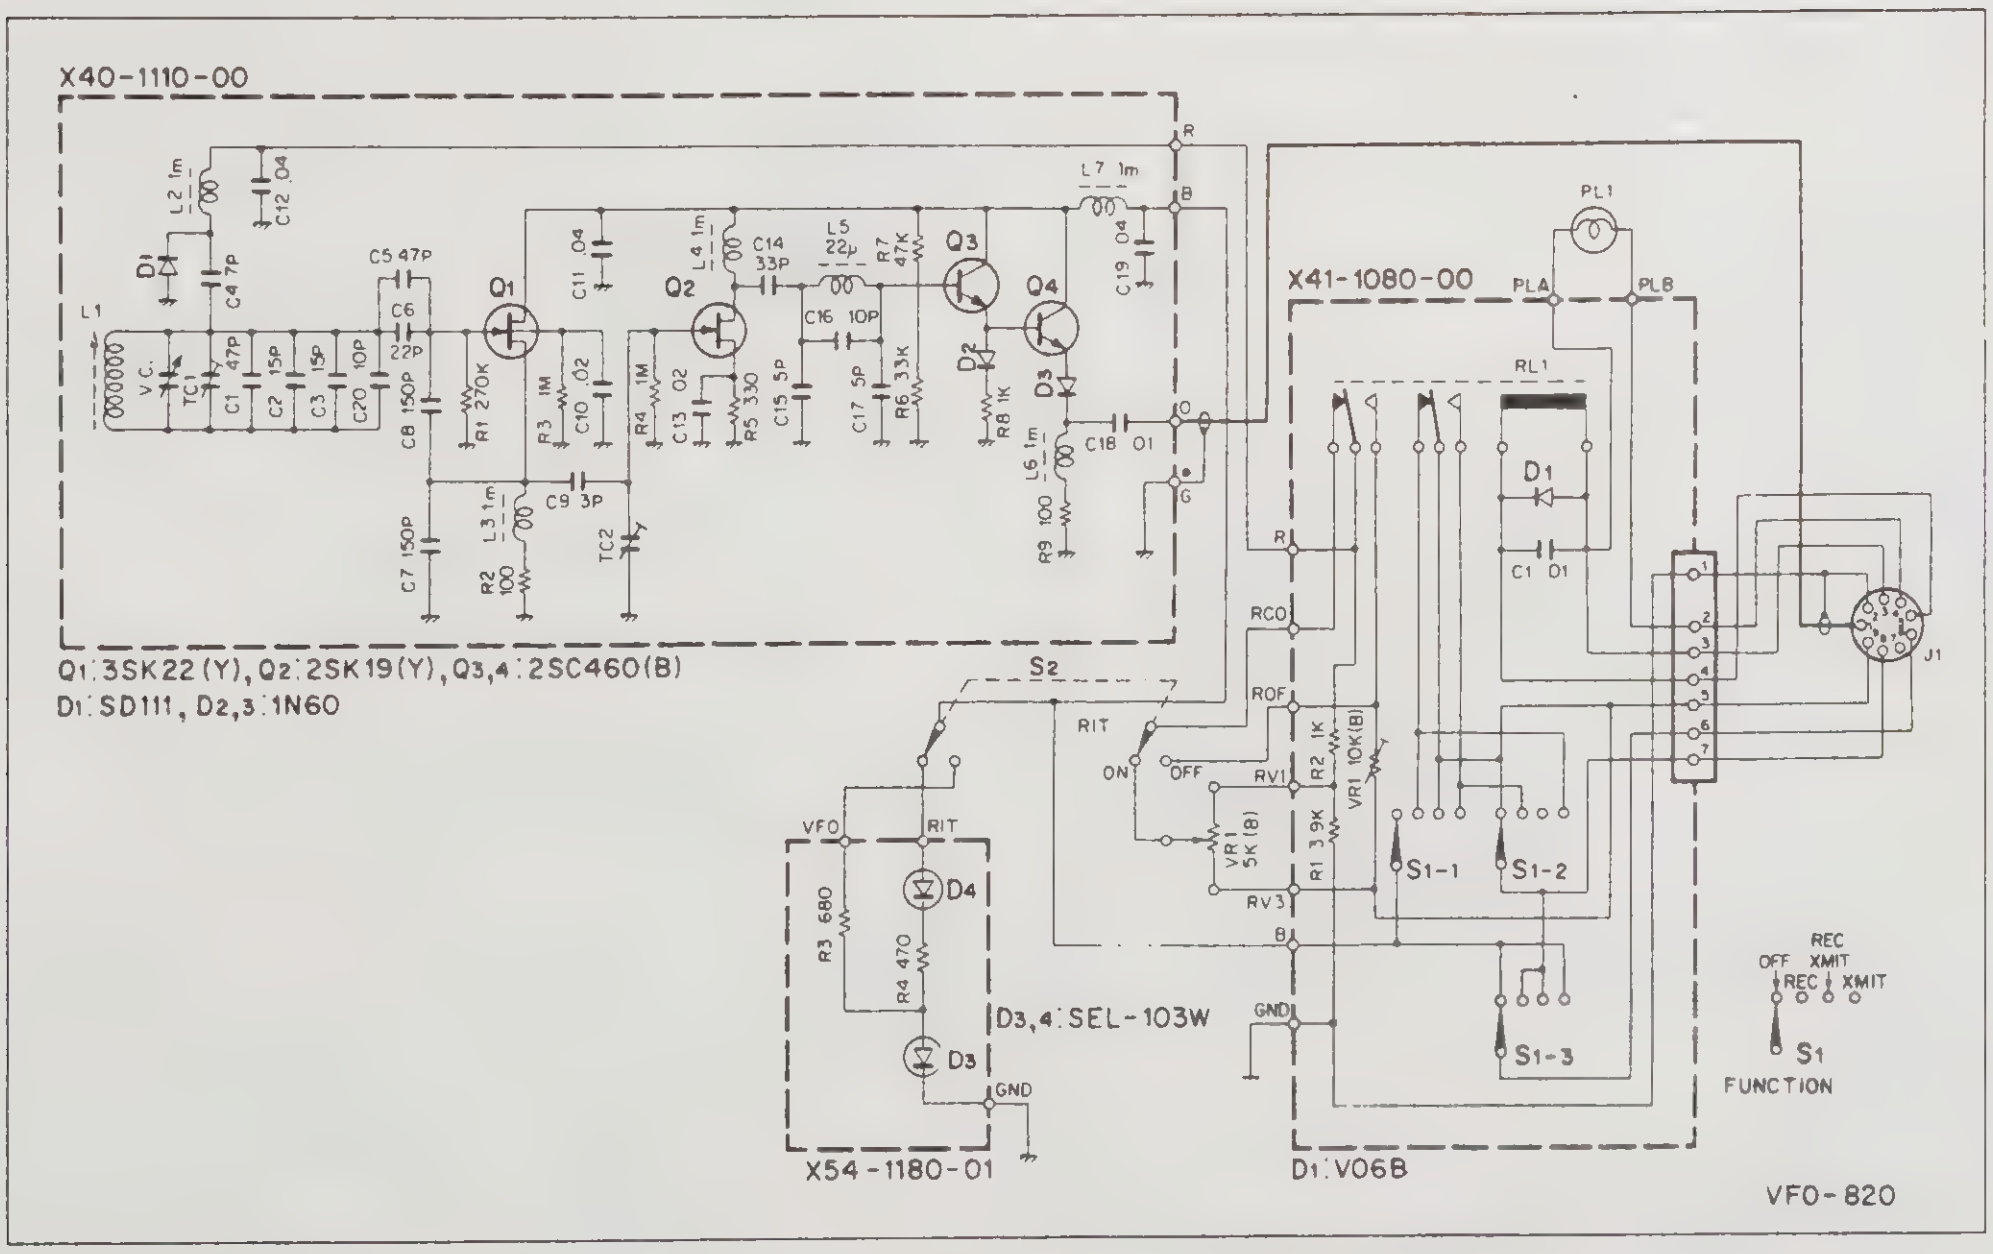

CONNECTOR TERMINALS

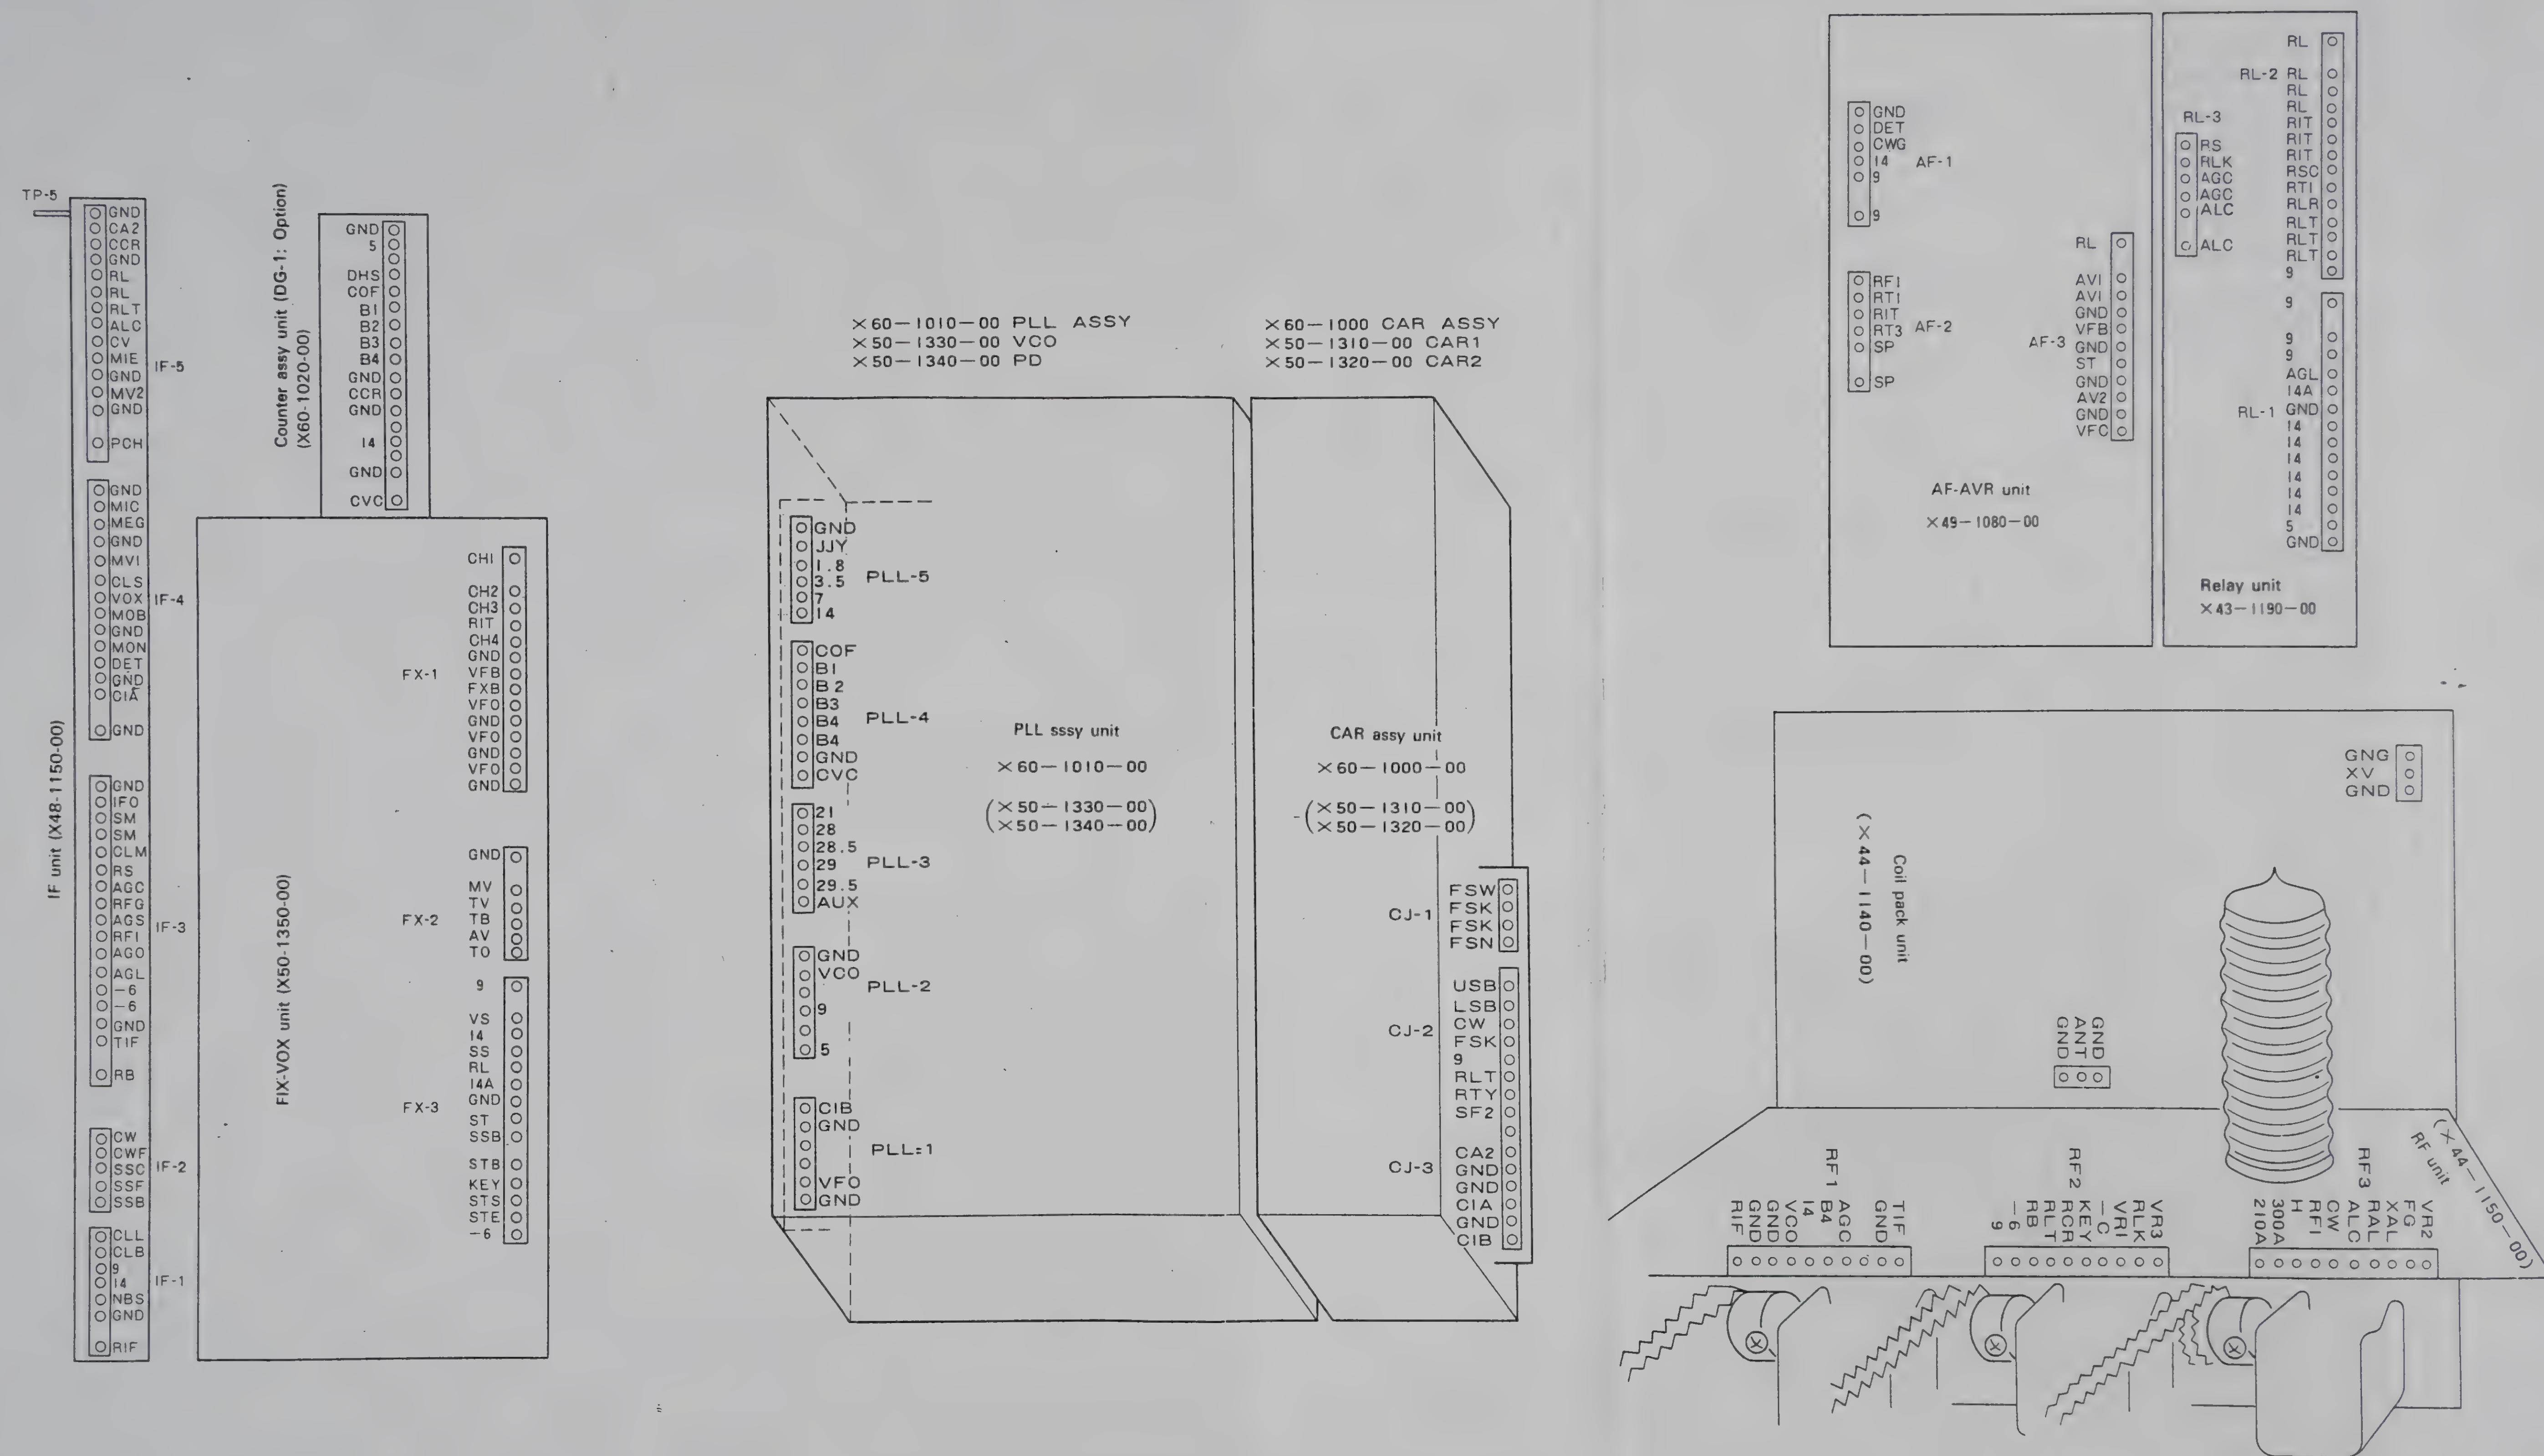

VFO-820

SPECIFICATIONS

OSCILLATION FREQUENCY:
5.0 to 5.5 MHz

OSCILLATION CIRCUIT:
VFO: Clapp Oscillator

OUTPUT VOLTAGE:
1 volt ± 3 dB (across a 470 ohm load).

FREQUENCY STABILITY:
Within ±100 Hz per 30 minutes after 3 minutes of warm-up.

SOLID STATE COMPLEMENT:
2 transistors
2 FET's
6 diodes

POWER REQUIREMENTS:
The VFO-820 receivers power from the TS-820.
12.6 VAC, 40 ma. 12.6 VDC, 40 ma. 9.0 VDC, 25 ma.

DIMENSIONS:
6.5" wide × 6.0" high × 7.5" deep (excluding feet).

WEIGHT:
6.6 lbs. (shipping weight 8.36 lbs.)

BLOCK DIAGRAM

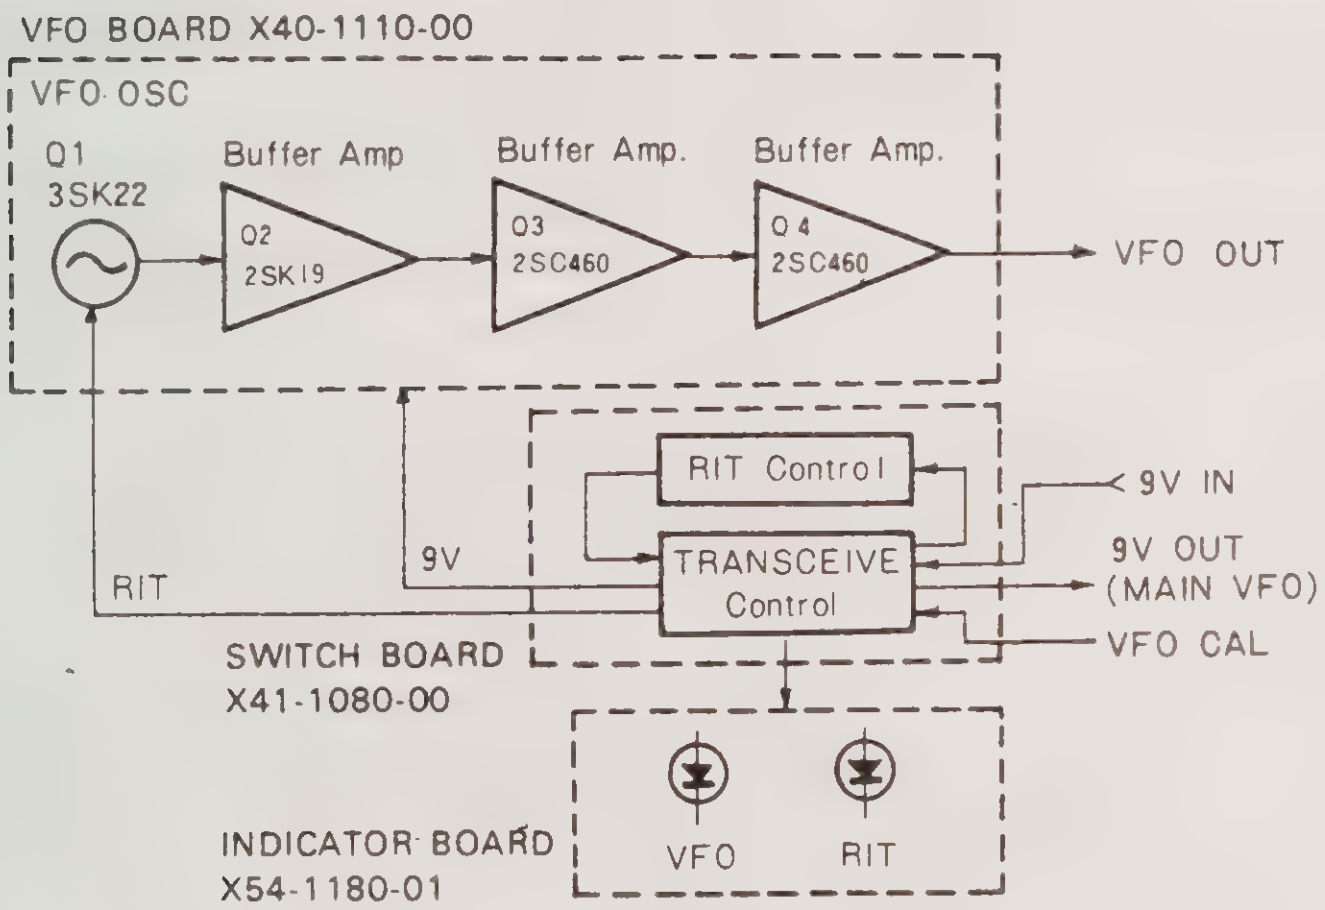

CONNECTION WITH TS-820

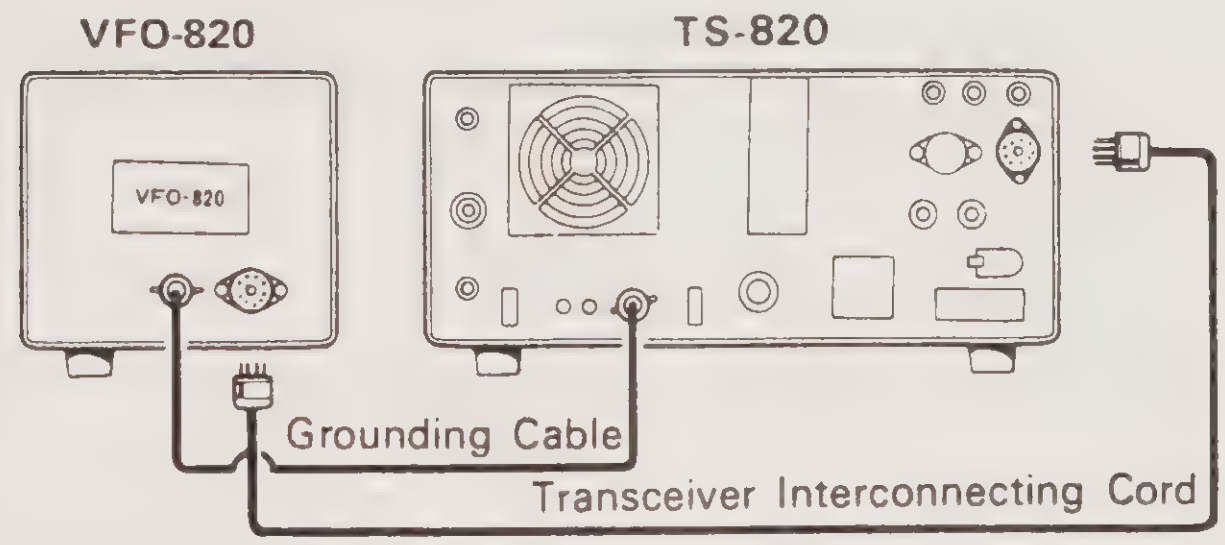

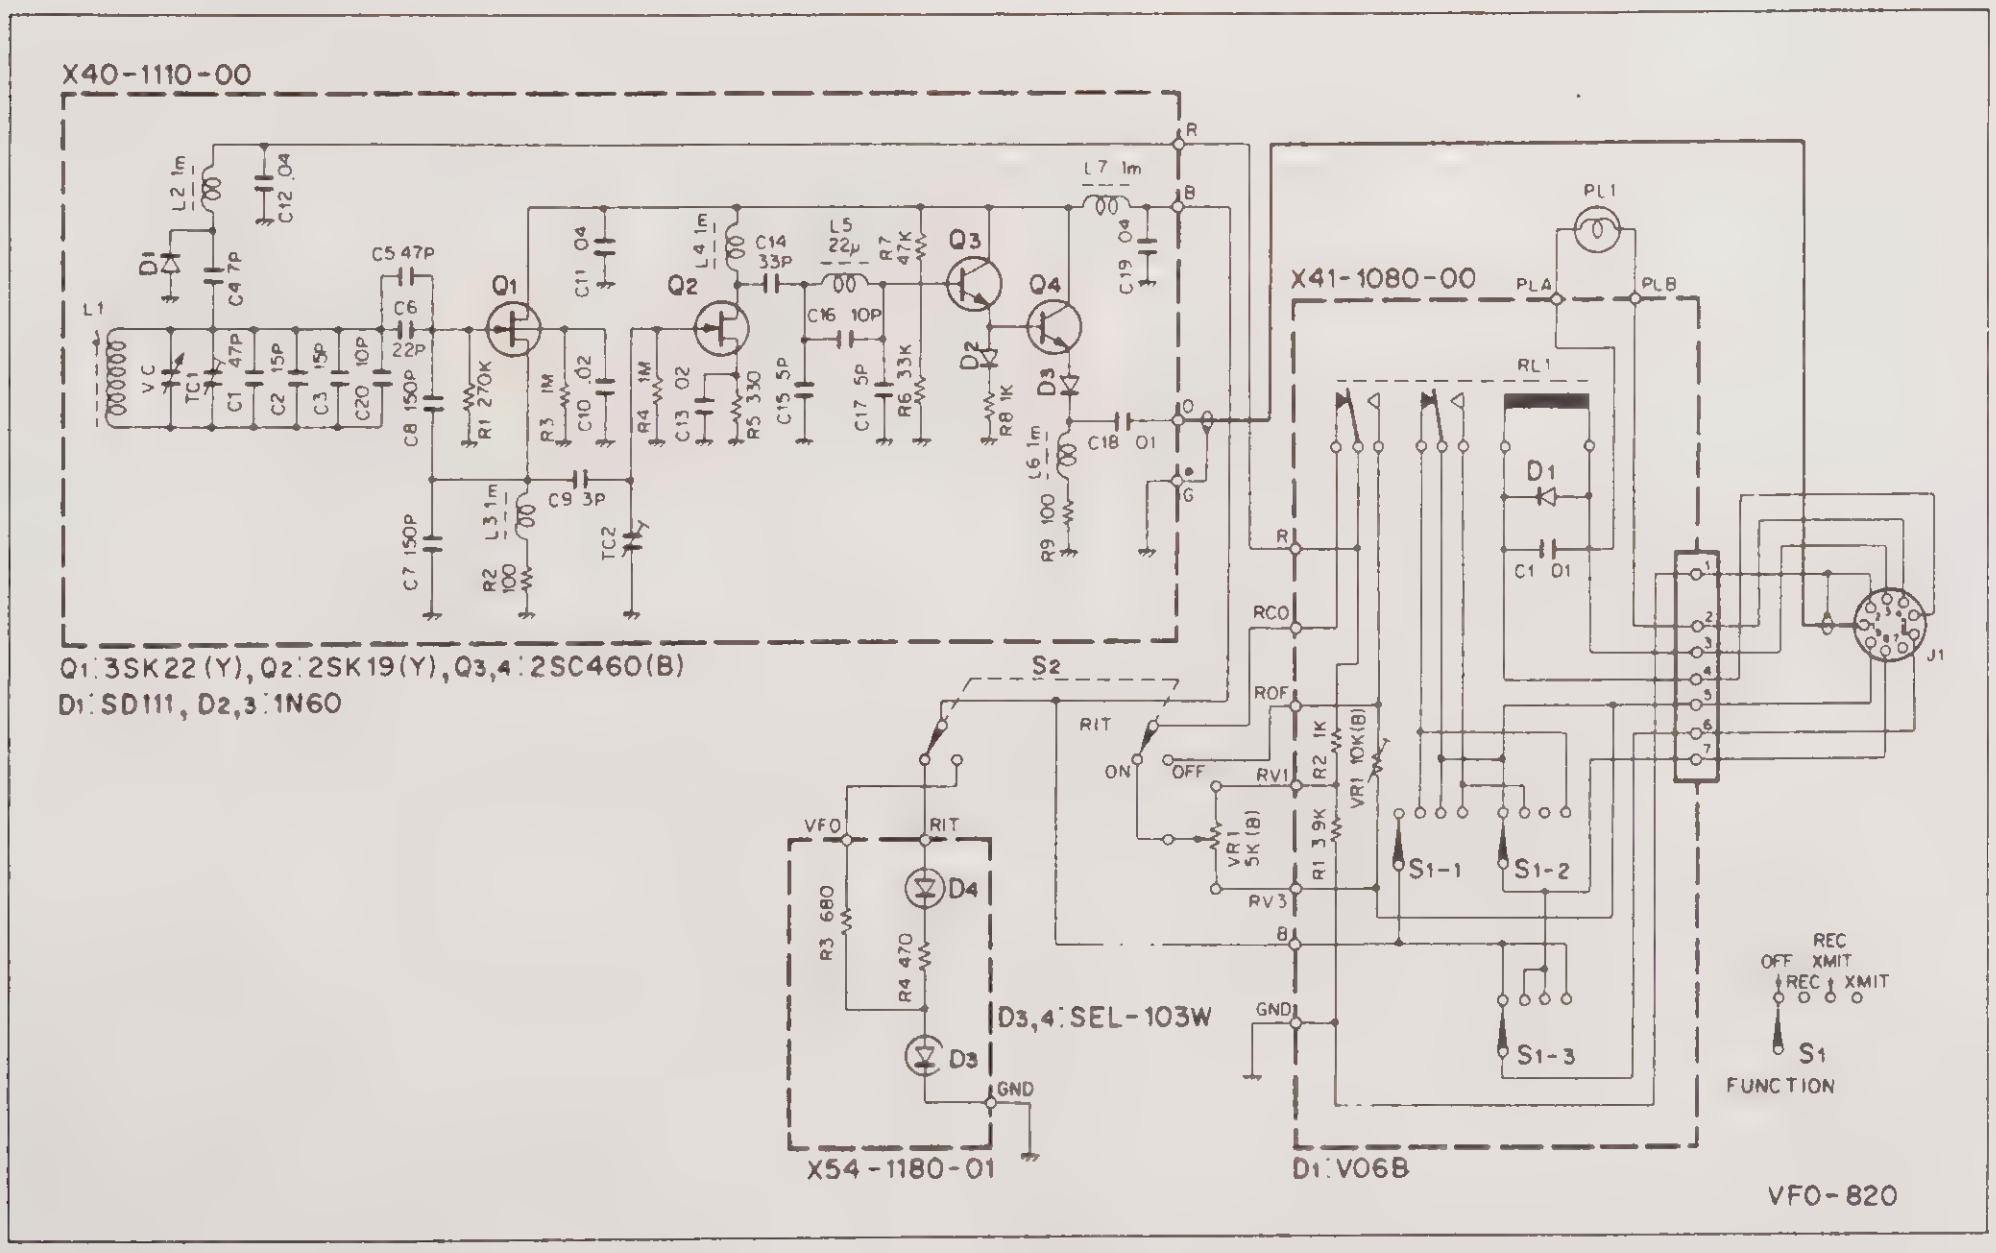

VFO-820

With regard to VFO unit (X40-1110-00), refer to that of TS-820

Ref. No.	Parts No.	Description	Re-marks
		MISCELLANEOUS	
S2	S40-2077-05	Push switch RIT	
	A01-0300-13	Case	
	A20-1071-05	Panel	
	A22-0200-02	Sub-panel	
	A23-0430-03	Rear panel	
	A40-0156-13	Bottom plate	
	B01-0105-05	Dial escucheon	
	B09-0012-04	Rubber cap	
	B10-0212-14	Front glass	
	B10-0197-03	Front glass (dial)	
	B20-0373-04	Dial scale	
	B20-0374-04	Dial scale (A) mono-scale (front)	
	B20-0375-04	Dial scale (B) mono-scale (back)	
	B30-0079-05	Pilot lamp 12V, 40 mA	
	B40-1410-04	Model name plate	
	B50-1538-00	Operating manual	
	D23-0142-05	Ball retainer	
	E01-0903-05	9P MT socket	
	E05-0901-05	9P MT plut with lead × 2	
	E09-0204-05	2P plug socket	
	E14-0101-05	1P plug	
	E23-0046-04	Terminal (square) × 6	
	E23-0047-04	Terminal (square) × 9	
	E23-0069-05	Terminal (for earth cable) × 2	
	E31-0035-05	7P connector with lead	
	F15-0210-04	Blinding plate	
	H01-1587-04	Carton case (inside)	
	H03-0528-04	Carton case (outside)	
	H12-0047-03	Cushion (F)	
	H10-0968-03	Cushion (R)	
	H20-0372-04	Protection cover	
	H25-0103-04	Polyethylene bag	
	H25-0029-04	Polyethylene bag	
	J01-0025-04	Leg (small)	
	J02-0049-14	Leg (28ϕ) × 4	
	J19-1301-04	Diode holder × 2	
	J21-1495-04	Lamp stopper	
	J21-1503-04	VFO stopper	
	J21-1570-04	PC board stopper	
	J32-0222-04	Boss A (for dial scale A)	
	J32-0223-14	Boss B (for dial scale B)	
	J32-1030-14	Round boss (holding leg)	
	J41-0020-04	Knob bushing	
	J61-0019-05	Vinvl tie × 7	
	K21-0267-04	Knob × 2, RIT, Function	
	K23-0709-03	Knob, MAIN	
	K29-0166-04	Knob, push	
	K29-0269-04	Knob, calibration	
	X40-1110-00	VFO unit	
	X41-1080-00	Switch unit	
	X54-1180-01	Indicator unit	

SWITCH UNIT (X41-1080-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
		RESISTOR	
R1	PD14BY2E392J	Carbon 3.9kΩ ±5% 1/4W	
R2	PD14BY2E102J	Carbon 1kΩ ±5% 1/4W	
		SEMICONDUCTOR	
D1	V11-0219-05	Diode V06B	
		POTENTIOMETER	
VR1	R12-3022-05	10kΩ (B)	
		SWITCH/RELAY	
S1	S29-1093-05	Rotary switch	
RL1	S51-4031-05	Relay	
		MISCELLANEOUS	
—	E23-0047-04	Terminal (square)	
—	E40-0713-05	Mini-connector	
—	J12-0048-05	Relay cramper	

INDICATOR UNIT (X54-1180-01)

Ref No	Parts No.	Description	Re-marks
		RESISTER	
R3	PD14BY2E681J	Carbon 680Ω ±5% 1/4W	
R4	PD14BY2E471J	Carbon 470Ω ±5% 1/4W	
		SEMICONDUCTOR	
D3.4	V11-0430-05	LED SEL-103W	
		MISCELLANEOUS	
—	E23-0046-04	Terminal (square) × 3	
—	F20-0501-04	Insulator × 2	
—	R92-0150-05	Short jamper	

PACKING VFO-820

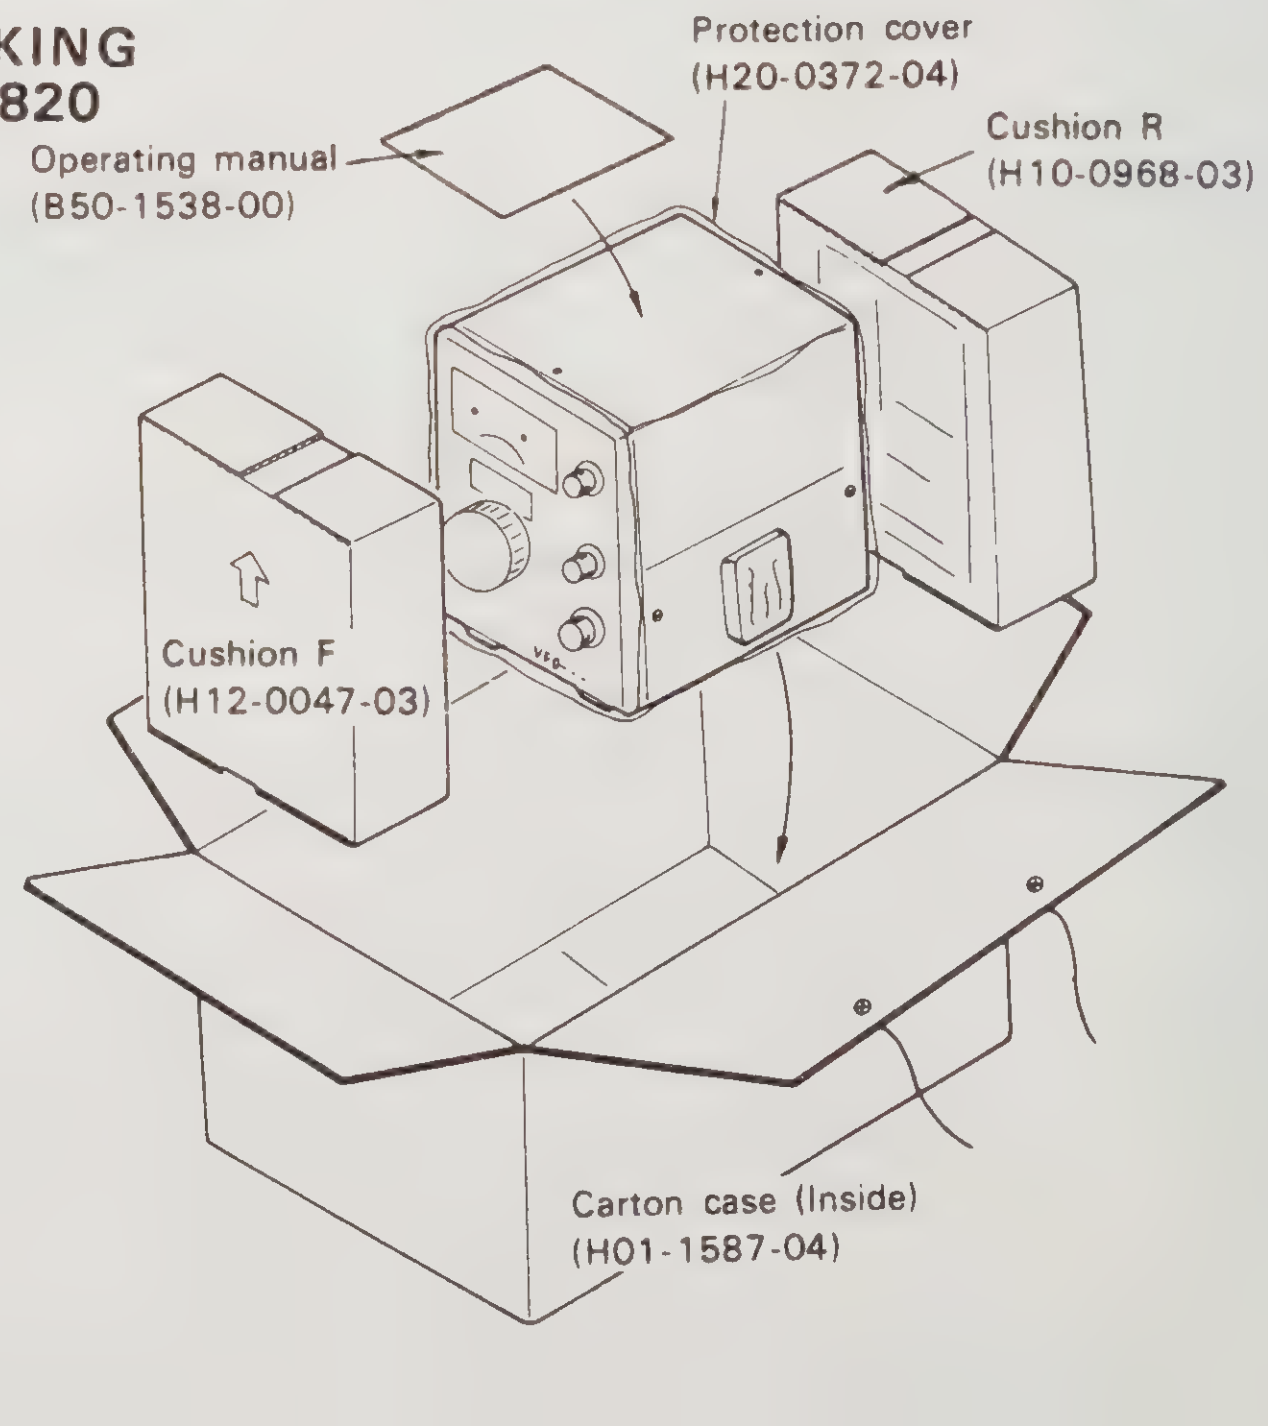

DG-1 SPECIFICATIONS

RANGE OF FREQUENCIES DISPLAYED:
Displays all the transmit/receive frequencies of TS-820 to the accuracy of 0.1 kHz order.

ACCURACY OF STANDARD OSCILLATOR:
Within $\Delta f = 1 \times 10^{-6}$ after one month of ageing under ambient temperatures of 0°C ~ 50°C.

OPERATING TEMPERATURE:
−10°C ~ +50°C

SEMICONDUCTORS AND INDICATOR:

IC	33
Transistor	22
Diode	28
Fluorescent indicating tube (6 digits)	1

With regard to adjustment and installation of DG-1, refer to page 36, 48 and the operating manual.

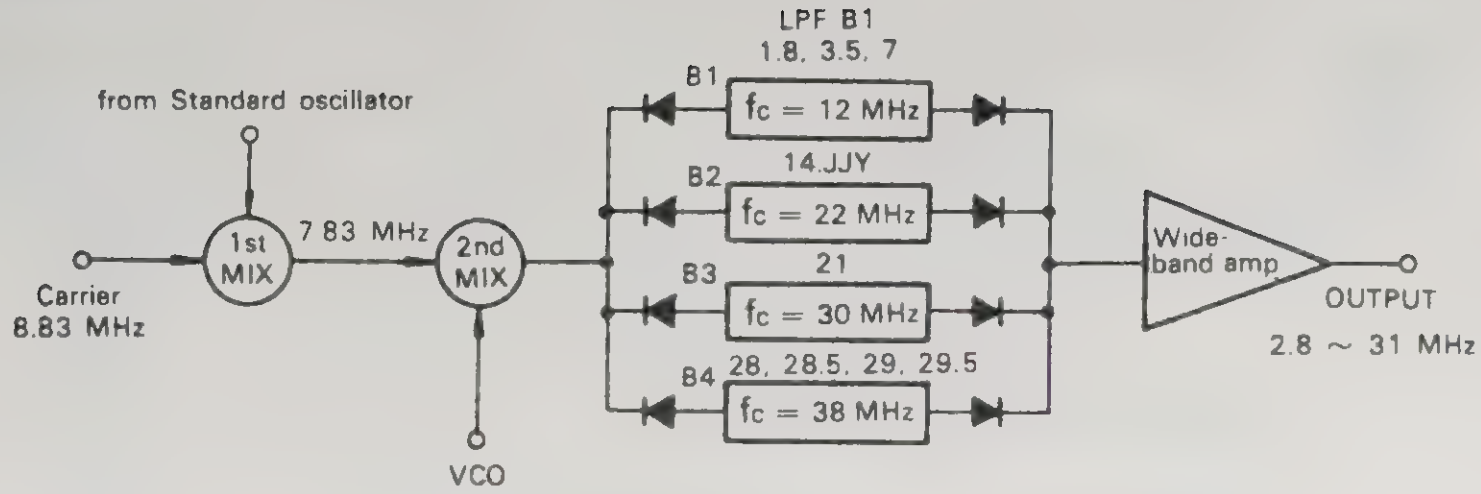

BAND MHz	VCO Freq. (MHz)	Output freq. (MHz)	LPF BAND
1.8	10.63 ~ 11.13	2.8 ~ 3.3	B1
3.5	12.33 ~ 12.83	4.5 ~ 5.0	
7	15.83 ~ 16.33	8.0 ~ 8.5	
14	22.83 ~ 23.33	15.0 ~ 15.5	B2
JJY (15)	23.83 ~ 24.33	16.0 ~ 16.5	
21	29.83 ~ 30.33	22.0 ~ 22.5	B3
28	36.83 ~ 37.33	29.0 ~ 29.5	B4
28.5	37.33 ~ 37.83	29.5 ~ 30.0	
29	37.83 ~ 38.33	30.0 ~ 30.5	
29.5	38.33 ~ 38.83	30.5 ~ 31.0	

Digital counter mixer and frequency

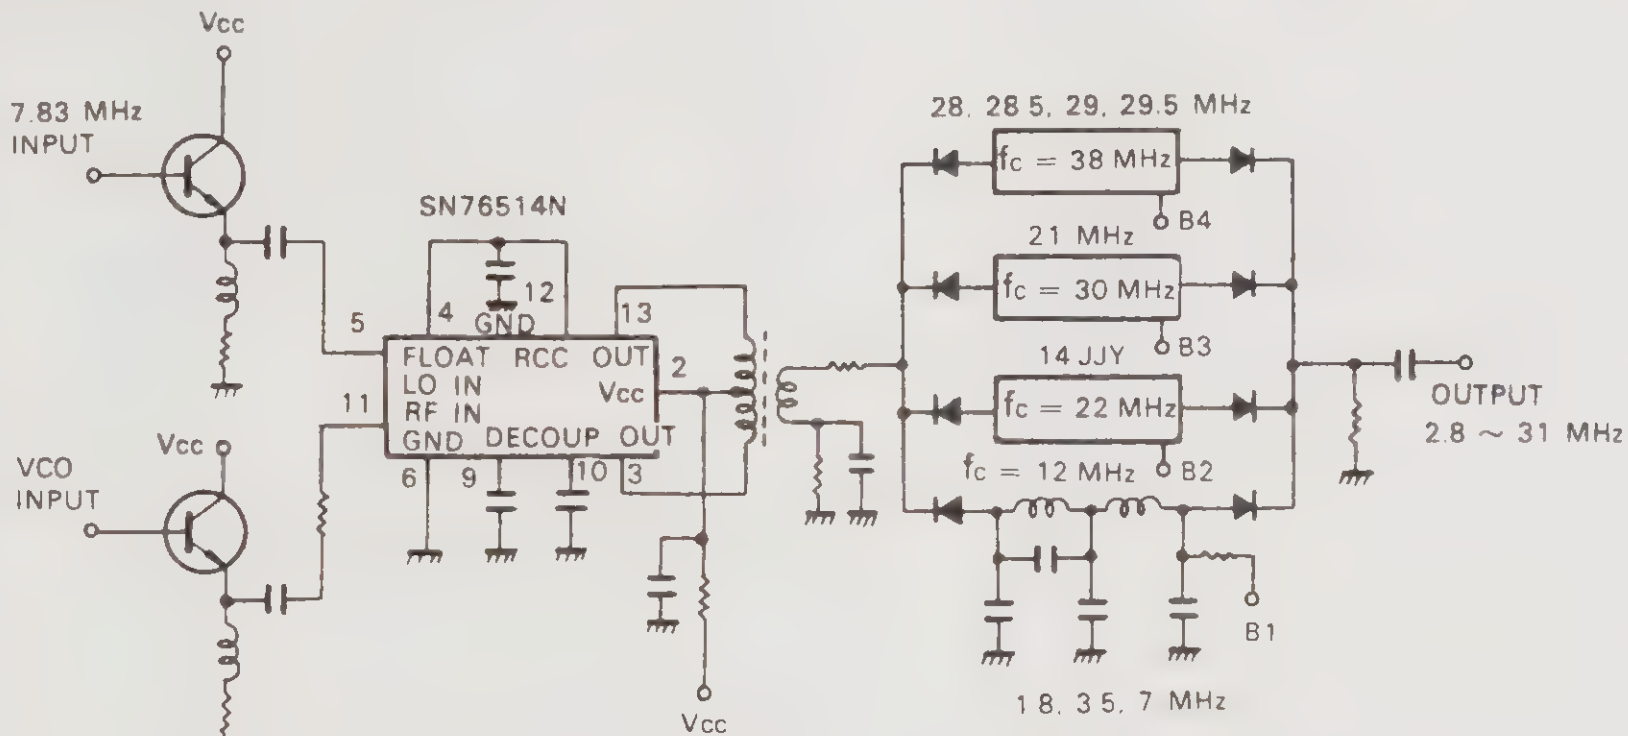

Second mixer circuit diagram

BLOCK DIAGRAM

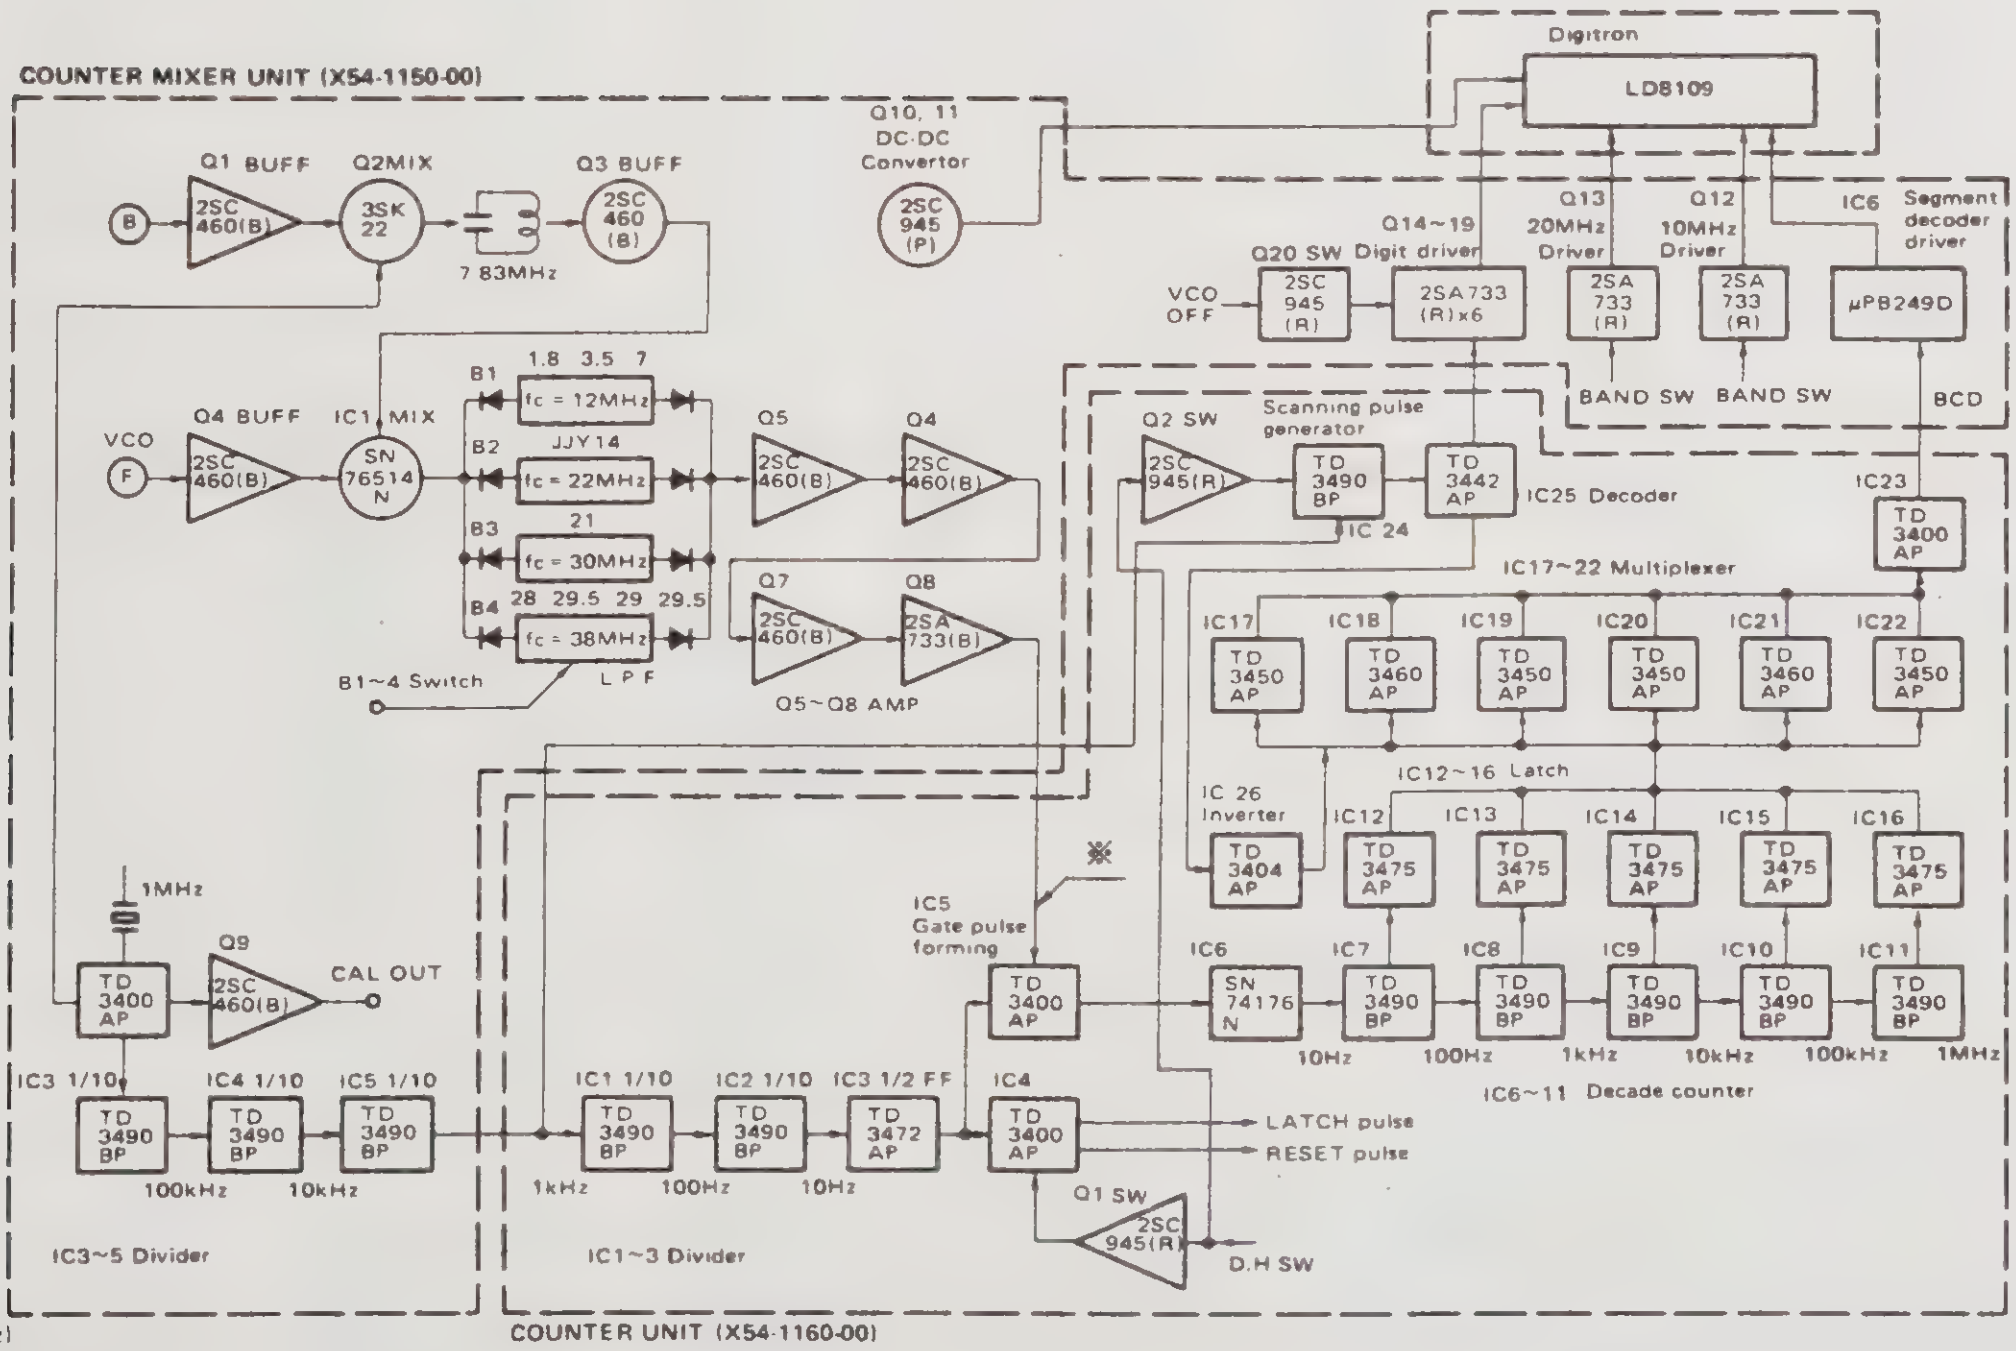

※ Counter Freq. (When CAR Freq. = 8.830 MHz)

BAND	VCO Freq.	Counter Freq.	BAND	VCO Freq.	Counter Freq.
JJY/WWV	23.83~24.33	16.00~16.50	21	29.83~30.33	22.00~22.50
1.8	10.63~11.13	2.80~ 3.30	28	36.83~37.33	29.00~29.50
3.5	12.33~12.83	4.50~ 5.00	28.5	37.33~37.83	29.50~30.00
7	15.83~16.33	8.00~ 8.50	29	37.83~38.33	30.00~30.50
14	22.83~23.33	15.00~15.50	29.5	38.33~38.83	30.50~31.00



DG-1

Ref No.	Parts No.	Description	Remarks
		MISCELLANEOUS	
	B50-1566-00	Operating manual	
	E31-0039-05	Cable (for counter calibration)	
	H01-1614-03	Carton case (inside)	
	H03-0543-04	Carton case (outside)	
	H12-0048-04	Cushion E	
	H12-0049-04	Cushion C	
	H12-0050-04	Cushion A	
	H12-0051-04	Cushion B	
	H12-0052-04	Cushion D	
	H12-0002-03	Protection sheet	
	H25-0077-03	Protection cover × 3	
	H25-0112-04	Protection cover	
	J32-0221-04	Hexagonal boss × 2	
	X43-1220-00	5V-AVR unit	
	X54-1170-00	Display unit	
	X60-1020-00	Counter ass'y unit	

5V-AVR (X43-1220-00)

Ref No.	Parts No	Description	Remarks
		CAPACITOR	
C1	CE04W1E470	Electrolytic 47μF ±10%	
C2	CQ93M1H104K	Mylar 0.1μF ±10%	
C3	CQ93M1H104K	Mylar 0.1μF ±10%	
		RESISTOR	
R1	RW98A3H5R6K	Cement 5.6Ω ±10% 5W	
		SEMICONDUCTOR	
Q1	V30-0171-05	IC MC7805CP	
		MISCELLANEOUS	
—	E40-0413-05	Mini-connector	
—	F01-0244-04	Heat sink	
—	F01-0253-04	Heat sink (resistor)	

DISPLAY (X54-1170-00)

Ref. No.	Parts No.	Description	Remarks
		MISCELLANEOUS	
—	E31-0021-15	Connector 16P with lead	
—	G13-0107-04	Sponge	
—	J19-0485-04	Indicating tube stopper	
—	J21-1493-04	Indicating tube stopper	
—	V11-0429-05	Indicating tube LD8109	

COUNTER ASS'Y (X60-1020-00)

Ref. No.	Parts No.	Description	Remarks
		MISCELLANEOUS	
—	E40-0625-05	Chassis mounter	
—	E40-1225-05	Chassis mounter	
—	F11-0231-03	Counter shield box	
—	F11-0232-13	Counter shield case	
—	X54-1150-00	Counter mixer unit	
—	X54-1160-00	Counter unit	

COUNTER MIXER (X54-1150-00)

Ref. No.	Parts No.	Description	Remarks
		CAPACITOR	
C1	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C2	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C3	KC45B1H102K	Ceramic 0.001μF ±10%	
C4	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C5	CC45RH1H220J	Ceramic 22pF ±5%	
C6	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C7	CC45CH1H020C	Ceramic 2pF ±0.25pF	
C8	CC45RH1H220J	Ceramic 22pF ±5%	
C9	CC45CH1H330J	Ceramic 33pF +80% −20%	
C10,11	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C12	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C13	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C14	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C15～19	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C20	CC45CH1H470J	Ceramic 47pF ±5%	
C21	CC45CH1H390J	Ceramic 39pF ±5%	
C22	CC45SL1H121J	Ceramic 120pF ±5%	
C23	CC45SL1H680J	Ceramic 68pF ±5%	
C24	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C25,26	CC45CH1H220J	Ceramic 22pF ±5%	
C27	CC45SL1H560J	Ceramic 56pF ±5%	
C28	CC45CH1H390J	Ceramic 39pF ±5%	
C29	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C30,31	CC45CH1H180J	Ceramic 18pF ±5%	
C32	CC45CH1H470J	Ceramic 47pF ±5%	
C33	CC45CH1H330J	Ceramic 33pF ±5%	
C34	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C35	CC45CH1H120J	Ceramic 12pF ±5%	
C36	CC45CH1H150J	Ceramic 15pF ±5%	
C37	CC45CH1H330J	Ceramic 33pF ±5%	
C38	CC45CH1H220J	Ceramic 22pF ±5%	
C39	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C40	CK45B1H102K	Ceramic 0.001μF ±10%	
C41	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C42	CK45B1H102K	Mylar 0.001μF ±10%	
C43	CQ92M1H472K	Ceramic 0.0047μF ±10%	
C44	CK45B1H102K	Ceramic 0.001μF ±10%	
C45,46	CK45F1H223Z	Ceramic 0.022μF +80% −20%	
C53	CK45F1H103Z	Ceramic 0.01μF +80% −20%	
C54	CK45B1H331K	Ceramic 330pF ±10%	
C55	CK45B1H681K	Ceramic 680pF ±10%	
C56	CK45B1H331K	Ceramic 330pF ±10%	
C57	CQ92M1H104K	Mylar 0.1μF ±10%	
C59	CS15E1VR33M	Tantalum 0.033μF ±20%	
C60	CK45B1H102K	Ceramic 0.001μF ±10%	

Ref. No.	Parts No.	Description	Re-marks
C61	CE04W1H100(RL)	Electrolytic 10μF 50WV	
C62	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C63,64	CE04W1E100(RL)	Electrolytic 10μF 25WV	
C65	C90-0262-05	Ceramic 0.047μF	
C66,67	CK45F1H103Z	Ceramic 0.01μF +80%−20%	
C68	CE04W1A101(RL)	Electrolytic 100μF 10WV	
C69	C90-0262-05	Ceramic 0.047μF	
C71	CC45CH1H120J	Ceramic 12pF ±5%	
C72	CC45CH1H560J	Ceramic 56pF ±5%	
C73	CC45SL1H391J	Ceramic 390pF ±5%	
C74	CC45CH1H470J	Ceramic 47pF ±5%	
C75	CC45CH1H150J	Ceramic 15pF ±5%	
C76	C90-0262-05	Ceramic 0.047μF	
C77,78	CK45F1H223Z	Ceramic 0.022μF +80%−20%	
C79	CK45B1H471K	Ceramic 470pF ±10%	
C80	CC45SL1H470J	Ceramic 47pF ±5%	
C81	CK45B1H331K	Ceramic 330pF ±10%	
C82	CC45CH1H010C	Ceramic 1pF ±0.25pF	
C83	CK45B1H102K	Ceramic 0.001μF ±10%	
RESISTOR			
R1	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R2	PD14CY2B154J	Carbon 150kΩ ±5% 1/8W	
R3	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R4	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R5	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R6	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R7	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R8,9	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R10	PD14CY2B154J	Carbon 150kΩ ±5% 1/8W	
R11	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R12	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R13,14	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R15	PD14CY2B224J	Carbon 220kΩ ±5% 1/8W	
R16	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R17	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R18,19	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R20	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R21	PD14CY2B100J	Carbon 10Ω ±5% 1/8W	
R22～24	PD14CY2B181J	Carbon 180Ω ±5% 1/8W	
R25	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R26	PD14CY2B332J	Carbon 3.3kΩ ±5% 1/8W	
R27	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R28	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R29	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R30	PD14CY2B331J	Carbon 330Ω ±5% 1/8W	
R31	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R32	PD14CY2B100J	Carbon 10Ω ±5% 1/8W	
R33	PD14CY2B221J	Carbon 220Ω ±5% 1/8W	
R34	PD14BY2B333J	Carbon 33kΩ ±5% 1/8W	
R35	PD14CY2B271J	Carbon 270Ω ±5% 1/8W	
R36	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R44	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R45	PD14CY2B561J	Carbon 560Ω ±5% 1/8W	
R46	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R47	PD14CY2B100J	Carbon 10Ω ±5% 1/8W	
R48～55	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R56	PD14CY2B821J	Carbon 820Ω ±5% 1/8W	
R57,58	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R59,60	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R61	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R62	PD14CY2B272J	Carbon 2.7kΩ ±5% 1/8W	
R63	PD14CY2B224J	Carbon 220kΩ ±5% 1/8W	

Ref. No.	Parts No.	Description	Re-marks
R64	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R65	PD14CY2B822J	Carbon 8.2kΩ ±5% 1/8W	
R66	PD14CY2B222J	Carbon 2.2kΩ ±5% 1/8W	
R67	PD14CY2B223J	Carbon 22kΩ ±5% 1/8W	
R68	PD14CY2B152J	Carbon 1.5kΩ ±5% 1/8W	
R69	PD14CY2B471J	Carbon 470Ω ±5% 1/8W	
R70	PD14CY2B101J	Carbon 100Ω ±5% 1/8W	
R71	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R72	PD14CY2B222J	Carbon 2.2kΩ ±5% 1/8W	
R73	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R74	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
R75	PD14CY2B102J	Carbon 1kΩ ±5% 1/8W	
R76	PD14BY2B183J	Carbon 18kΩ ±5% 1/8W	
RB1,2	R90-0112-05	Carbon 47kΩ × 7	
RB3	R90-0113-05	Carbon 47kΩ × 6	
SEMICONDUCTOR			
IC1	V30-0153-05	IC SN76514N	
IC2～5	V30-0151-05	IC TD3490BP	
IC6	V30-0170-05	IC μPB249D	
Q1	V03-0079-05	Transistor 2SC460(B)	
Q2	V09-0023-05	FET 2SK22(GR)	
Q3～7	V03-0079-05	Transistor 2SC460(B)	
Q8	V01-0084-05	Transistor 2SA733(R)	
Q9	V03-0079-05	Transistor 2SC460(B)	
Q10,11	V03-0270-05	Transistor 2SC945(R)	
Q12～19	V01-0084-05	Transistor 2SA733(R)	
Q20	V03-0270-05	Transistor 2SC945(R)	
Q21	V03-0079-05	Transistor 2SC460(B)	
Q22	V01-0084-05	Transistor 2SA733(R)	
D1～8	V11-0414-05	Diode 1S2588	
D9～12	V11-0076-05	Diode 1S1555	
D13,14	V21-0007-05	Varistor SV-03	
D15	V11-0076-05	Diode 1S1555	
D16	V11-0482-05	Zener diode BZ-220	
C17	V21-0007-05	Varistor SV03	
D18～28	V11-0076-05	Diode 1S1555	
D29	V11-0240-05	Zener diode WZ090	
COIL/TRIMMER			
L1,2	L40-4711-03	Ferri-inductor 470μH	
L3	L40-6801-03	Ferri-inductor 68μH	
L4	L40-3391-03	Ferri-inductor 2.7μH	
L5	L40-4719-02	Ferri-inductor 4.7μH	
L6	L40-1592-02	Ferri-inductor 1.5μH	
L7	L40-2792-02	Ferri-inductor 2.7μH	
L8	L34-0523-05	Tuning coil 1μH	
L9	L40-1892-02	Ferri-inductor 1.8μH	
L10	L34-0526-05	Tuning coil 0.28μH	
L11	L40-1592-02	Ferri-inductor 1.5μH	
L12～	L40-4711-03	Ferri-inductor 470μH	
L18,19	L40-6801-03	Ferri-inductor 68μH	
L20～22	L40-4711-03	Ferri-inductor	
L23	L33-0601-05	Choke coil 2.2μH	
T1,2	L34-0522-05	Tuning coil 7.83MHz	
T3	L34-0524-05	Wide range transformer (BM output)	
T4	L19-0020-05	Oscillating transformer (DC-DC converter)	
X1	L77-0482-05	Crystal 10 MHz	
TC1	C05-0032-05	Trimmer 40pF	
MISCELLANEOUS			
J1～3	R92-0150-05	Short jamper	

Ref. No.	Parts No.	Description	Re-marks
—	E23-0046-04	Square terminal × 5	
—	E40-0327-05	Type U pin ass'y	
—	E40-0607-05	Mini-connector × 3	
—	E40-0826-05	Type U pin ass'y × 2	
—	E40-1714-05	Mini-connector	
VR1	R12-4021-05	Semi-fixed resistor 50kΩ(B)	

COUNTER (X54-1160-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CC45CH1H101J	Ceramic 100pF ±5%	
C2	CK45B1H102K	Ceramic 0.001µF ±10%	
C3	CE04W1C220	Electrolytic 22µF 16WV	
C4,5	C90-0262-05	Ceramic 0.047µF	
C6	CE04W1A101	Electrolytic 100µF 10WV	
C7～9	C90-0262-05	Ceramic 0.047µF	
		RESISTOR	
R1,2	PD14CY2B272J	Carbon 2.7kΩ ±5% 1/8W	
R3	PD14CY2B472J	Carbon 4.7kΩ ±5% 1/8W	
R4,5	PD14CY2B104J	Carbon 100kΩ ±5% 1/8W	
R6,7	PD14CY2B821J	Carbon 820Ω ±5% 1/8W	
R8,9	PD14CY2B103J	Carbon 10kΩ ±5% 1/8W	
		SEMICONDUCTOR	
Q1,2	V03-0270-05		
IC1,2	V30-0151-05	IC TD3490BP	
IC3	V30-0131-05	IC TD3472AP	
IC4	V30-0132-05	IC TD3400AP	
IC5	V30-0169-05	IC SN74H00N	
IC6	V30-0168-05	IC SN74176N	
IC7～11	V30-0151-05	IC TD3490BP	
IC12～16	V30-0167-05	IC TD3475AP	
IC17	V30-0165-05	IC TD3450AP	
IC18	V30-0166-05	IC TD3460AP	
IC19,20	V30-0165-05	IC TD3450AP	
IC21	V30-0166-05	IC TD3460AP	
IC22	V30-0165-05	IC TD3450AP	
IC23	V30-0132-05	IC TD3400AP	
IC24	V30-0151-05	IC TD3490BP	
IC25	V30-0164-05	IC TD3442AP	
IC26	V30-0163-05	IC TD3404AP	
		COIL/MISCELLANEOUS	
L1	L40-4701-03	Ferri-inductor 17µH	
—	E40-0607-05	Mini-connector × 3	

PACKING

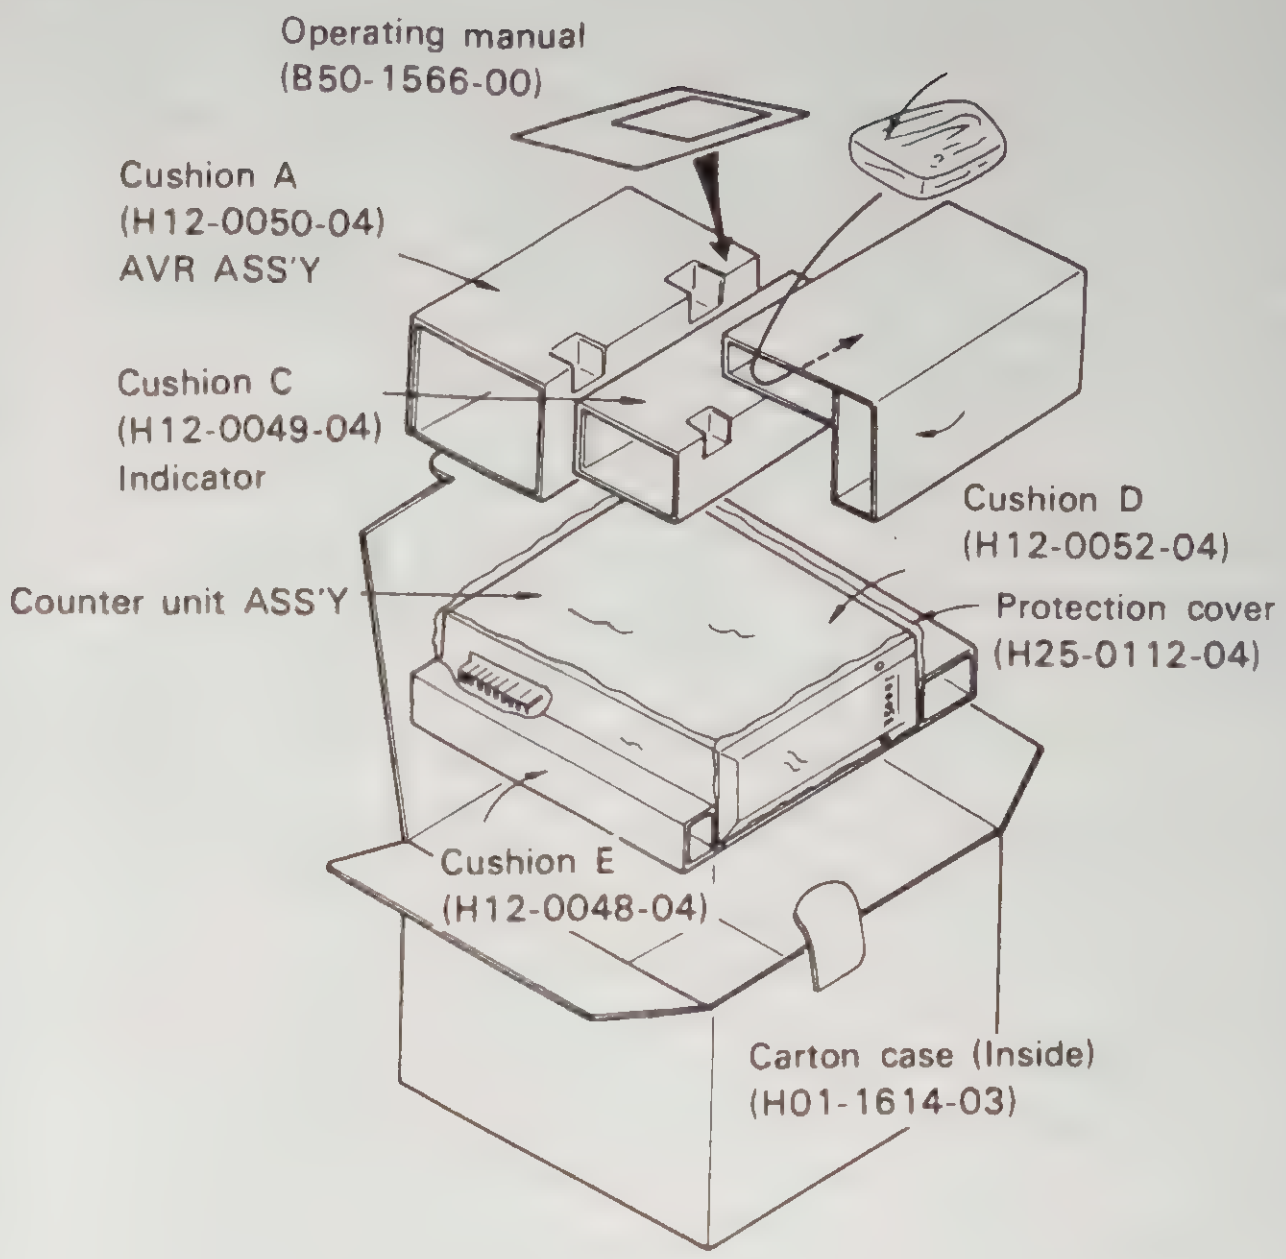

▼ DISPLAY (X54-1170-00)

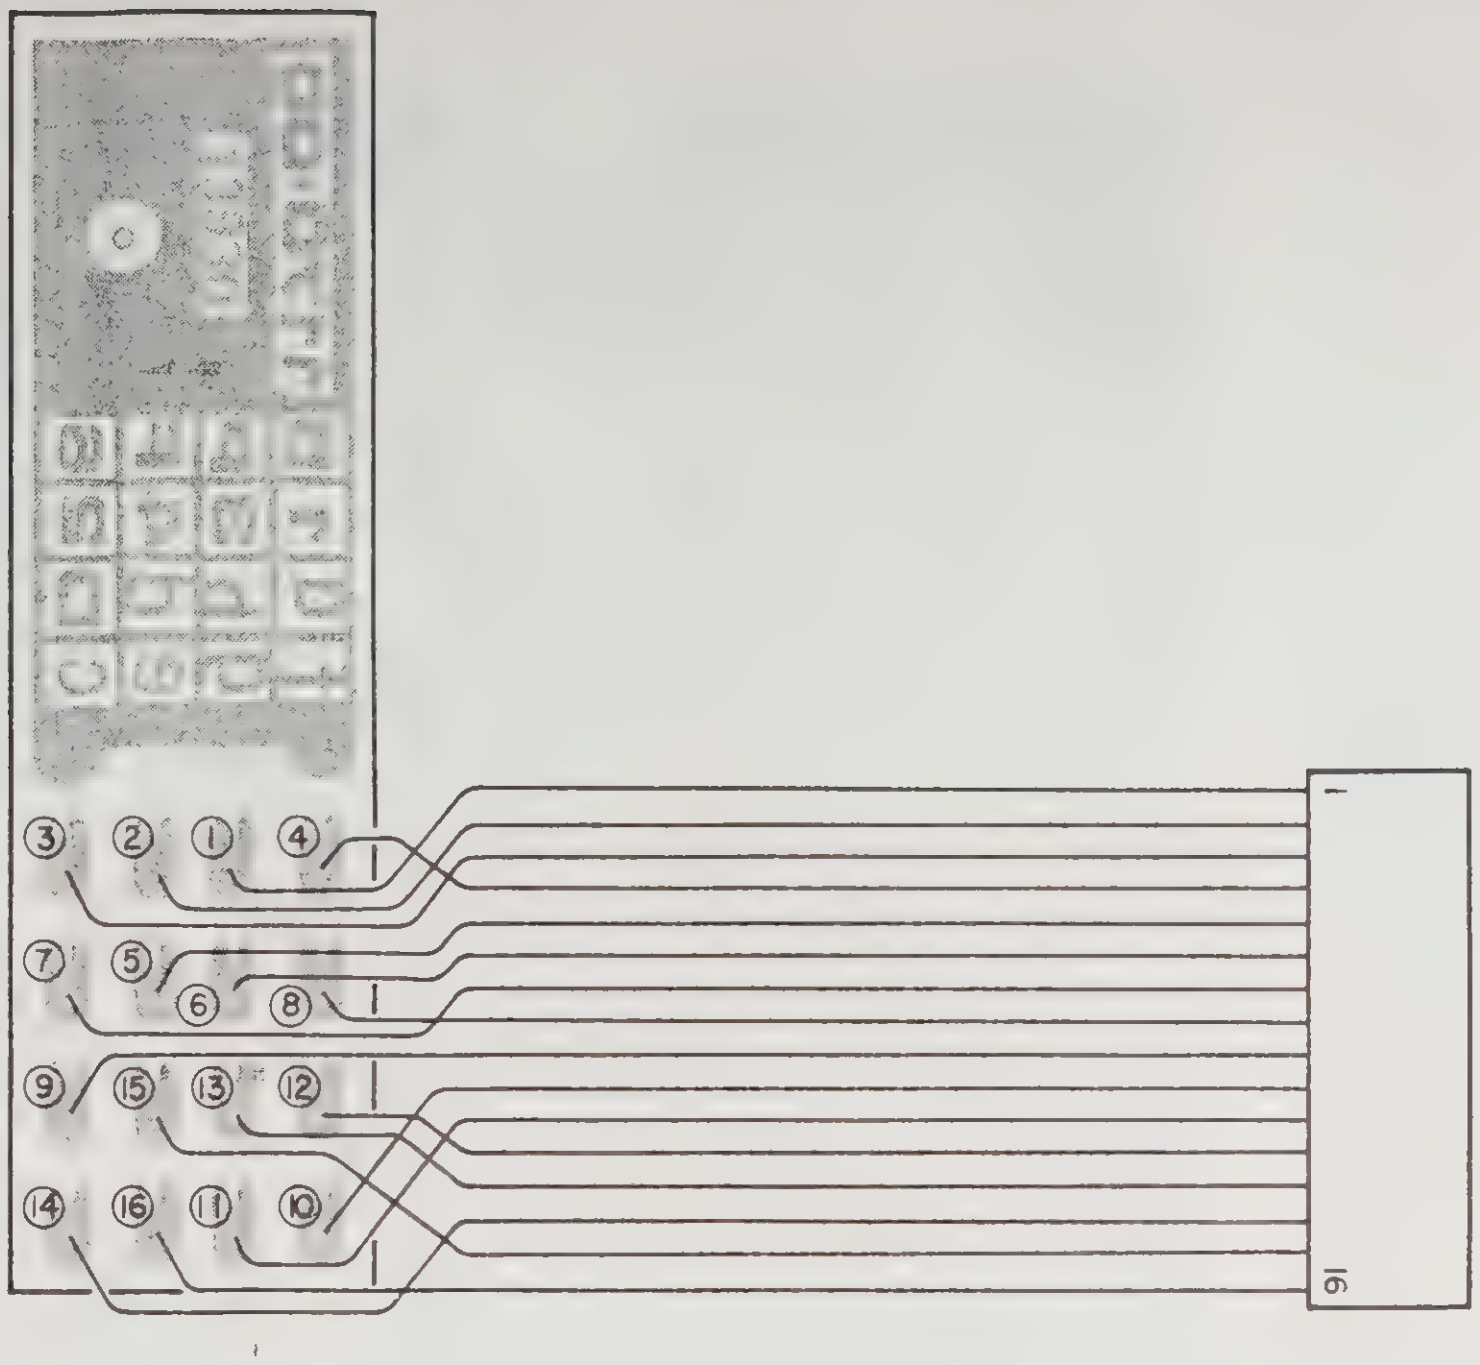

▼ 5V-AVR (X43-1220-00)

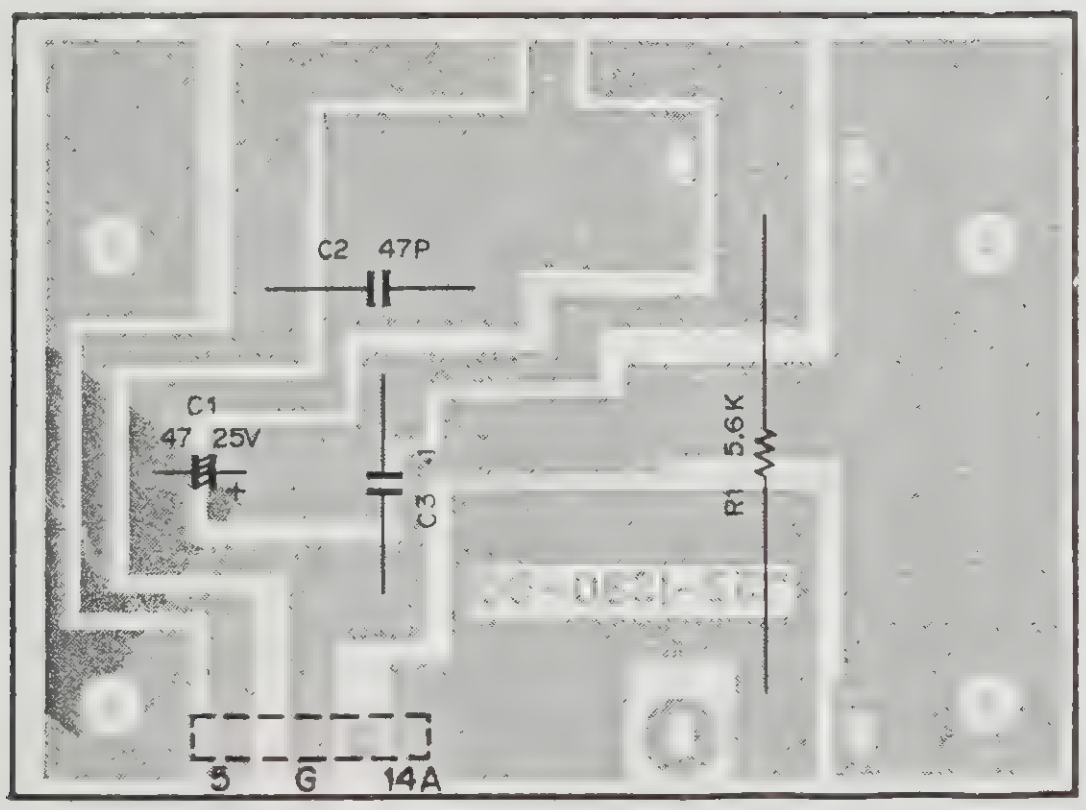

Q1: MC7805CP

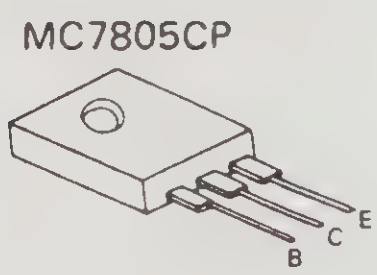

▼ DISPLAY (X54-1170-00)

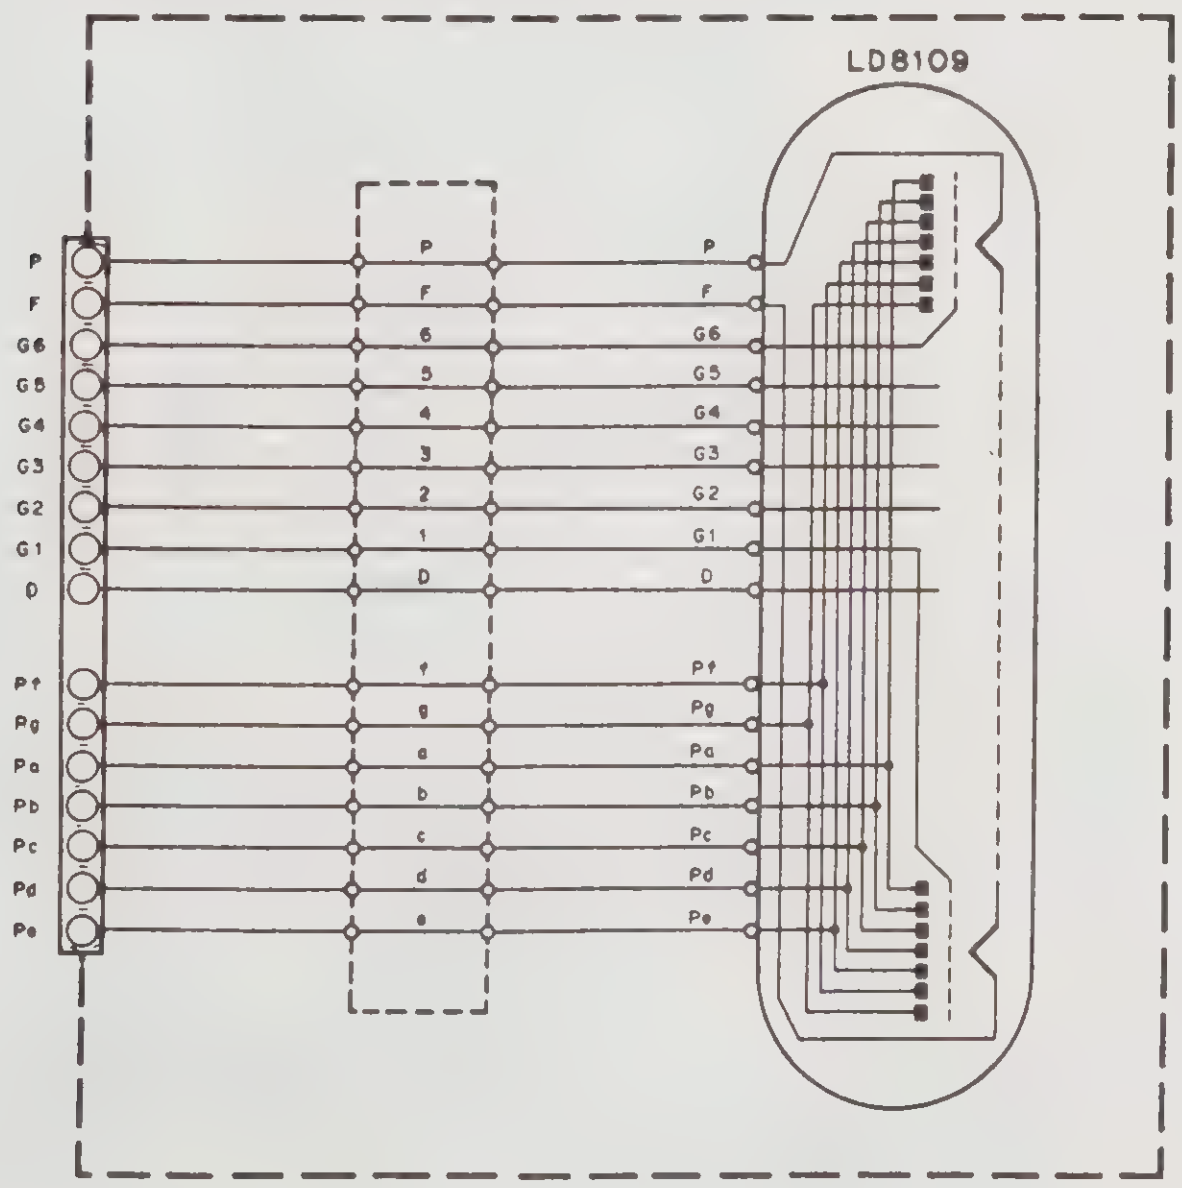

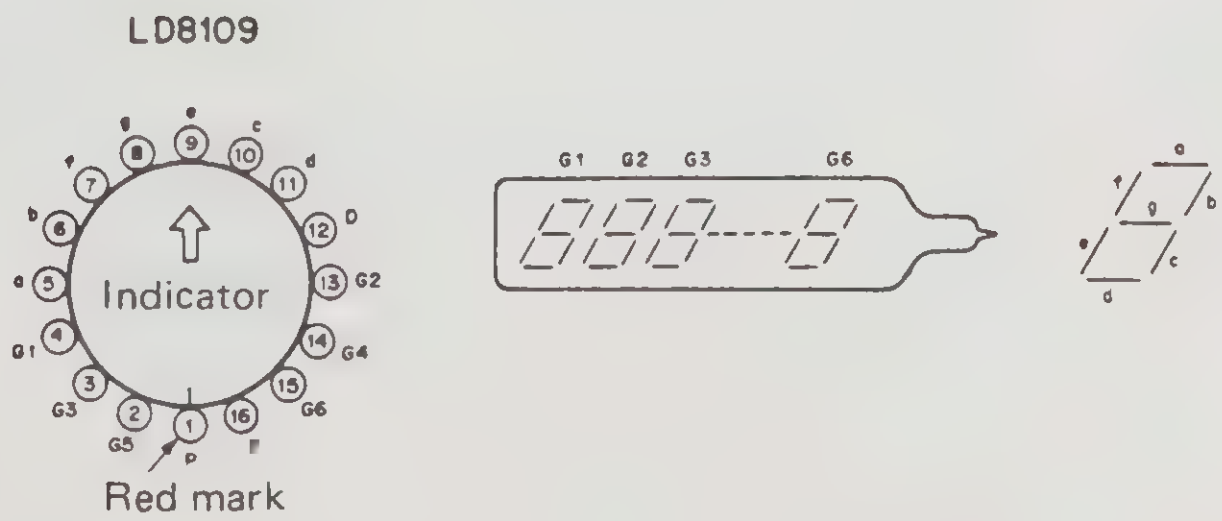

▼ COUNTER MIX (X54-1150-00)

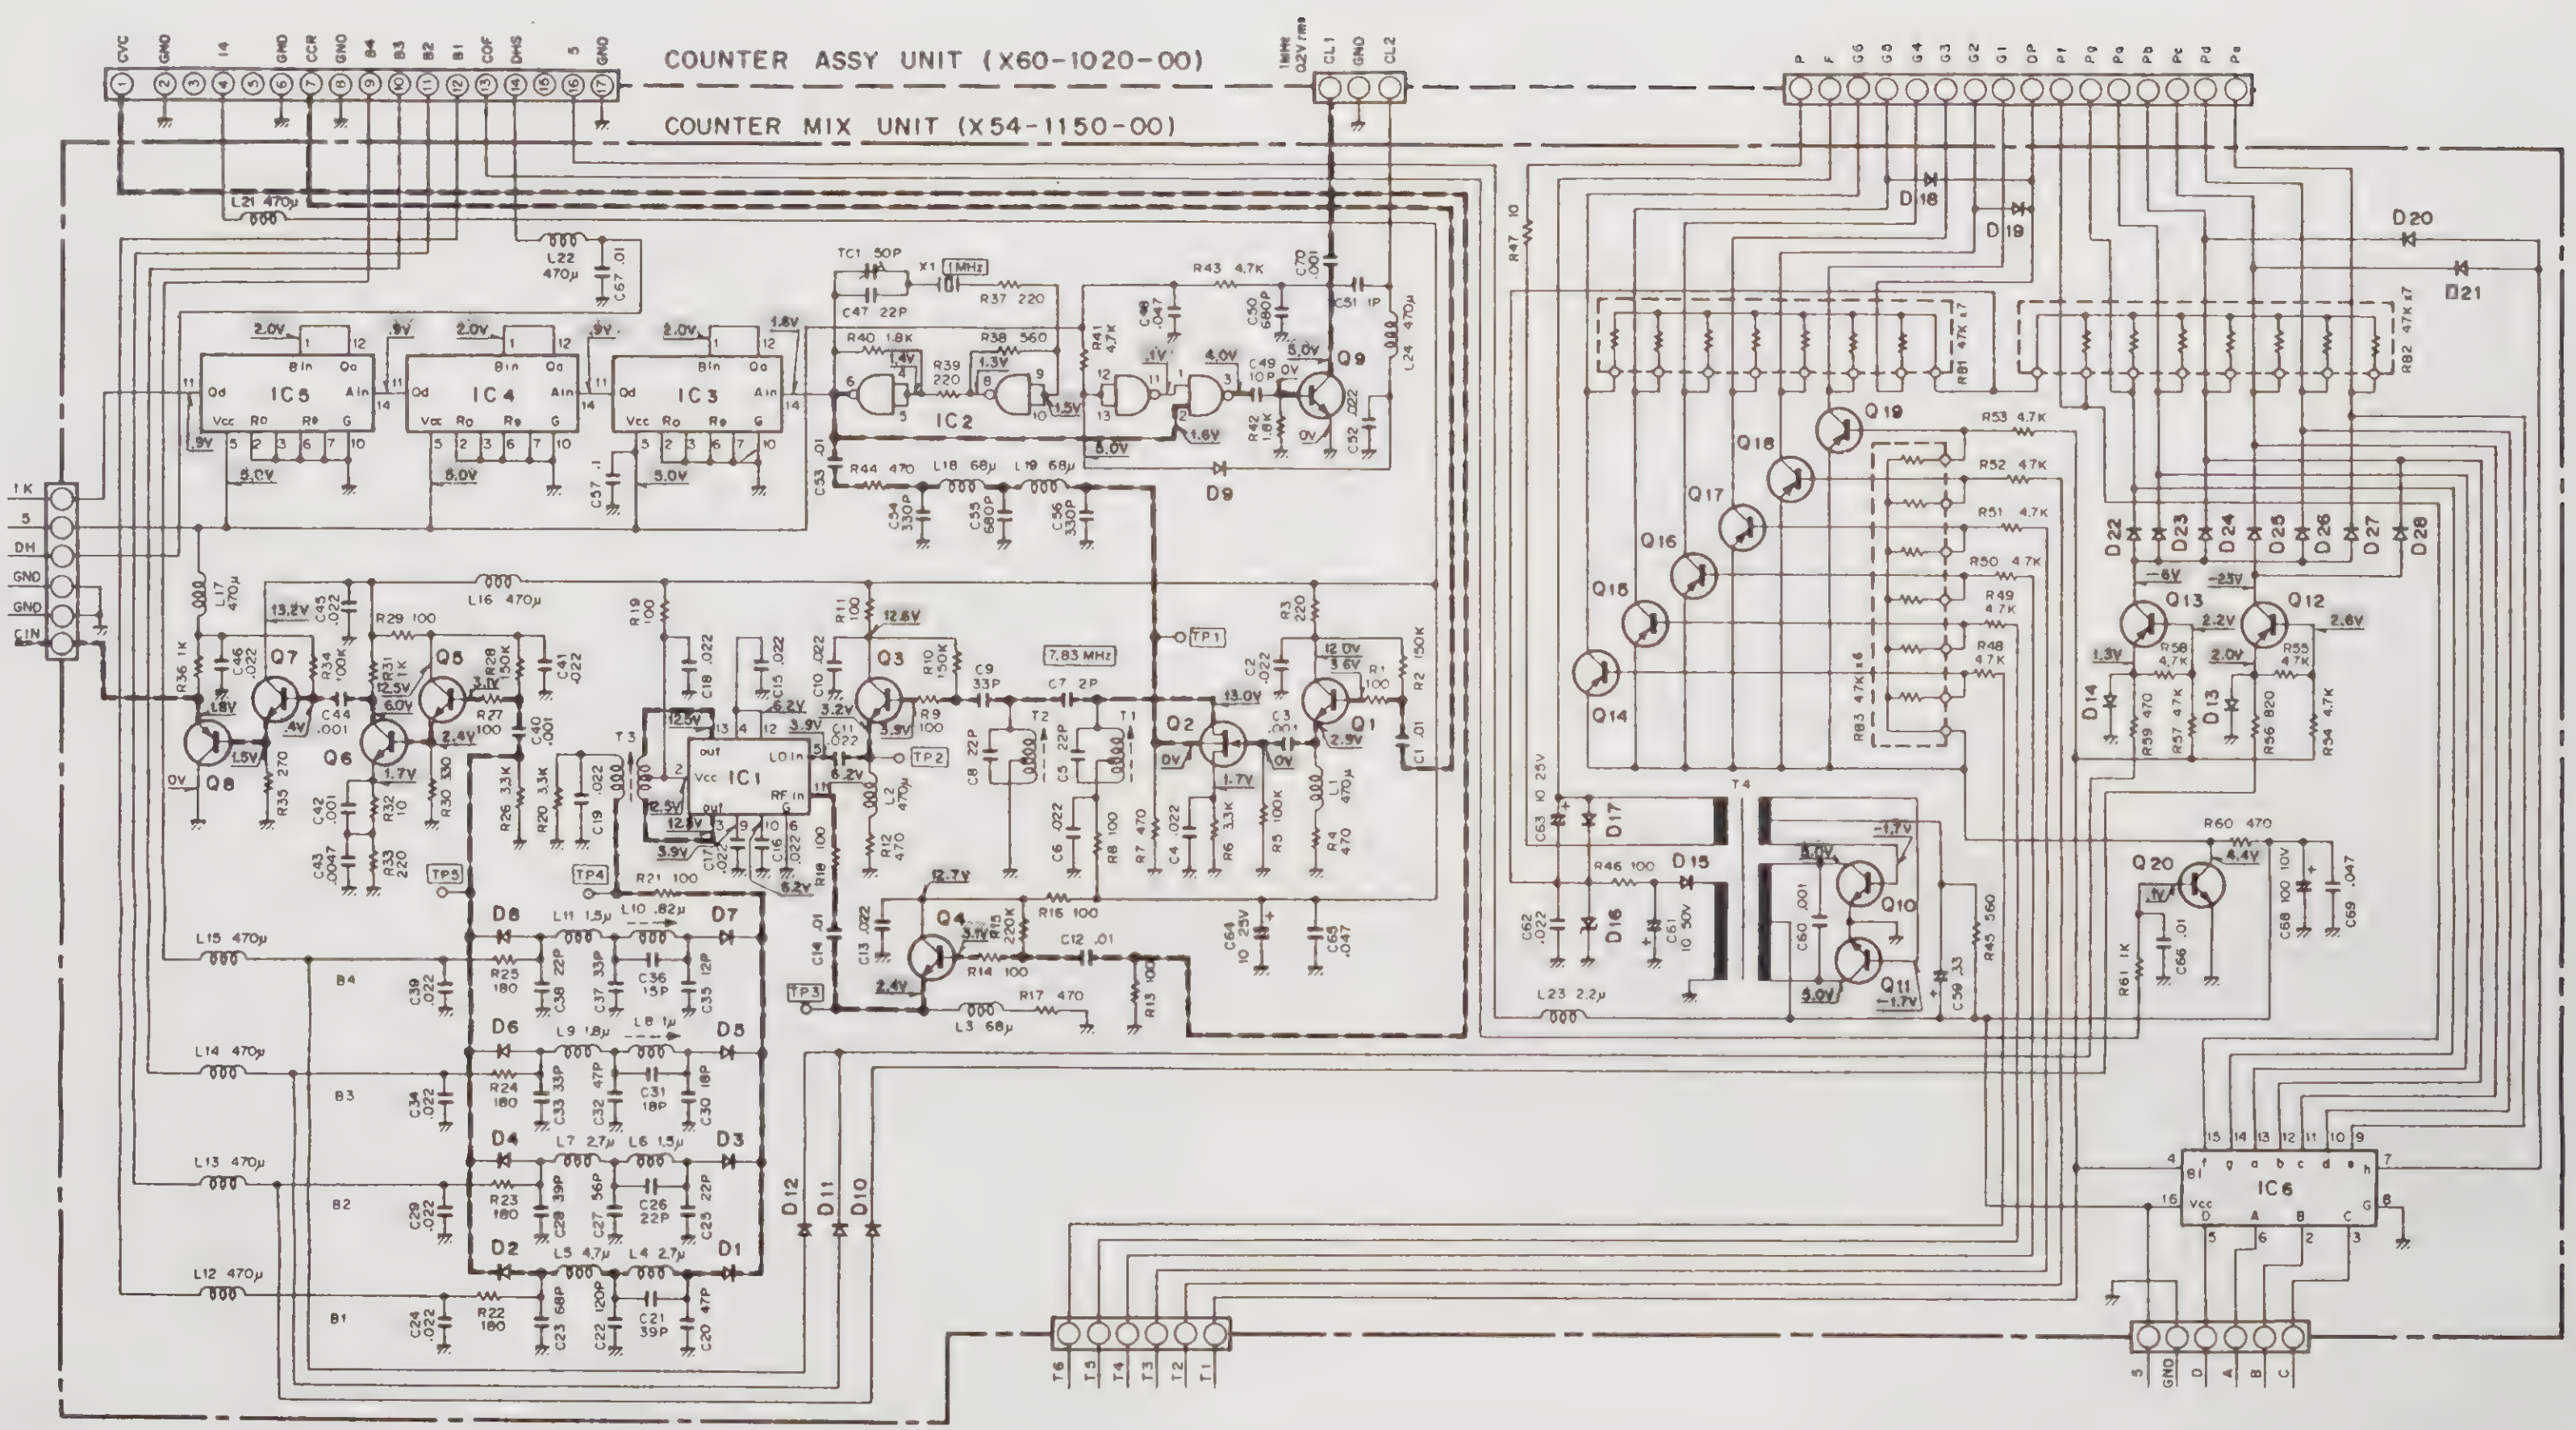

IC1: SN76514N, IC2: TD3400AP, IC3～5: TD3490BP, IC6: μPB249D, Q1,3～7,9: 2SC460(B), Q2. 3SK22(GR), Q8,12～19: 2SA733(R), Q10,11,20: 2SC945(P, D1～8: 1S2588, D9～12,15,18～26: 1S1555, D13,14,17: SV-03, D16: BZ-220

▼ COUNTER MIX (X54-1150-00)

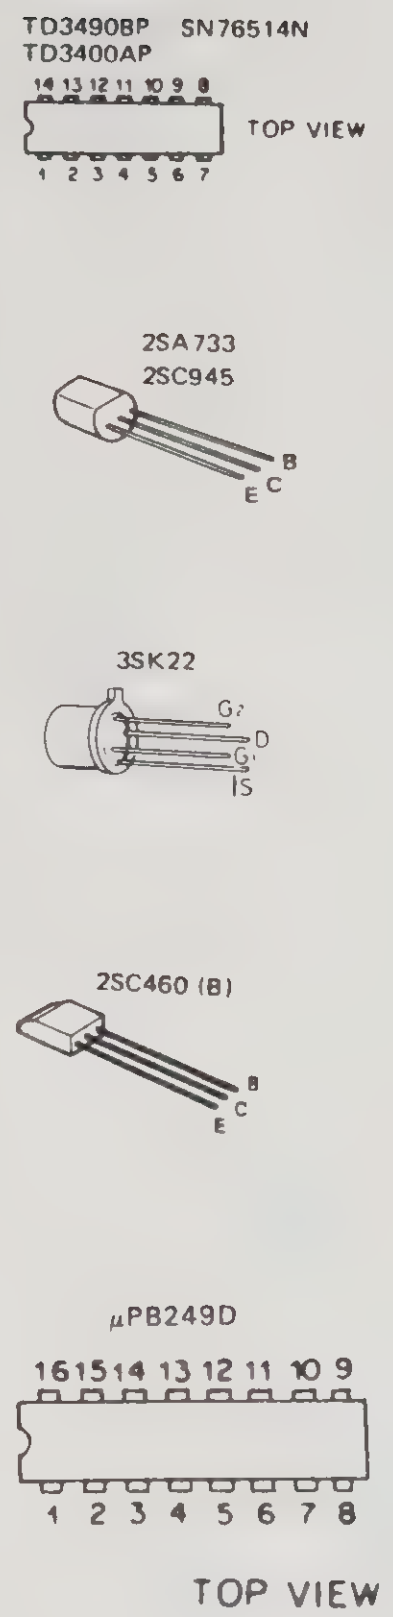

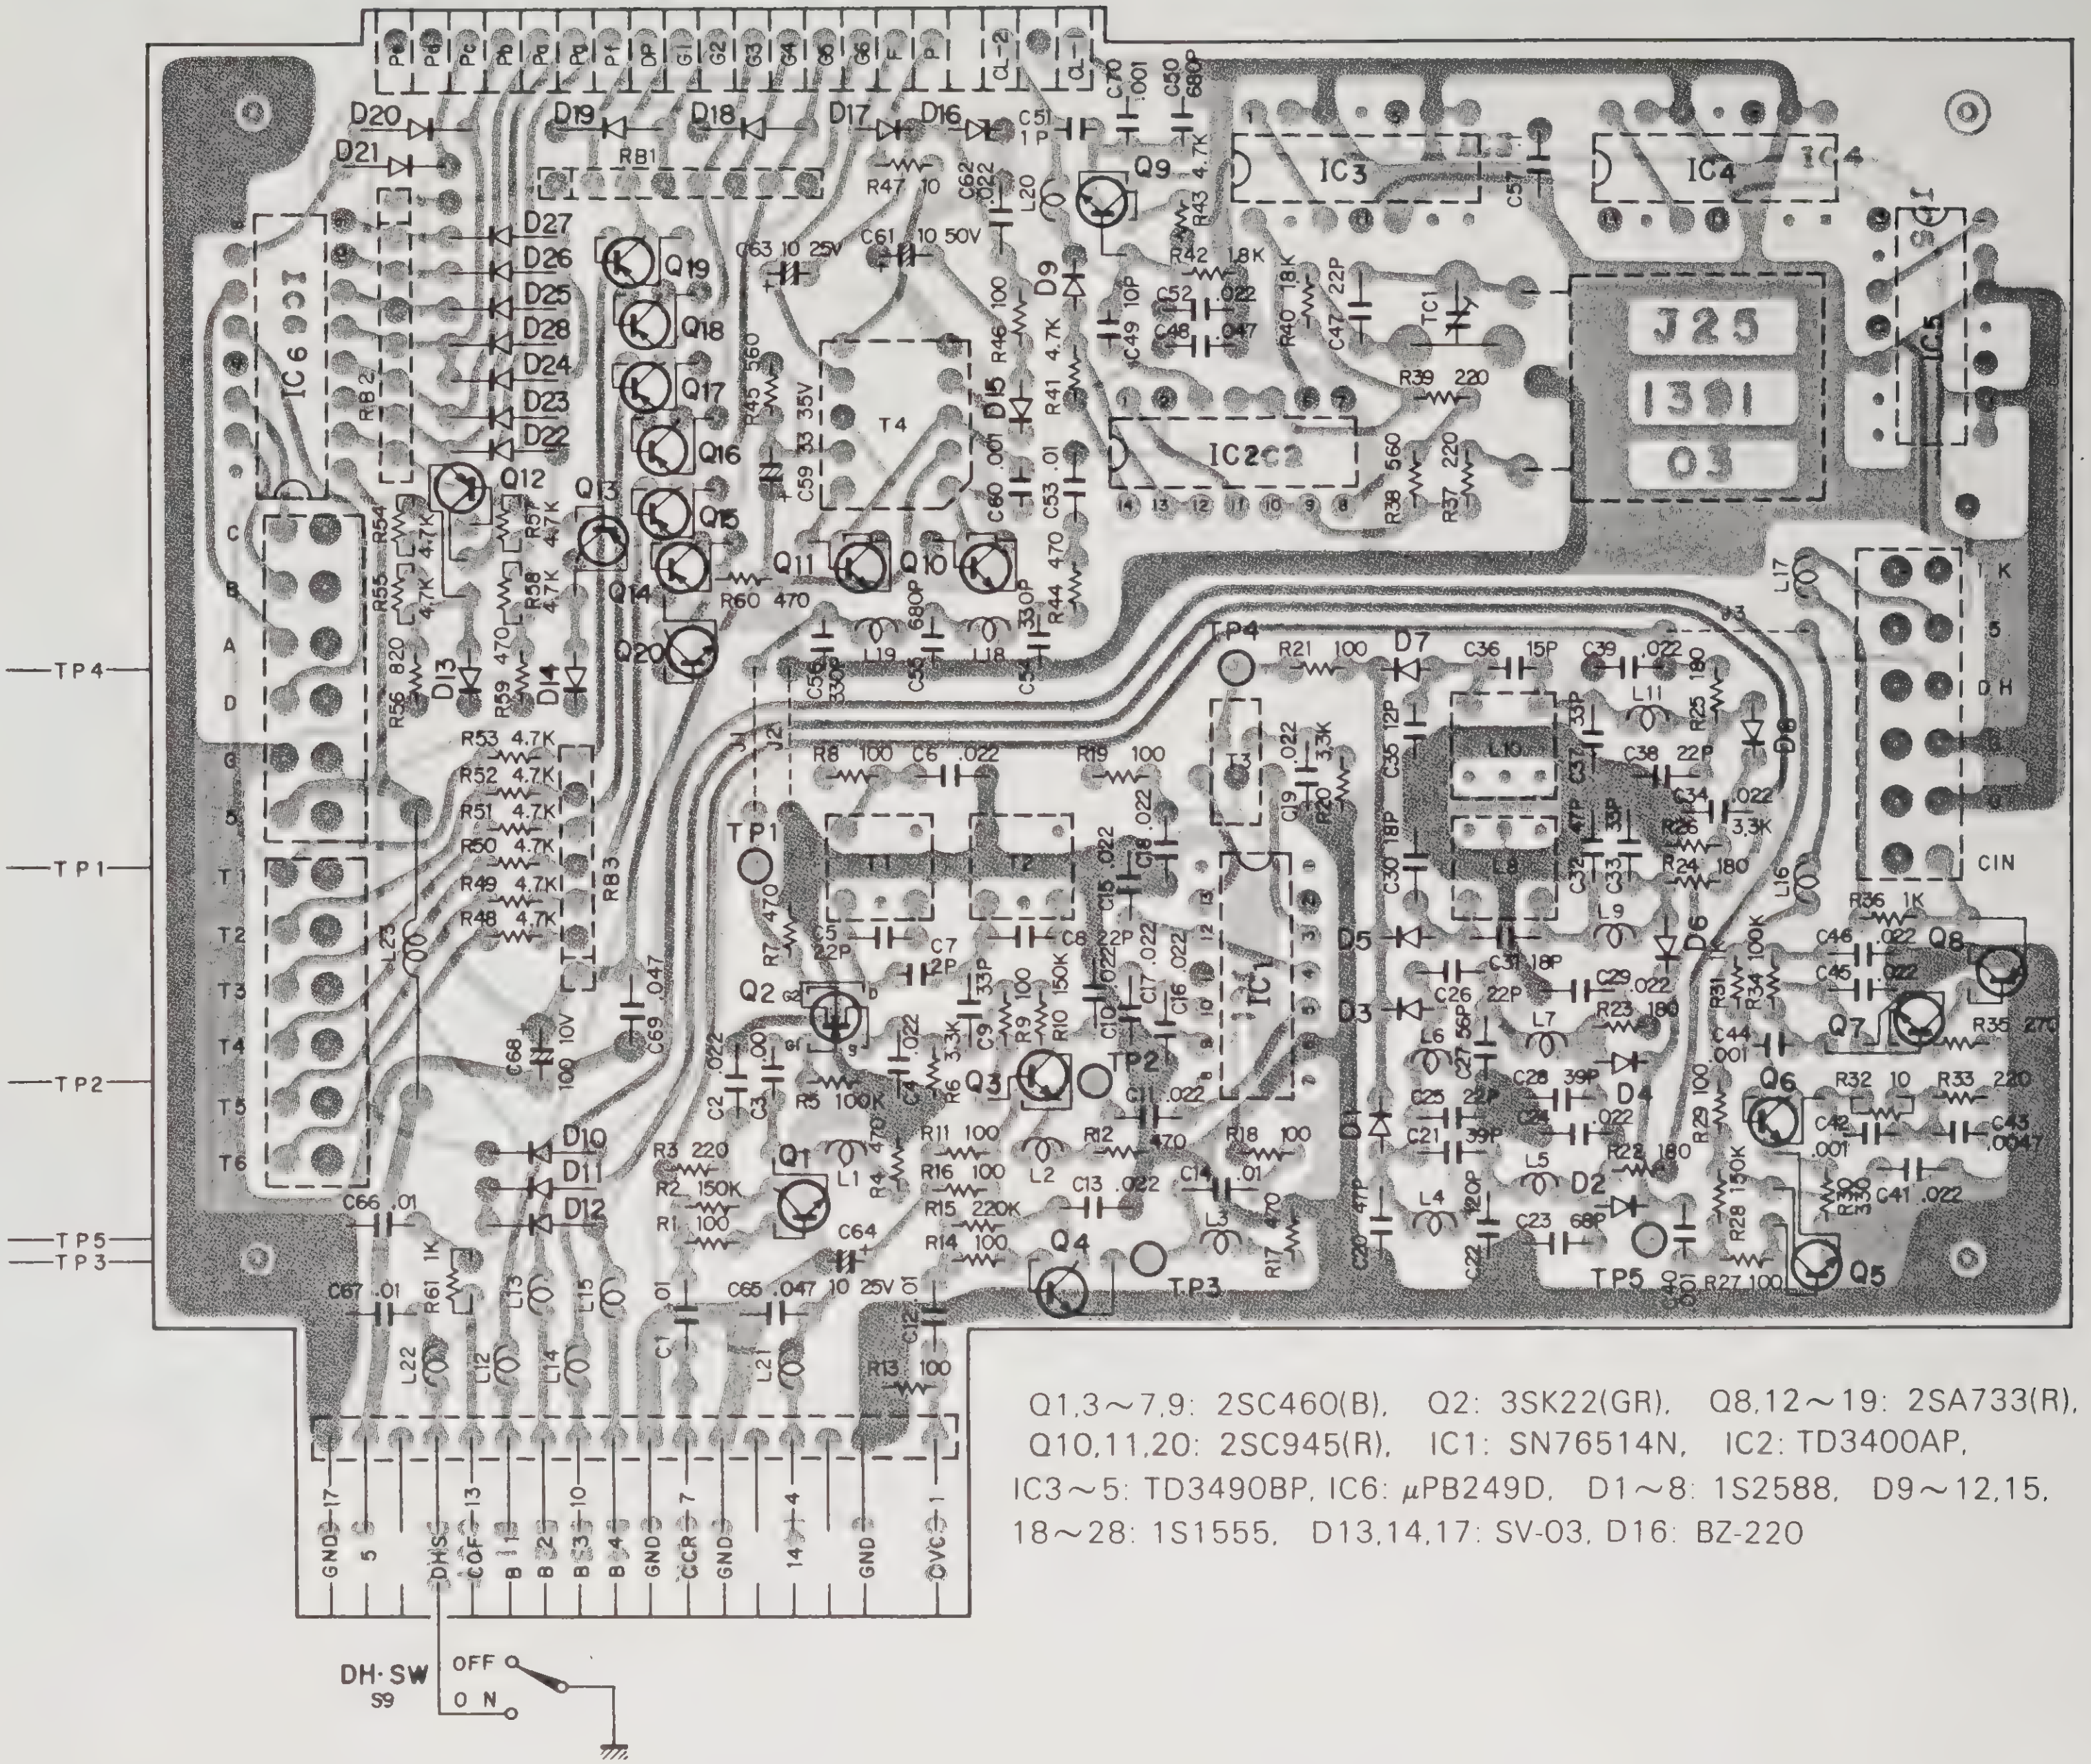

Q1,3～7,9: 2SC460(B), Q2: 3SK22(GR), Q8,12～19: 2SA733(R), Q10,11,20: 2SC945(R), IC1: SN76514N, IC2: TD3400AP, IC3～5: TD3490BP, IC6: μPB249D, D1～8: 1S2588, D9～12,15, 18～28: 1S1555, D13,14,17: SV-03, D16: BZ-220

▼ COUNTER (X54-1160-00)

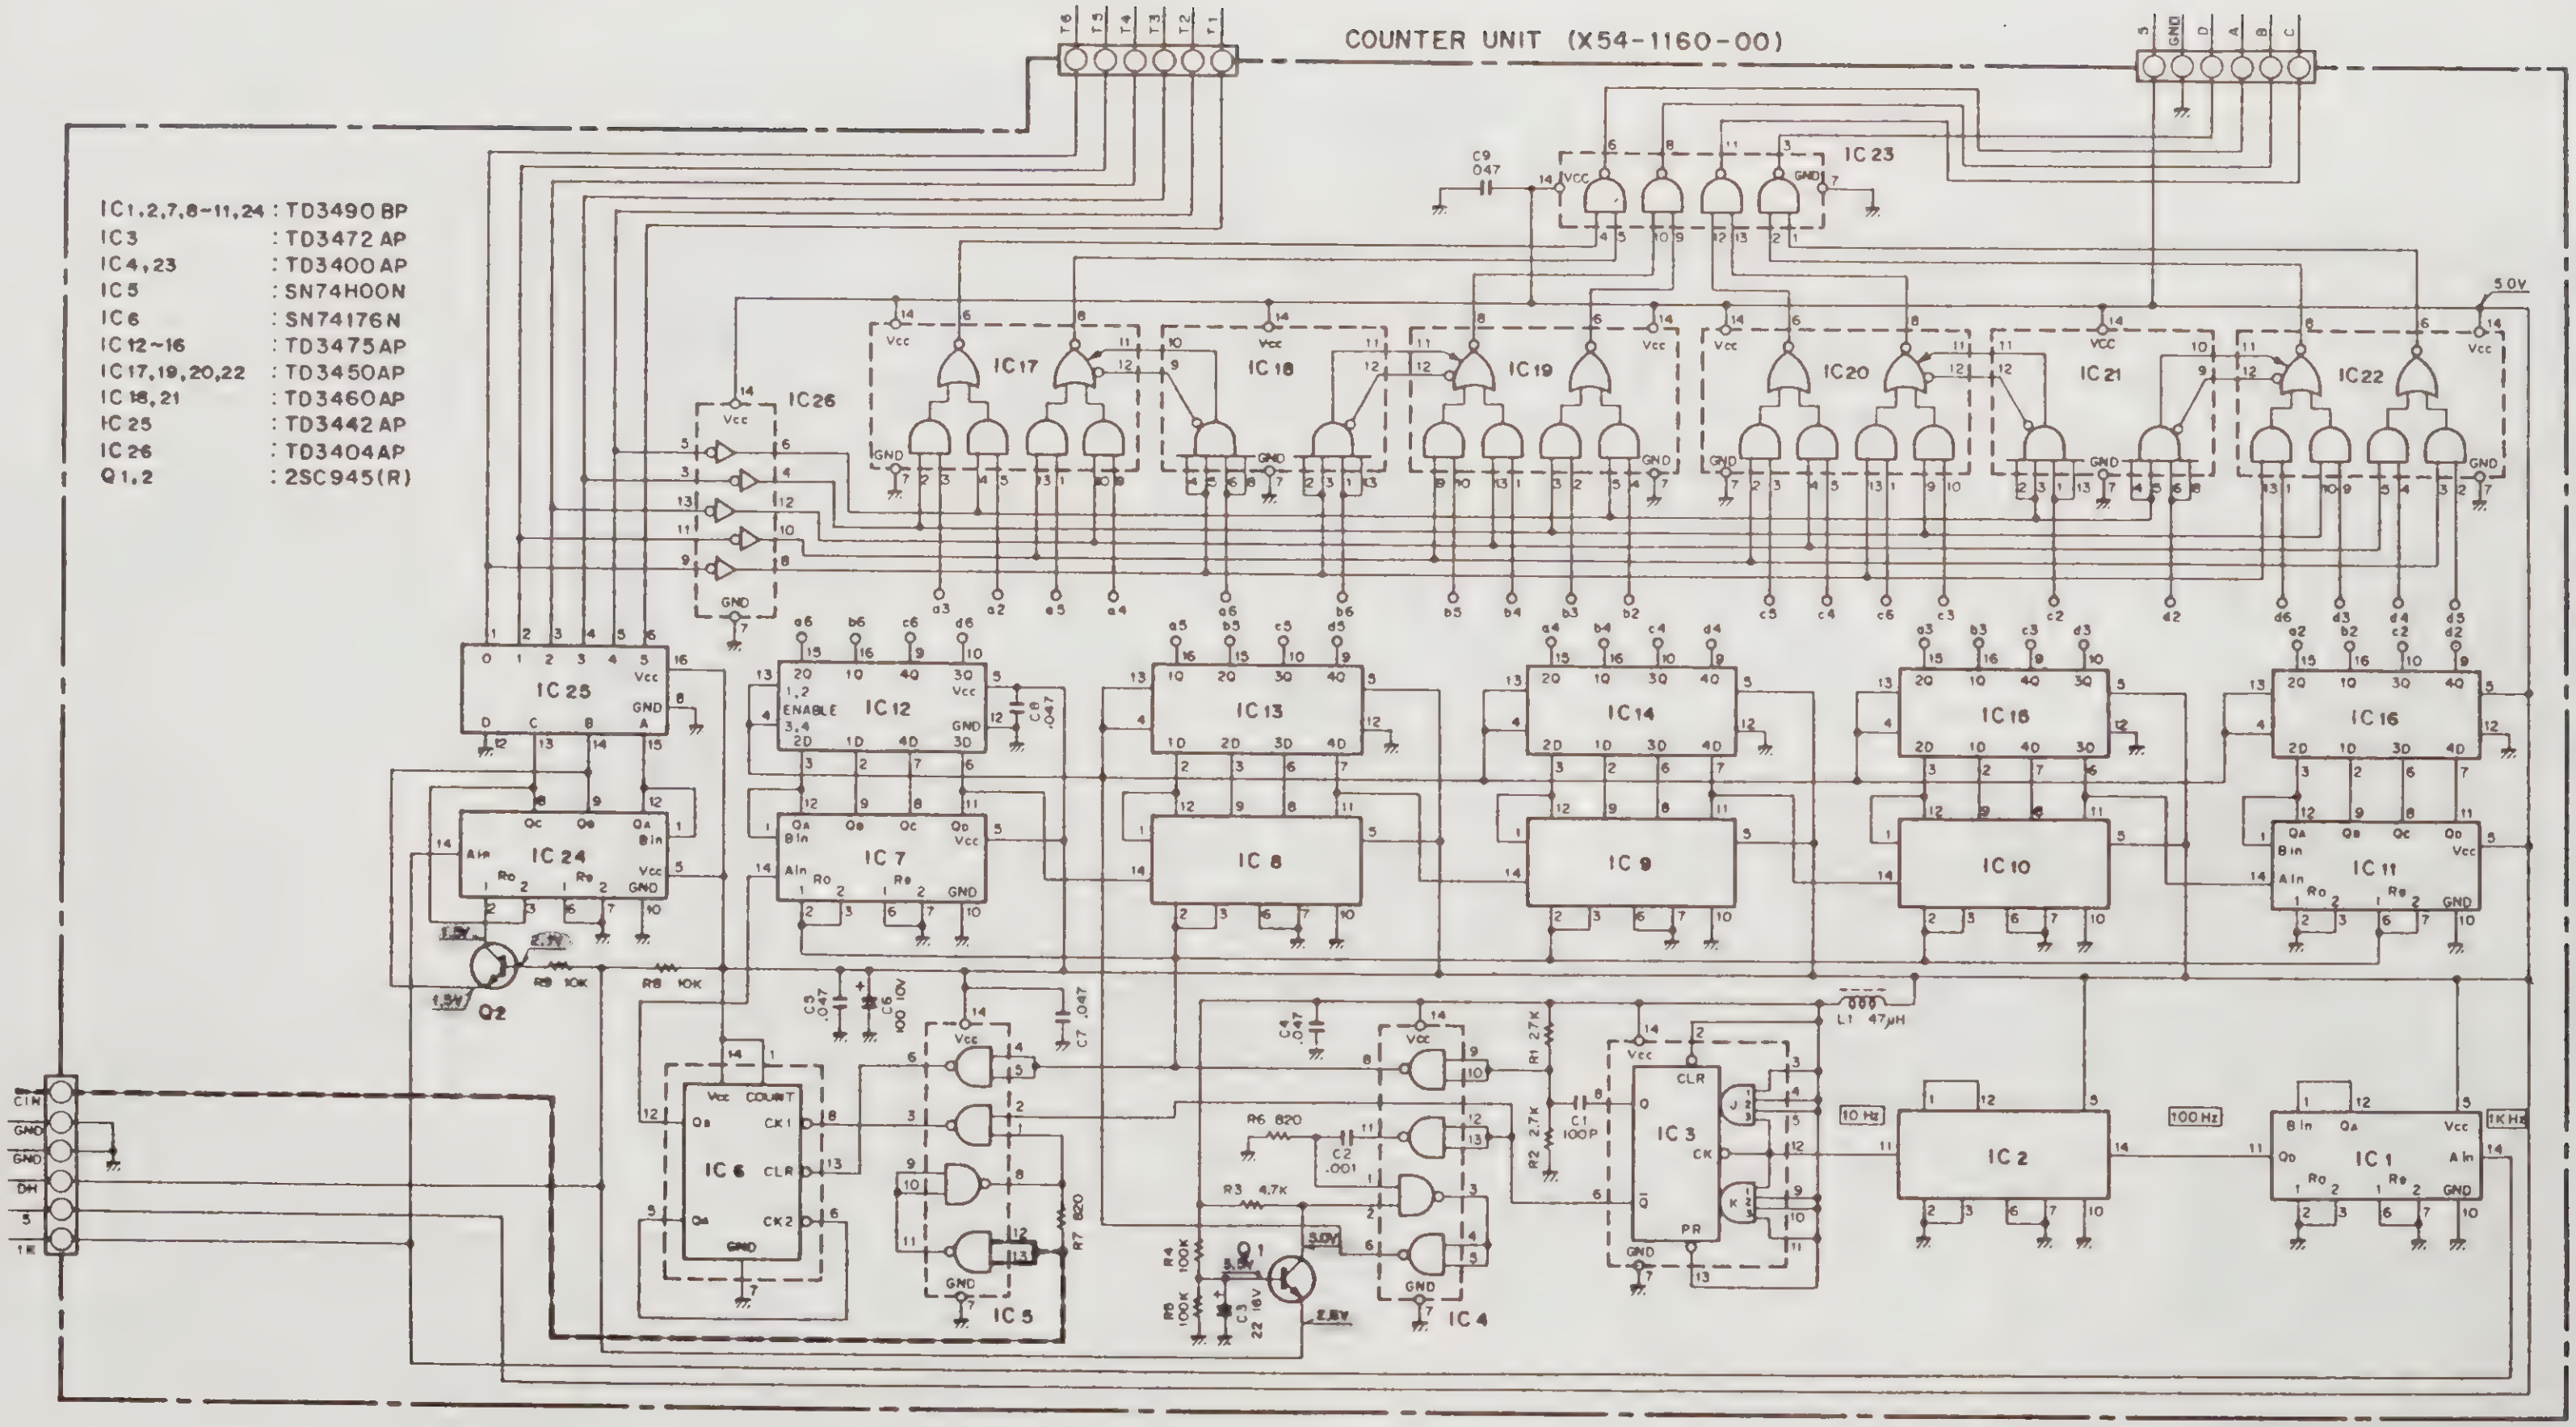

TD3400AP TD3460AP
TD3490BP TD3404AP
TD3472AP SN74H00N
TD3450AP SN74176N



2SC945

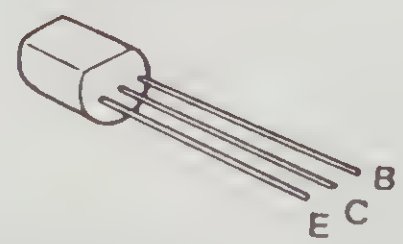

TD3475AP
TD3442AP



▼ **COUNTER (X54-1160-00)**

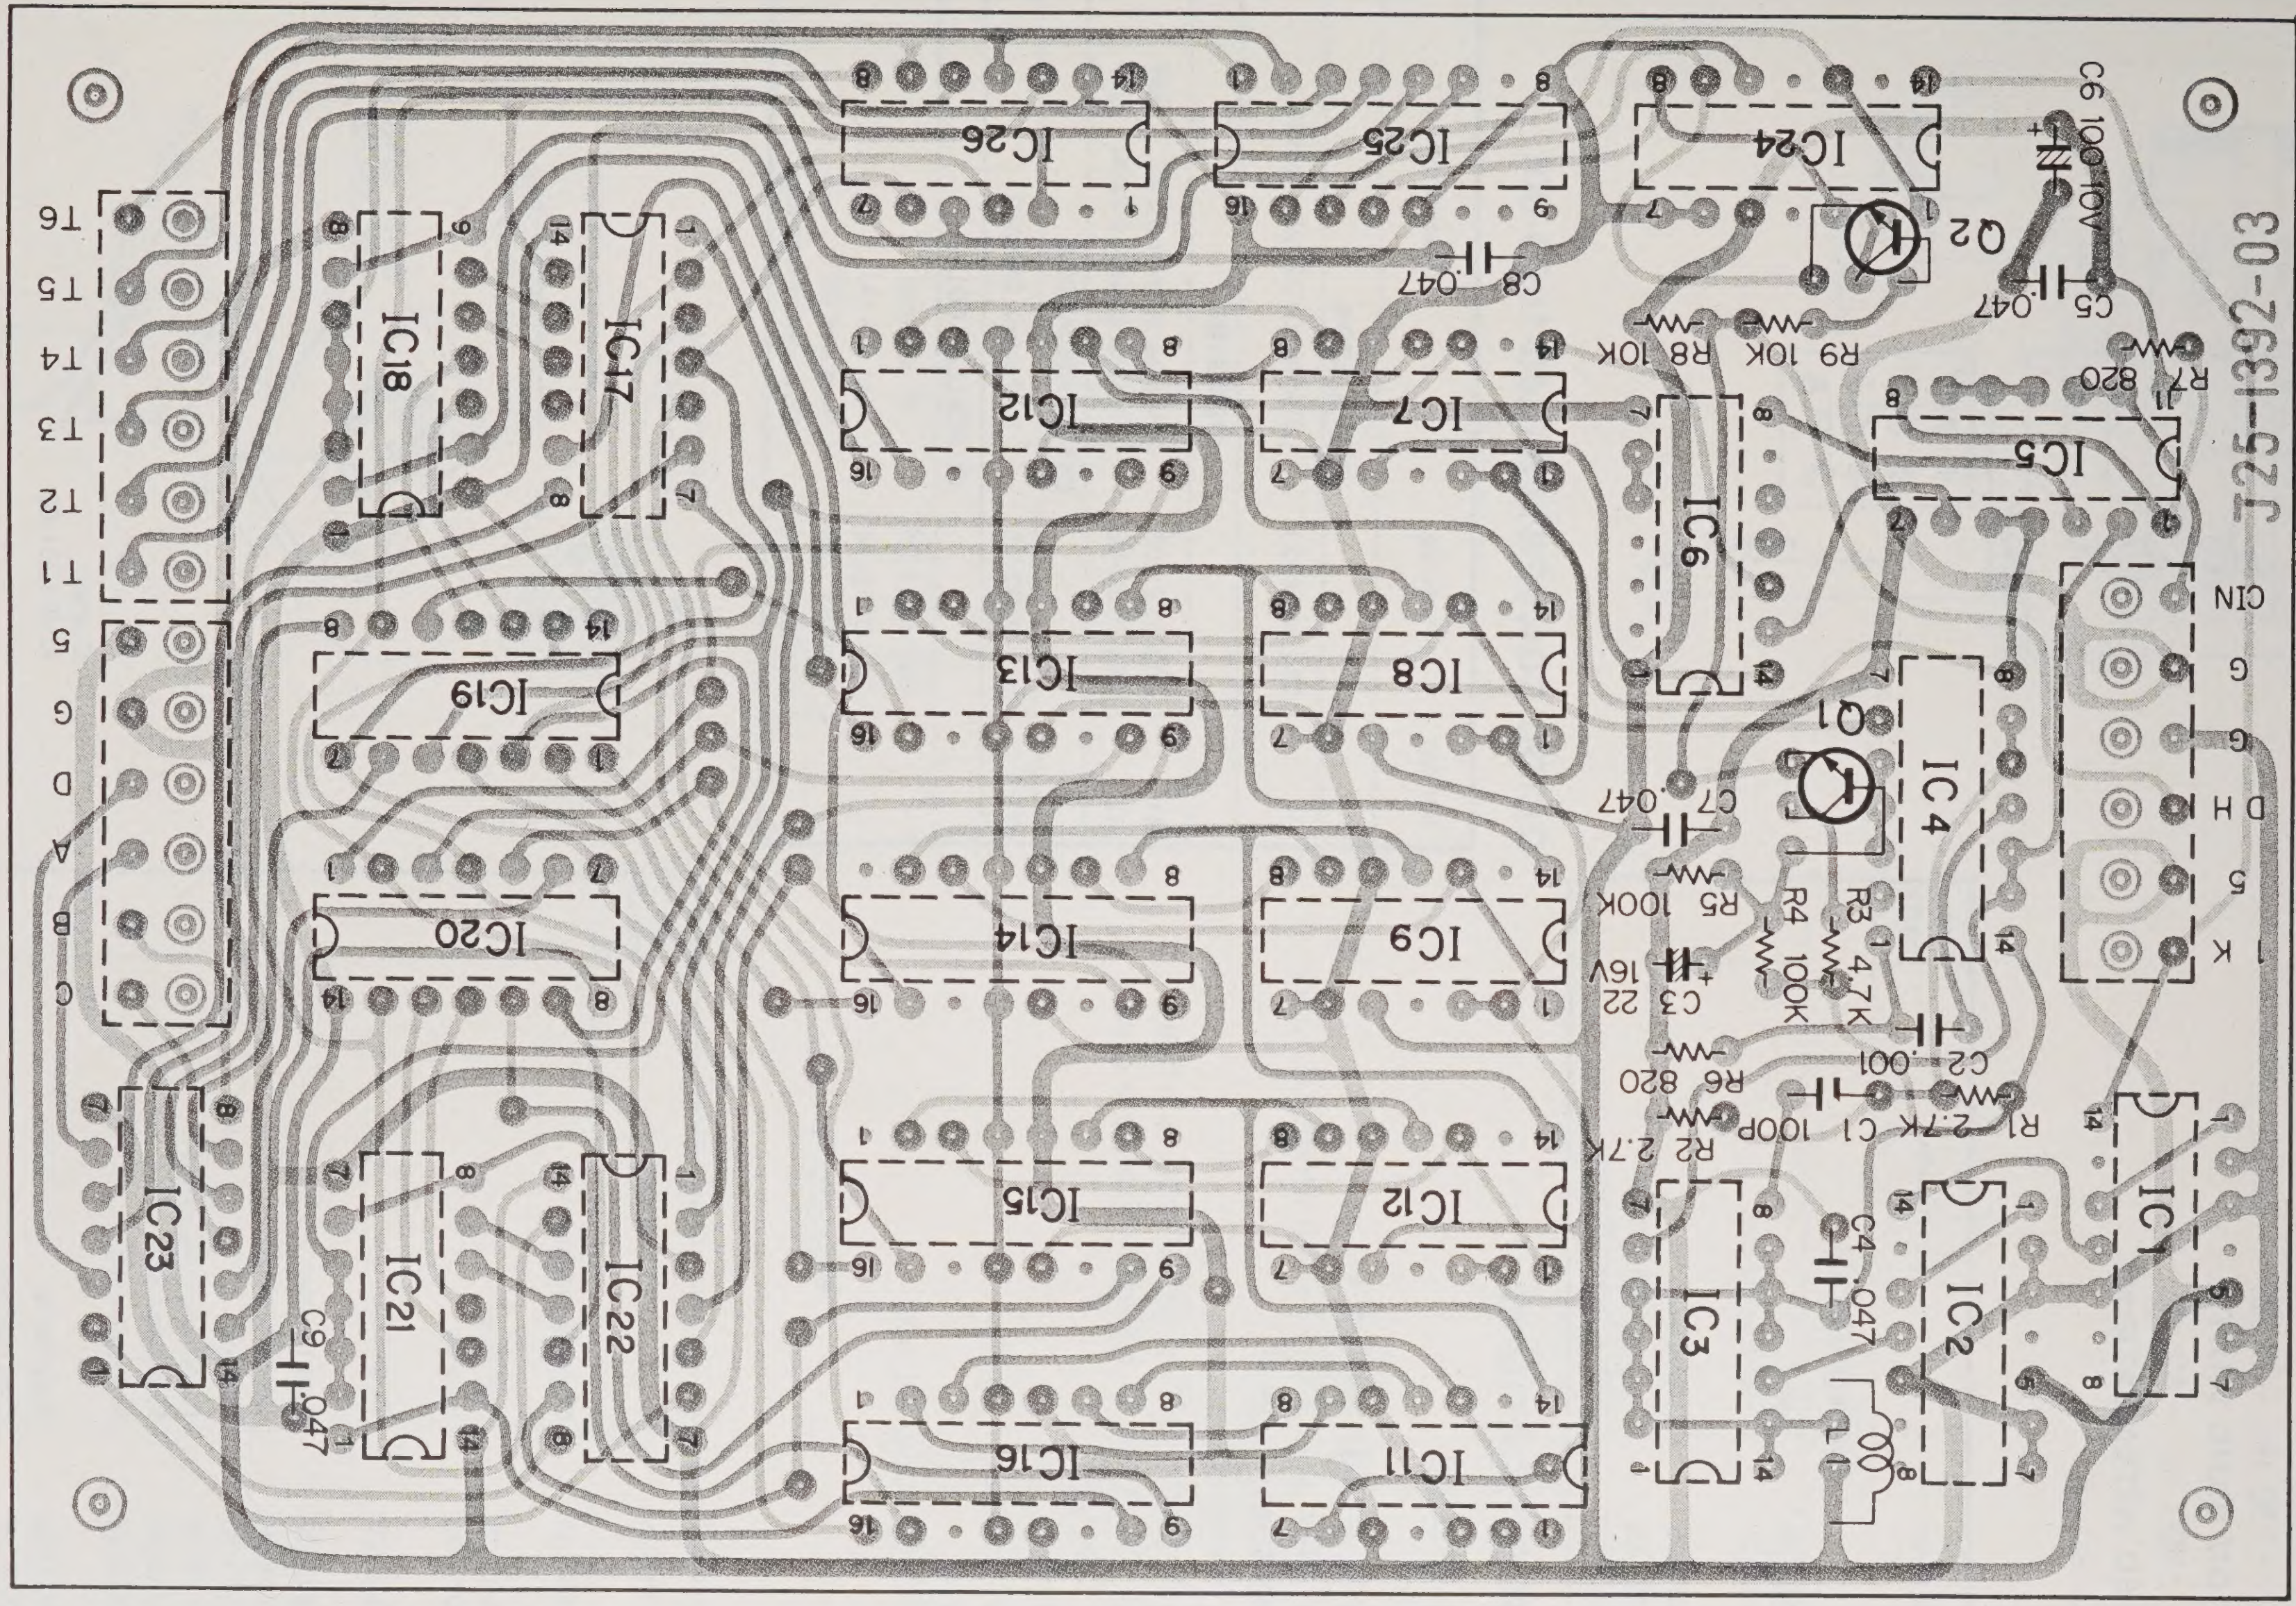

Q1,2: 2SC945(R), IC1,2,7～11,24: TD3490BP, IC3: TD3472AP, IC4,23: TD3400AP, IC5: SN74H00N, IC6: SN74176N
IC12～16: TD3475AP, IC17,19,20,22: TD3450AP, IC18,21: TD3460AP, IC25: TD3442AP, IC26: TD-3404AP

YG-88C SPECIFICATIONS

CENTER FREQUENCY:
8830.7 kHz

PASS BAND WIDTH:
Better than ±250 Hz (−6 dB)

ATTENUATION BAND WIDTH:
Less than ±900 Hz (−60 dB)

GUARANTEED ATTENUATION:
Better than 80 dB

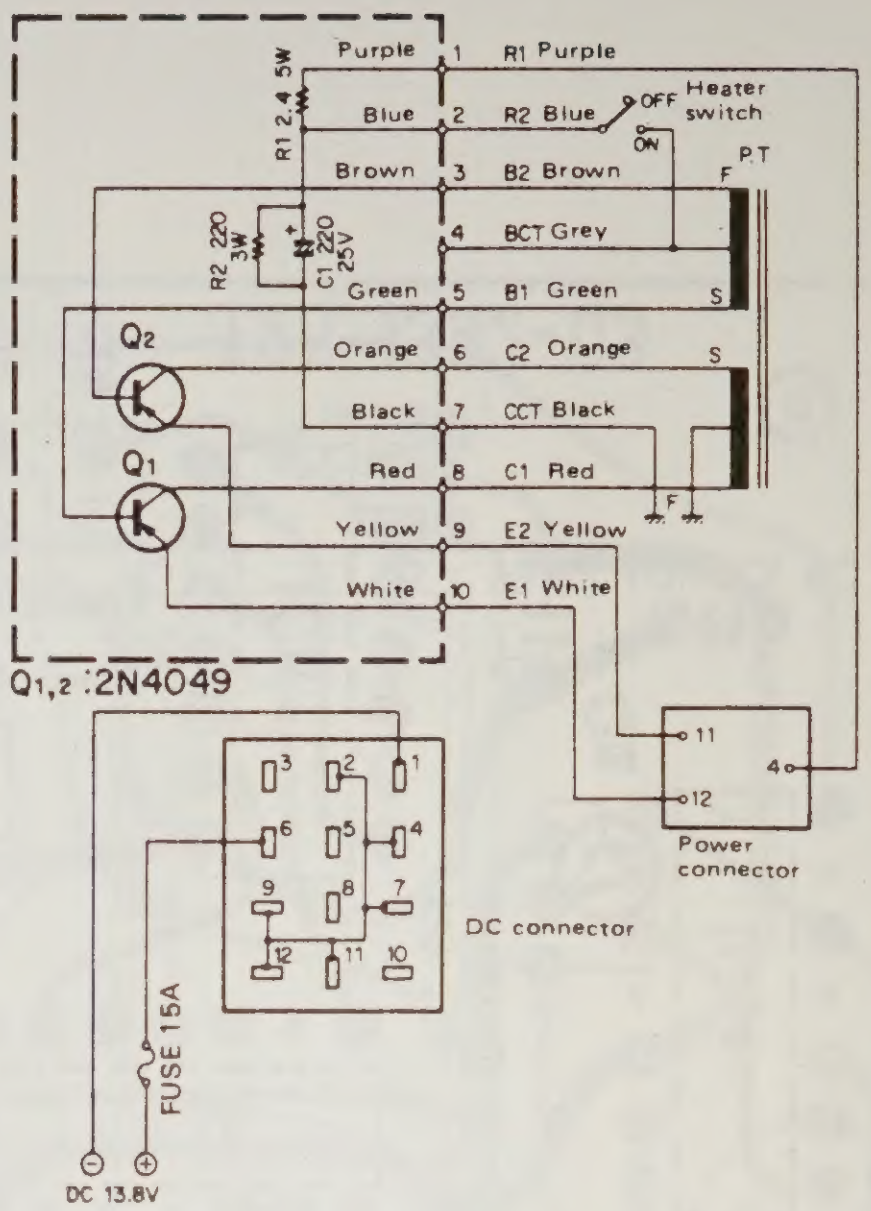

YG-88C

Ref. No.	Parts No.	Description	Re-marks
		MISCELLANEOUS	
—	B42-0664-04	Label	
—	B50-1556-00	Operating manual	
—	L71-0024-05	Crystal filter	
—	H01-0585-05	Packing case (Inside)	
—	H03-0200-04	Packing case (Outside)	

DS-1A SPECIFICATIONS

SEMICONDUCTORS
T20A6 (2)

RATED FINAL STAGE INPUT *
More than 90W at CW (1.8 ～ 28 MHz), DC13.8V

POWER CONSUMPTION *
15A (CW transmission)
0.6A (heater switch OFF in signal receive mode)
5A (heater switch ON in no-signal receive mode)
Note: AT DC13.8V

POWER SUPPLY
DC12-16V (standard: 13.8V)

DIMENSIONS
80 (W) × 51 (H) × 94 (D) mm

WEIGHT
300g

*TS-820 is used.

DC-DC CONVERTER (X46-1000-00)

Ref. No.	Parts No.	Description	Re-marks
		CAPACITOR	
C1	CE02W1E221	Electrolytic 220μF 25WV	
		RESISTOR	
R1	R92-0121-05	Resistor (Cement) 2.4Ω 5W	
R2	R92-0120-05	Resistor (Cement) 220Ω 2W	
		SEMICONDUCTOR	
Q1,2	V11-0292-05	Transistor 2N4049	
		MISCELLANEOUS	
—	E20-0513-05	5P terminal × 2	
—	F01-0170-14	Heat sink (A)	
—	F01-0171-04	Heat sink (B)	
—	F11-0195-14	Cover (Heat radiating)	

DS-1A

Ref. No.	Parts No.	Description	Re-marks
—	B50-1567-00	Operating manual	
—	E08-1207-05	12P Plug	
—	E33-0074-00	Wire kit	
—	F05-1531-05	Fuse 15A	
—	H01-1617-03	Case (Inside)	
—	H03-0544-04	Case (Outside)	
—	H10-1001-03	Cushion	
—	H25-0029-04	Polyethylene bag (Small)	
—	H25-0103-04	Protection bag	
—	H25-0105-04	Protection bag	
—	J13-0037-05	Fuse holder	
—	J41-0024-15	Cord bushing	
—	J61-0014-05	Free up bolt	
—	X46-1000-00	DC-DC converter